


# DRAWERS + MODESTY PANEL - FULL

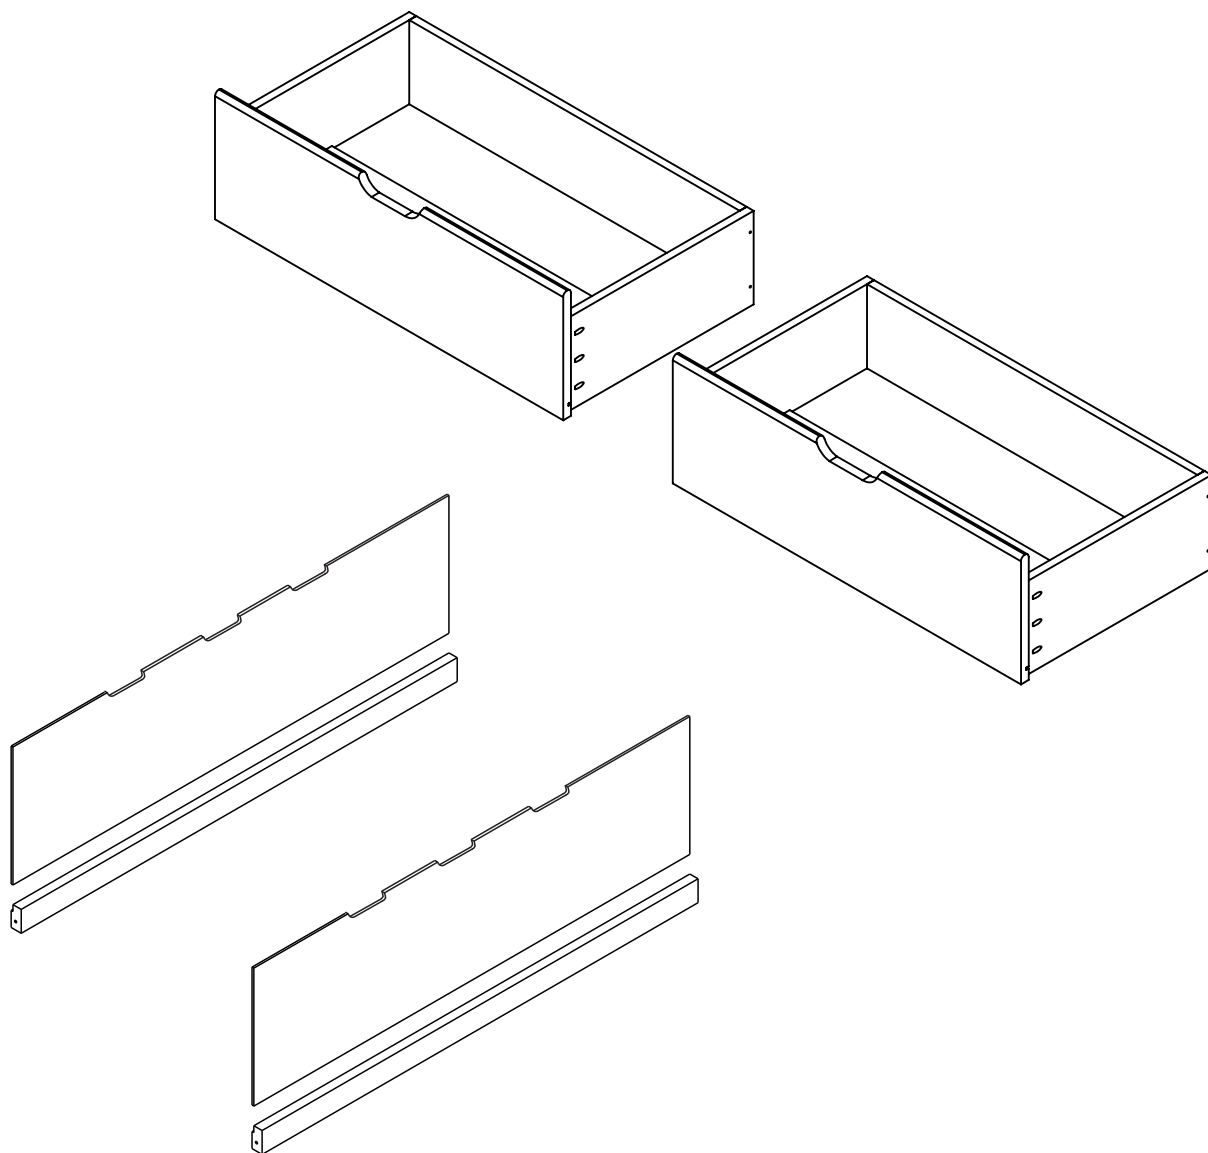


## ATTENTION





- 1 - Read and observe carefully all the assembly instructions before beginning assembly.
- 2 - The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- 3 - The screw must be tightened periodically.
- 4 - Avoid contact with sharp objects.
- 5 - Avoid banging pieces together.

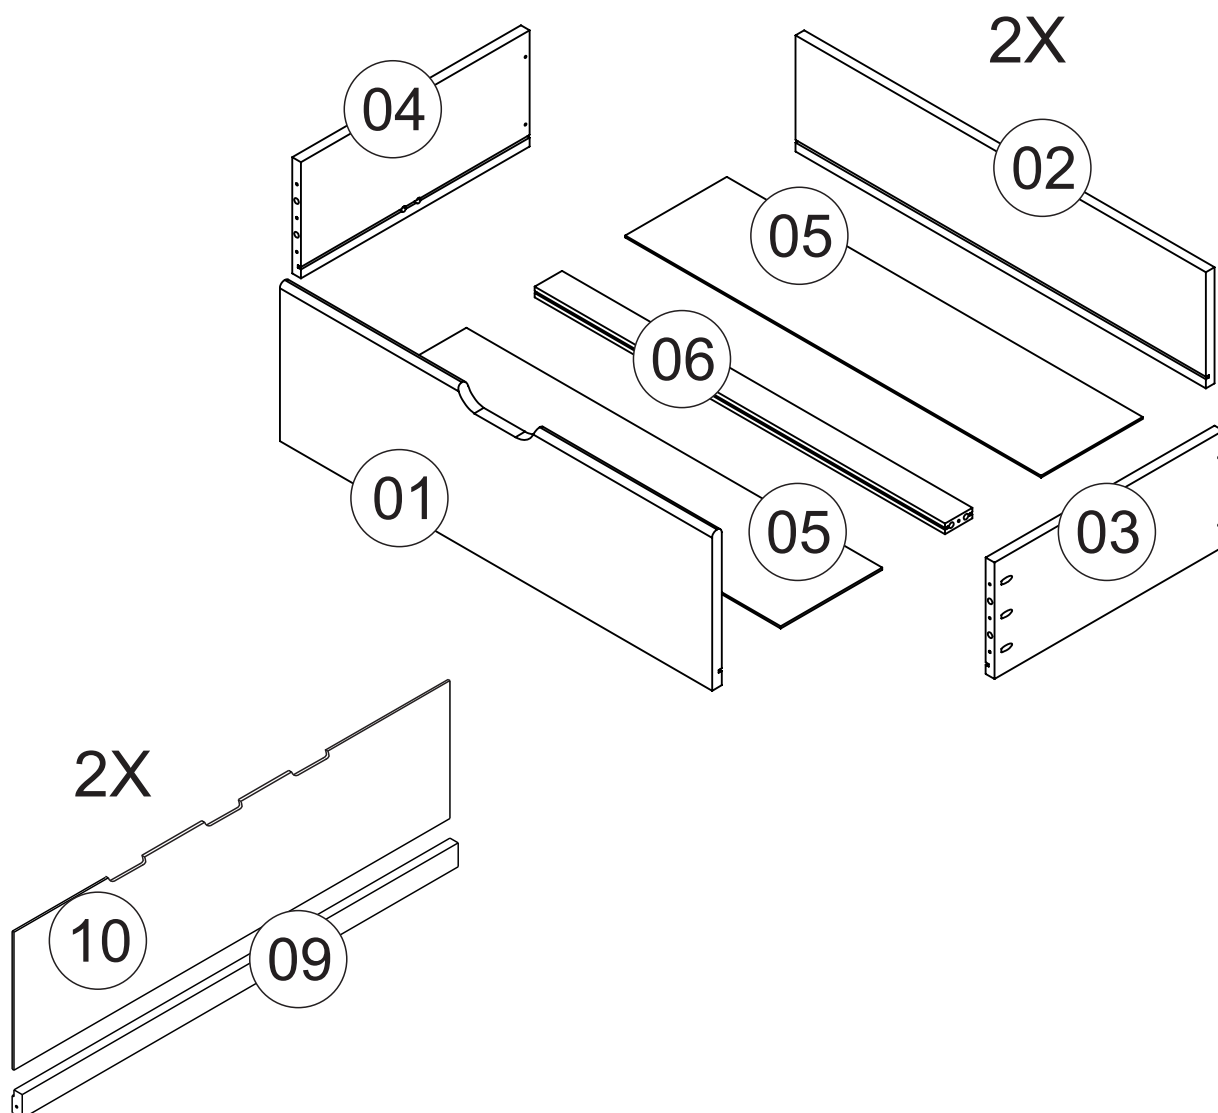

“Please! Confirm all parts and hardware are included to assemble!”




### Hardware - Carton


<b>T</b>	 1 5/16"	<b>08x</b>
<b>Z</b>	 Ø1/8" x 5/8"	<b>48x</b>
<b>AP</b>	 Ø1/8" x 1 3/8"	<b>28x</b>
<b>AW</b>	 Ø3/8" x 1 3/8"	<b>16x</b>

# ASSEMBLY INSTRUCTIONS


## Step 01

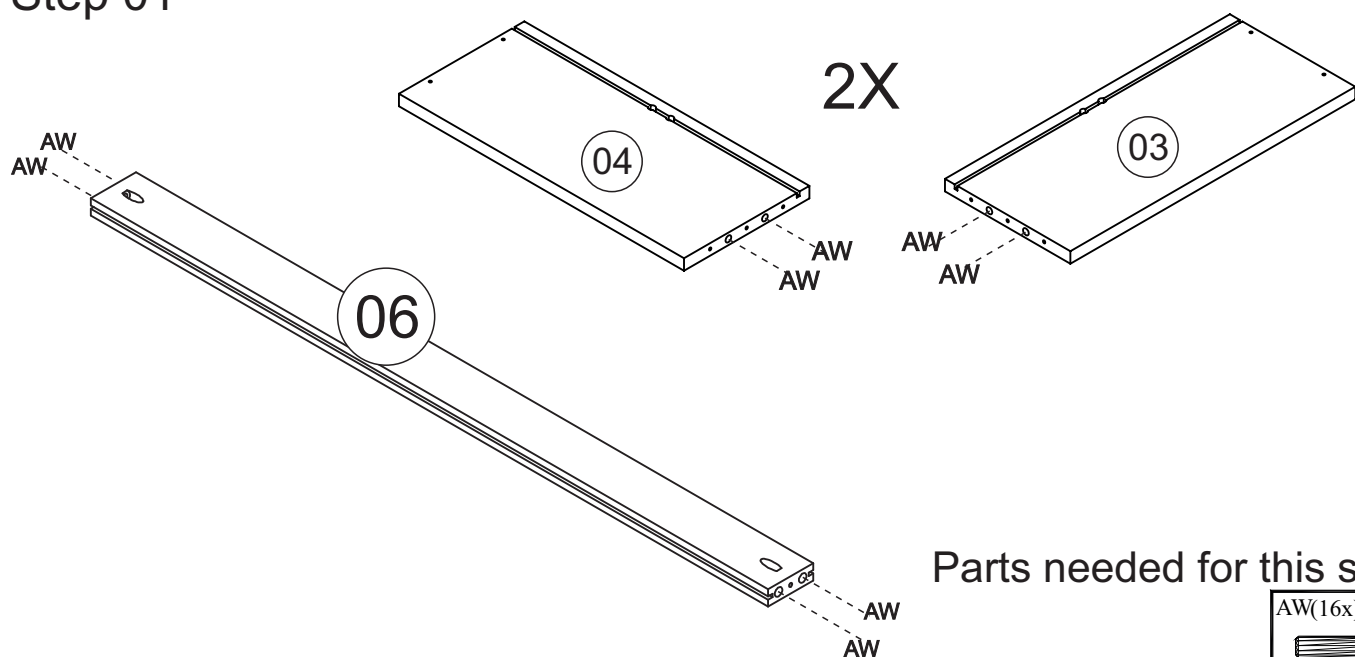


## Step 02

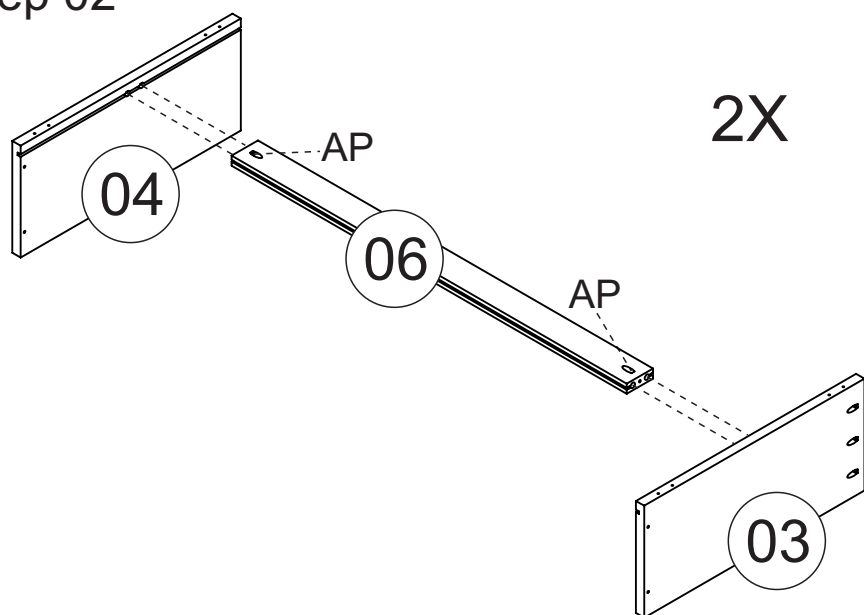

## Step 03

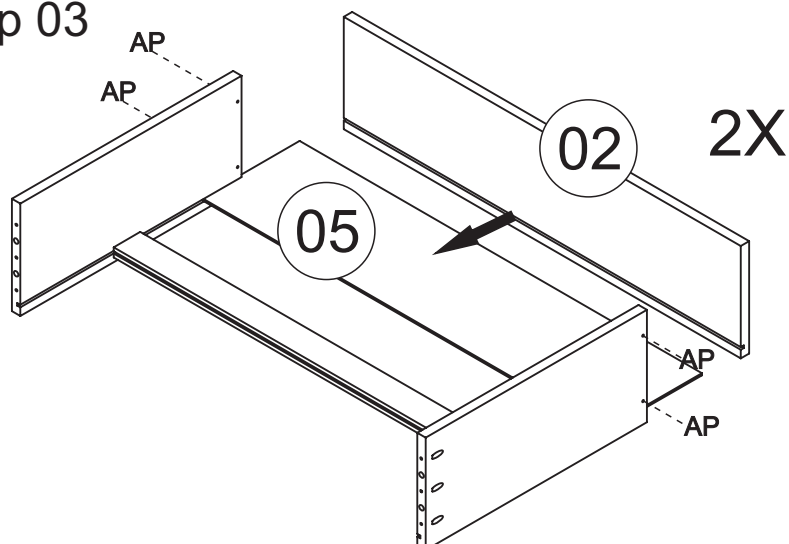

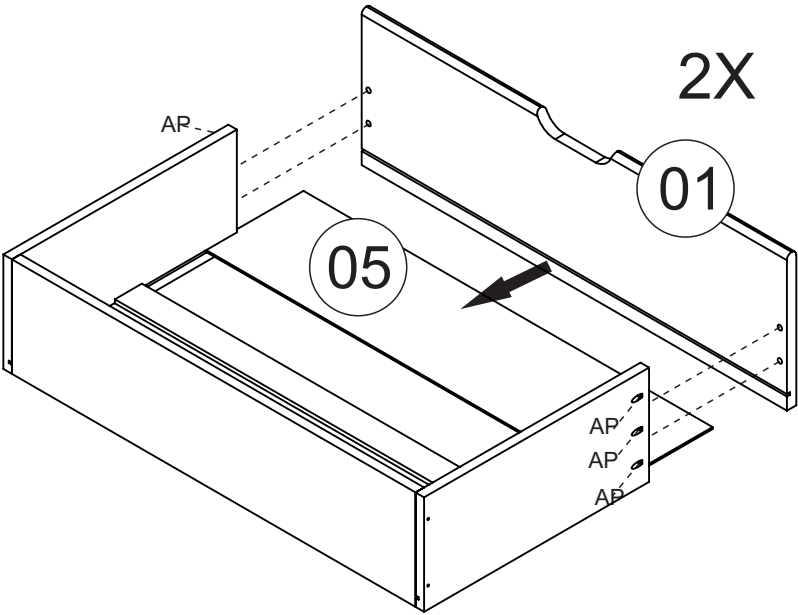

Step 04




Parts needed for this step:

AP(12x)



 

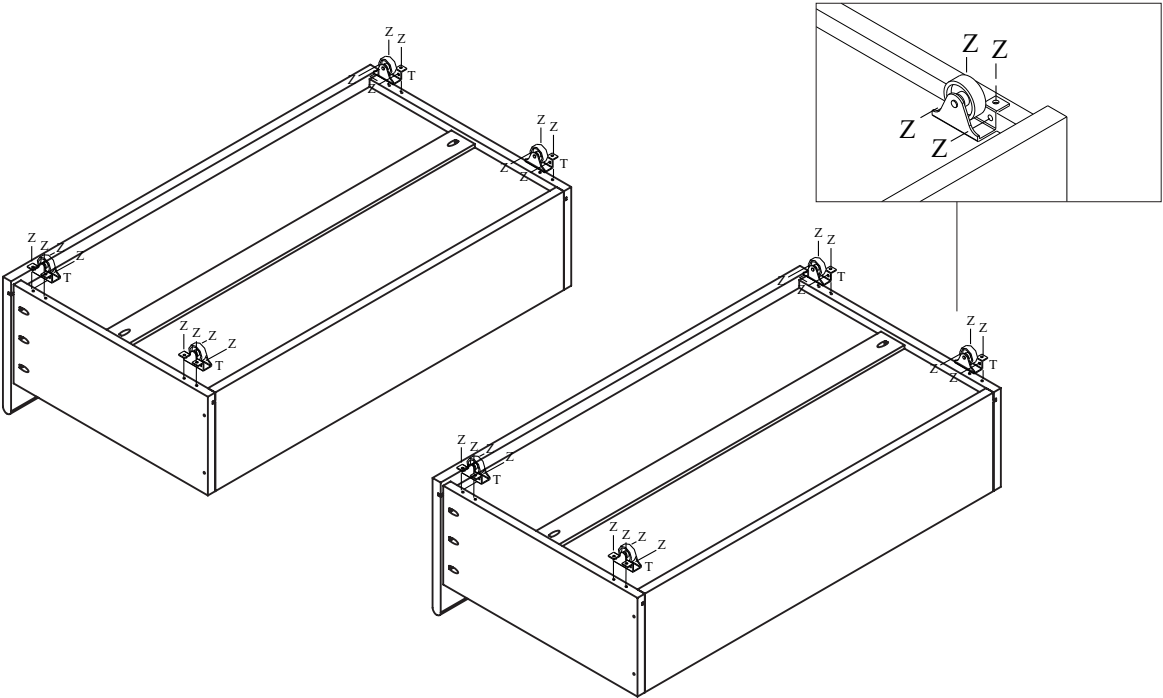Step 05




Parts needed for this step:


Z (32x)


T (8x)



## Step 06

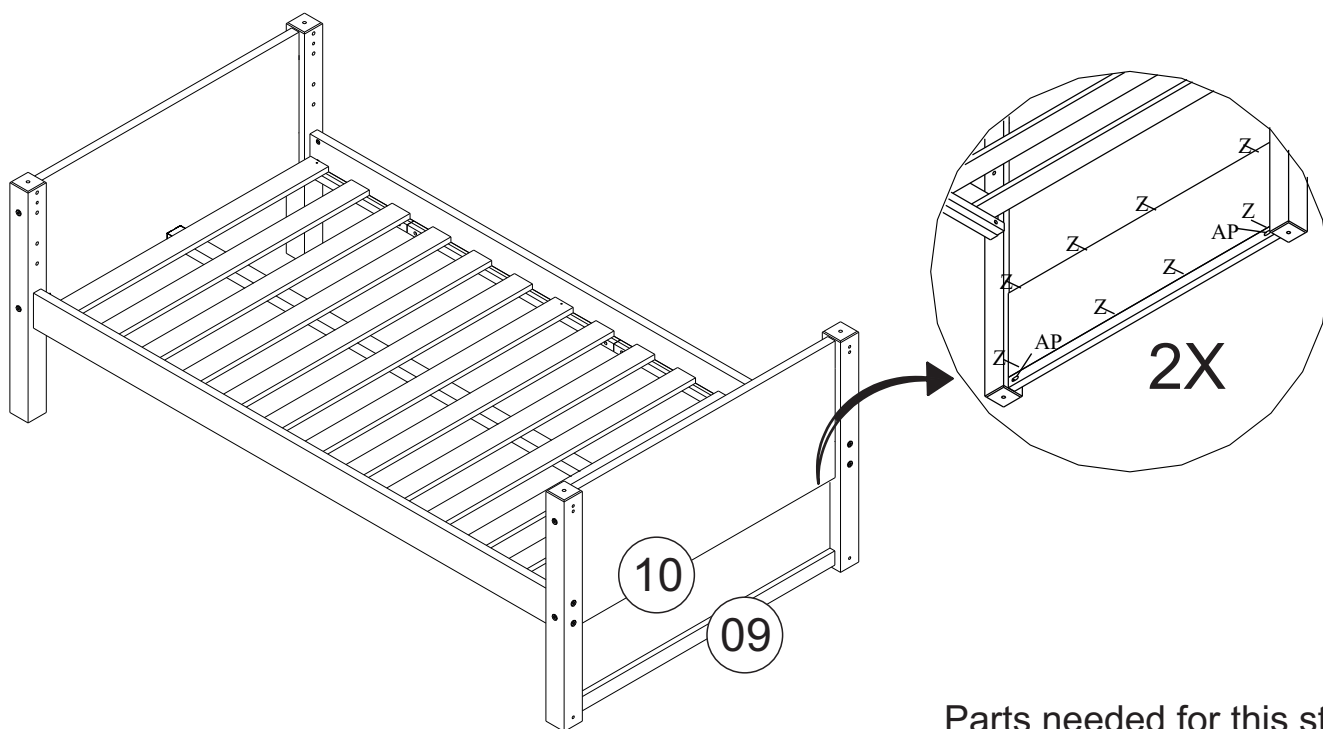

Parts needed for this step:

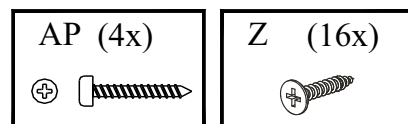

## Step 07

