


ASSEMBLY INSTRUCTIONS

Tufted Bench with Iron Legs

So Comfortable,
You'll feel the difference
the moment you sit down.

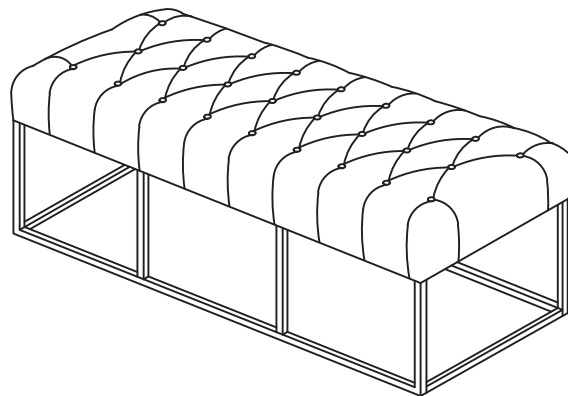

Should you prefer to
speak with a customer
service representative,
you may call toll free

Guidelines

FAILURE TO FOLLOW THESE WARNINGS WHEN IN USE COULD RESULT IN INJURY

- Do not stand on the item or use as a step ladder
- Do not use this item unless all bolts and screws are firmly secured and fastened.
- Check all bolts and screws every 90 days. As necessary tighten if any are loose.
- Lift up then move. Pushing over or dragging this product can result in an injury or cause damage to the floor and piece.

Pre-Assembly Preparation:


Please read through this instruction booklet before beginning assembly of this item.

Two adults are recommended for assembly.


- Clear out the space for assembly and lay out all parts on Parts List, extra room will allow you to easily determine if all the pieces are present.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- Keep small parts and pieces away from children and pets until fully assembled.
- Please check for any loose screws and tighten them before you use.

WARNING: DO NOT LET CHILDREN PLAY IN OR AROUND THE UNIT DUE TO THE POSSIBLE RISK OF INJURY.


Parts List

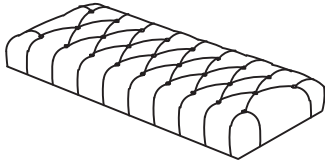

(A) Seat Cushion (1)

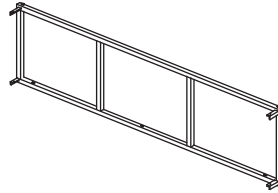

(B) Metal Side Frame (2)



(C) Metal Tube (4)



(D) Short Bolts (8)



(E) Flat Washers (14)



(F) Spring Washers (14)




(G) Allen Key (1)



(H) Long Bolts (6)

Step 1-- Remove all parts from the carton and place them on a protected surface or carpet. Insert the Metal Tube (C) into the Metal Side Frame (B) as shown. Screw them with Short Bolts (D), Spring Washers (F) and Flat Washers (E), then tighten all the Short Bolts (D) securely with Allen Key (G).

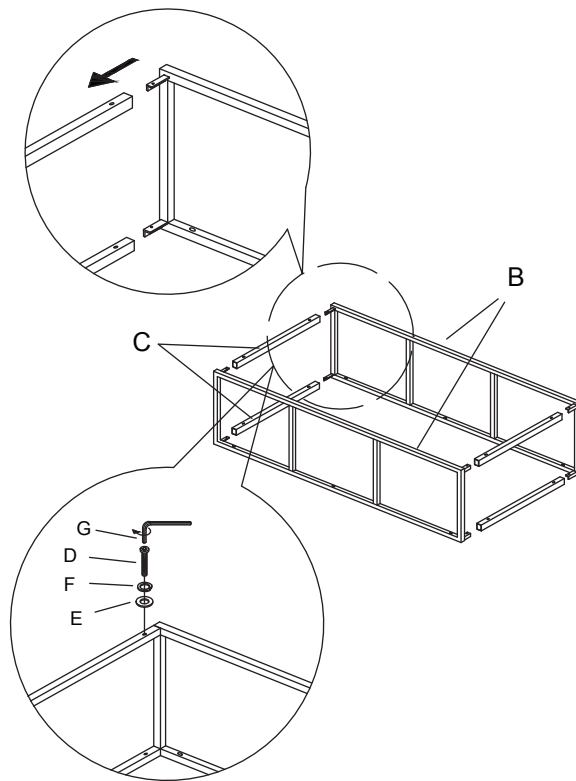

Step 2--

1. When completed metal frame assembly, place the Seat Cushion (A) upside down and put the metal frame on the bottom of the Seat Cushion (A), aligning hole position, then fix the metal frame and the Seat Cushion (A) with Long Bolts (H), Spring Washers (F) and Flat Washers (E), tighten all the Long Bolts (H) securely with Allen Key (G).

2. Place bench upright on level floor, then the assembly is completed.

