
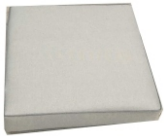


PRODUCT INSTRUCTIONS

WARNING!

○If cushion gets wet, hang over chair to dry to prevent mold/mildew.
Remove all protective packing material and position base on floor.Adjust all the foot levelers level , and put on the cushion,attach the cushion on the ottoman frame. Now the chair is ready to use.
Warning:DO NOT use acid or alkaline washing liquid to clean the product.

A		OTTOMAN	1
B		PE cap	Factory already assembled
C		CUSHION	1

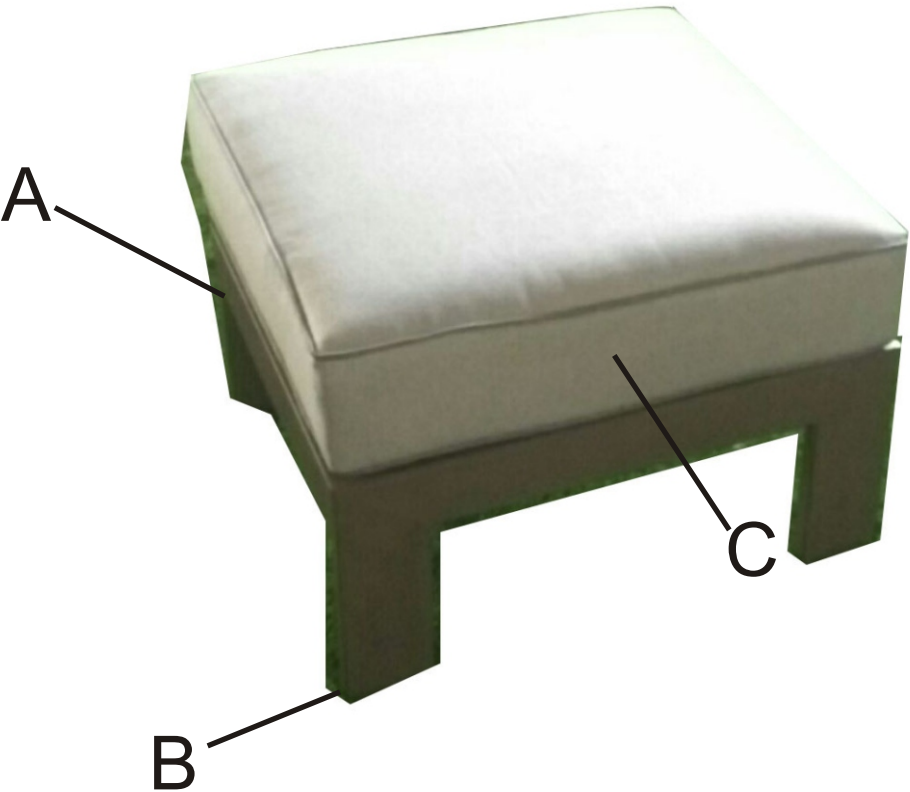

This parts have been assemble by factory already!