

EASTERN KING SIZE PU BED

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.





Warning!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION

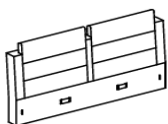

B1 (BOX 1)


AN		HEADBOARD	1PC
BN		ROLL SLAT (14PCS)	1SET

B2 (BOX 2)

CN		FOOTBOARD PANEL	1PC
----	---	-----------------	-----

B3 (BOX 3)


DN		LEFT BED RAIL	1PC
EN		RIGHT BED RAIL	1PC

FN		FOOTBOARD LEGS	2PCS
----	---	----------------	------

GN		BED SLAT SUPPORT WITH LEVELER	6PCS
----	---	-------------------------------------	------

HN		FOOTBOARD SUPPORT WITH LEVELER	1PC
----	--	--------------------------------------	-----

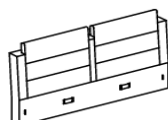


IN		CENTER RAIL	2PCS
----	---	-------------	------



AN		*FROM BOX 1 HEADBOARD	1PC
----	---	--------------------------	-----

FBN		*FROM BOX 2 & BOX 3 FOOTBOARD COMPLETE	1PC
-----	---	---	-----

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - Hardware pack is located in (B3)

1		SHORT FLAT HEAD SCREW	14PCS
2		LONG FLAT HEAD SCREW	34PCS
3		BOLT	6PCS

4		SMALL ALLEN WRENCH	1PC
5		BIG ALLEN WRENCH	1PC

NOTE : PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS. HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.


ASSEMBLY INSTRUCTIONS

BOX 2 & BOX 3

STEP 1

1.1) Place footboard panel (CN) upside down on soft surface. Align and fasten footboard leg (FN) to the pre-marking on the bottom of footboard panel (CN) using short flat head screw (1) (as per diagram shown) and tighten with Phillips head screw driver (NOT INCLUDED).


1.2) Align and fasten footboard support with leveler (HN) to footboard panel (CN) by turning clockwise until tight. Then adjust leveler to touch the floor.

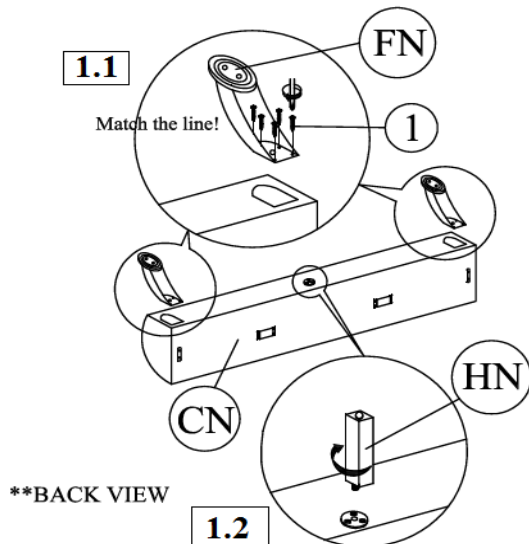

BOX 1 TO BOX 3


STEP 2

Loosen the bolts from metal plate to leave a gap of about 5mm. Hook the left and right bed rail (DN & EN) onto the bolts.

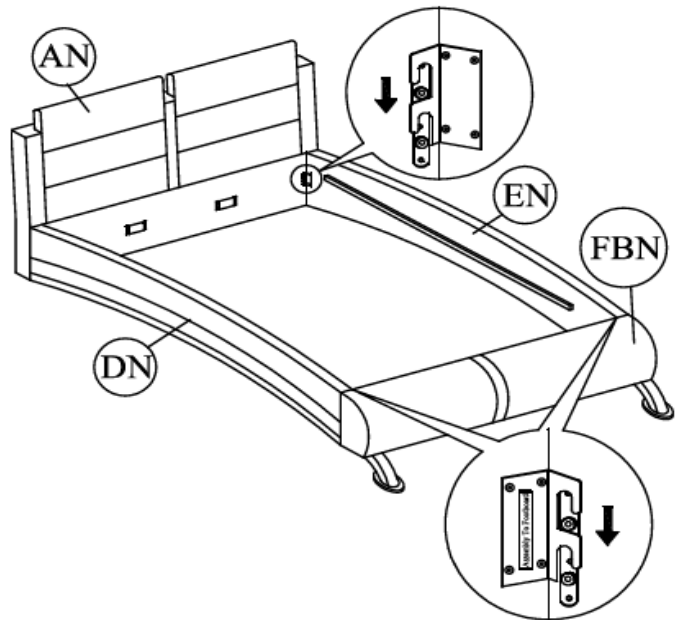


STEP 3

Align and fasten bed slat support with leveler (GN) to center rail (IN) using bolt (3) and tighten with small Allen wrench (4).

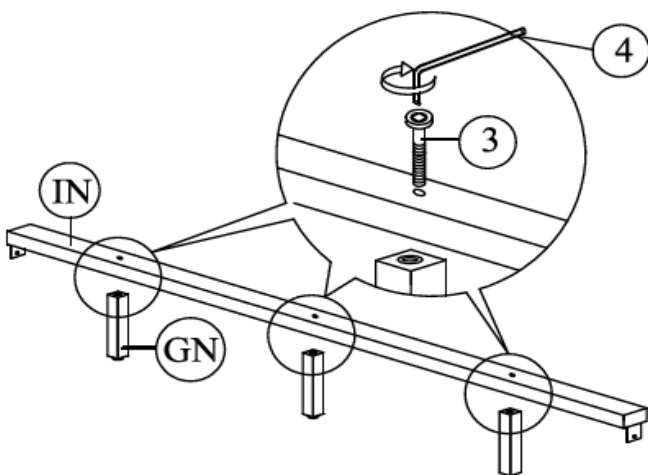

STEP 4

Align and fasten the plat at the end of center rail (IN) to the bracket at headboard (AN) and footboard (FBN) using short flat head screw (1) and tighten with Phillips head screw driver (NOT INCLUDED). Then adjust leveler on bed slat support to touch the floor.

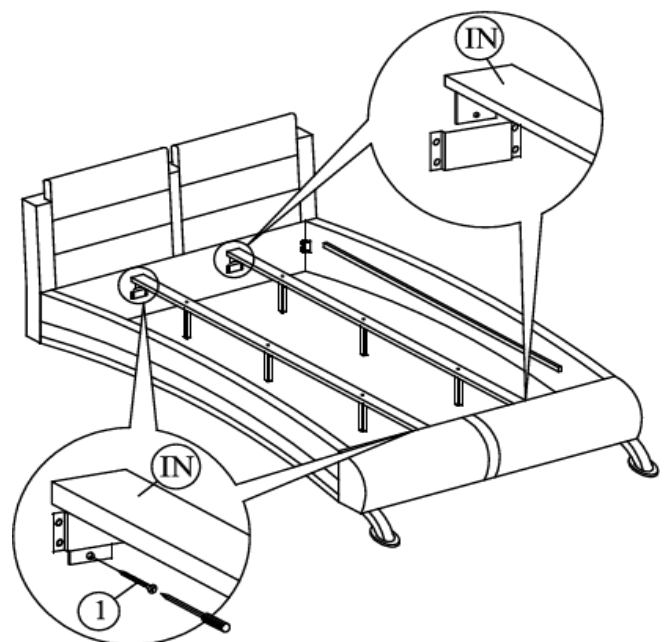


ASSEMBLY INSTRUCTIONS

STEP 5

5.1) Fully tighten all the bolts with big Allen wrench (5).

5.2) Align and fasten roll slat (BN) to center rail (IN) and left & right bed rail (DN & EN) using long flat head screw (2) and tighten with Phillips head screw driver (NOT INCLUDED).

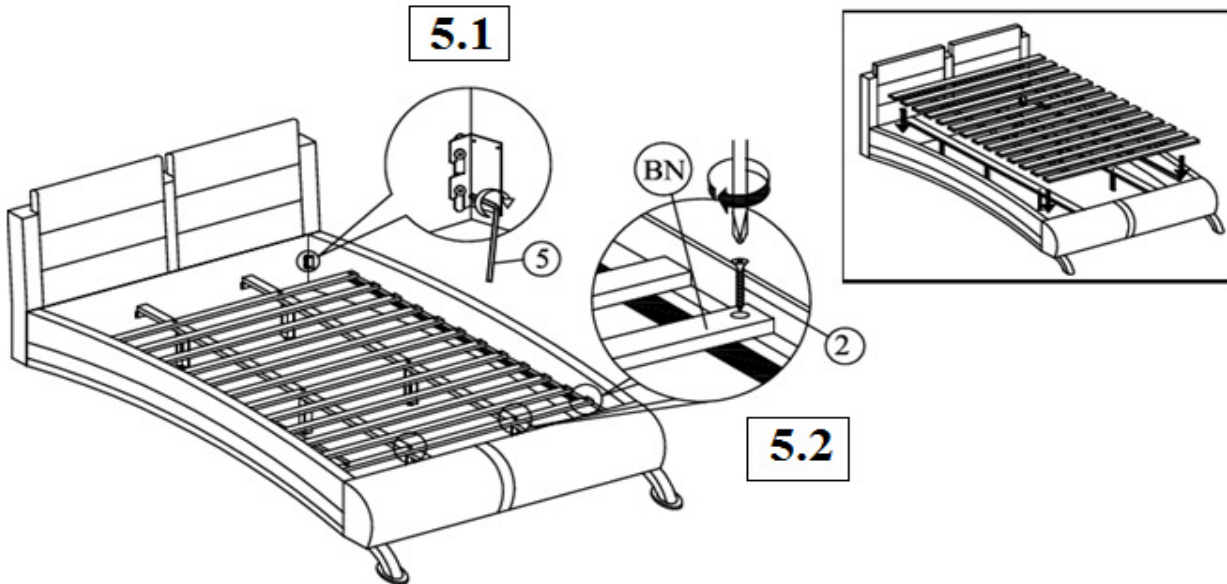

STEP 6

Tear off the protector sticker of acrylic on headboard, footboard and bed rail.

