







Assembly Instructions

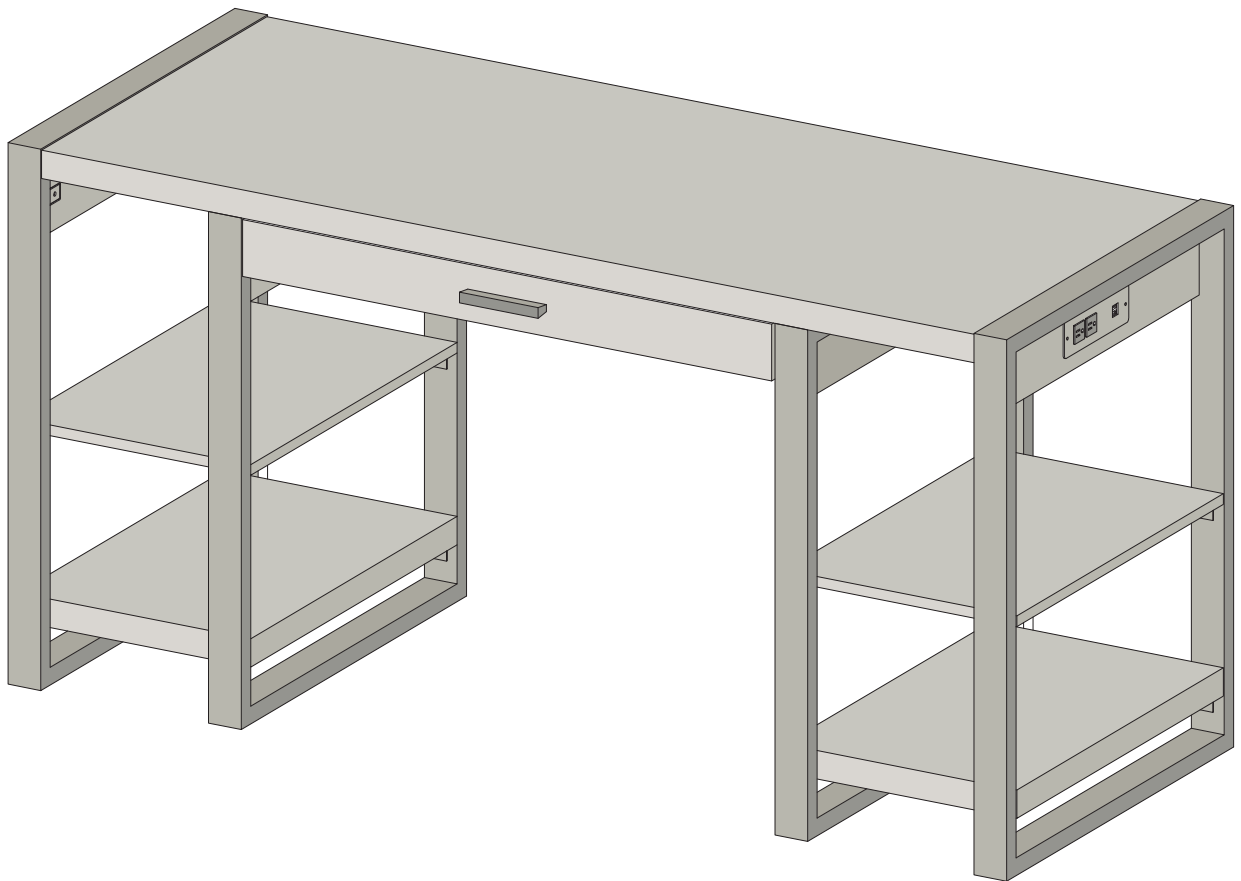


Parts List

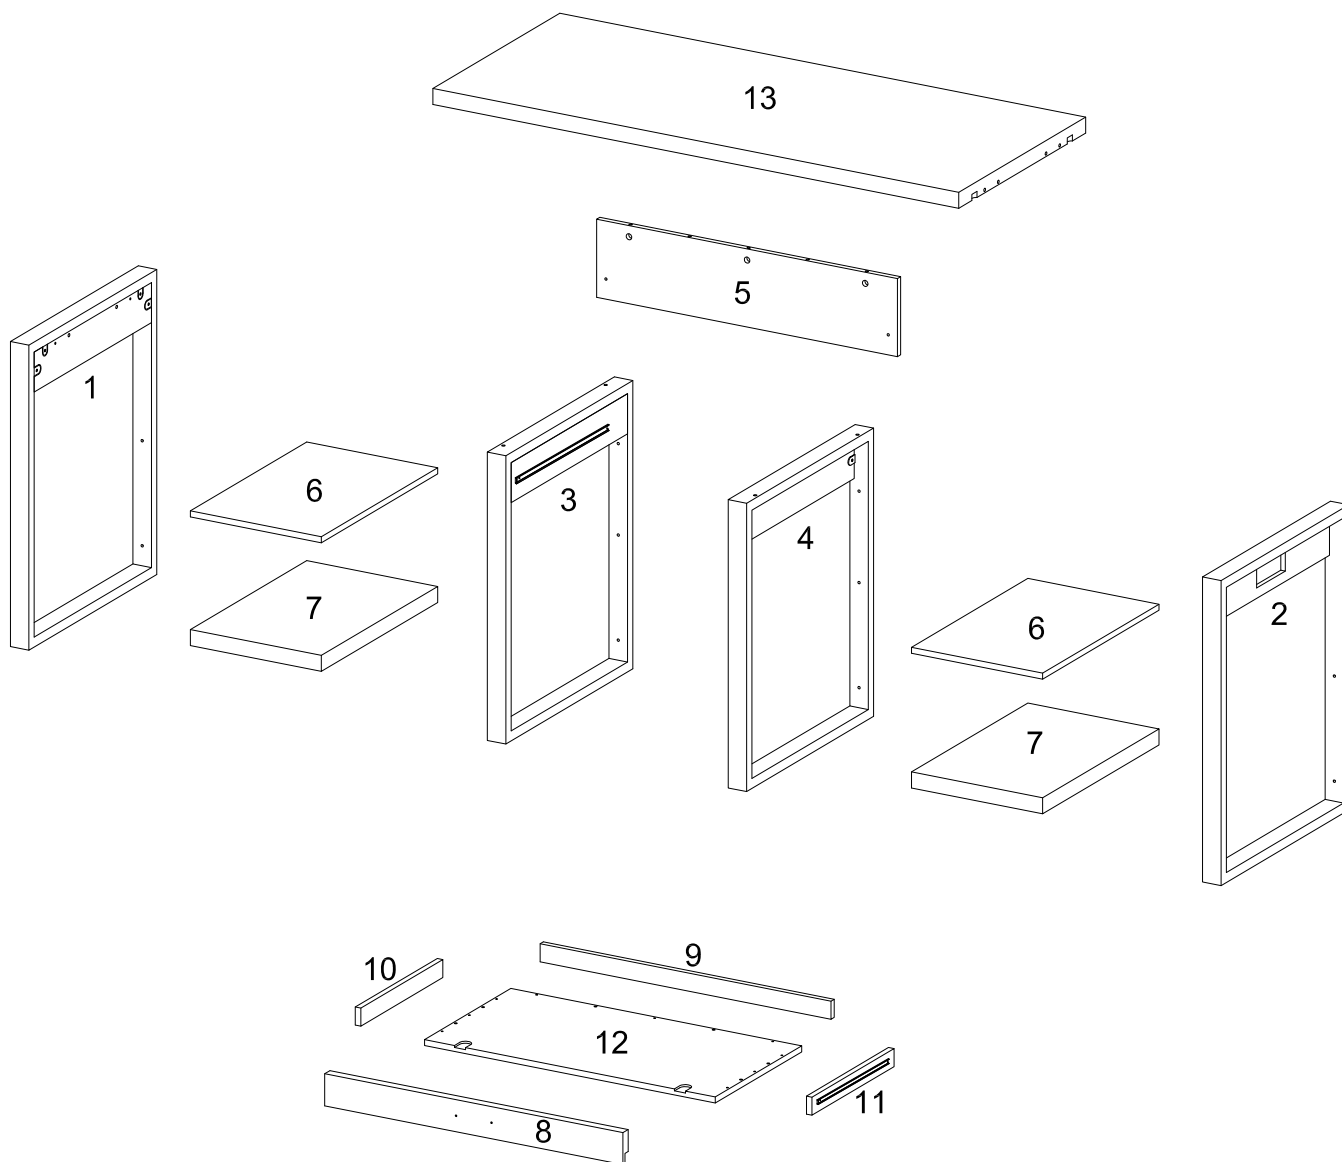

Hardware List


A		M8*30	Wooden dowel	12 pcs
B			Cam bolt	7 pcs
C			Cam lock	7 pcs
D		Ø6*12	Bolt	36 pcs
E			L Shape Bracket	16 pcs
F			Flat Bracket	2 pcs
G			Handel	1 pc
H		M4*22	Bolt	2 pcs
J		Ø6*35	Bolt	4 pcs
K		Ø4*32	Screw	11 pcs
L		Ø3*12	Screw	18 pcs
M			Screw	1 pc
N			Plastic strap	1 pc
P			Hinge lock	1 pc
Q			Hinge lock	1 pc
R			Hinge	2 pcs
S			USB Interface	1 pc
U			Wrench	1 pc
V			Sticker	7 pcs

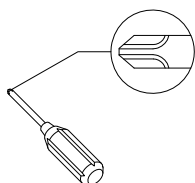

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

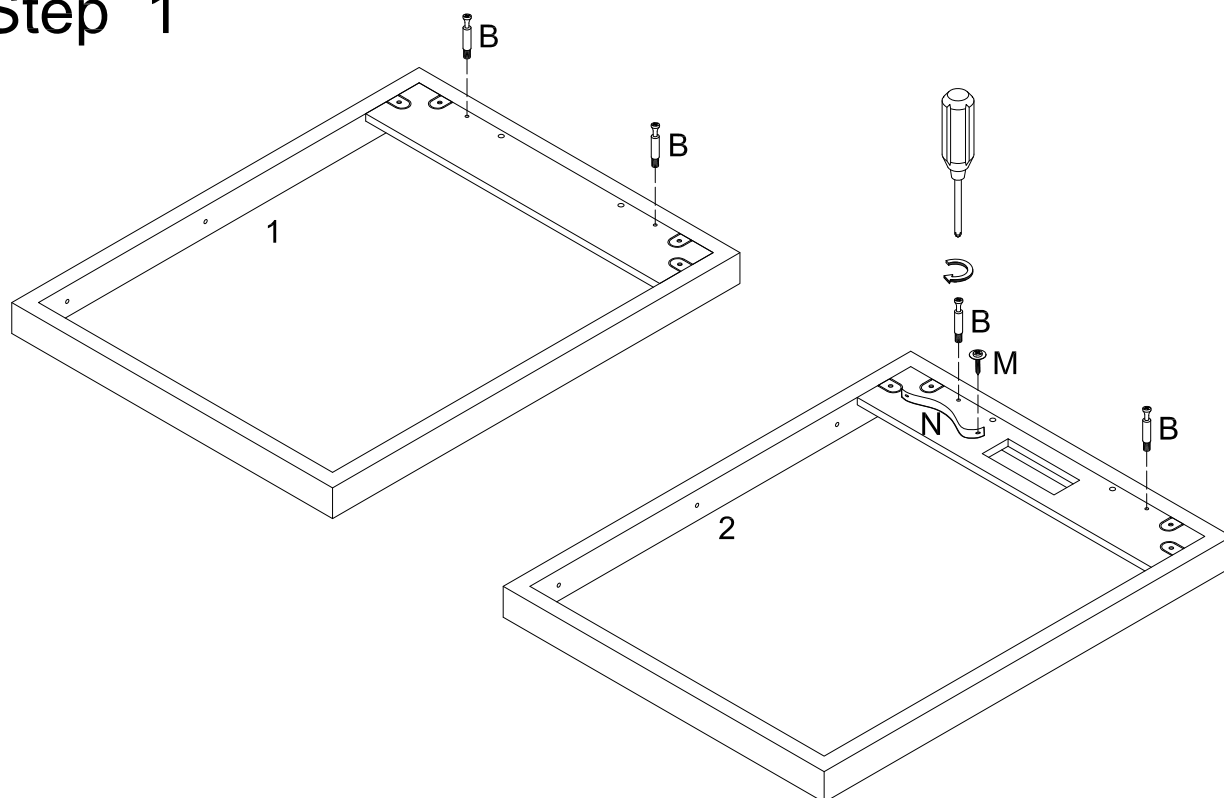


Insert cam bolts (B) into side frames (1)(2). Use bolt (M) to secure velcro strap (N) into side frame (2).

Step 2

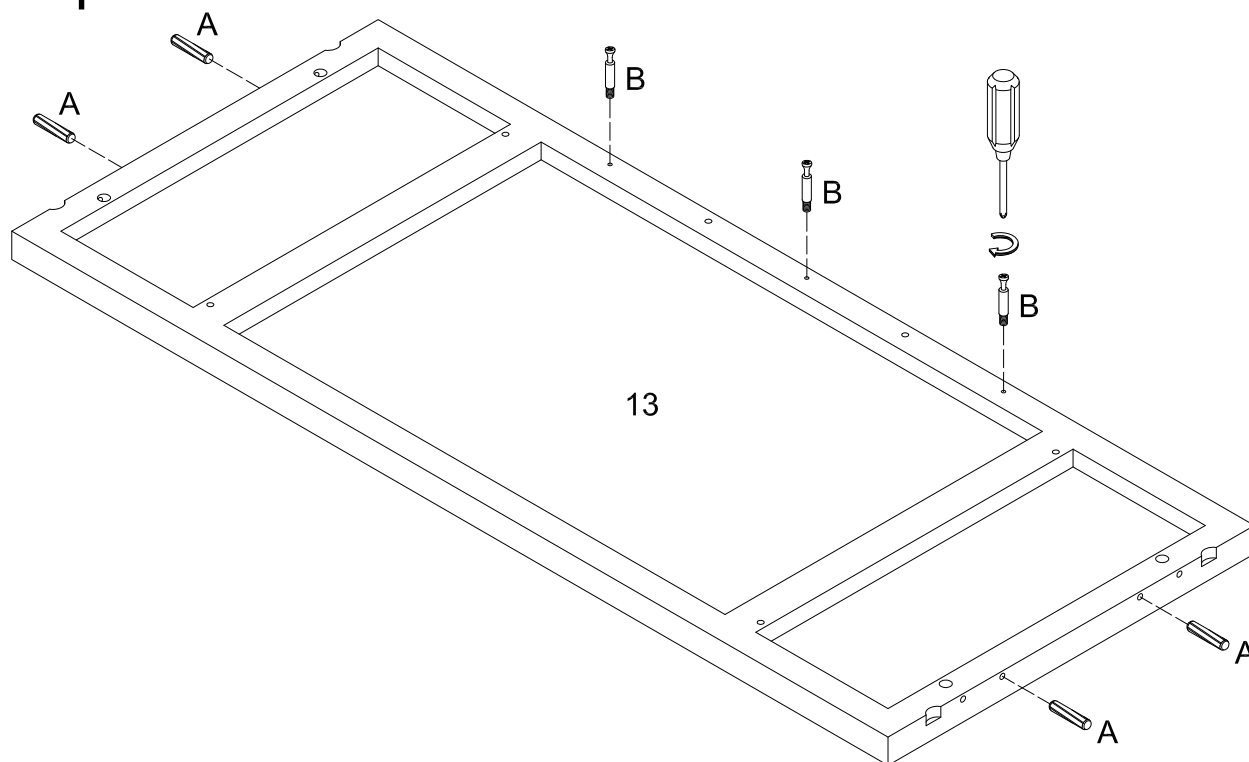


Insert wooden dowels (A) and bolts (B) into the table top (13).

Step 3

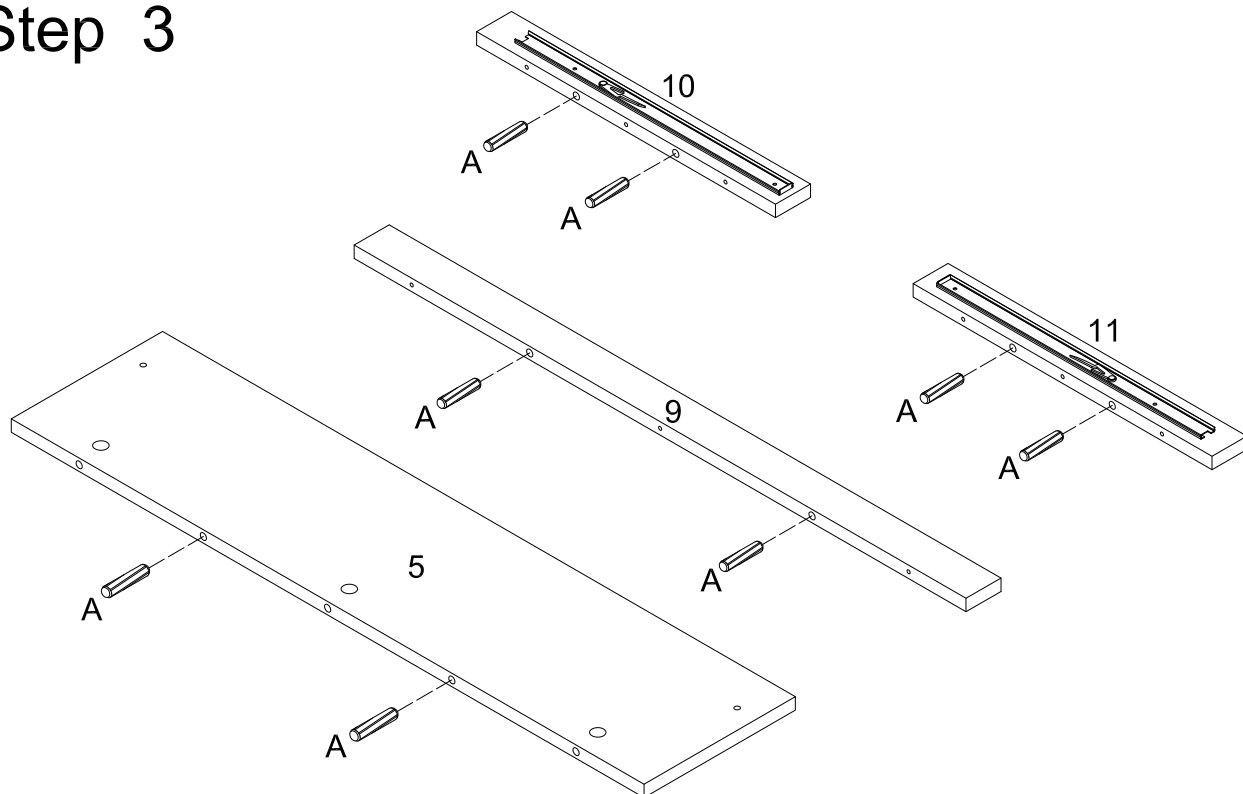


Insert wooden dowels (A) into back panel (5) and drawer panels (9)(10)(11).

Step 4

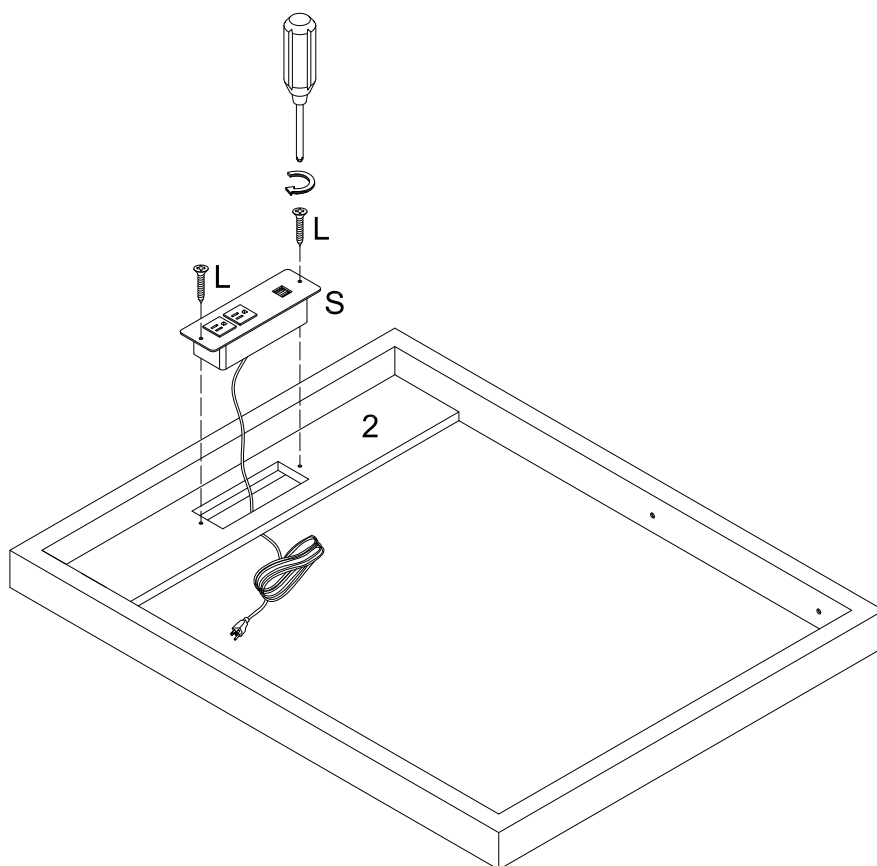


Insert the USB Interface (S) into side frame (2) and secure it with screw (L).

Step 5

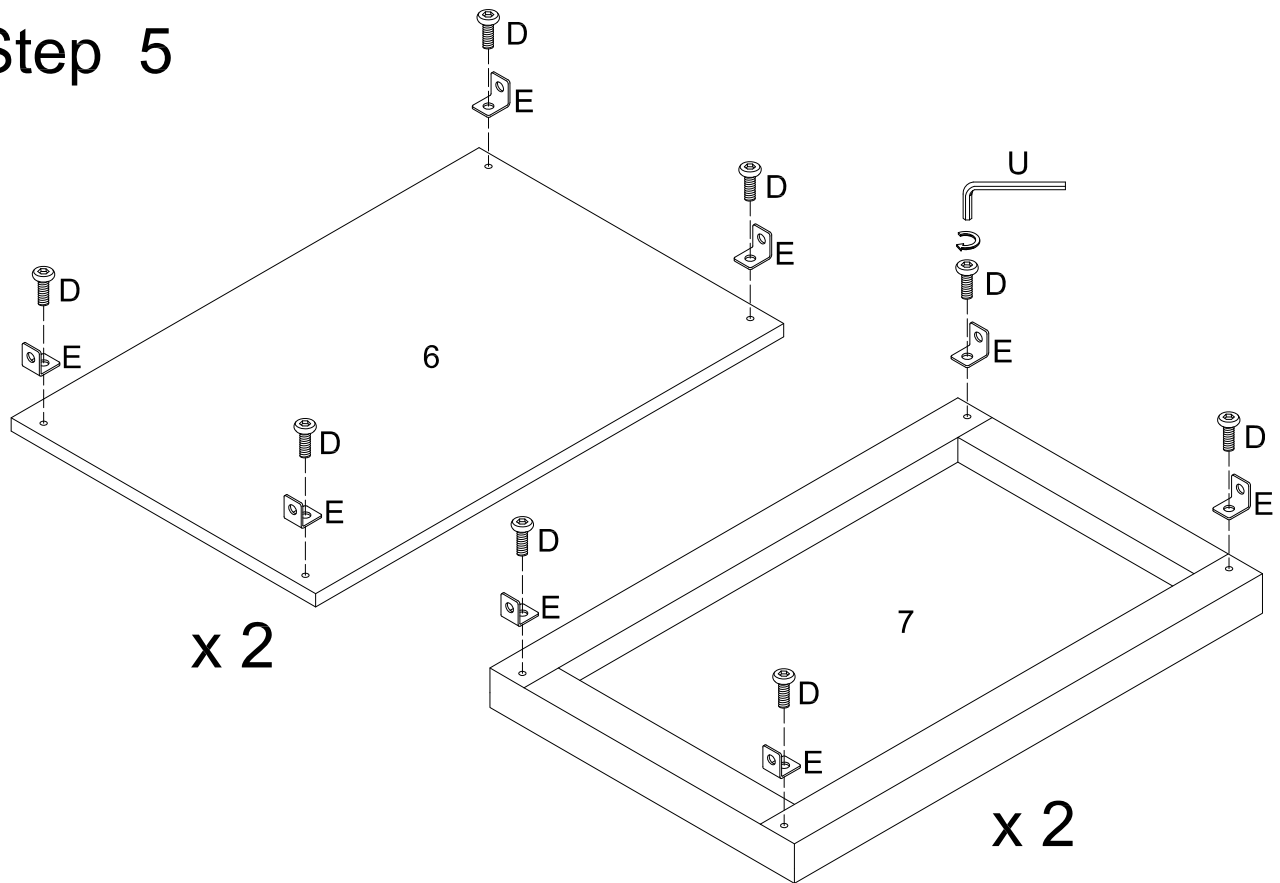


Use wrench (U) and bolts (D) to secure the L shape bracket (E) to the shelving board (6)(7).

Step 6

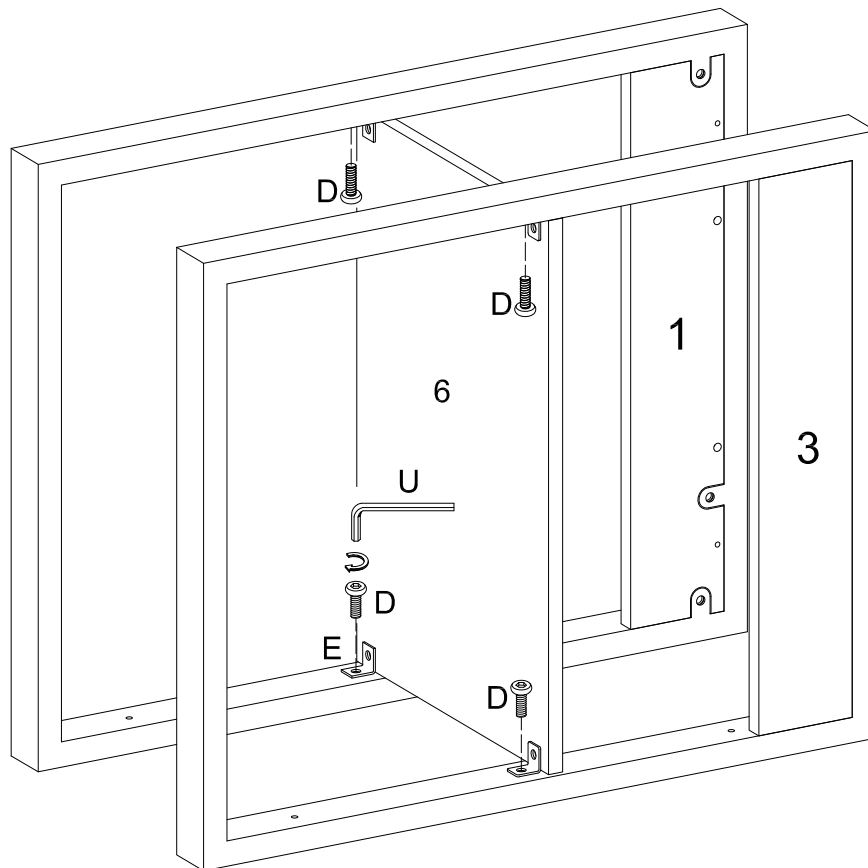


Use wrench (U), bolts (D) to secure the L shape bracket (E) to the shelving board (6) and Side Frame (1)(3).

Step 7

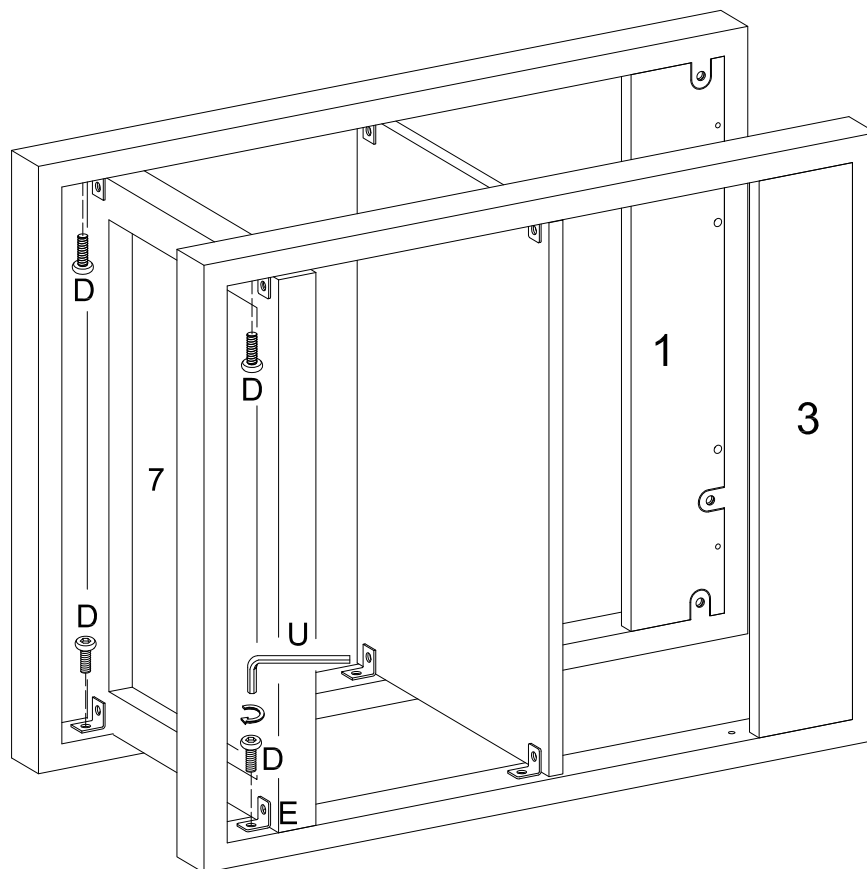


Use wrench (U), bolts (D) to secure the L shape bracket (E) to the shelving board (7) and the Side Frame (1)(3).

Step 8

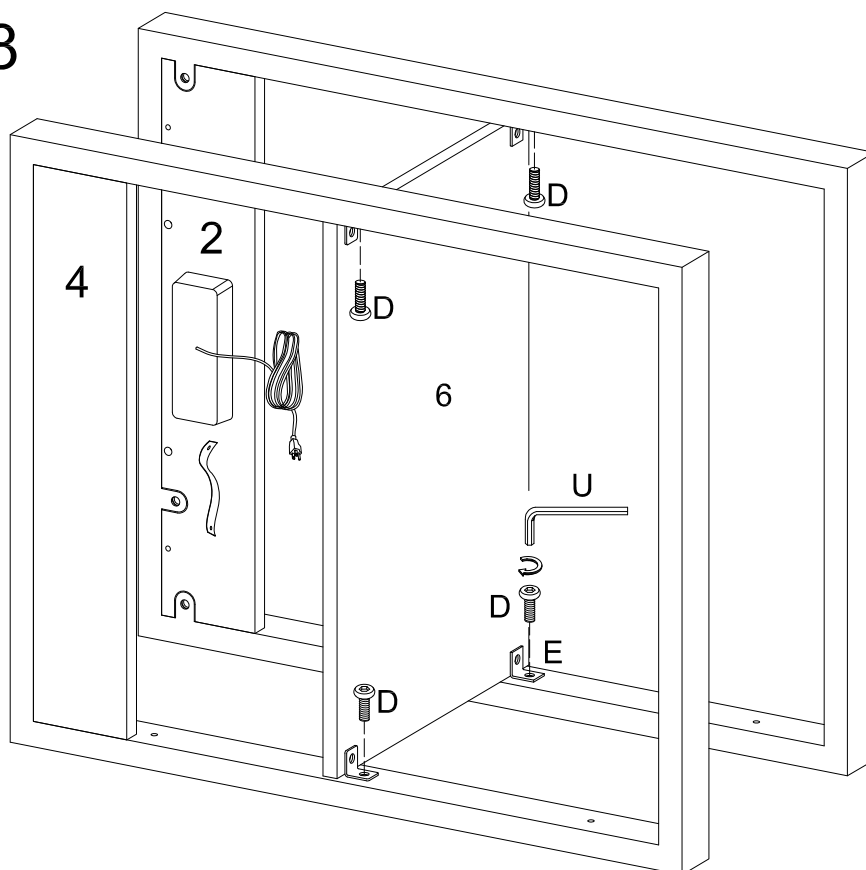



Use wrench (U), bolts (D) to secure the L shape bracket (E) to the shelving board (6) and Side Frame (2)(4).

Step 9

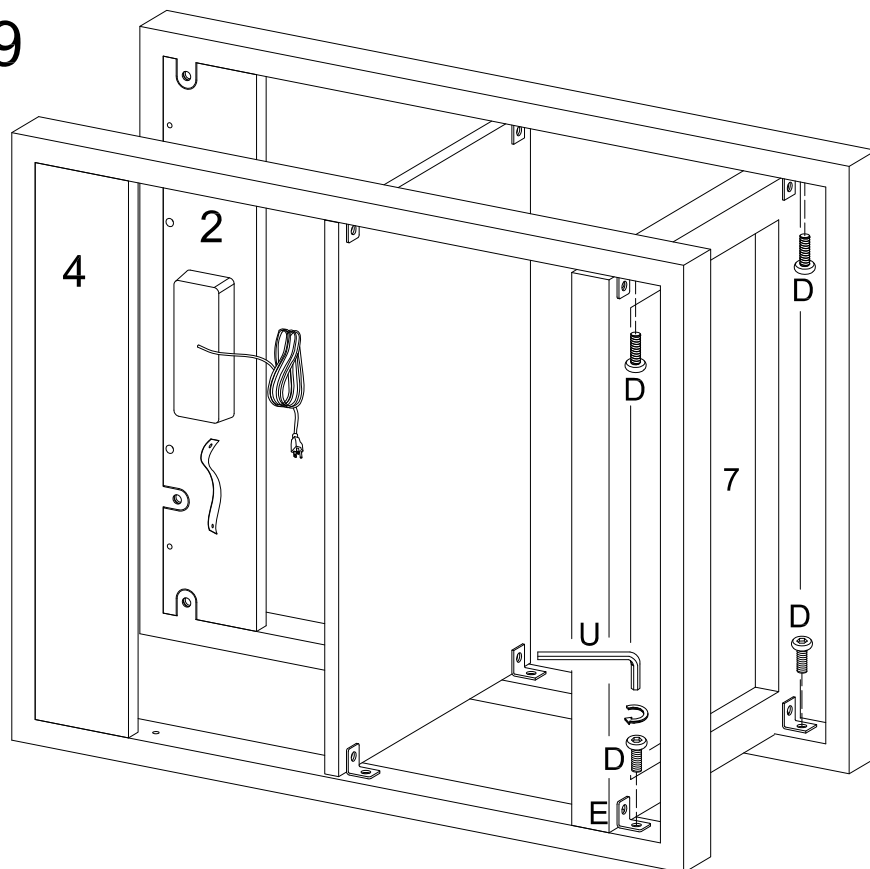


Use wrench (U), bolts (D) to secure the L shape bracket (E) to the shelving board (7) and the Side Frame (2)(4).

Step 10

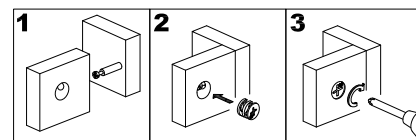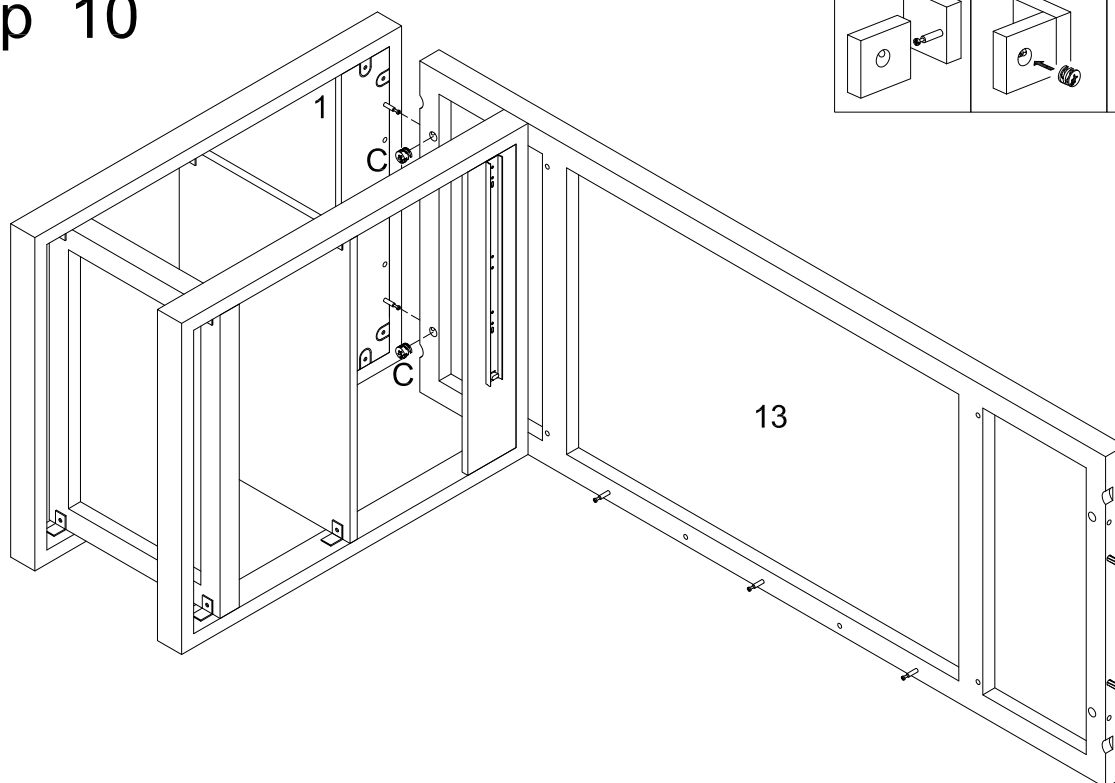


Use cam locks (C) to secure the Table Top (13) to the Side Frame (1).

Step 11

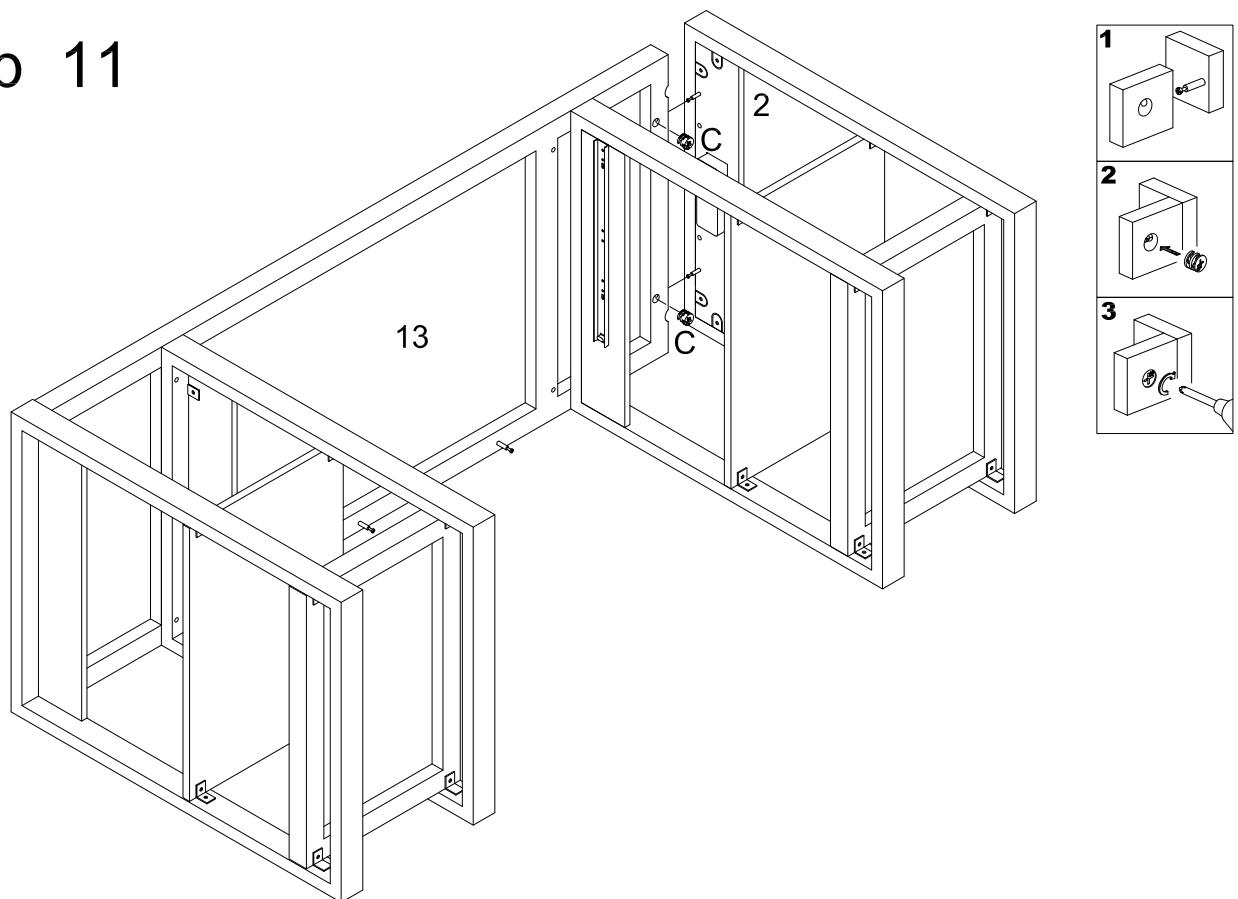


Use cam locks (C) to secure the Table Top (13) to the Side Frame (2).

Step 12

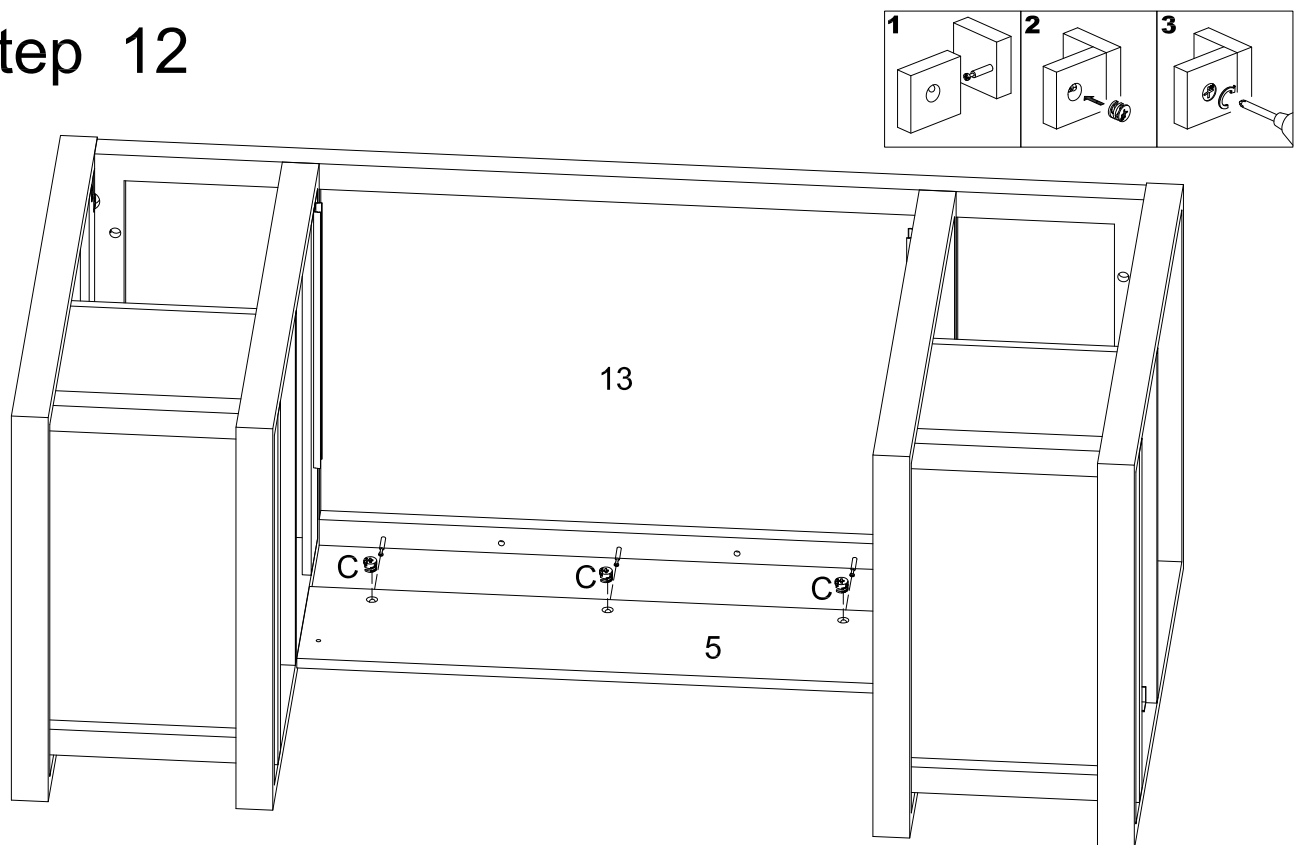


Use Cam Lock (C) to secure the Back Panel (5) to the Table Top (13).

Step 13

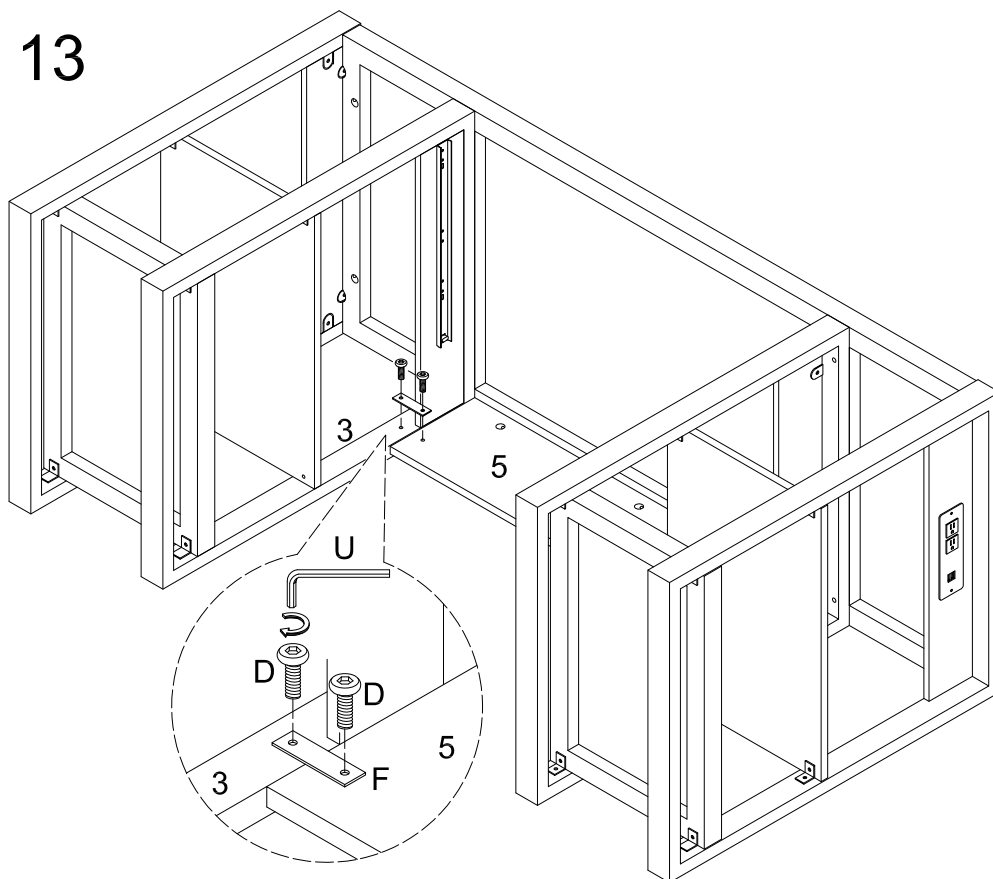


Use bolts (D), wrench (U) to secure the Flat Bracket (F) to the Side Frame (3) and Back Panel (5).

Step 14

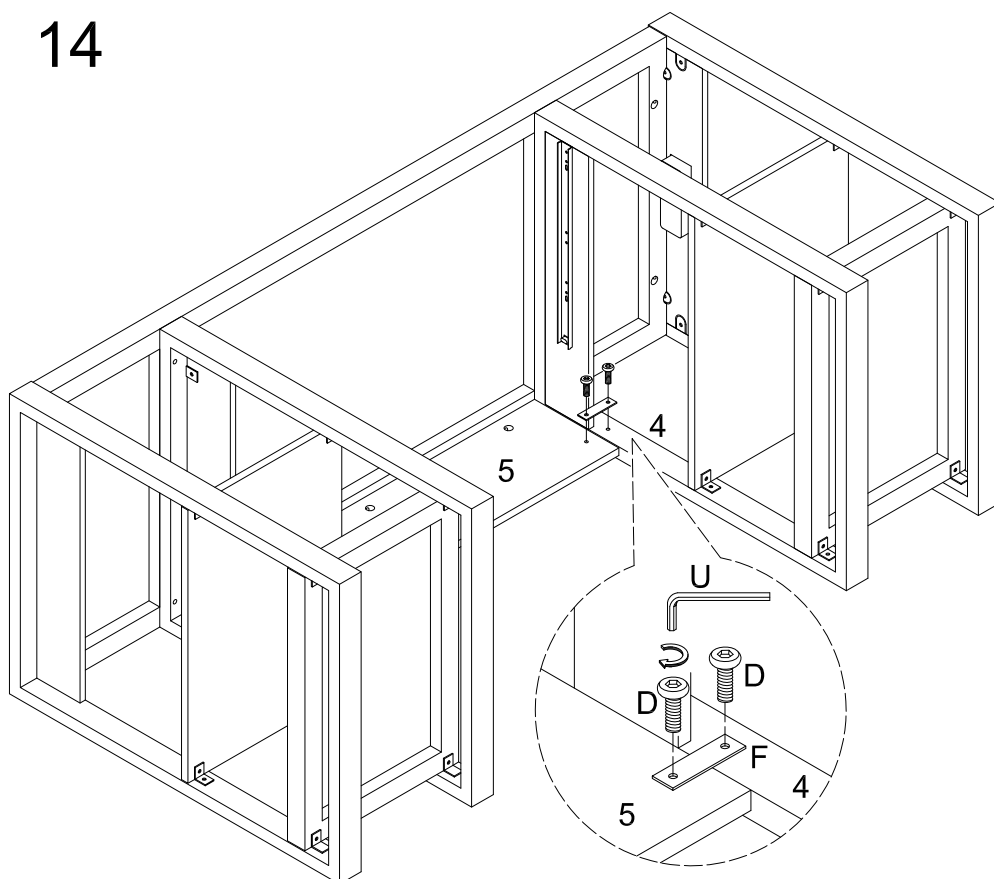


Use bolts (D), wrench (U) to secure the Flat Bracket (F) to the Side Frame (4) and Back Panel (5).

Step 15

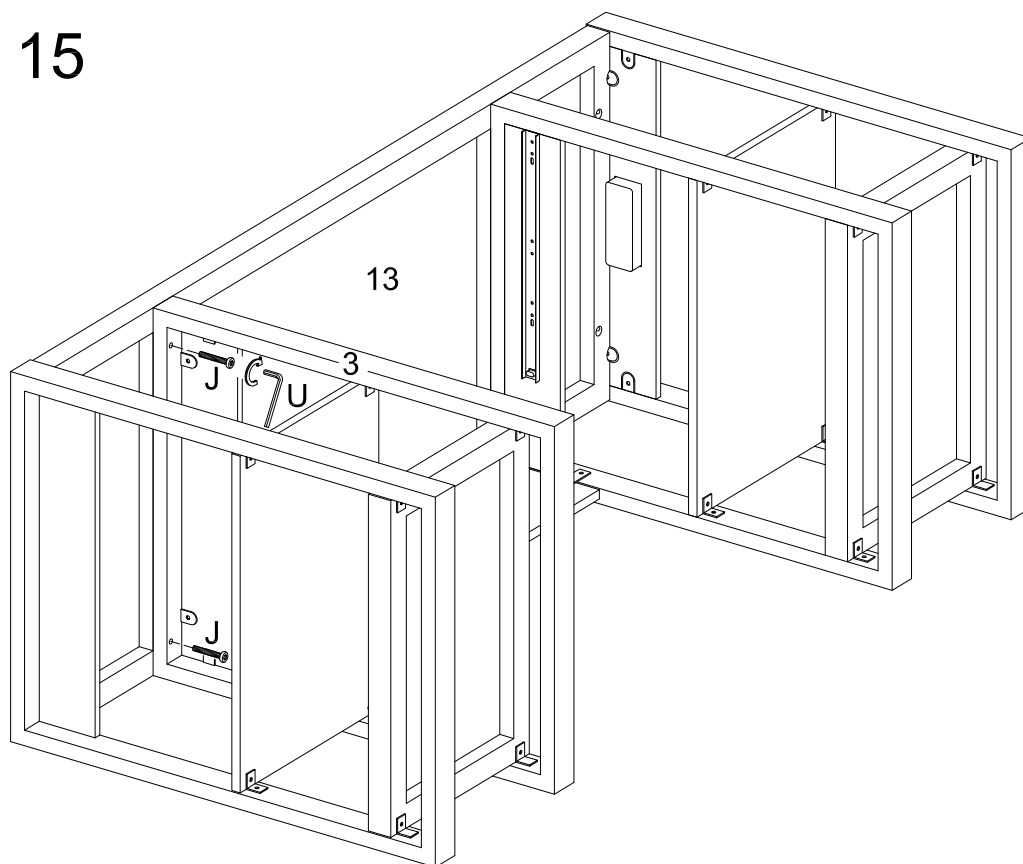



Use bolts (J), wrench (U) to secure Side Frame (3) to the Table Top (13).

Step 16

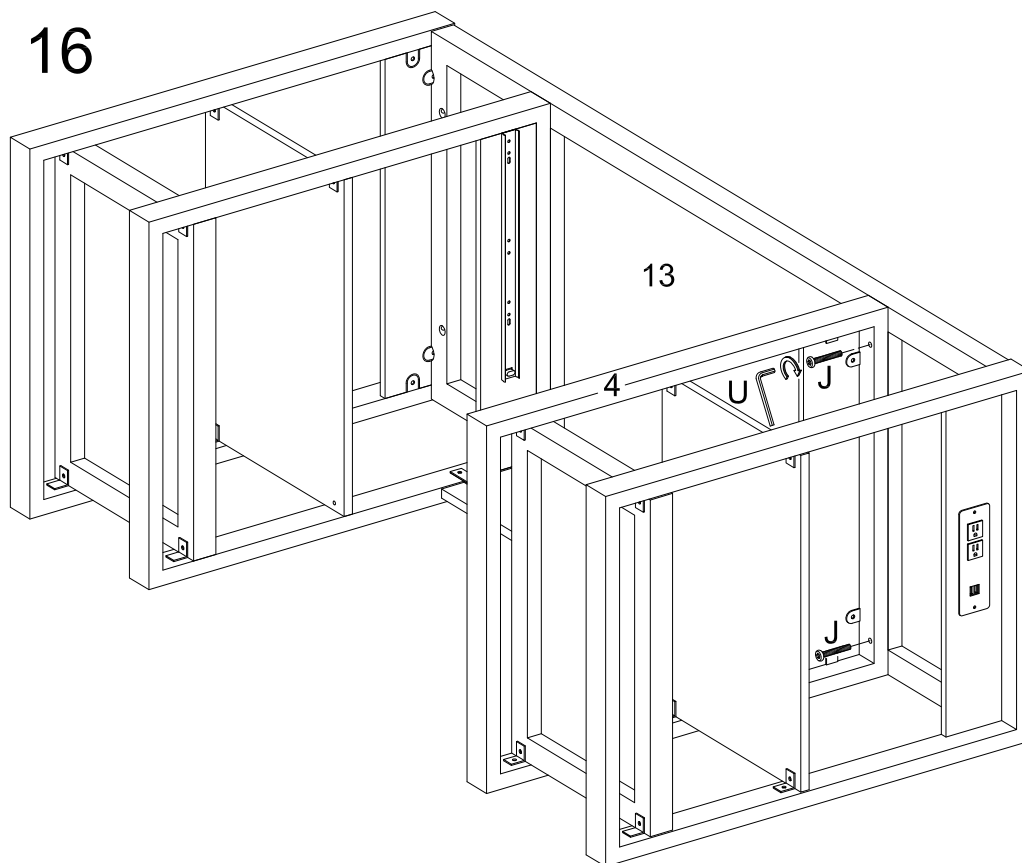


Use bolts (J), wrench (U) to secure Side Frame (4) to the Table Top (13).

Step 17

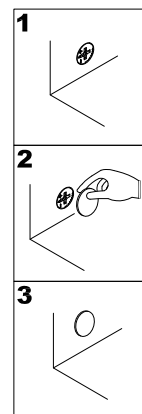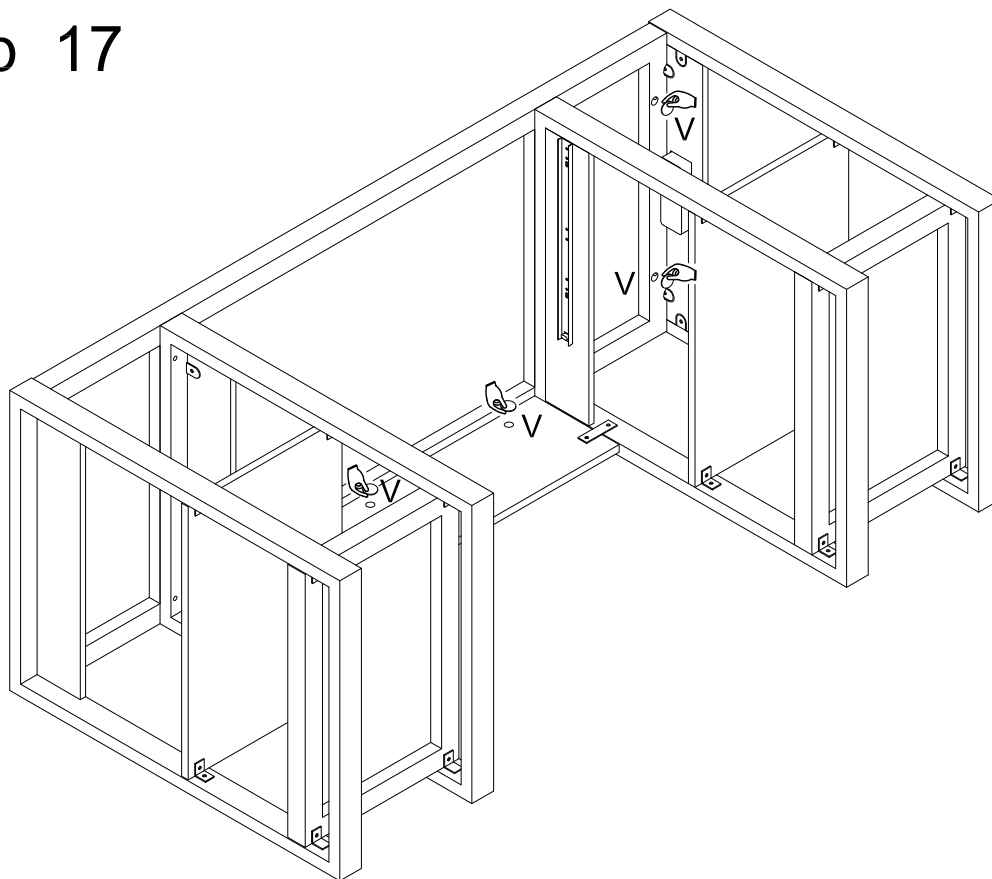


Use stickers (V) to cover the Cam Locks.

Step 18

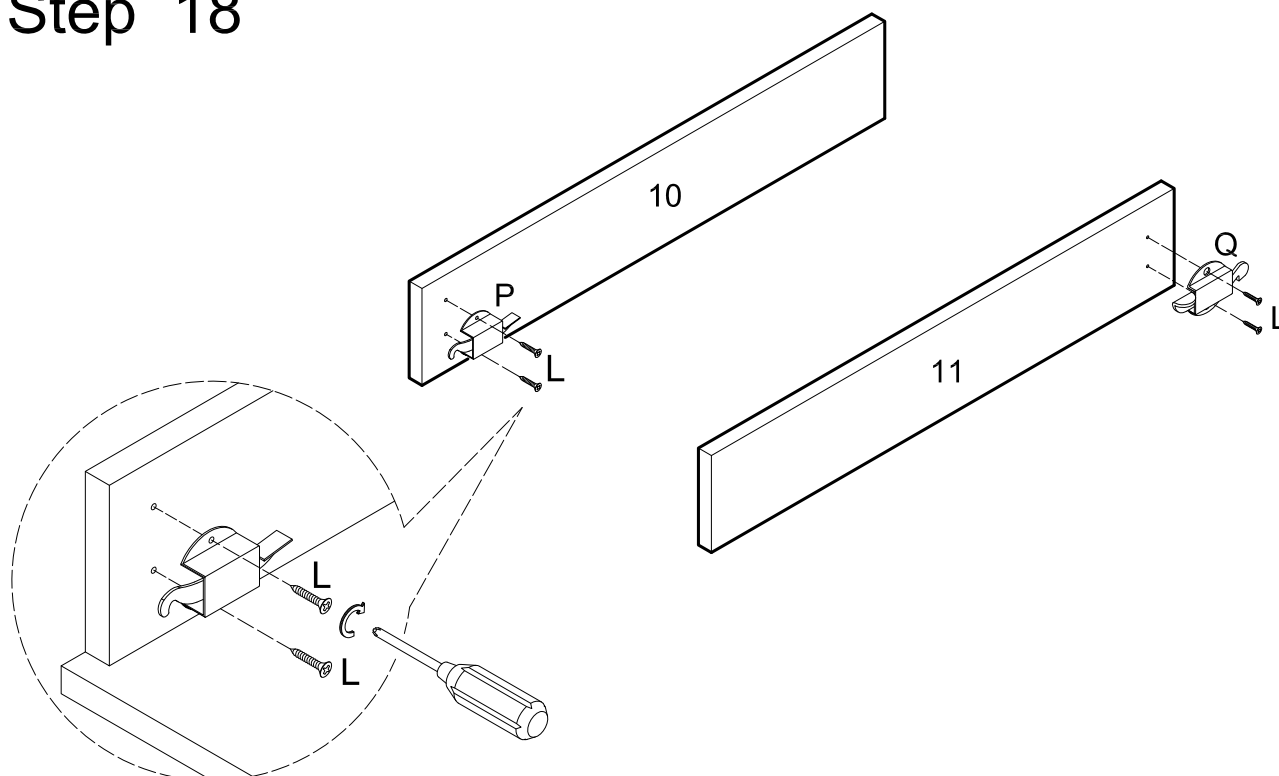


Use screws (L) to secure the Hinge Lock (P) to the drawer side panel (10).
Use screws (L) to secure the Hinge Lock (Q) to the drawer side panel (11).

Step 19

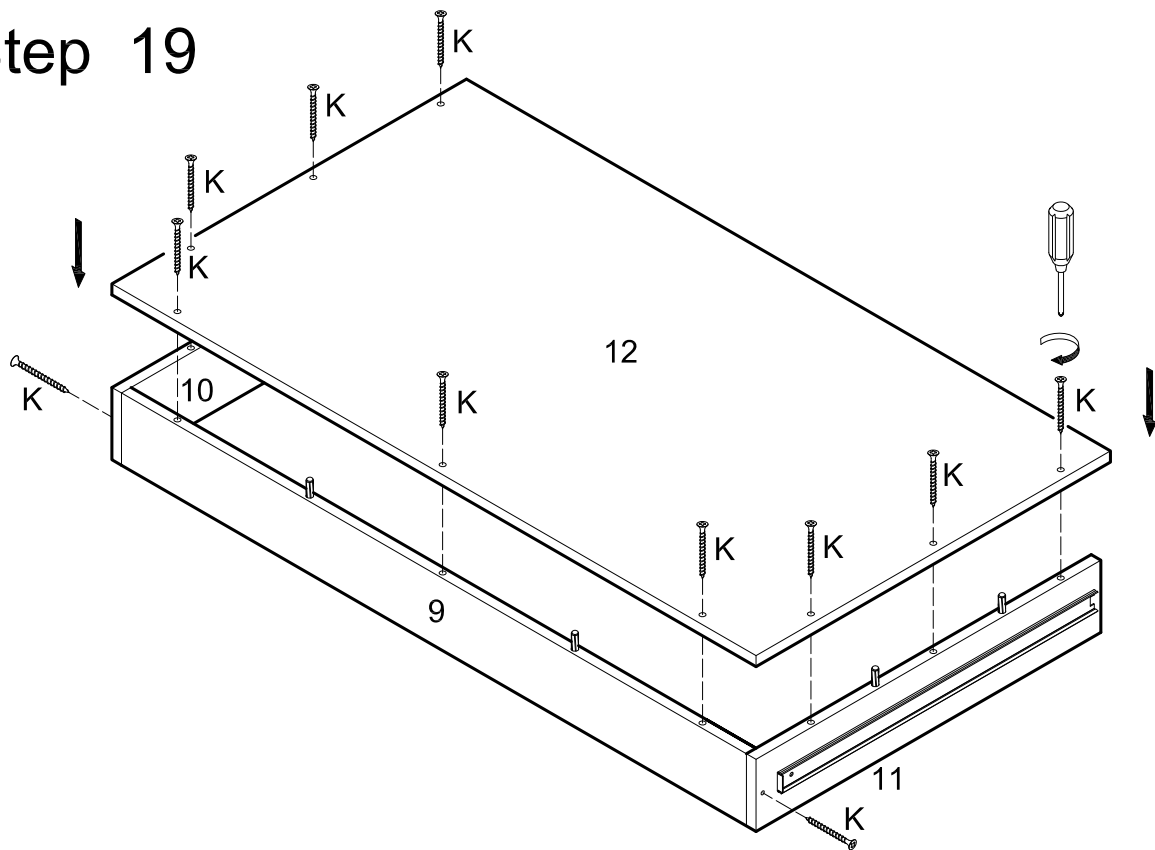


Using screws (K) assemble the bottom drawer panel (12) to the drawers panels (9)(10)(11).

Step 20

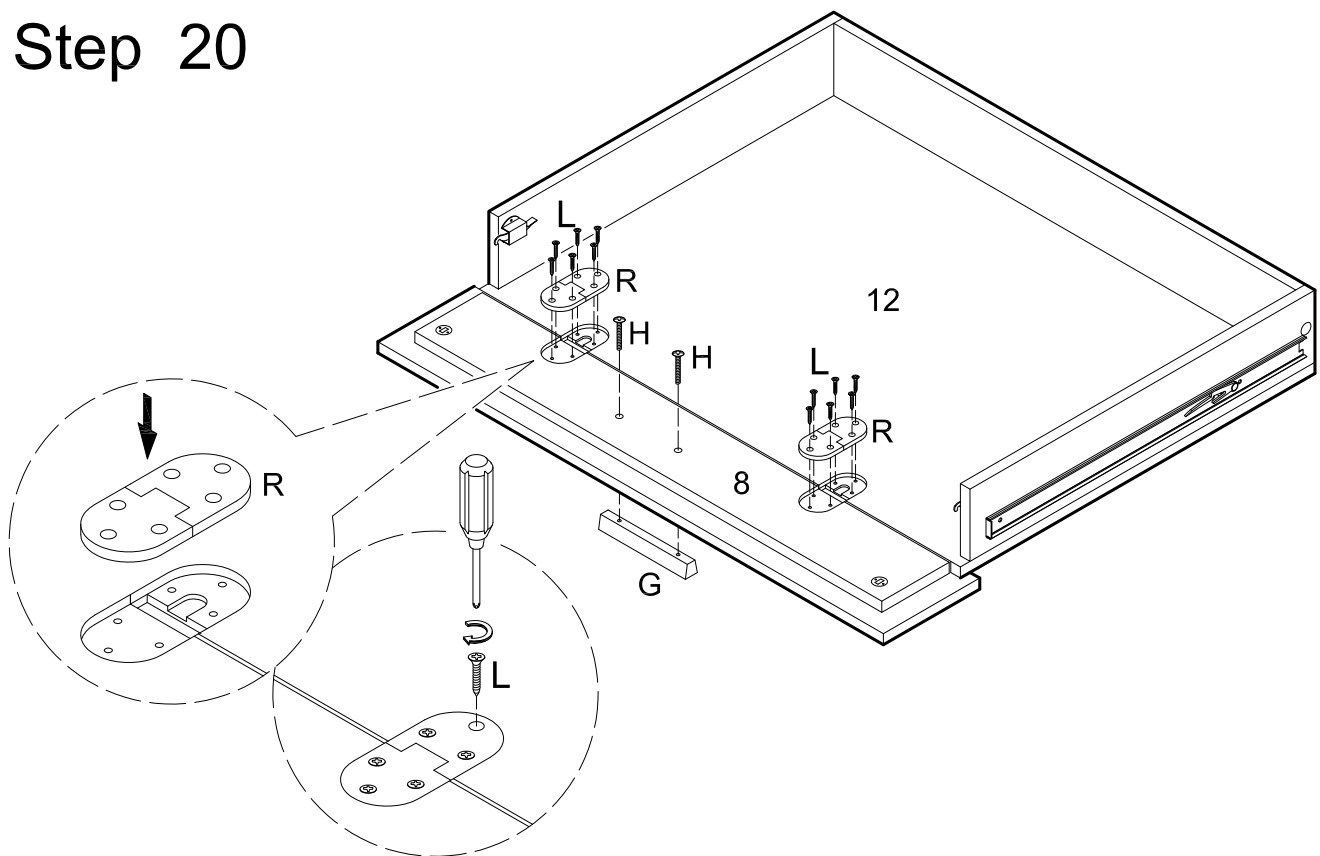


Use screws (L) to secure Hinge (R) to drawer front panel (8) and drawer bottom panel (12).
Use bolts (H) to assemble the drawer handle (G) to the drawer front panel (8).

Step 21

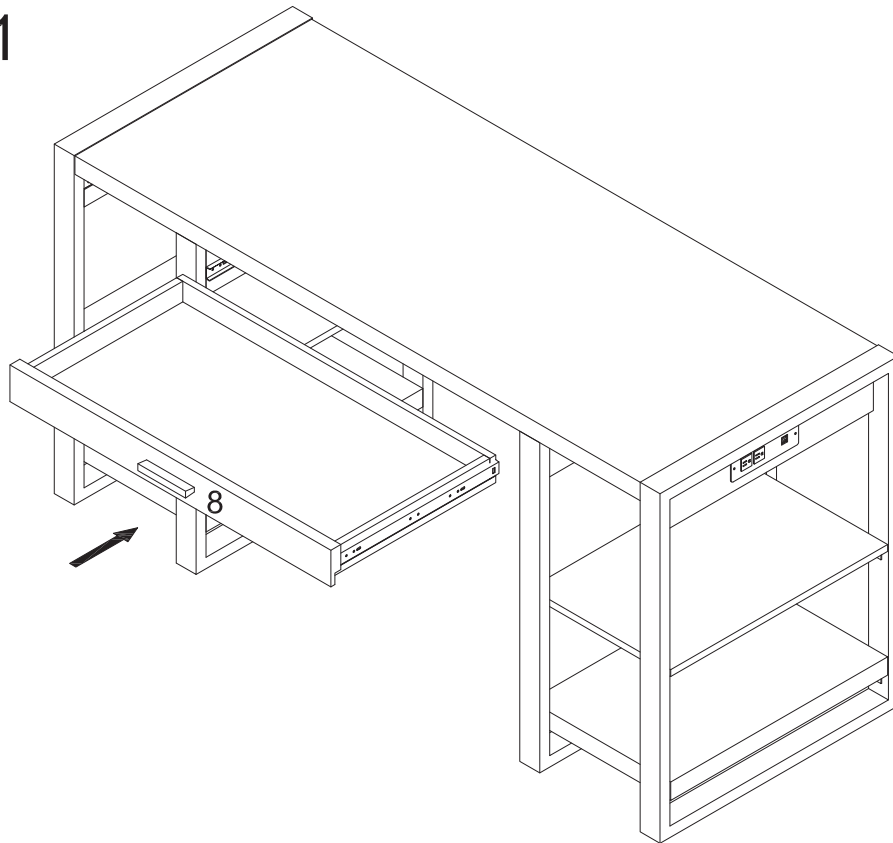

Slide drawer (8) into the desk using tray arms as guides.

Step 22

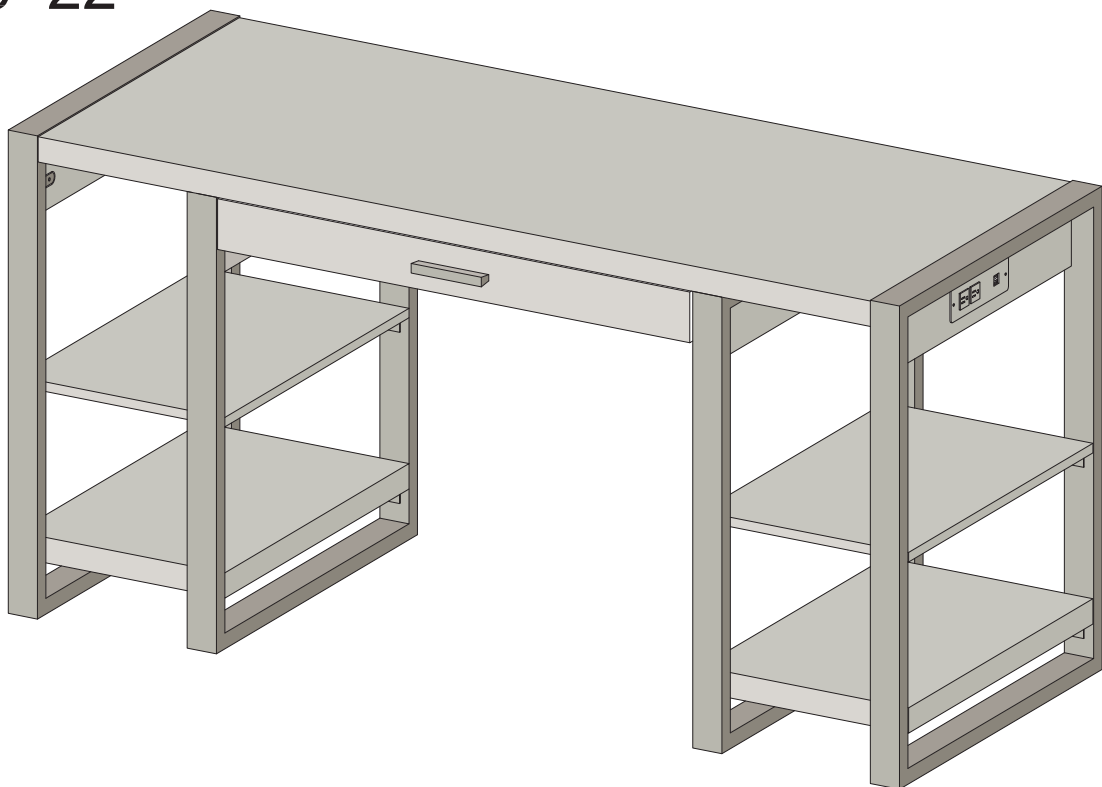

Final Assembly