




# FLAT PANEL BED DRAWER


## TWIN FULL > QUEEN KING ASSEMBLY INSTRUCTIONS

Thank you for choosing our new Bed drawer.  
This practical design offers the utmost in versatility.


Before assembling your Flat panel bed drawer, please read through these instructions carefully. Familiarize yourself with the different parts.

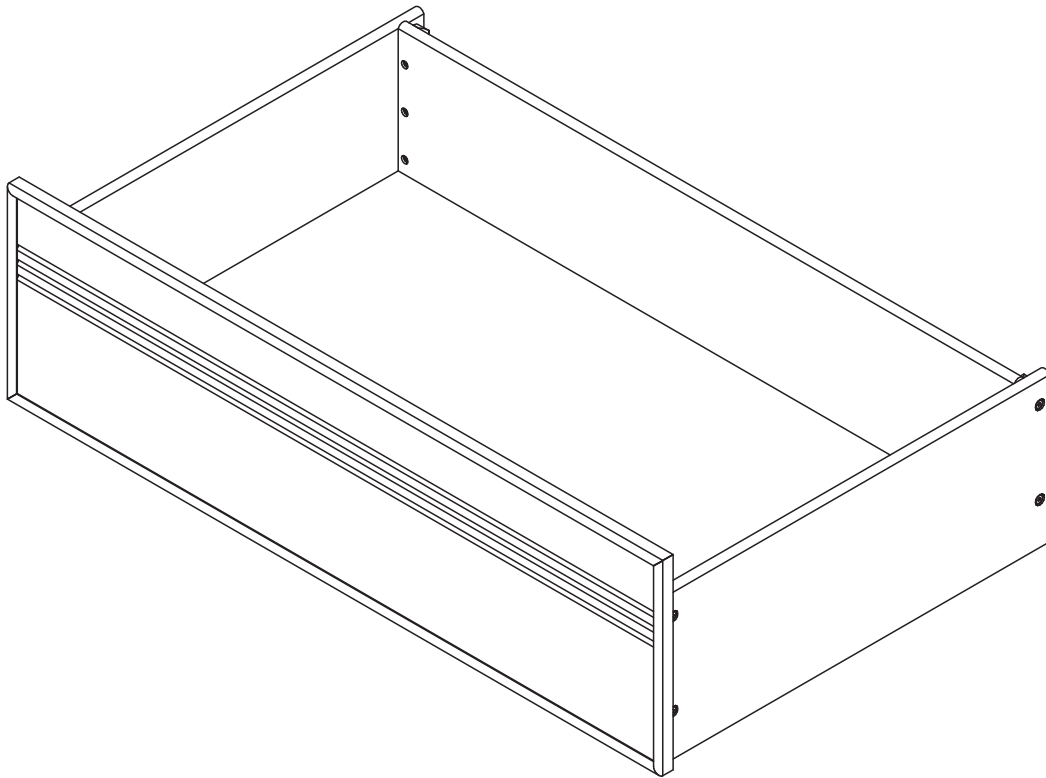

Adult Assembly

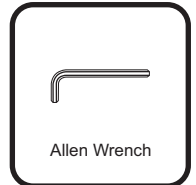

Allen Wrench

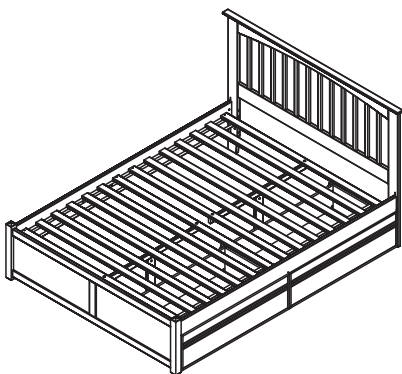


BED WITH BED DRAWER

## HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH OR JCB ARE DAMAGED DURING ASSEMBLY.

**A**




JCB M6 X 1" ( 25mm ) - 16 pcs  
Spare - 2 pcs

**B**



Allen Wrench - 1 pc  
Spare - 1 pc


# PARTS LIST

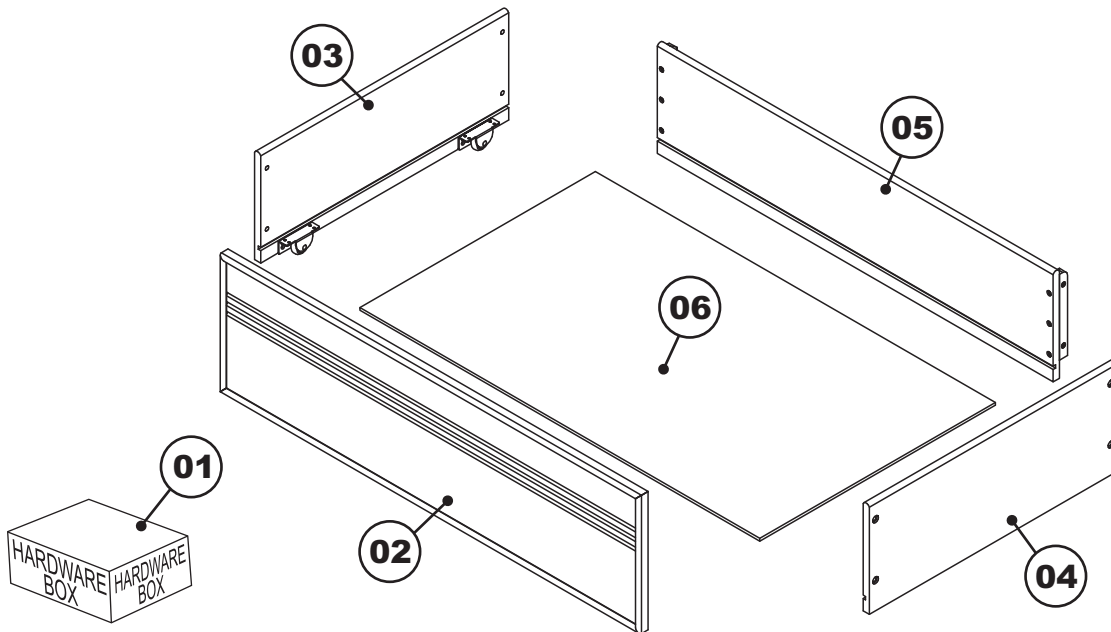

|           |                         |              |           |                          |              |
|-----------|-------------------------|--------------|-----------|--------------------------|--------------|
| <b>01</b> | <b>HARDWARE</b>         | <b>1 BOX</b> | <b>04</b> | <b>RIGHT DRAWER SIDE</b> | <b>2 PCS</b> |
| <b>02</b> | <b>DRAWER FACE</b>      | <b>2 PCS</b> | <b>05</b> | <b>DRAWER BACK</b>       | <b>2 PCS</b> |
| <b>03</b> | <b>LEFT DRAWER SIDE</b> | <b>2 PCS</b> | <b>06</b> | <b>DRAWER PANEL</b>      | <b>2 PCS</b> |

## STEP 1

Lay the drawer face (02) on smooth, flat surface so the groove are facing upwards. Fit the drawer side (03)(04) to drawer face (02), Use JCB M6 X 1" (A) to attach the drawer side in place, but don't fully tighten these yet. Leave them a bit loose to make fitting the drawer back easier.

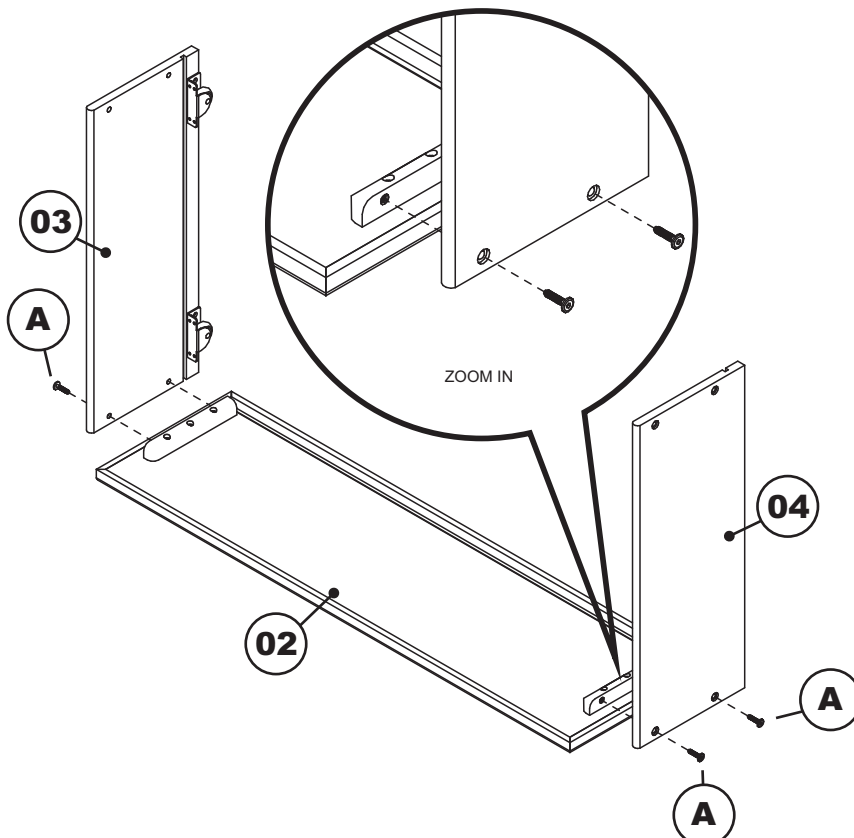

Adult Assembly

**A**



JCB M6 X 1"


**B**



Allen Wrench




## STEP 2

Guide the drawer panel (06) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the bottom (in the drawer face) before fitting the drawer back.

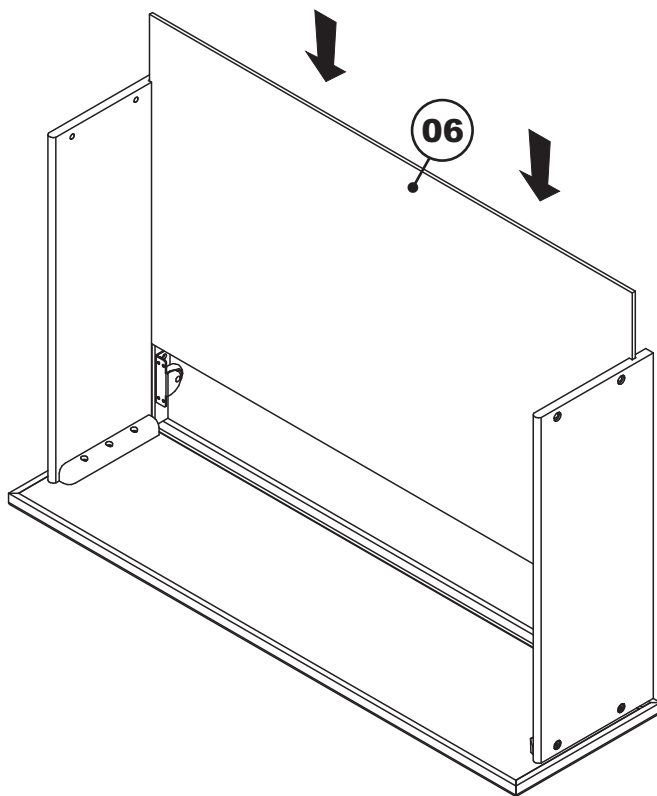

## STEP 3

Attach drawer back (05) to the bed drawer assemblies as shown bellow. Using JCB (A ) Tighten with allen wrench (B). After this tighten all JCB to the drawer face. Repeat step 1 through 3 for second storage drawer.

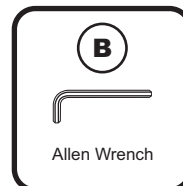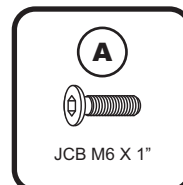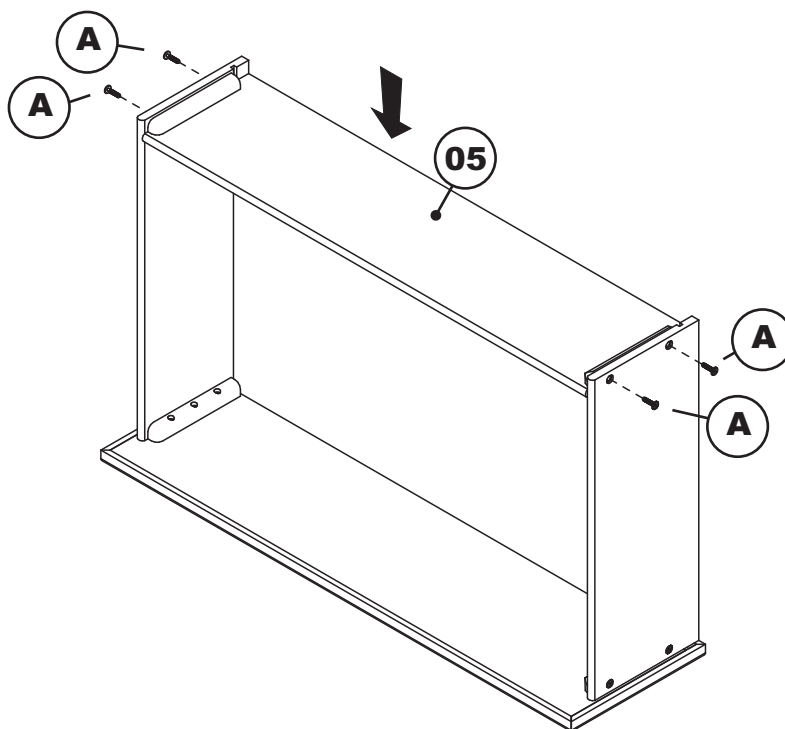

**Congratulations !**

Your Flat panel bed drawer is now ready for use.