

QUEEN SIZE PU BED

ASSEMBLY INSTRUCTIONS




ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



Warning!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

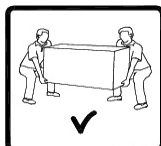

ASSEMBLY TIME 20 MINUTES

PARTS IDENTIFICATION

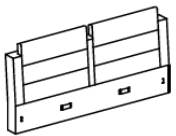

B1 (BOX 1)





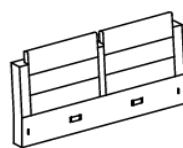

AN		HEADBOARD	1PC
BN		ROLL SLAT (14PCS)	1SET

B2 (BOX 2)

CN		FOOTBOARD PANEL	1PC
----	---	-----------------	-----




B3 (BOX 3)



DN		LEFT BED RAIL	1PC
EN		RIGHT BED RAIL	1PC

FN		FOOTBOARD LEGS	2PCS
GN		BED SLAT SUPPORT WITH LEVELER	3PCS
HN		FOOTBOARD SUPPORT WITH LEVELER	1PC
IN		CENTER RAIL	1PC
AN		300345Q (B1) *FROM BOX 1 HEADBOARD	1PC
FBN		300345Q (B2&B3) *FROM BOX 2 & BOX 3 FOOTBOARD COMPLETE	1PC

HARDWARE IDENTIFICATION

Z-B3 (BOX 3) - Hardware pack is located in 300345Q (B3)

1		SHORT FLAT HEAD SCREW	12PCS
2		LONG FLAT HEAD SCREW	31PCS
3		BOLT	3PCS


4		SMALL ALLEN WRENCH	1PC
5		BIG ALLEN WRENCH	1PC

NOTE : PHILLIPS HEAD SCREW DRIVER IS REQUIRED IN THE ASSEMBLY PROCESS. HOWEVER, MANUFACTURER DOES NOT PROVIDE THIS ITEM.


ASSEMBLY INSTRUCTIONS

(B2 & B3) - BOX 2 & BOX 3


STEP 2

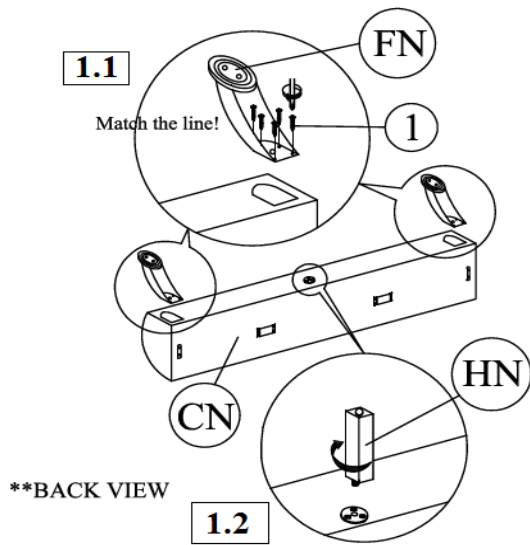


(B1 - B3) - BOX 1 TO BOX 3 STEP 1

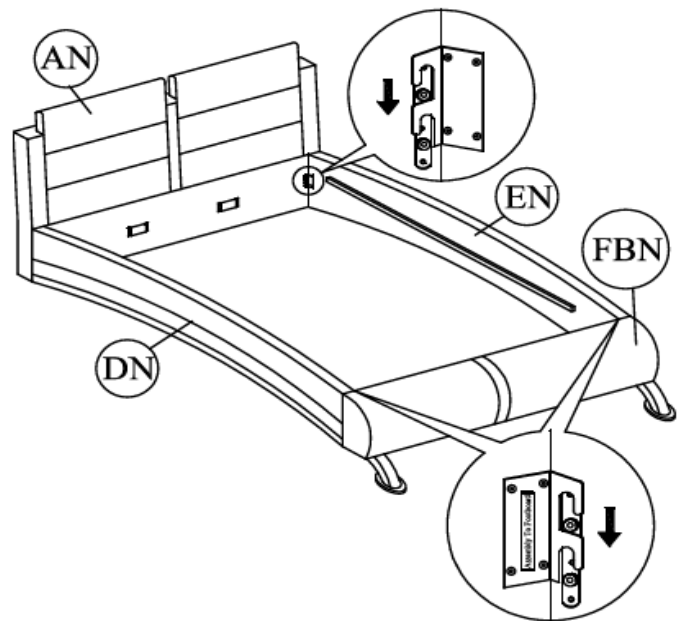

STEP 3

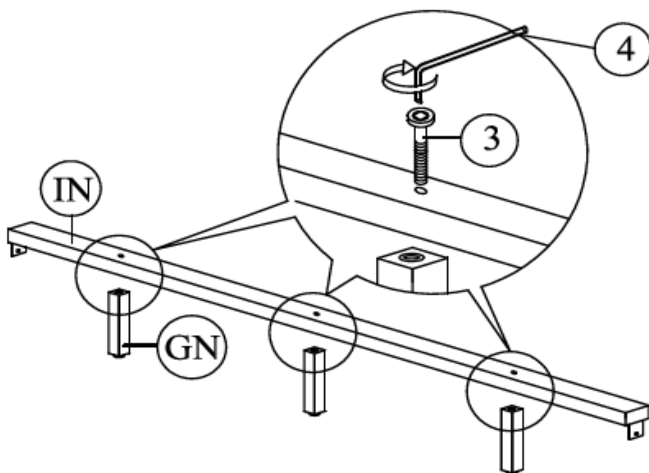


STEP 4

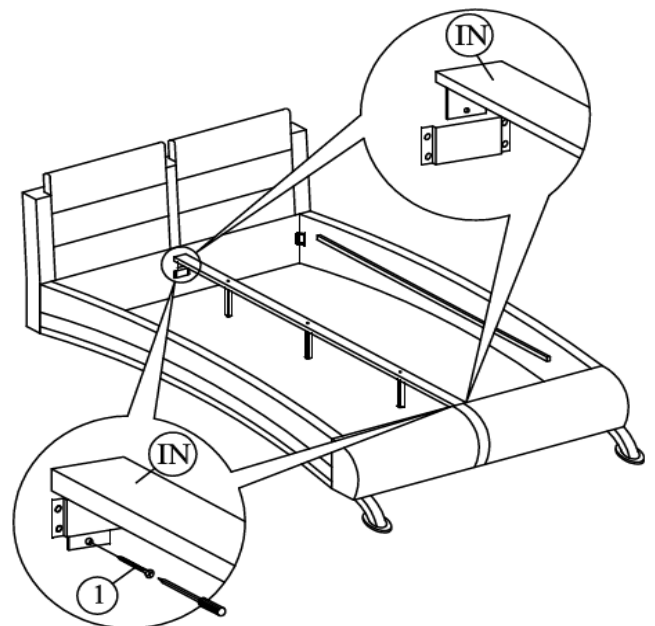

ASSEMBLY INSTRUCTIONS

STEP 5

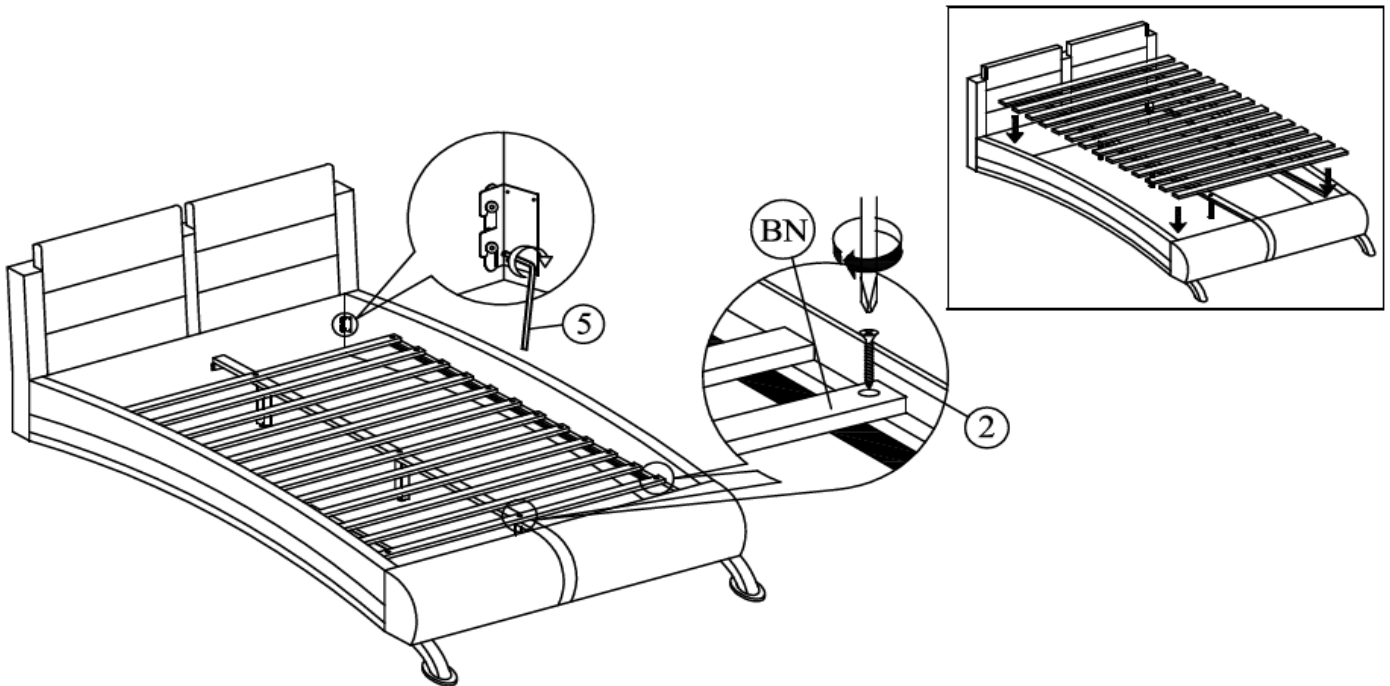

STEP 6

