

STEP 4

Attach Panel (B) to the assembled unit with Small Round Leg (7), Round Pole (5) and Screw (3).

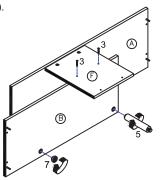


STEP 5

Attach Panel (C) with Small Round Leg (7) and Screw (3).

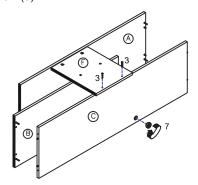


STEP 6

6.1 Attach Right Side Panel (E) with Screw (3). 6.2 Lock mini fix cam (2) as shown.

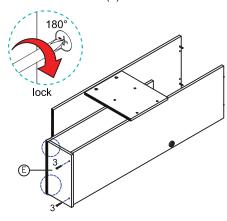


STEP 7

- 7.1 Attach Left Side Panel (D) with Screw (3) and lock the Mini Fix Cam (2), as shown.
- 7.2 Cover the Screw with Screw Sticker (8).

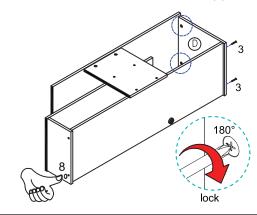

Recommended Maximum Weight

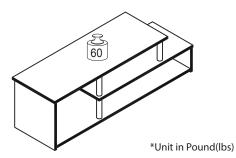

WARNING:


- >This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.
- >DO NOT allow children to climb on unit.
- >Put heavier items on lower shelves.




Assembly Instruction

Low Rise TV Stand






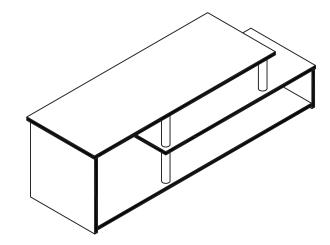

No	Hardware List	Qty	
1	Mini Fix Bolt	Î	6pcs
2	Mini Fix Cam	3 C	6pcs
3	Screw	~	8pcs
4	Dowel		8pcs
5	Round Pole		3pcs
6	Insert Cap	9	2pcs
7	Small Round Leg	9	2pcs
8	Screw Sticker	00	4pcs
9	Nail Leg	Q.	6pcs

Parts List	Qty
Top Panel	1pc
Shelf Panel	1pc
Bottom Panel	1pc
Left Side Panel	1pc
Right Side Panel	1pc
Back Panel	1pc
	Top Panel Shelf Panel Bottom Panel Left Side Panel Right Side Panel

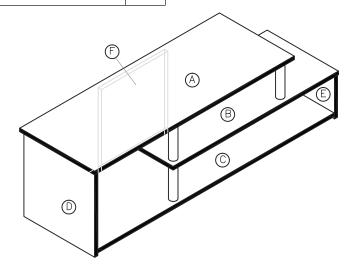


USEFUL HINTS BEFORE YOU START:

- 1. Read each step carefully before starting.
- 2. It is important that each step is performed in correct order to avoid difficulties.
- 3. Identify, sort and count the parts before assembly.
- 4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
- 5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
- 6. Using uncompatible hardware might cause damage to product.


STEP 1

- 1.1 Insert Mini Fix Bolt (1) into Panel (A&B).
- 1.2 Press Insert Cap (6) into Panel (A) with a little pressure .
- 1.3 Insert Dowel (4) into Panel (C,D&E).
- 1.4 Insert Mini Fix Cam (2) and Nail Leg (9) into Panel (D,E&F), as shown.

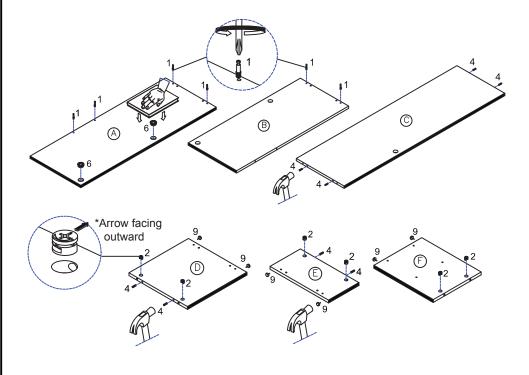

STEP 2

Attach Round Pole (5) to Panel (A).

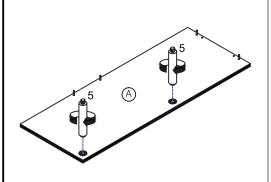

STEP 3

Attach Panel (F) to assembled unit and lock the Mini Fix Cam (2), as shown.

