




SLAT KIT

ASSEMBLY INSTRUCTIONS (TWIN SINGLE)

Before assembling your Bed slat kit, please read through these instructions carefully. Familiarize yourself with the different parts.
Please note that you will require a Phillips Head Screwdriver.

PARTS LIST

01 SLAT KIT 1 SET

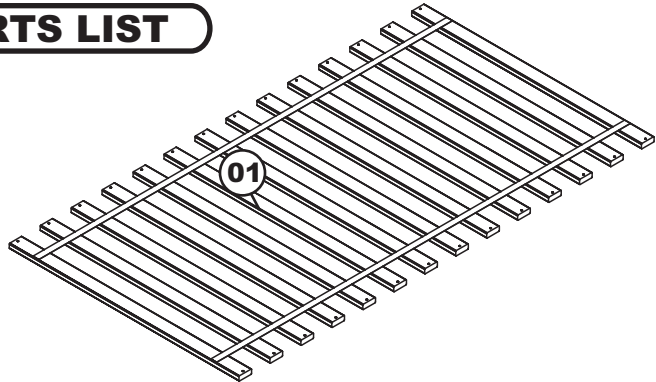

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE WOOD SCREW ARE DAMAGED DURING ASSEMBLY.

A



1 1/4" Wood Screw - 28 pcs
Spare - 2 pcs
For Slat Kit to Ledger Strip


HARDWARE

Step 1


Assemble bed frame according to bed assembly instructions.

Step 2

Lay the slat kit onto the bed or twin upper bunk .

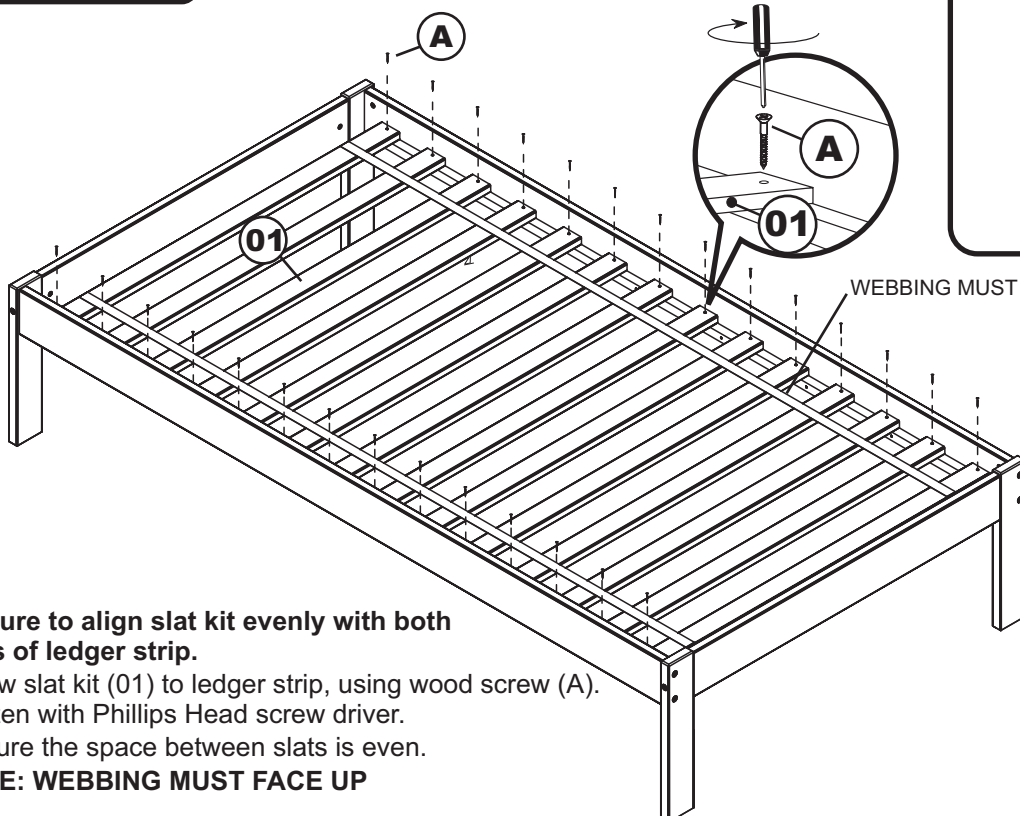

TWIN UPPER BUNK

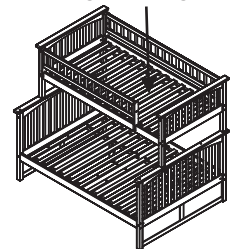

Be sure to align slat kit evenly with both ends of ledger strip.

Screw slat kit (01) to ledger strip, using wood screw (A).
Tighten with Phillips Head screw driver.


Be sure the space between slats is even.

NOTE: WEBBING MUST FACE UP



Adult Assembly

A



Wood Screw