


ASSEMBLY INSTRUCTION


A	BOLT $\phi 1/4$ "X3"	8 pcs
B	LOCK WASHER $\phi 5/16$ " X 1/2"	22 pcs
C	FLAT WASHER $\phi 5/16$ "X3/4"	22 pcs
D	ALLEN KEY 4MM X 23MM X 59MM	1 pcs
E	HEX WRENCH 12MM X 90 MM	1 pcs
F	HEX NUT $\phi 5/16$ " X 12 MM	8 pcs
G	BOLT $\phi 1/4$ " X 1-1/2"	6 pcs

STEP1

ATTACH THE TWO FRONT LEG USING
4 PCS HEX NUT(F), 4 PCS SMALL
WASHER(B) AND 4 PCS FLAT
WASHER(C).

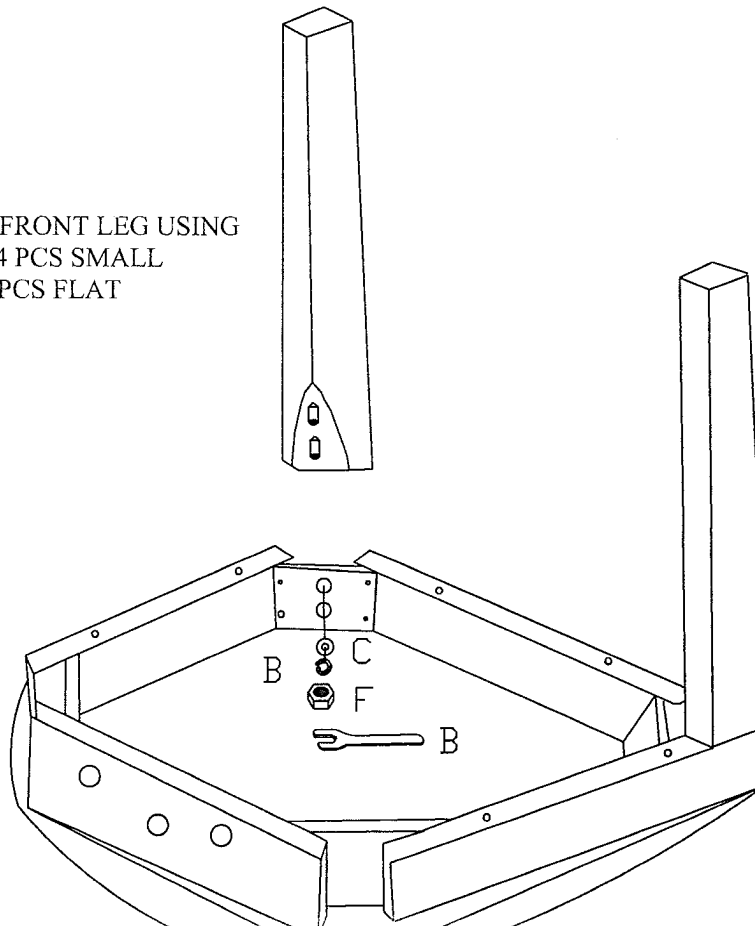


STEP2

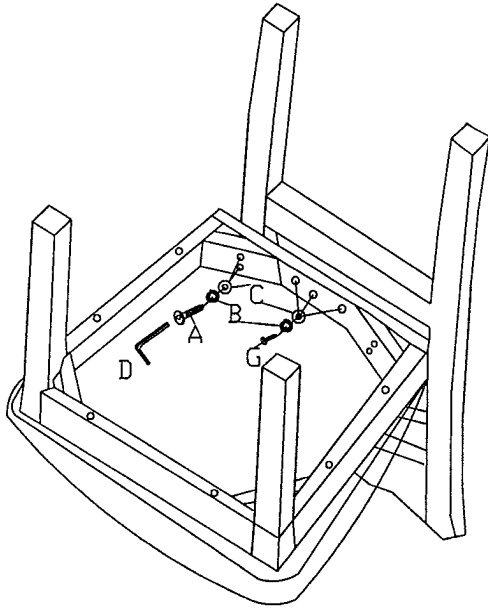

- CONNECT THE SEAT FRAME TO THE BACK USING 4 PCS BOLTS(A) 4 PCS LOCK WASHER(B) AND 4 PCS FLAT WASHER(C)
- CONNECT THE SEAT FRAME TO THE BACK USING 3 PCS BOLTS(G) 3 PCS LOCK WASHER(B) AND 3 PCS FLAT WASHER(C)

STEP3

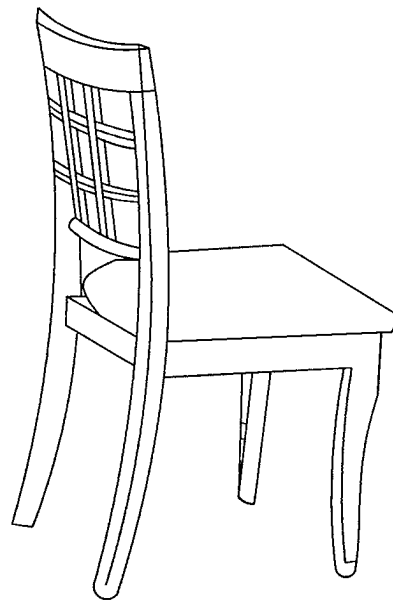

NOTE: DO NOT TIGHTEN UNTILL COMPLETELY ASSEMBLE.