
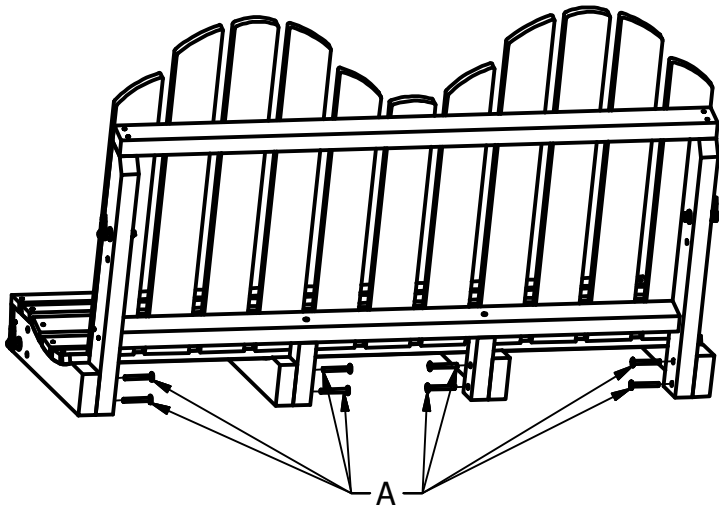




Classic Porch Swing

Assembly Guide

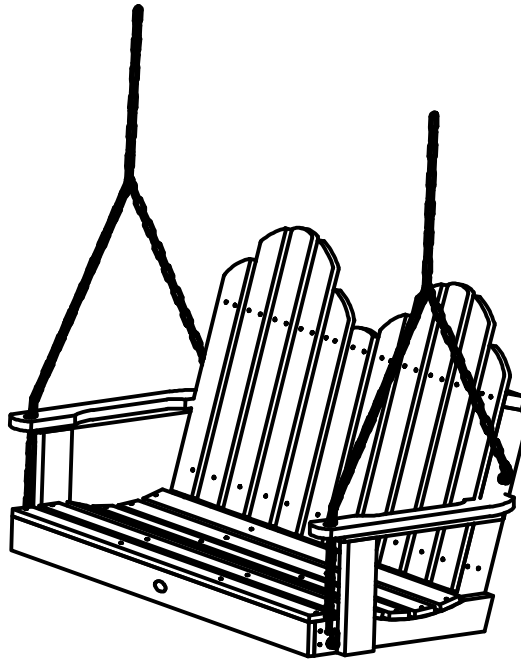

- 1) Using Two A Bolts on each side, attach Swing Back to Swing Seat.
- 2) Using Two A Bolts for each brace, attach Back Braces to Swing Seat.

HARDWARE

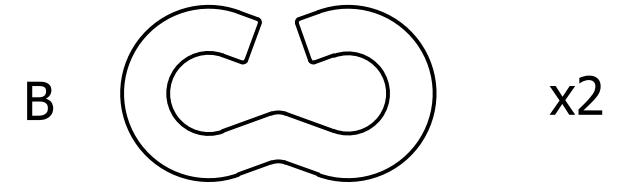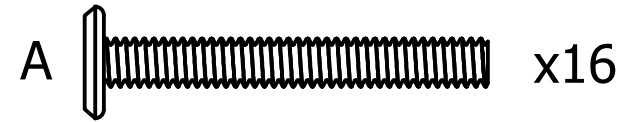


IMPORTANT!

DO NOT fully tighten the bolts until all bolts are started. Once all bolts are inserted, go back & tighten all the bolts.


Retain these instructions for future reference

INCLUDED TOOLS

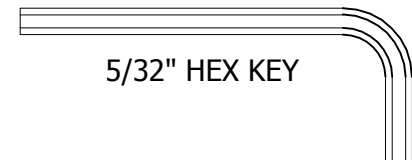

Classic Porch Swing



Assembly Guide

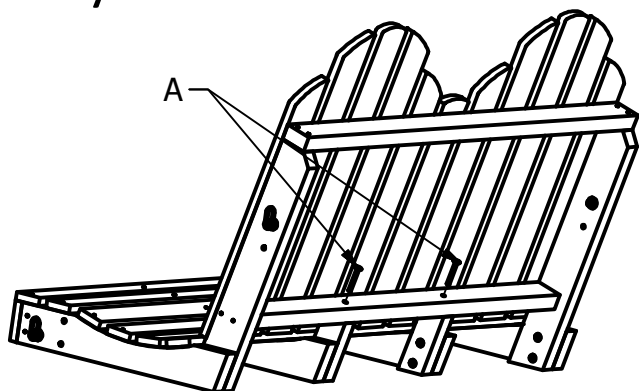

3) Attach Back Braces to Swing Back with Two A Bolts.

4) Attach Arm Assembly to Swing Seat using Two A Bolts in the front. Attach Swing Back to Arm using One A Bolt.

5) Repeat on other side.

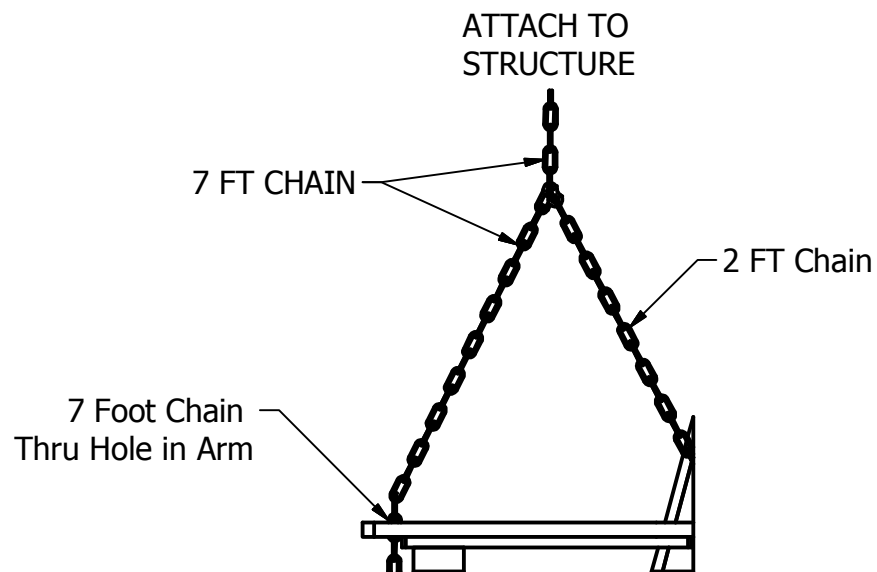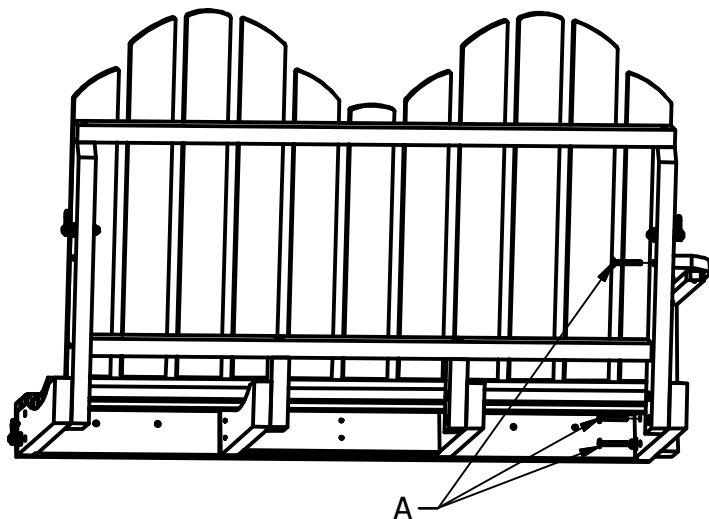

6) Attach Chain Connector B to End of 2 Foot Chain.

7) Guide 7 Foot Chain Thru Hole in Arm and Attach other End of Chain Connector B to 7 Foot Chain so that Arm is Level as shown.

8) Repeat on Other Side.

9) Attach Ends of 7 Foot Chain to Structure.

