Thank you for purchasing this product. This Product has been designed for easy assembly and is constructed for durability. Please take this time to read and follow the assembly Instructions carefully. If a part or hardware is missing or you have any difficulties in assembling this product, please contact us

## ASSEMBLY INSTRUCTION




HIDs. A	450m, 100	par pa	8 6	ST	,
വര	2.3				
	194		8 1	20 11	

r	MILIAFIAI		
1	CHAIR BACK FRAME	1	PC
	SEAT	1	PC
	FRONT LEG (RIGHT)	1	PC
	FRONT LEG (LEFT)	1	PC
	FRONT STRETCHER	1	PC
	SIDE STRETCHER	2	PCS


## HARDWARE LIST

A	JCBC SCREW M6 x 40MM		3 PCS
B	JCBC SCREW M6 x 60MM		4 PCS
Č	JCBC SCREW M6 x 70MM		4 PCS
D	SPRING WASHER 1/4"		11 PCS
E	FLAT WASHER 1/4" x 19MM		11 PCS
F	M4 ALLEN KEY (BALL SHAPE) LONG	*	1 PCS
G	DAN HEAD SCREW MAY 28MM		6 PCS

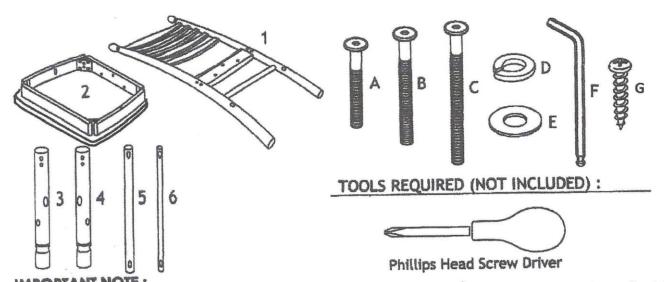

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched. Check to
  be sure that you have all parts and hardware. Remove all wrapping materials, including staples & packing straps before you start
  to assemble.
- Keep all hardware parts out of reach of children.
- DO NOT TIGHTEN BOLTS/SCREWS UNTIL ALL COMPLETELY ASSEMBLED.

## **ASSEMBLY INSTRUCTION**

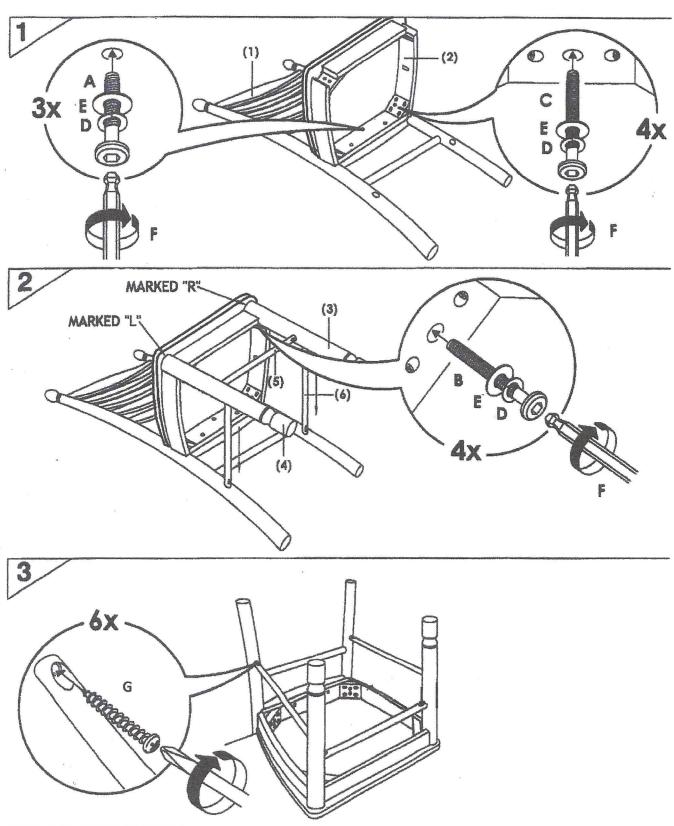

## CARE AND MAINTENANCE!

 The touch of a soft cloth is all the maintenance your wood pleces will ever need. Never use harsh chemicals or abrasive cleaners, as they could mark or destroy finish.

MADE IN MALAYSIA

Page 2 of 2.