



8 PC SECTIONAL

ASSEMBLY INSTRUCTIONS

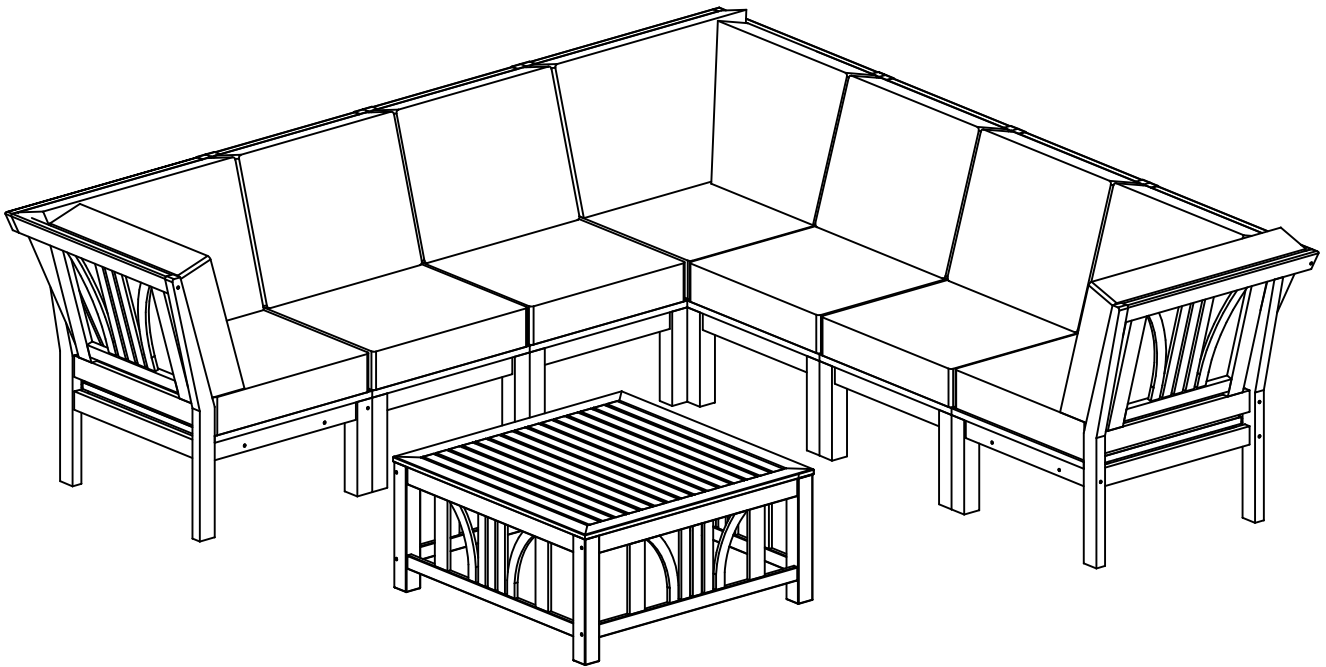


**THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**

- * ASSEMBLE YOUR UNIT IN AN AREA FREE FROM ANY OBJECTS THAT MIGHT SCRATCH THE SURFACE OF YOUR UNIT.
- * EXAMINE ALL PACKING MATERIAL BEFORE DISCARDING, SHORTAGES MAY OCCUR FROM PARTS LEFT IN THE PACKING MATERIAL.
- * PLEASE READ THE INSTRUCTIONS CAREFULLY, AND VERIFY ALL PARTS ARE INCLUDED.
- * ALL BOLTS ARE NEED TO BE TIGHTENED FROM TIME TO TIME TO AVOID DAMAGE.

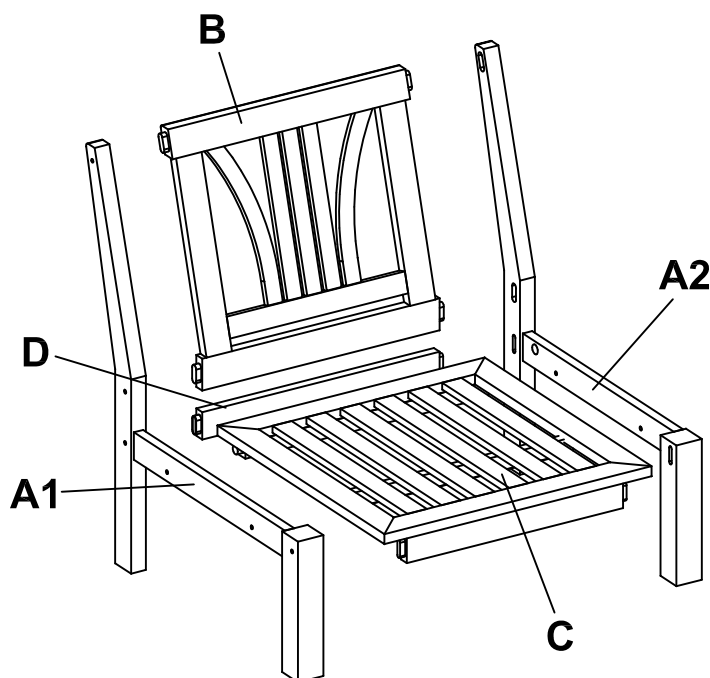


LIST OF WOODEN PARTS		
NO.	DESCRIPTION	Q'TY
A1	Right side frame	1 Pc
A2	Left side frame	1 Pc
B	Back support	1 Pc
C	Seat	1 Pc
D	Apron	1 Pc


LIST OF HARDWARE PARTS



2 1/4" Bolt 2 Pcs + 1



2" Bolt 2 Pcs + 1




1 1/2" Bolt 6 Pcs + 1

1 set of chair
(Total : 4 pcs)

TOOL REQUIRED

For proper assembly use this tool (not included)


8" Phillips screwdriver
- for tightening all bolts.



CARE INSTRUCTIONS

- * To clean, hand wash with mild detergent, wipe with damp cloth, or use sponge.
- * It is very important to air dry cushions when wet as mildew may growth on dirt and other substances that are not removed from fabric.
- * To extend life of your cushions, keep them in storage during rainy seasons or use furniture cover.
- * Please be notified that cushions with mildew problem are not under warranty.


STEP 1

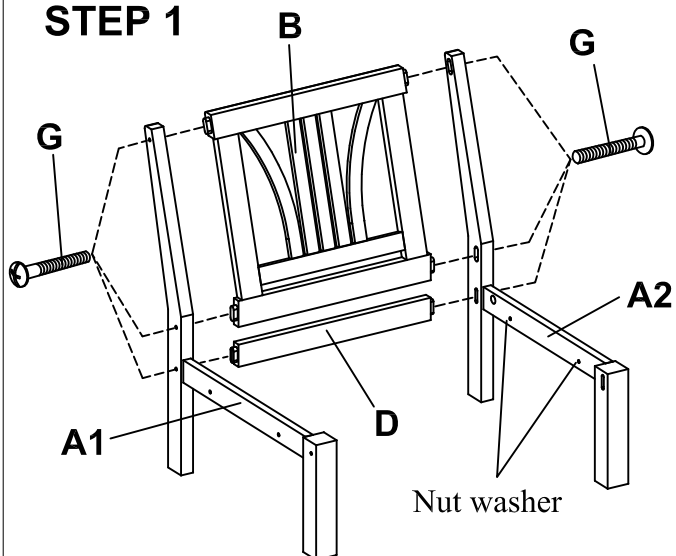

Attach right and left side frame (A1 & A2) into back support (B) and apron (D). Secure using 1 1/2" bolts (G) as shown.

**** DO NOT TIGHTEN BOLTS YET.**


STEP 2

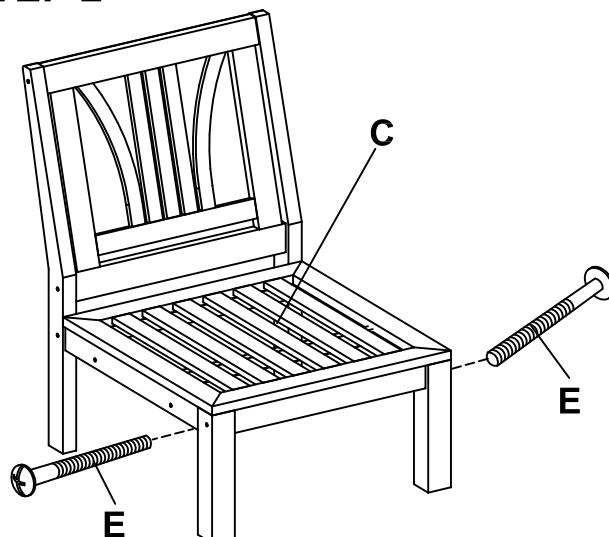

Next, attach the seat (C) into pre-assembled side frames and secure using 2 1/4" bolts (E) as shown. Tighten all bolts completely using screwdriver.


Repeat step 1 & 2 procedure to secure other chair.

STEP 3

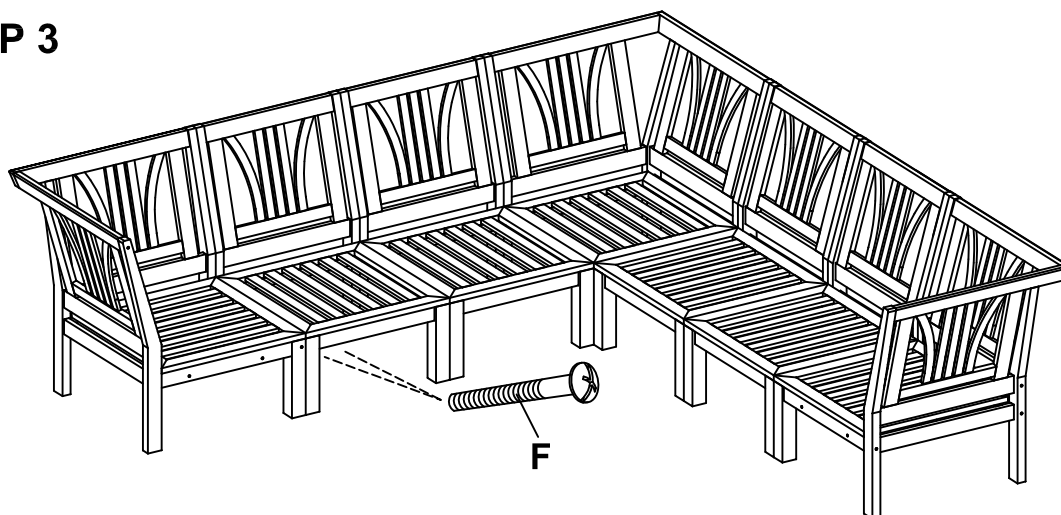

Joint all the corner chairs and other chairs as shown. Secure using 2" bolts from underneath of seat. Make sure all parts are correctly connected and tighten all bolts using screwdriver.

STEP 4

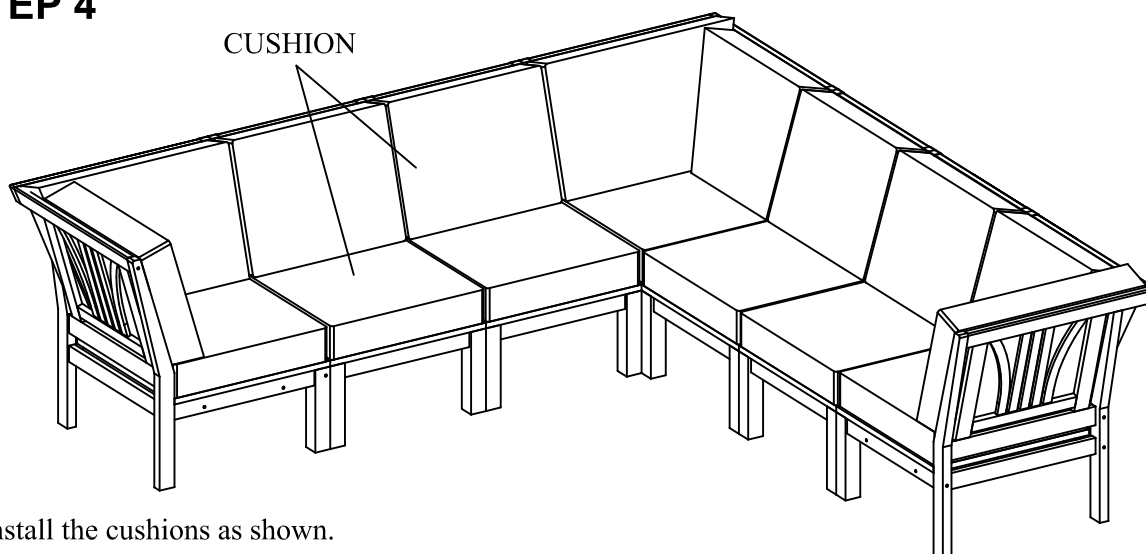

Install the cushions as shown.

THE SECTIONAL CHAIR IS NOW READY FOR USE.