


MIRRORED DESK

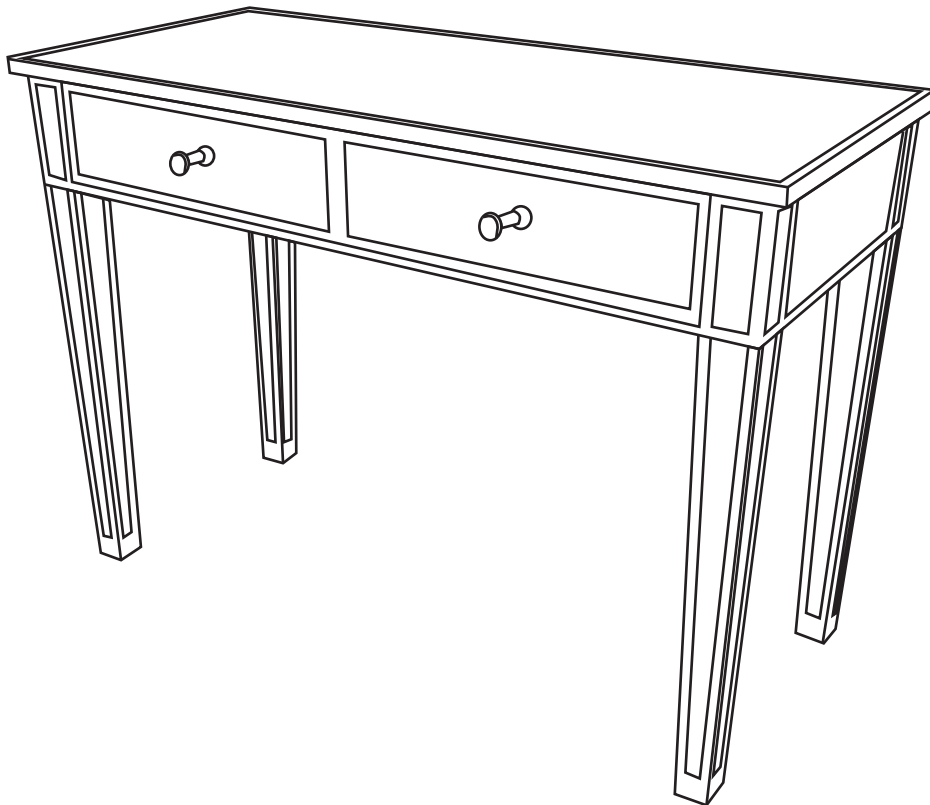

THANK YOU FOR YOUR ORDER!
ENCLOSED PLEASE FIND A POLISHING CLOTH FOR YOUR USE TO CLEAN THE MIRROR
OF THIS PRODUCT.
PLEASE ALSO CALL US IF YOU HAVE ANY QUESTIONS.












ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow ,
step by step instructions will guide you through the project from start to finish .
Feel confident that this will be a fun and rewarding project . The final product will be a quality
piece of furniture that will go together smoothly and give years of enjoyment .




Please do not return to the store
Broken or missing parts?
Need help with assembly?

Hardware List

A 	B 	C 	D 
Bolt (8pcs)	Allen wrench (1pc)	Anchor (1pc)	Eyelet screw (1pc)
E 	F 	G 	H 
Washer (8pcs)	Cable tie (1pc)	Short screw (2pcs)	Screw (2pcs)
I 	J 	K 	
Knob (2pcs)	Polishing cloth (1pc)	Plastic bracket (1pc)	

Panel List

1

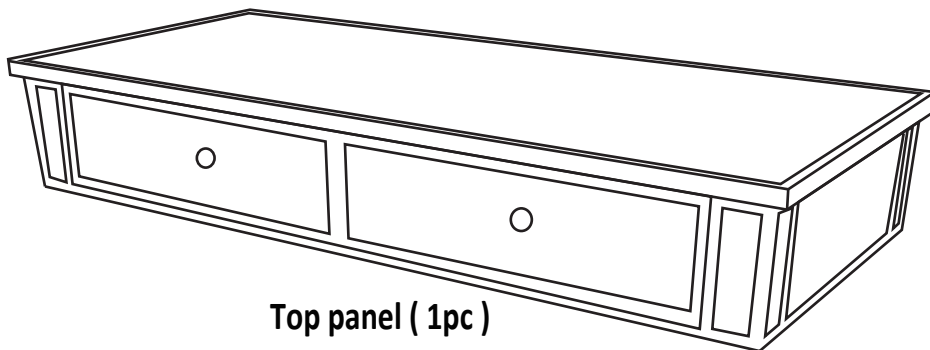

Top panel (1pc)

2





Leg (4pcs)

Step 1

Assemble face down on carpet or soft surface.

1. Remove drawers from top panel **1**.
2. Connect legs **2** to top panel **1** as shown using bolts (A), washers (E) and allen wrench (B).

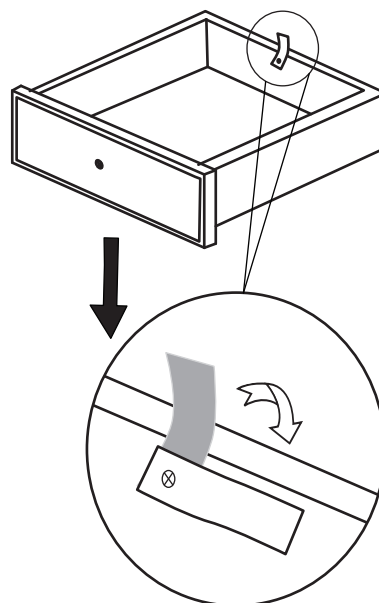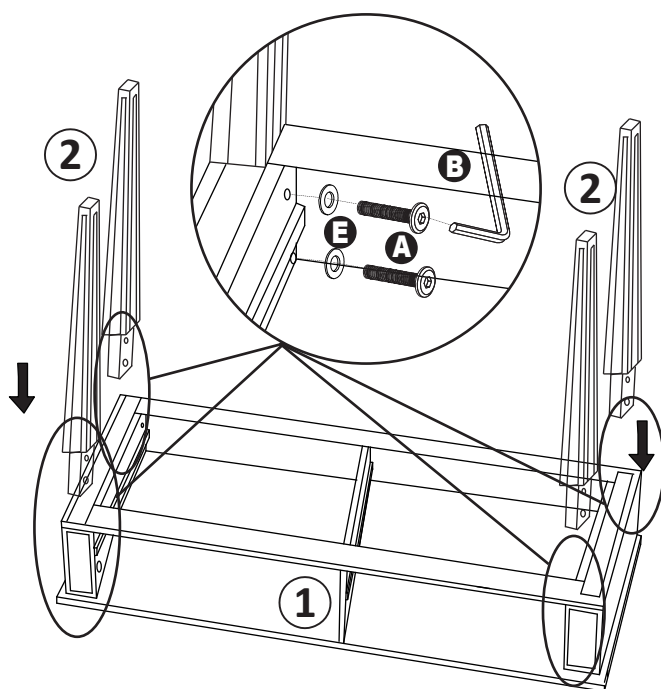

x 8




x 1



x 8

Step 2

1. Remove knob (I) from inside of drawer to outside of drawer using a hand held screwdriver. Screw (H) goes on inside of drawer.

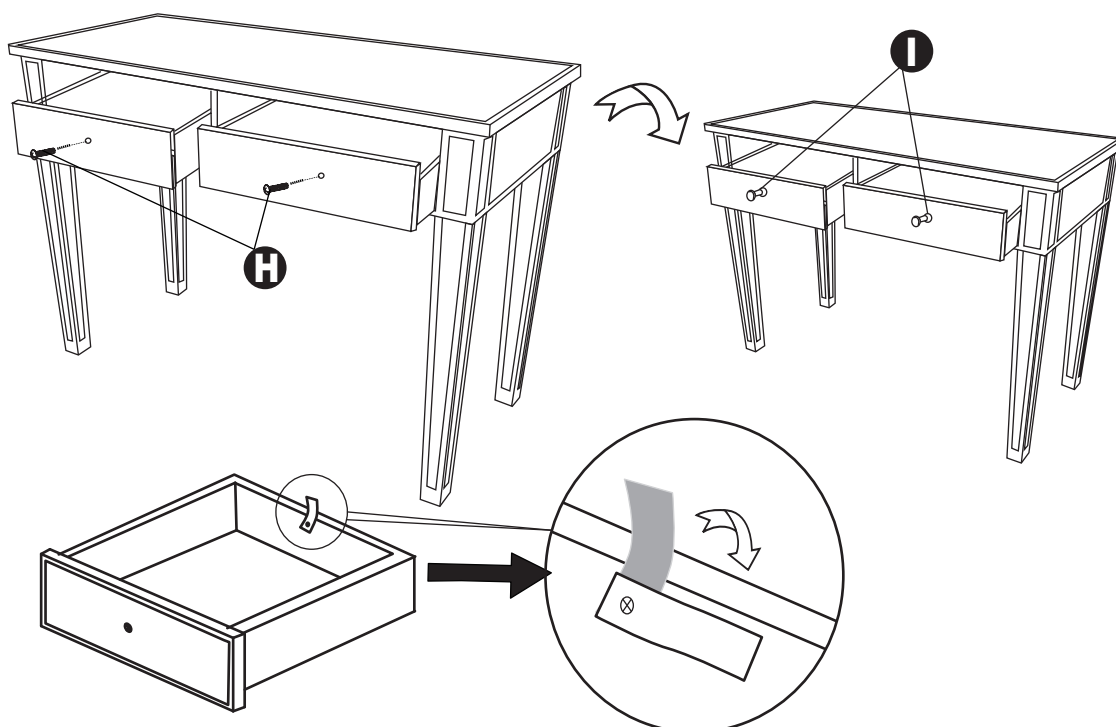

Step 3

1. Connect plastic bracket (K) to unit as shown using short screws (G) .
2. Insert cable tie (F) into plastic bracket (K) as shown.
3. Drill hole slightly smaller than anchor (C) into drywall and gently tap anchor into hole.
4. Insert eyelet screw (D) into anchor and fasten unit to wall using cable tie (F) .

