



STEP 4

Attach Panel (B) to assembled unit and tighten it with Screw (6) using screwdriver.

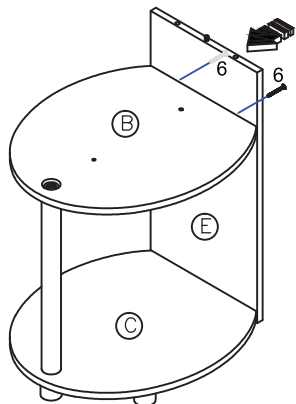


STEP 5

Attach Top Cap (3) to Panel (B) and tighten it with Long Round Pole (2).

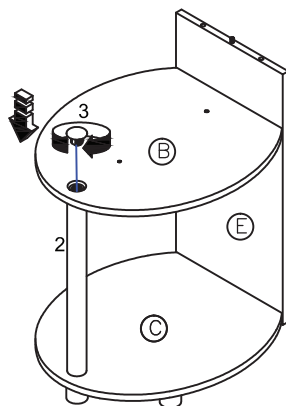


STEP 6

Attach Panel (D) to Panel (B) with Dowel (7) and Screw (6), as shown.

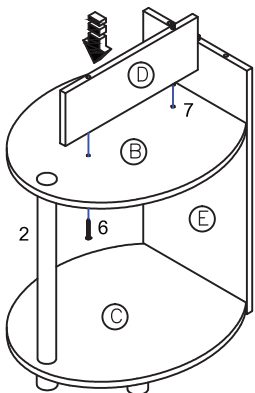


STEP 7

Attach Panel (A) to assembled unit with Mini Fix Bolt/ Cam (1A&1B). Lock Mini Fix Cam (1B) using screwdriver.

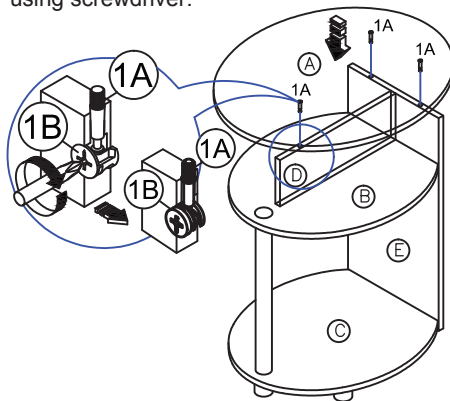

Recommended Maximum Weight

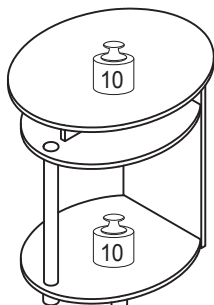

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.

Assembly Instruction

Simple Design Oval End Table


DIMENSION : 18.9"(W) x 19.3"(H) x 15.5"(D)

00:15


Approx. 15 minutes



Recomm. 1 Person





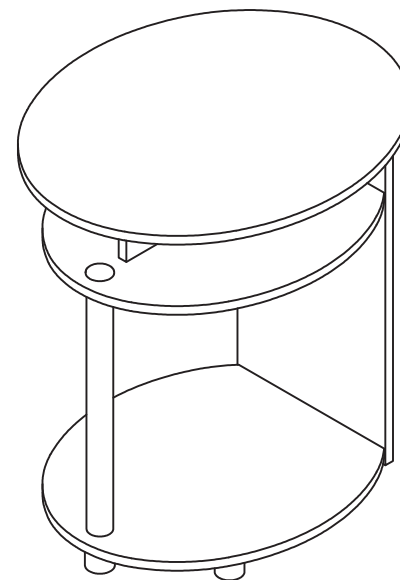





Tool Required









Customer Support

NEED HELP? For help with assembly, or if you are missing a part, please call our Customer Service.



No	Hardware List	Qty
1	Mini Fix Bolt& Cam  1A  1B	3pcs
2	Long Round Pole 	1pc
3	Top Cap 	1pc
4	Round Leg 	1pc
5	Plug Round Leg 	2pcs
6	C/B Screw 	5pcs
7	Dowel 	5pcs

No	Parts List	Qty
A	Top Panel 	1pc
B	Shelf Panel 	1pc
C	Bottom Panel 	1pc
D	Center Panel 	1pc
E	Back Panel 	1pc

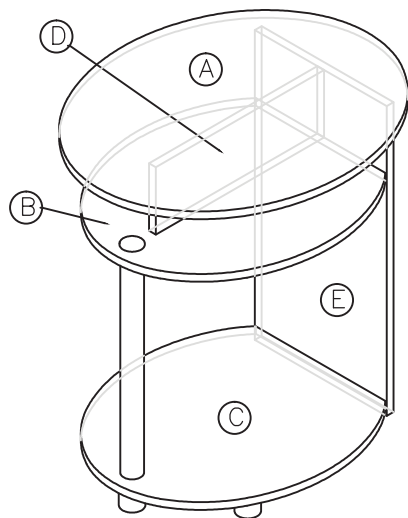


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.


STEP 1

- 1.1 Screw Mini Fix Bolt (1A) into pre-drill hole on Panel (A) as shown.
- 1.2 Insert Mini Fix Cam (1B) to Panel (D&E) as shown.
- 1.3 Insert Dowel (7) to Panel (B)(C)(D)(E) as shown.
- 1.4 Attach **Plug Round Leg (5)** into pre-drill hole on Panel (C).

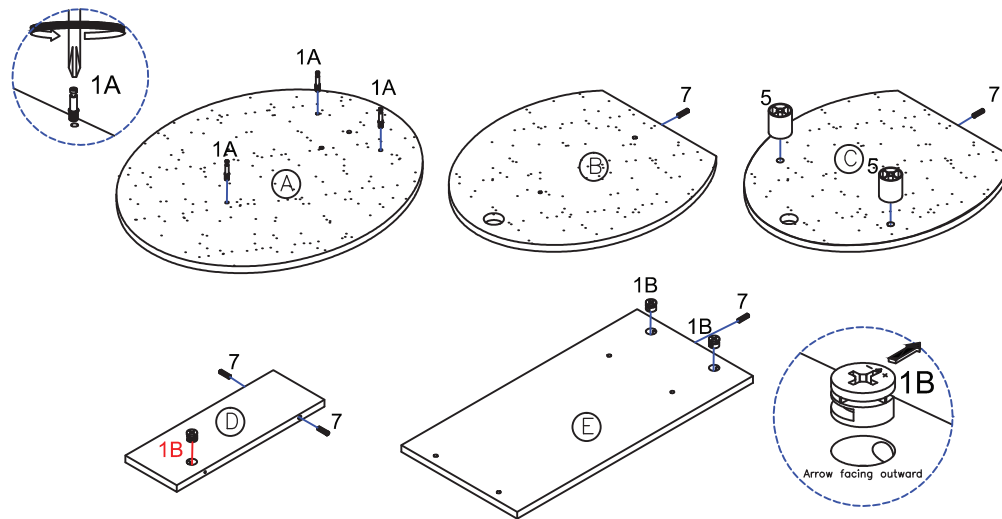

STEP 2

Attach Long Round Pole (2) to Panel (C) and tighten it with **Round Leg (4)** as shown.

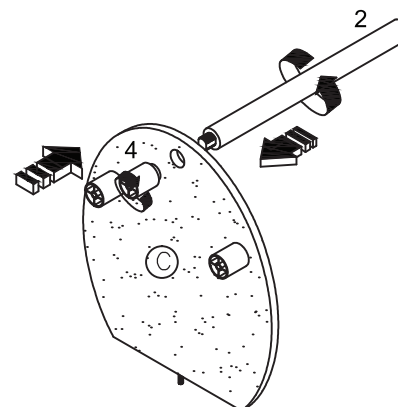

STEP 3

Attach Panel (E) to Panel (C) and tighten it with Screw (6) using screwdriver.

