

### ASSEMBLY INSTRUCTIONS:

- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
- 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
- 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
- 4- DO NOT USE ABRASIVES SOLUTIONS;

## ASSEMBLY INSTRUCTIONS

### BOX 08



| PART LIST   |     |                  |
|-------------|-----|------------------|
| PART NUMBER | Qty | DESCRIPTION:     |
| 1           | 1   | LEFT SIDE PANEL  |
| 2           | 1   | RIGHT SIDE PANEL |
| 3           | 2   | BOTTOM/TOP PANEL |
| 4           | 4   | FRAME            |
| 5           | 5   | SHELVES          |






| CABINET HARDWARES | 16              | 16       | 16                  |
|-------------------|-----------------|----------|---------------------|
|                   |                 |          |                     |
|                   | CAM LOCK SCREWS | CAM LOCK | DOWEL 5/16 X 1 3/16 |

### CABINET ASSEMBLY

#### STEP 01 PREPARATION OF THE SIDE PANELS

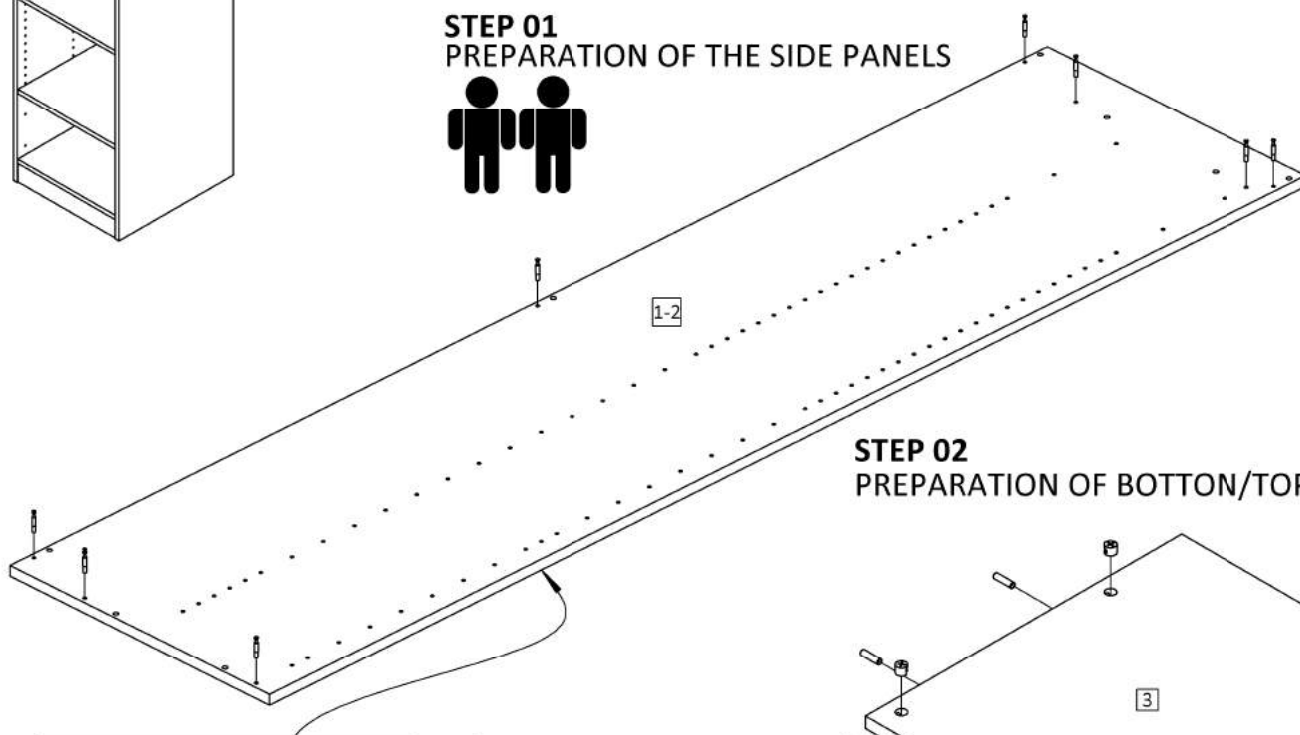
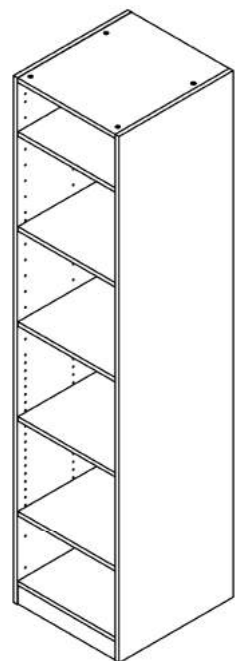


#### STEP 02 PREPARATION OF BOTTOM/TOP PANELS

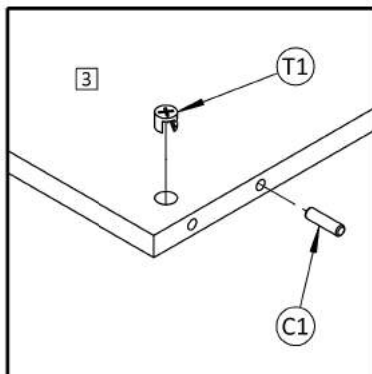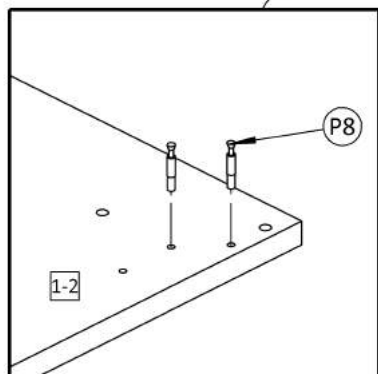
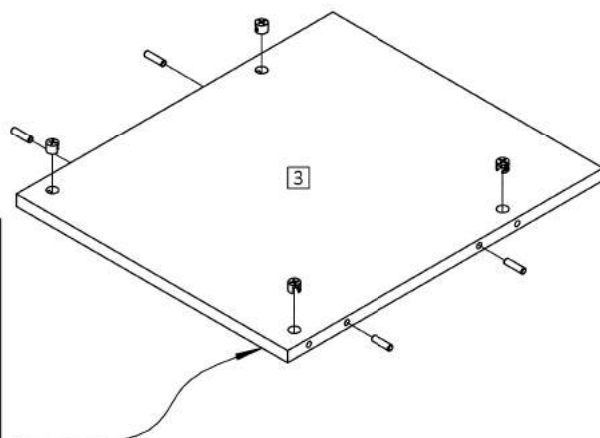


**STEP 03**  
PREPARATION OF THE FRAMES

**ASSEMBLY INSTRUCTIONS**  
BOX 08

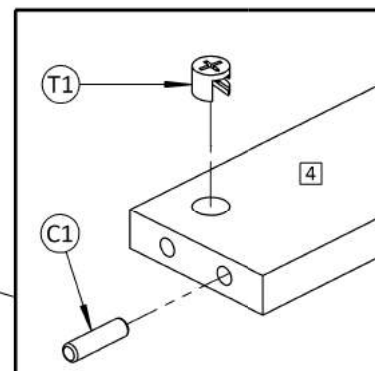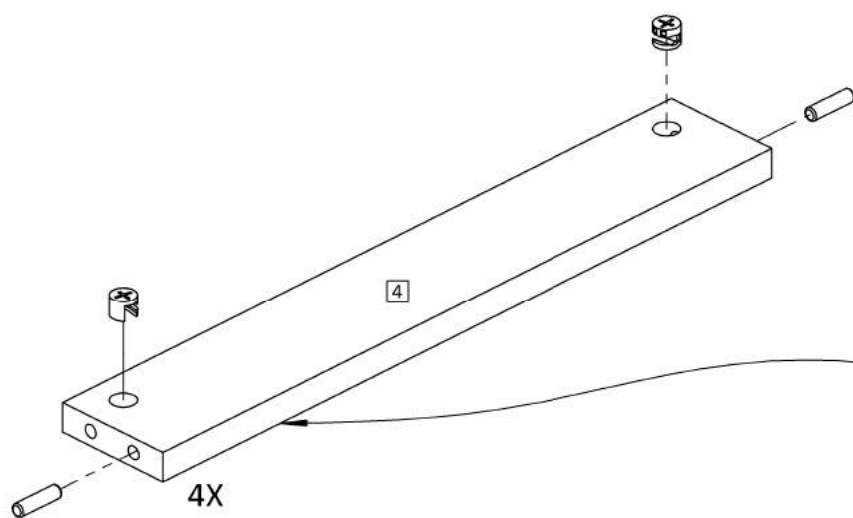



**STEP 04**  
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

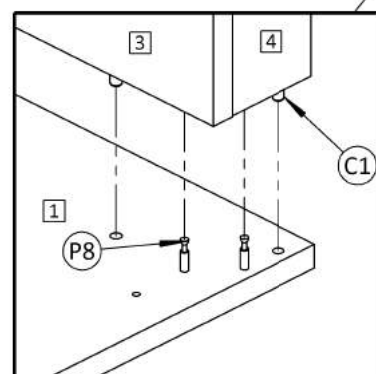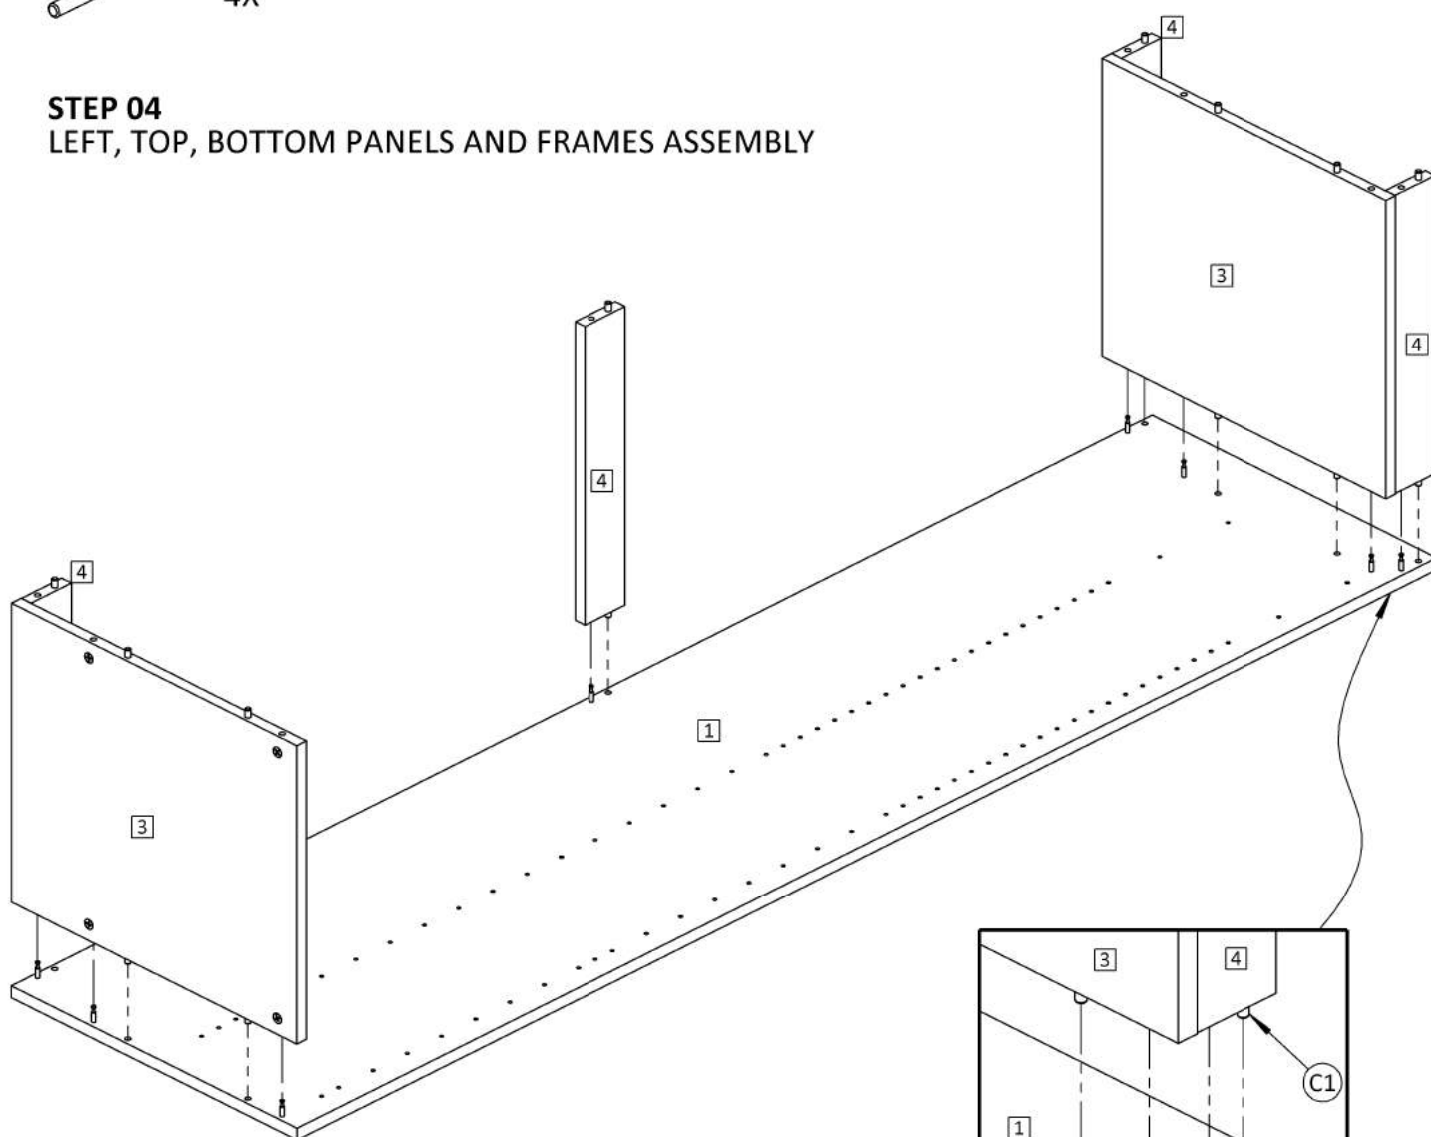

# ASSEMBLY INSTRUCTIONS

BOX 08

## STEP 05 RIGHT SIDE PANEL ASSEMBLY

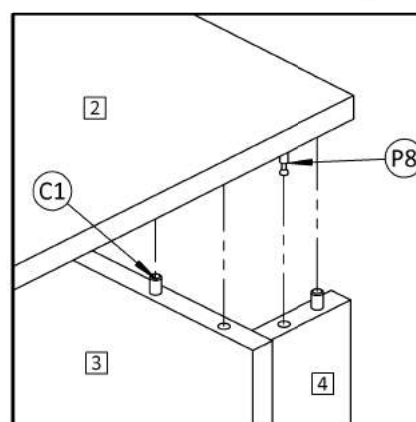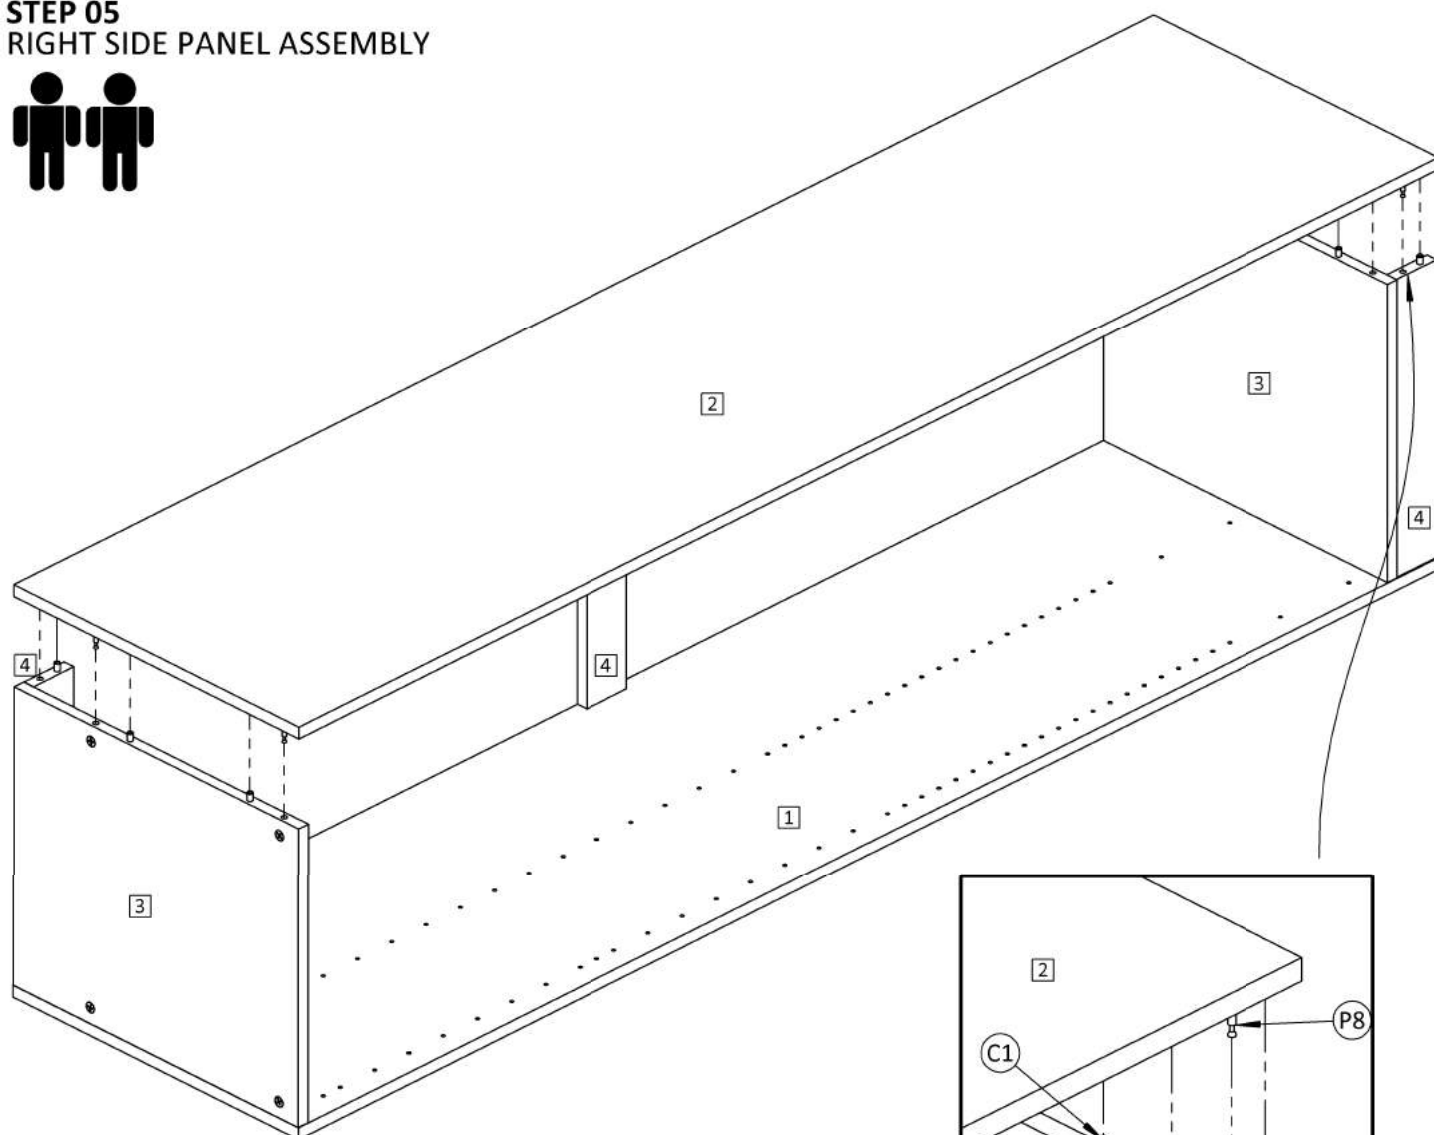

## STEP 06

### FIXING THE CABINET ON THE WALL



## FIXING THE CABINET

DRILL THE WALL  
USING A DRILLER  
IN ORDER TO  
INSERT THE PLUG


## ASSEMBLY INSTRUCTIONS BOX 08





IT IS REQUIRED TO FIX  
THE CABINETS ON THE WALL  
RISK OF FALL!



| FIXING<br>HARDWARES | 06                 | 06                | 06           | 08                 |
|---------------------|--------------------|-------------------|--------------|--------------------|
|                     |                    |                   |              |                    |
|                     | SCREW 5/32 X 2 3/4 | SCREW 1/4 X 2 3/4 | PLASTIC PLUG | SCREW 9/64 X 1 1/4 |

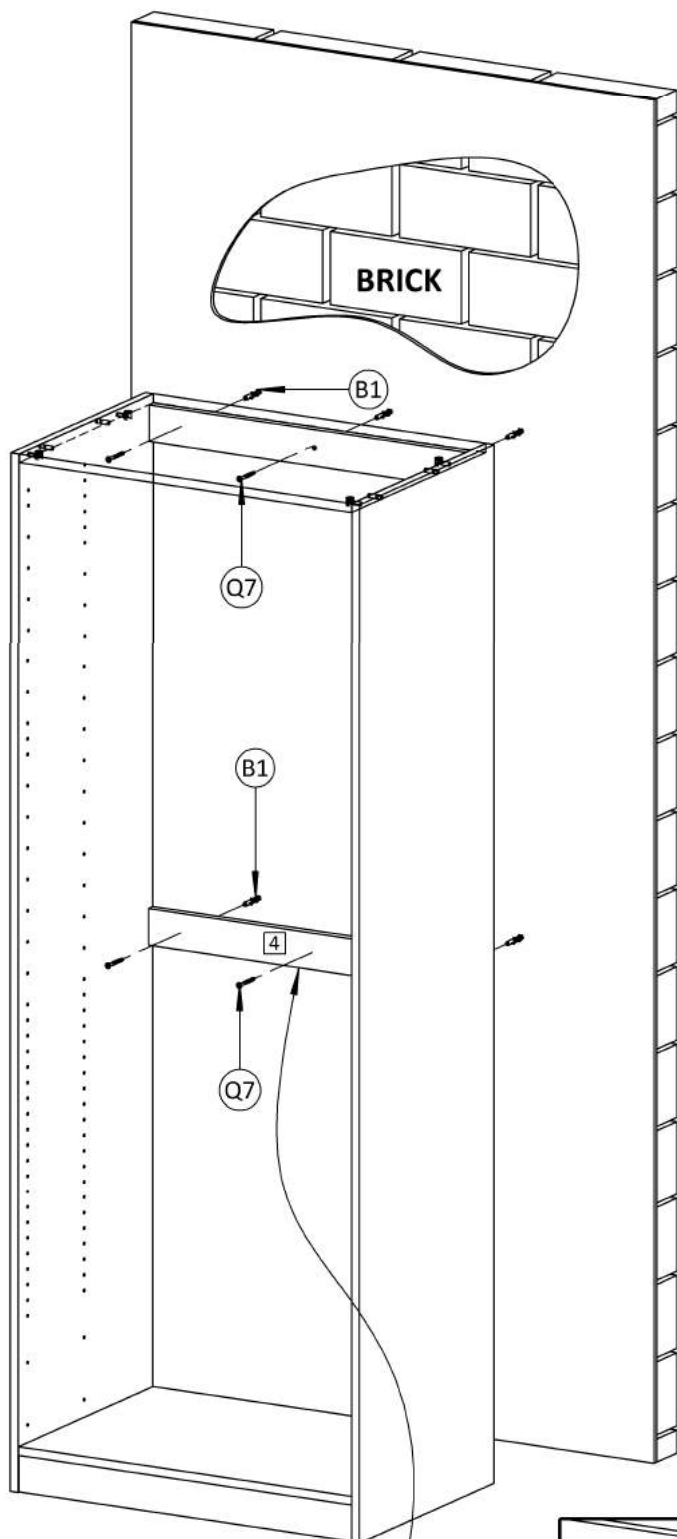



SCREW IN THE CENTER  
OF THE FRAME

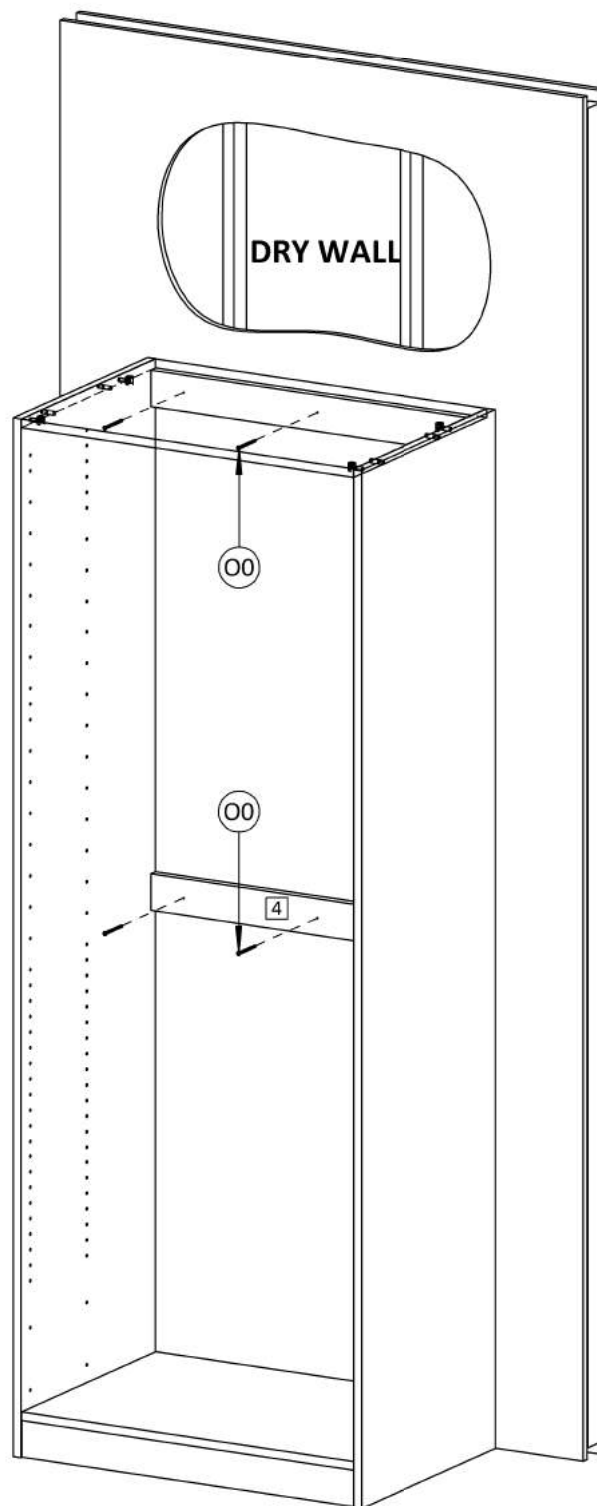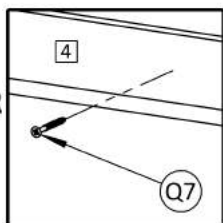



THE CABINET MUST ALWAYS BE  
SUPPORTED ON THE GROUND

**STEP 07**  
**JOINING THE CABINETS**

**ASSEMBLY INSTRUCTIONS**  
**BOX 08**

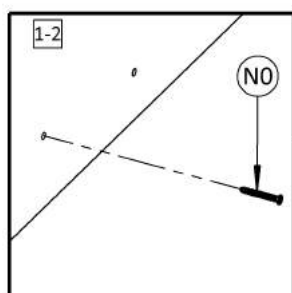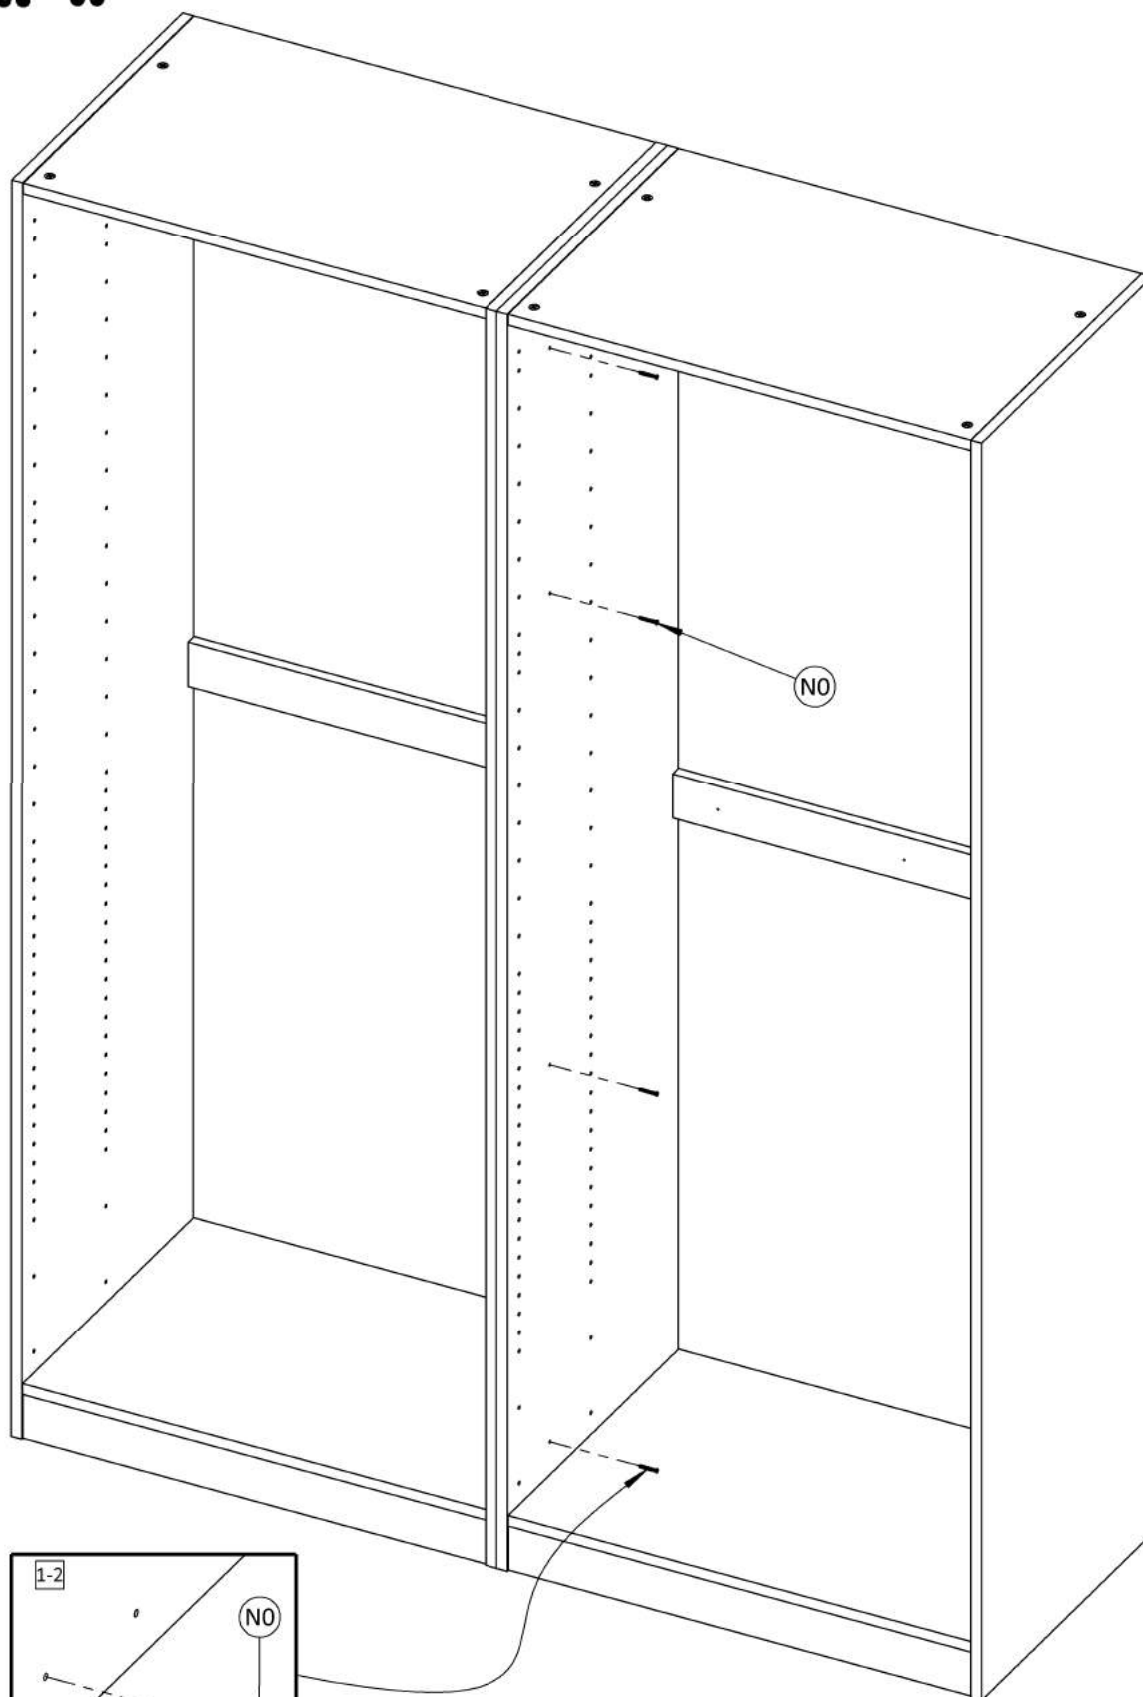

**STEP 08**  
FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

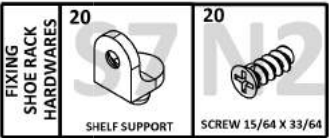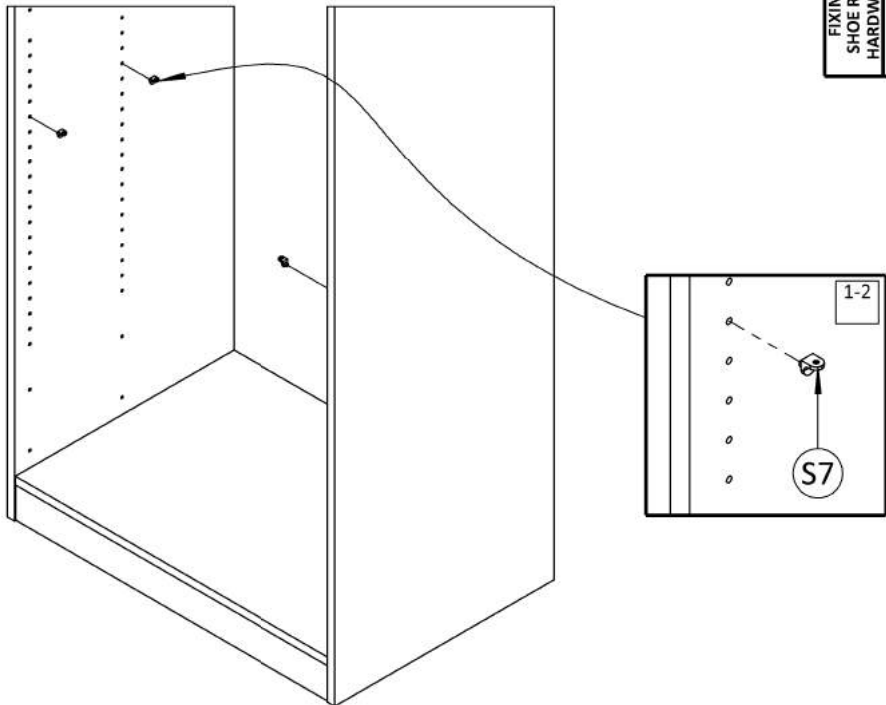

**STEP 09**  
FIT THE SHELF ON THE CLOSET

SCREW THE SHELF  
ON THE SUPPORT

