



### ASSEMBLY INSTRUCTIONS:

- 1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
- 2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
- 3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
- 4- DO NOT USE ABRASIVES SOLUTIONS;

## ASSEMBLY INSTRUCTIONS

### BOX 06


PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	5	SHELVES

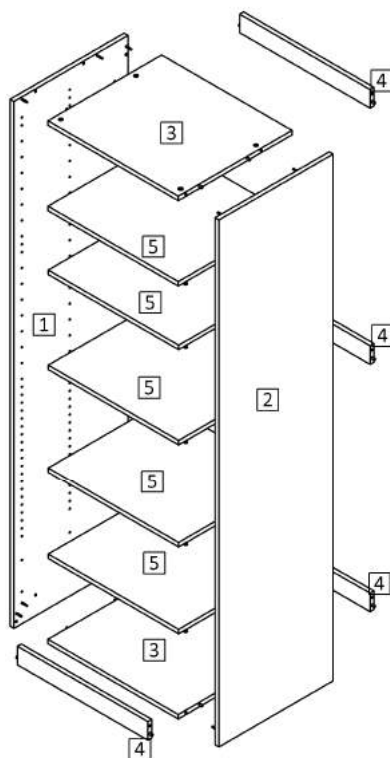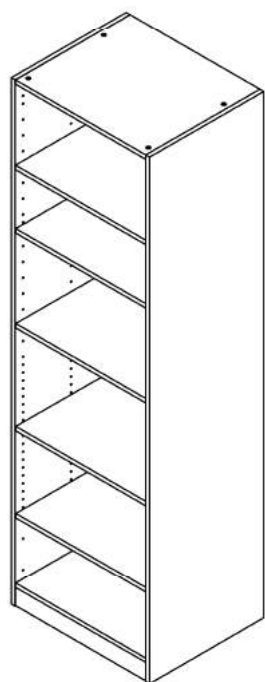




CABINET HARDWARES	16	16	16
	CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16

### CABINET ASSEMBLY

#### STEP 01 PREPARATION OF THE SIDE PANELS

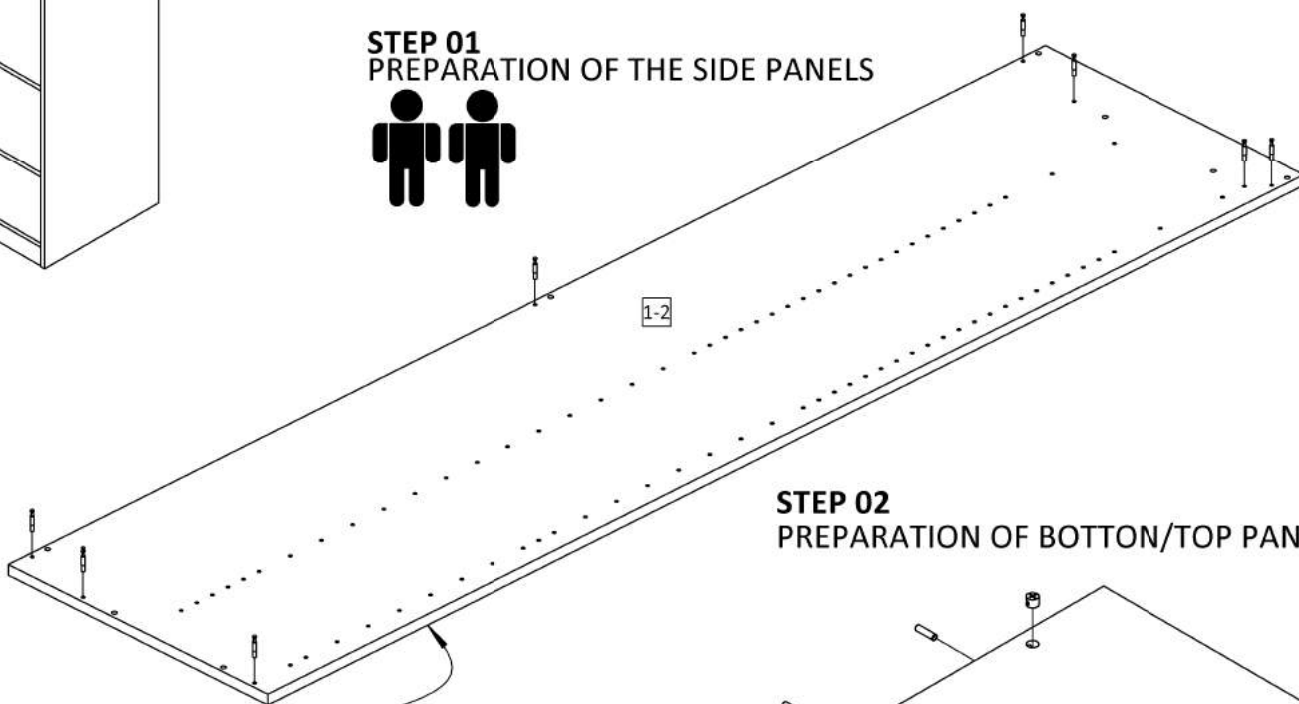


#### STEP 02 PREPARATION OF BOTTOM/TOP PANELS

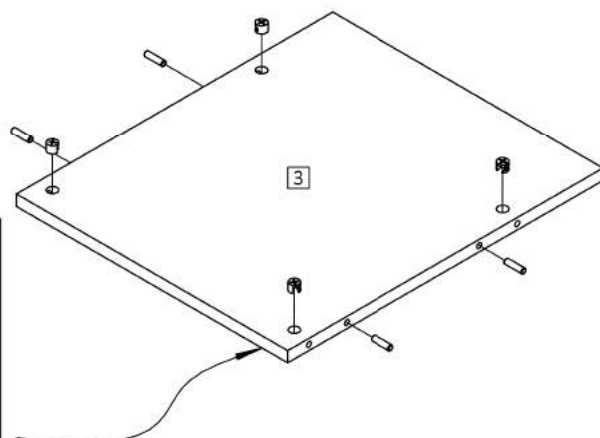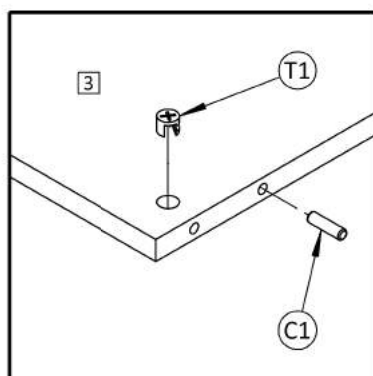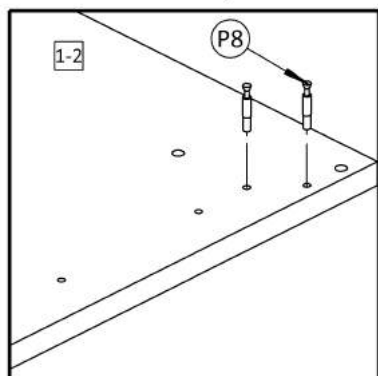


**STEP 03**  
PREPARATION OF THE FRAMES

**ASSEMBLY INSTRUCTIONS**  
BOX 06

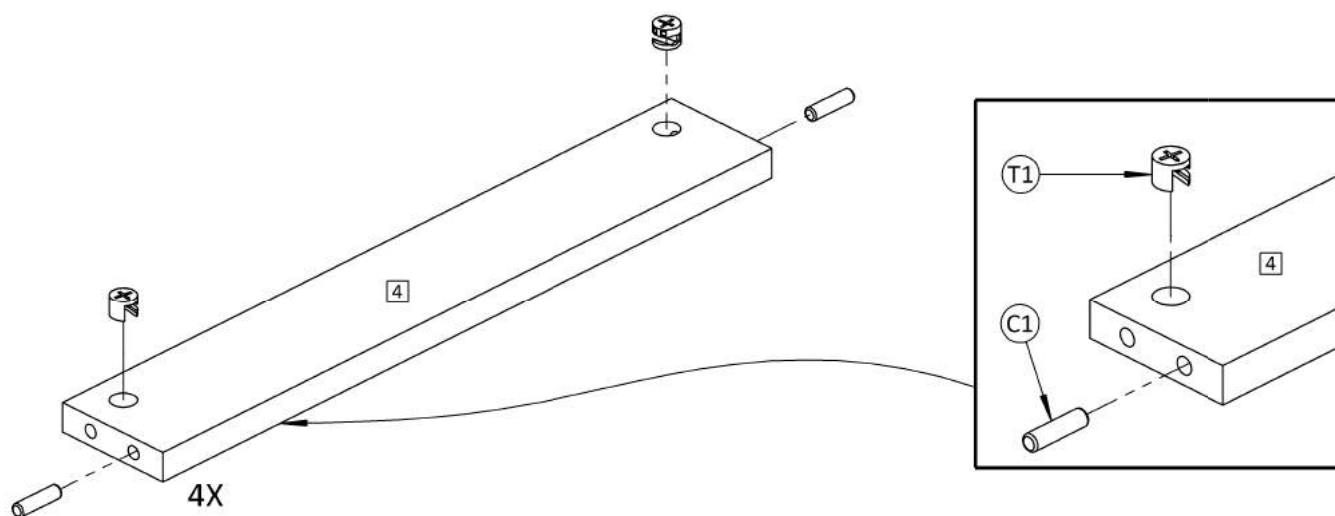


**STEP 04**  
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

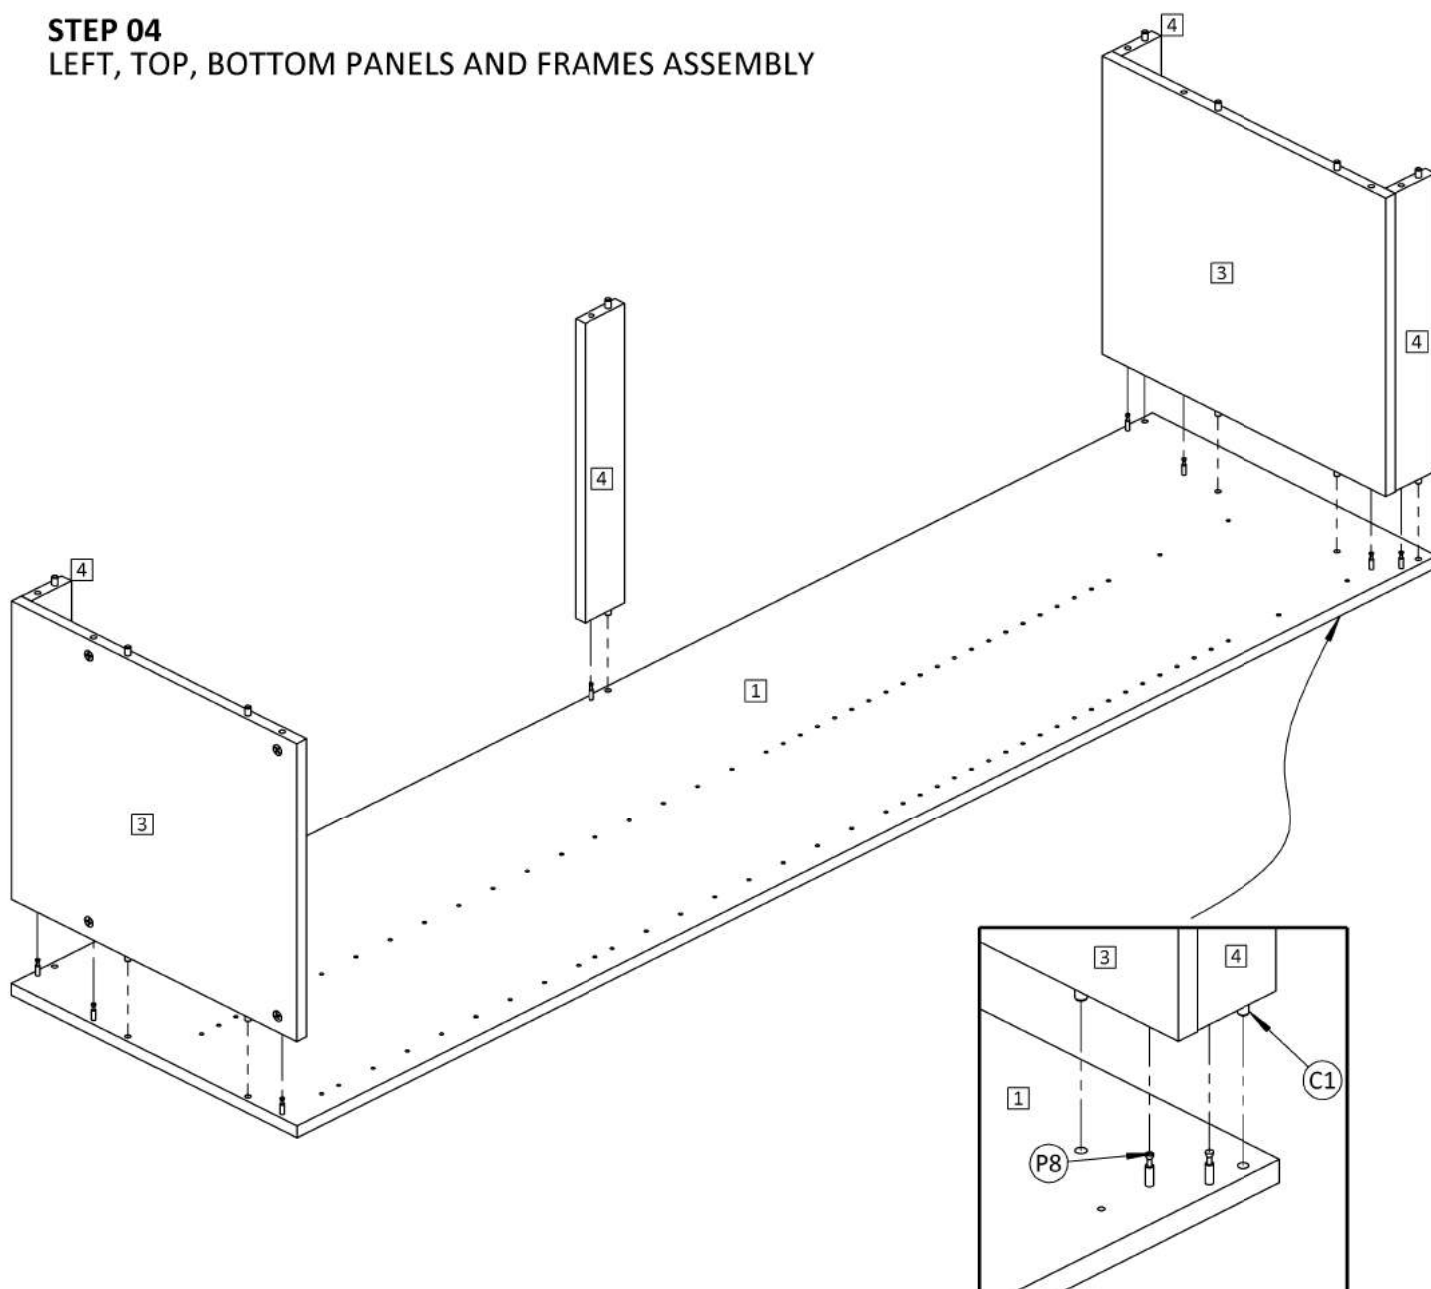

# ASSEMBLY INSTRUCTIONS

BOX 06

## STEP 05 RIGHT SIDE PANEL ASSEMBLY

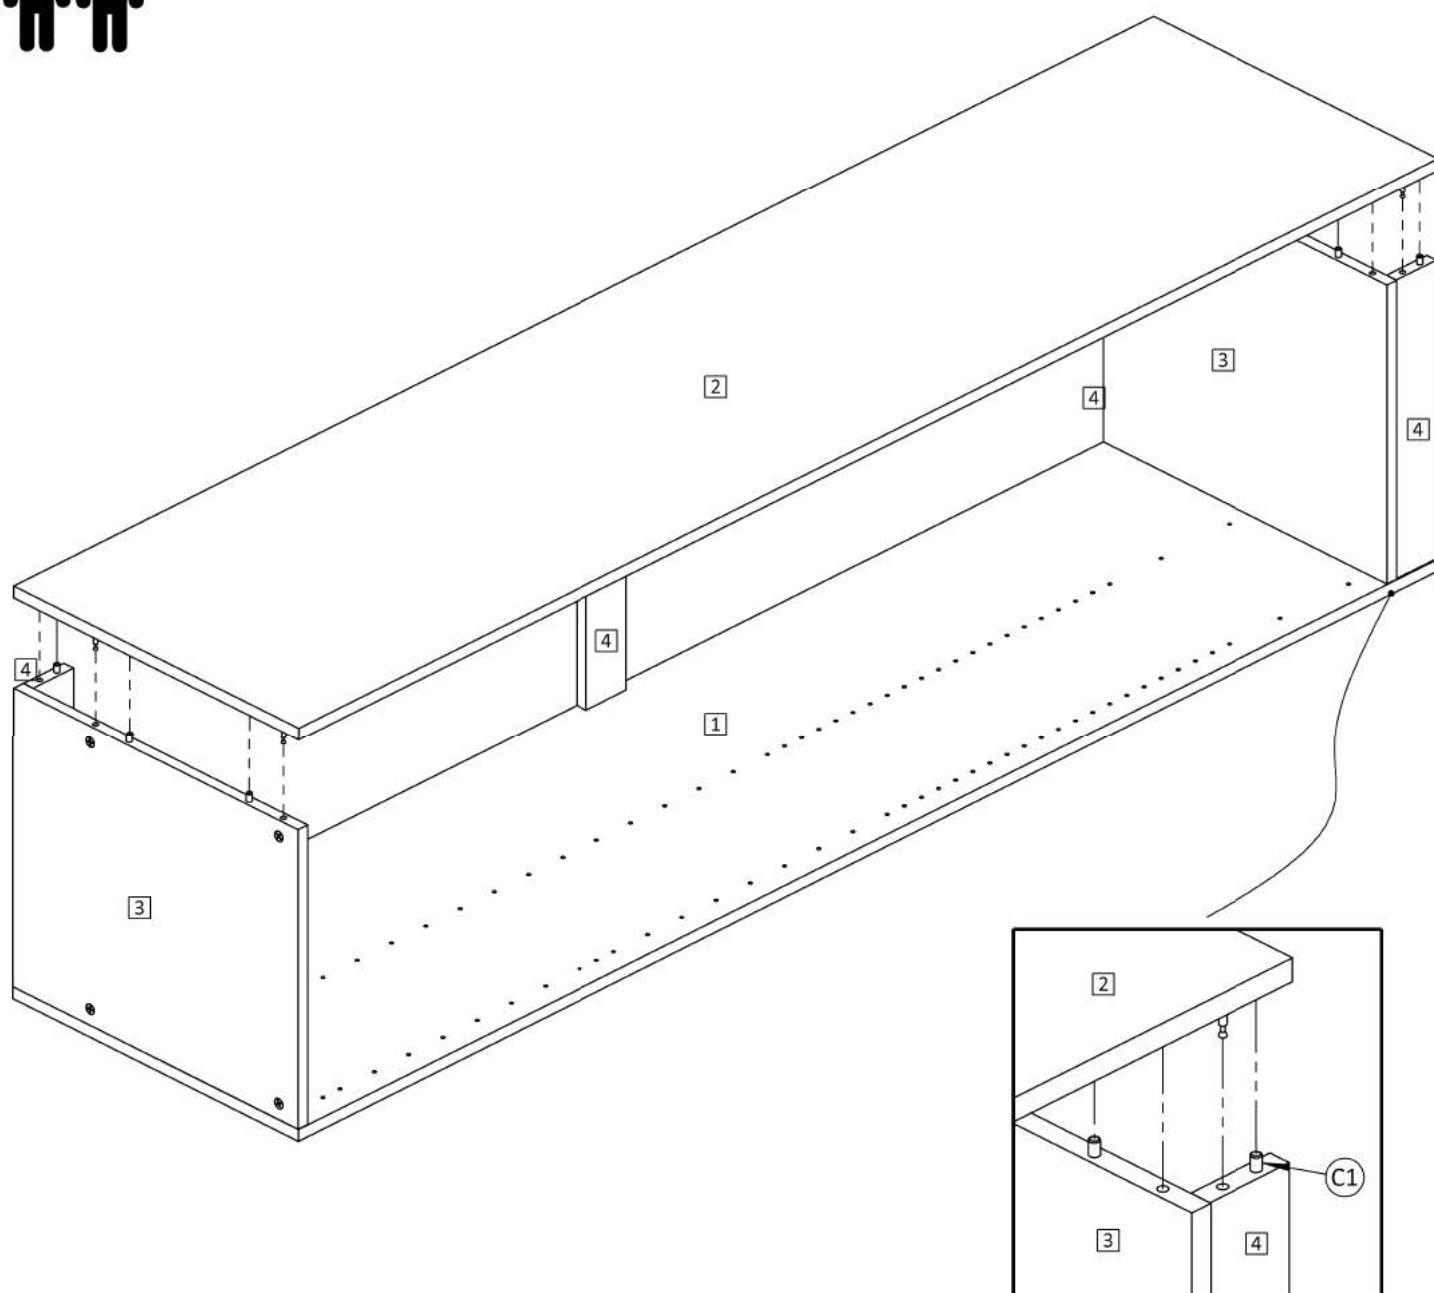

## STEP 06

### FIXING THE CABINET ON THE WALL



## FIXING THE CABINET

DRILL THE WALL  
USING A DRILLER  
IN ORDER TO  
INSERT THE PLUG

## ASSEMBLY INSTRUCTIONS


BOX 06





IT IS REQUIRED TO FIX  
THE CABINETS ON THE WALL  
RISK OF FALL!



FIXING HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

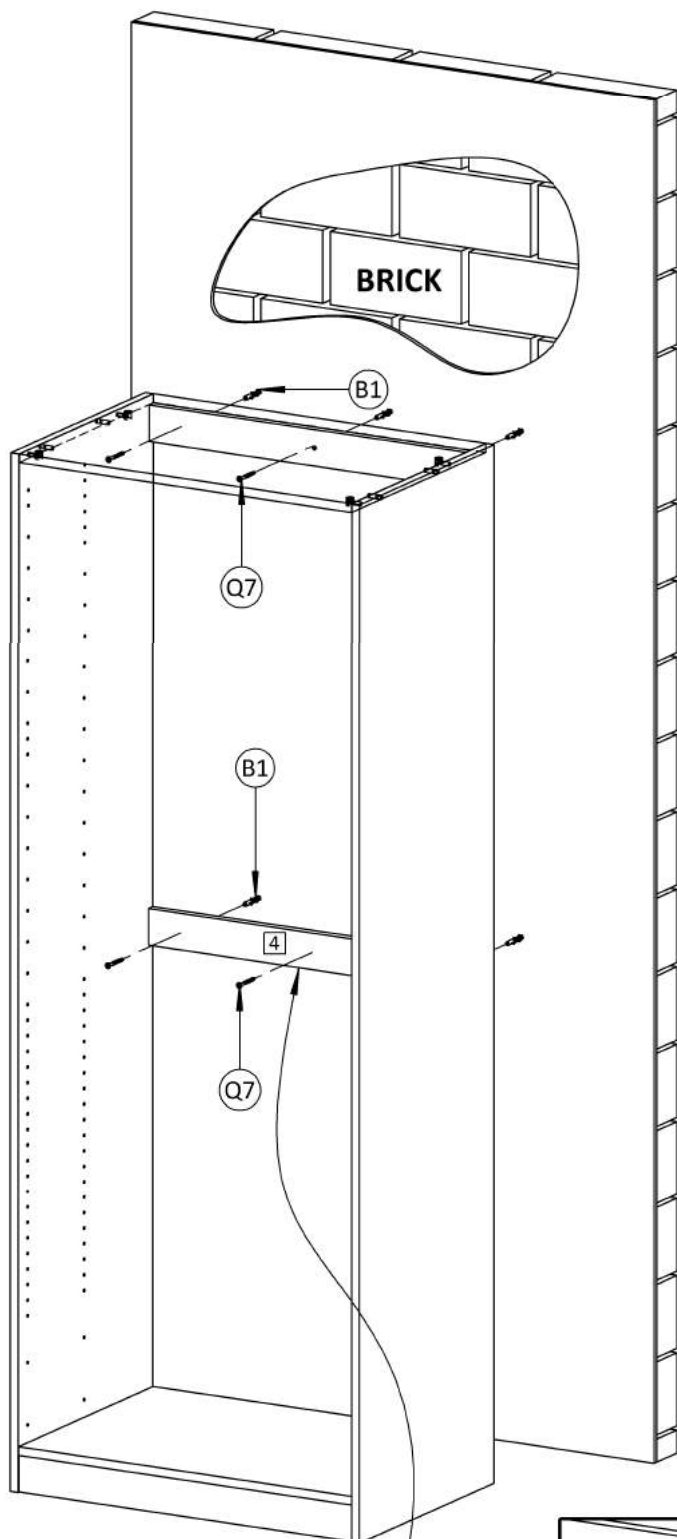



SCREW IN THE CENTER  
OF THE FRAME

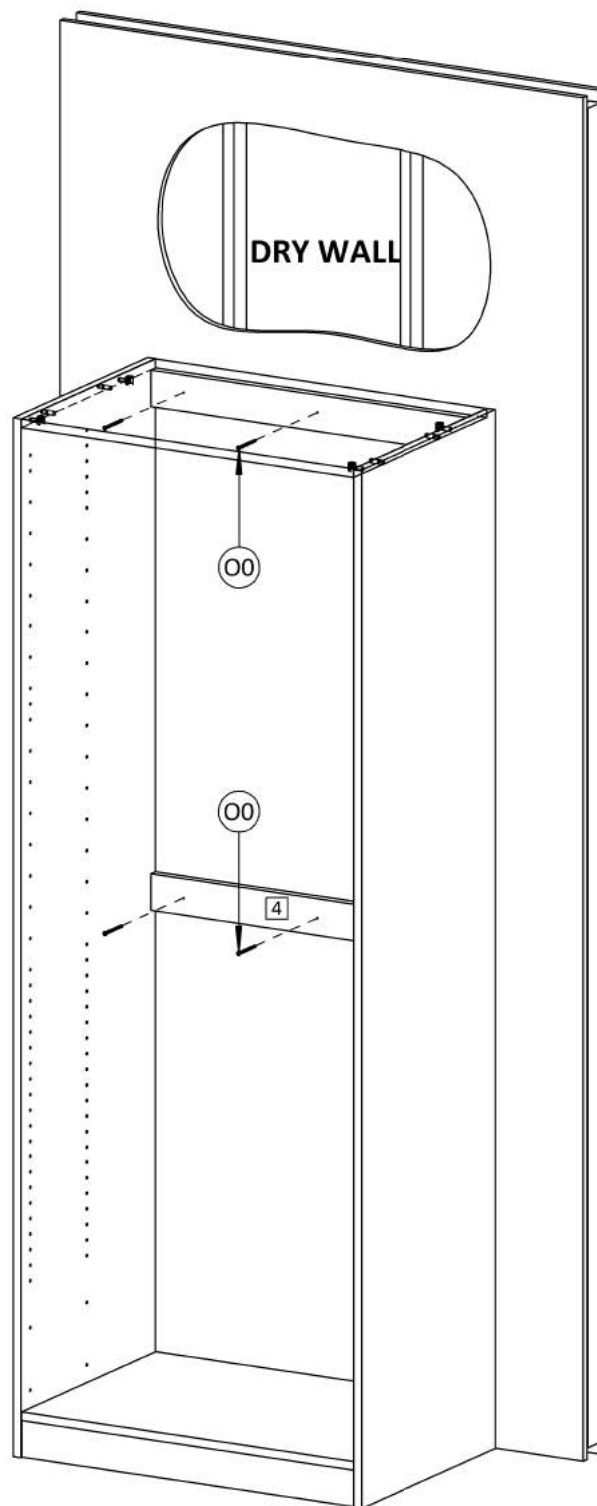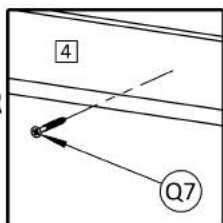

THE CABINET MUST ALWAYS BE  
SUPPORTED ON THE GROUND

**STEP 07**  
**JOINING THE CABINETS**

**ASSEMBLY INSTRUCTIONS**  
**BOX 06**

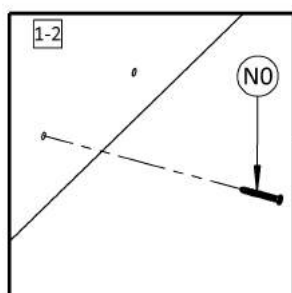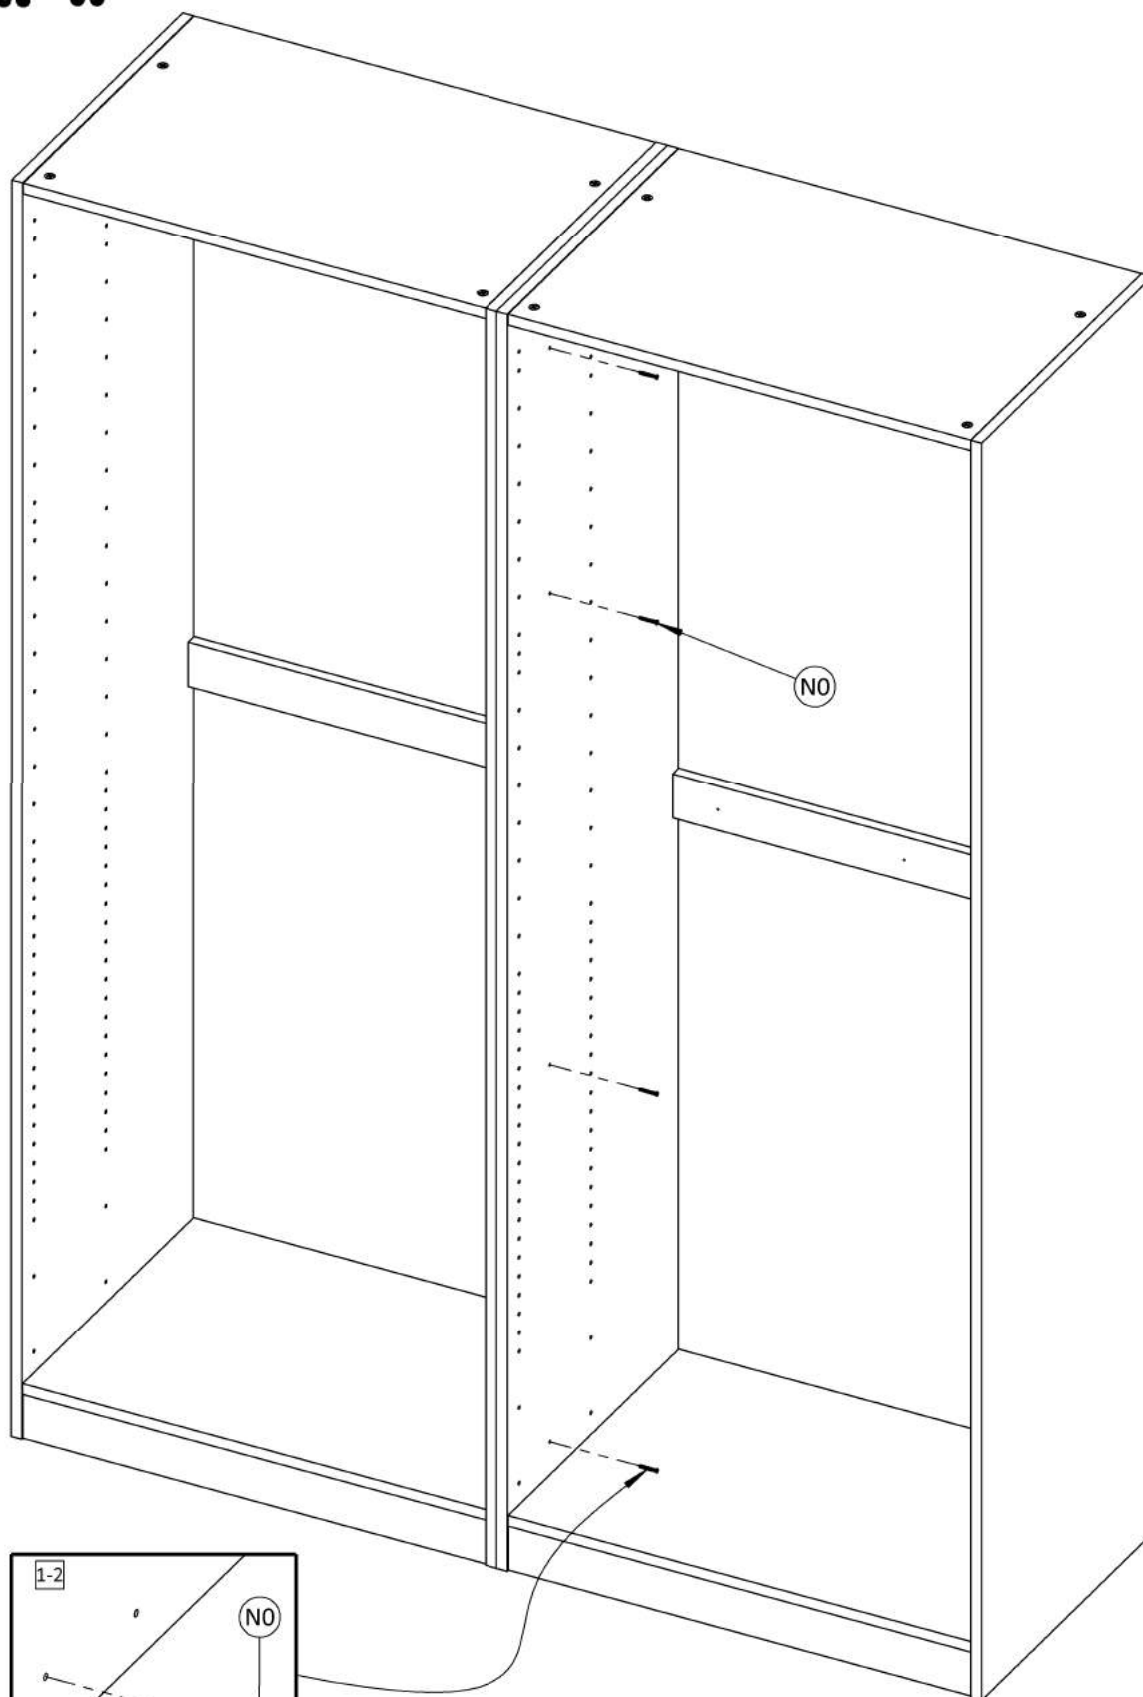


## FIXING THE SHELVES INSIDE THE CABINET



## ASSEMBLY INSTRUCTIONS

BOX 06

### STEP 08

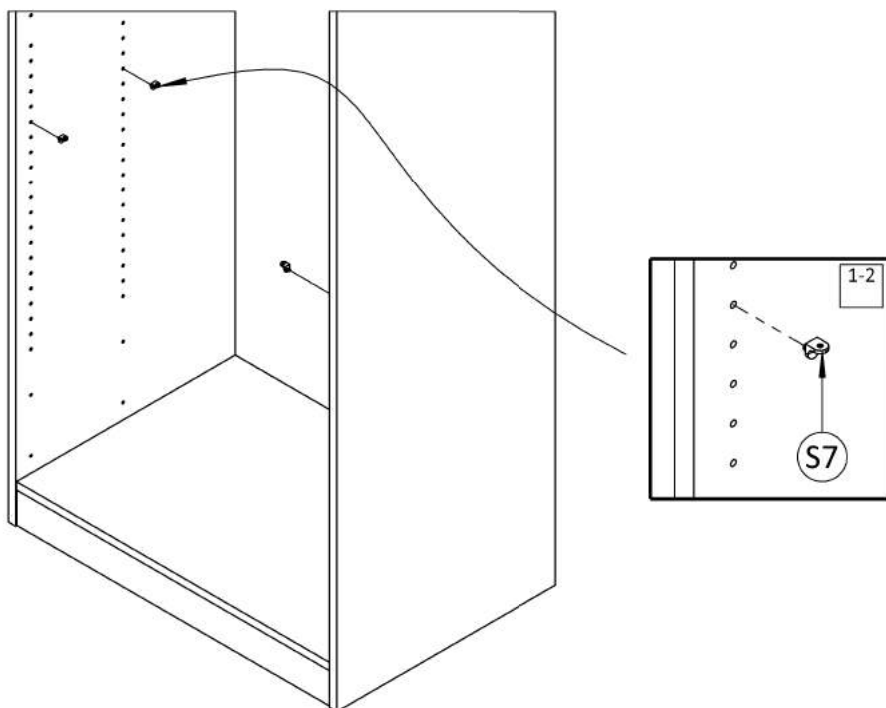FIX THE SUPPORT ON THE SIDE PANNELS CLOSET



FIXING SHOE RACK HARDWARES	20	20
	 SHELF SUPPORT	 SCREW 15/64 X 33/64

### STEP 09

FIT THE SHELF ON THE CLOSET

SCREW THE SHELF  
ON THE SUPPORT

