



# HEADBOARD

## ASSEMBLY INSTRUCTIONS

Before assembling your Headboard, please read through these instructions carefully, familiarize yourself with the different parts.

Instructions apply for all sizes of bed

### PARTS LIST

- 1 HEADBOARD PANEL 1 PC
- 2 LEFT LEG 1 PC
- 3 RIGHT LEG 1 PC

### HARDWARE

- a JCB M6 X 120mm(4 3/4") - 4 pcs  
Spare - 1 pc
- b JCB M6 X 70mm(2 3/4") - 4 pcs  
Spare - 1 pc
- c Barrel Nut - 8 pcs  
Spare - 2 pcs
- d Allen Wrench - 1pc  
Spare - 1pc


NOTE : WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, JCB OR BARREL NUT ARE DAMAGED DURING ASSEMBLY.

### Step 1

Attach the legs (2)(3) to headboard panel (1), using JCB (a) and barrel nut (c). Tighten with the Allen wrench (d).




### Step 2

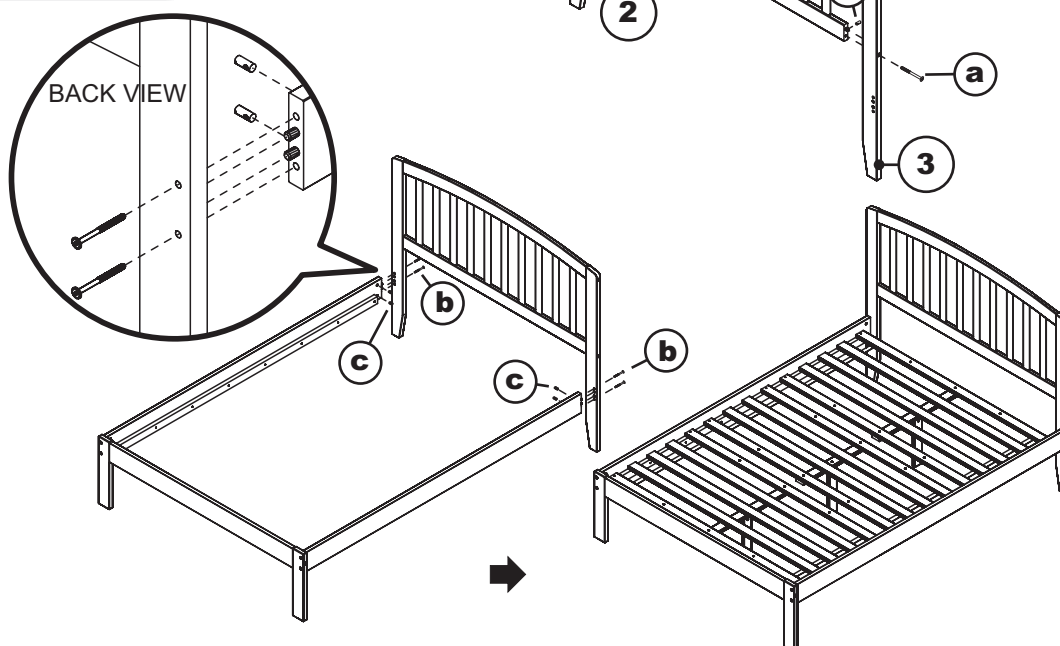

Attach bed frame assemblies to the headboard assemblies, using JCB M6 X 70mm (b) and barrel nut (c) as shown. Tighten with allen wrench (d). For Slat kit assembly, follow assembly instructions included with slat kit.

### Assemble Metal Frame

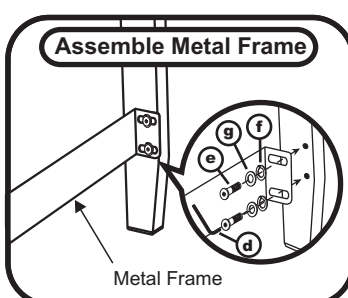

### HARDWARE

For Headboard to Metal Bed Frame

- e 1" Allen Bolts - 4 pcs  
Spare - 1 pc
- f Split Washer - 4 pcs  
Spare - 1 pc
- g Flat Washer - 4 pcs  
Spare - 1 pc