

## **CALIFORNIA KING BED**

### **ASSEMBLY INSTRUCTION**




**ASSEMBLY TIPS:**


- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast& easy assembly.



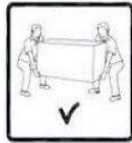


**warning**

- 1.Don't attempt to repair or modify parts that are broken or defective please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

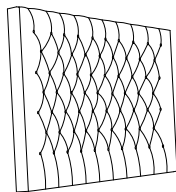





ASSEMBLY TIME PER UNIT:	20 MINUTES
-------------------------	------------

**PARTS IDENTIFICATION****A****Headboard****1PC****B****SIDE PANEL****2PC****HARDWARE PACKAGE**

1	Allen wrench    5*23*73mm		<b><u>1 PCS</u></b>
3	Headboard corner bracket-Right		<b><u>1 PCS</u></b>
4	Headboard corner bracket-Left (facing)		<b><u>1 PCS</u></b>
5	Short bolt    4.5cm		<b><u>8 PCS</u></b>
6	Hexagon socket screw    5cm		<b><u>4 PCS</u></b>

All above hardware pack is located in product

## PARTS IDENTIFICATION

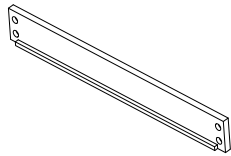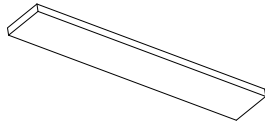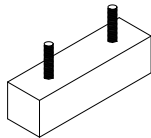
**C****BED RAILS****2PC****D****FOOTBOARD****1PC****E****SLATS****5PC****F****WOOD LEGS****2PC****G****SLAT SUPPORTS****5PC**

### HARDWARE PACKAGE


	DESCRIPTION	FIGURE	Q'TY
1	Allen wrench 5*23*73mm		<b><u>1 PCS</u></b>
2	Open-ended wrench		<b><u>1 PCS</u></b>
7	Screw		<b><u>8 PCS</u></b>
8	Hexagon head bolt 5cm		<b><u>4 PCS</u></b>
9	Wood screw 3cm		<b><u>10 PCS</u></b>

All above hardware pack is located in product


### STEP 1

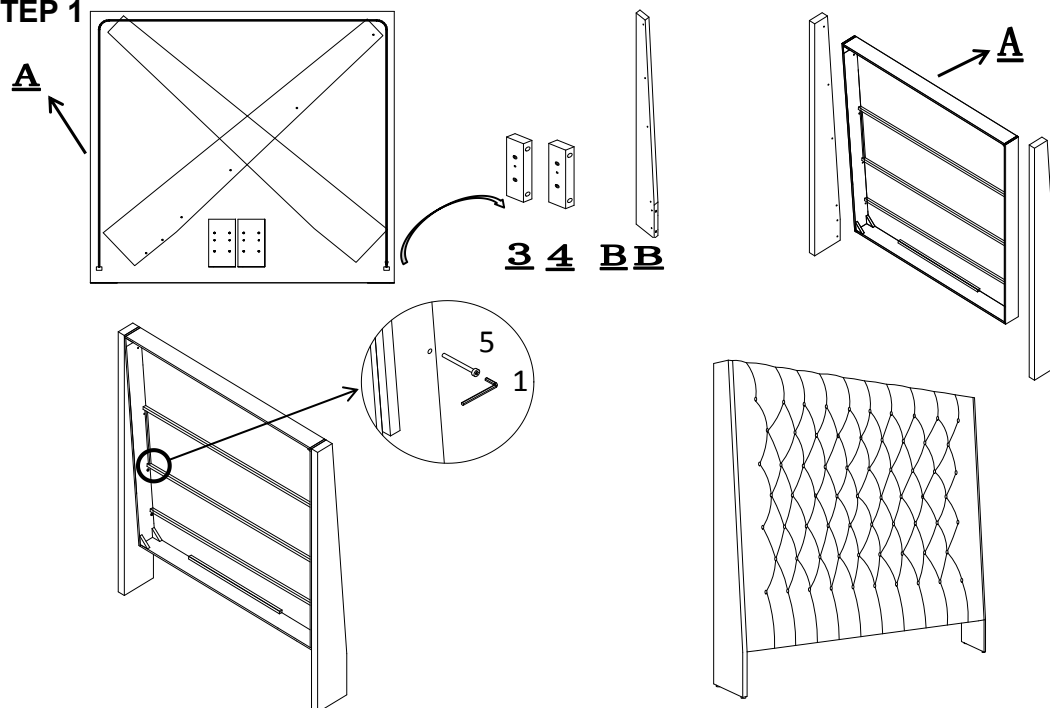


### STEP 2

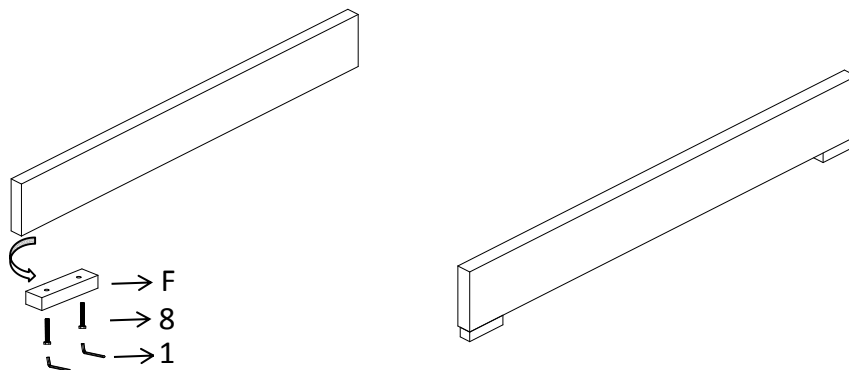


### STEP 3

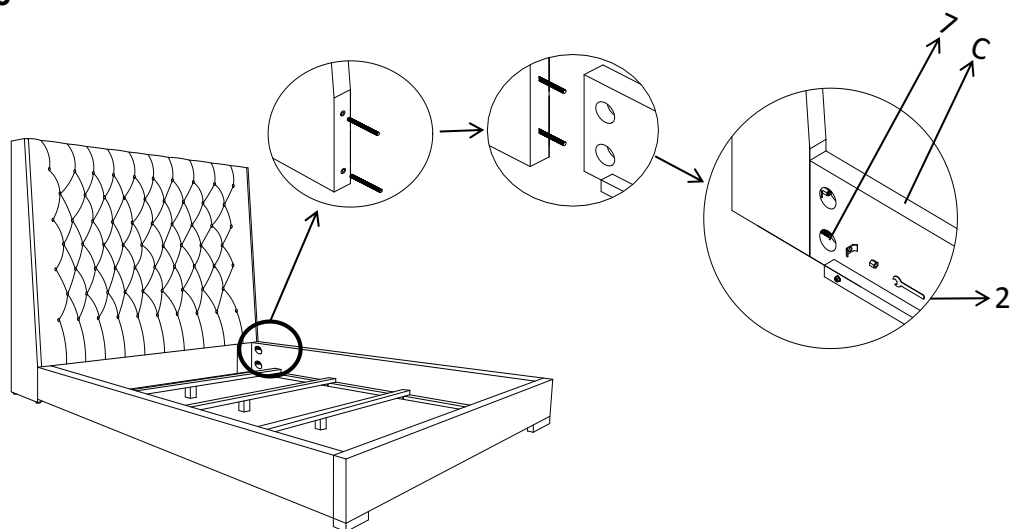

### STEP 3

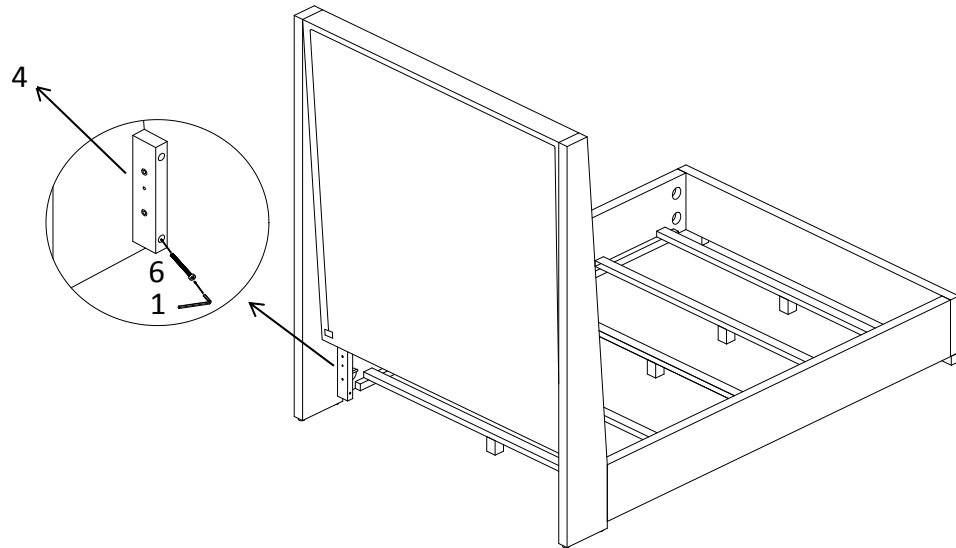

### STEP 4

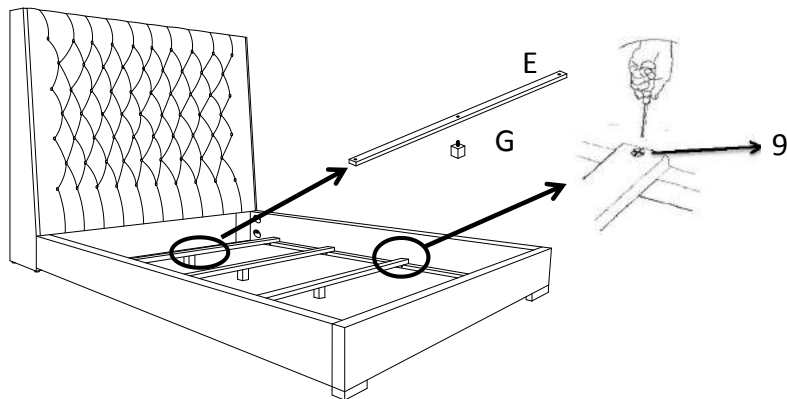

### STEP 5

