

SLAT KIT FULL LOWER BUNK


ASSEMBLY INSTRUCTION

Before assembling your bed slat kit, please read through these instructions carefully and familiarize yourself with the different parts. Please note that you will require a Phillips screwdriver and an Allen wrench.

ATTENTION! If you receive a damaged or defective item, please contact us



PARTS LIST

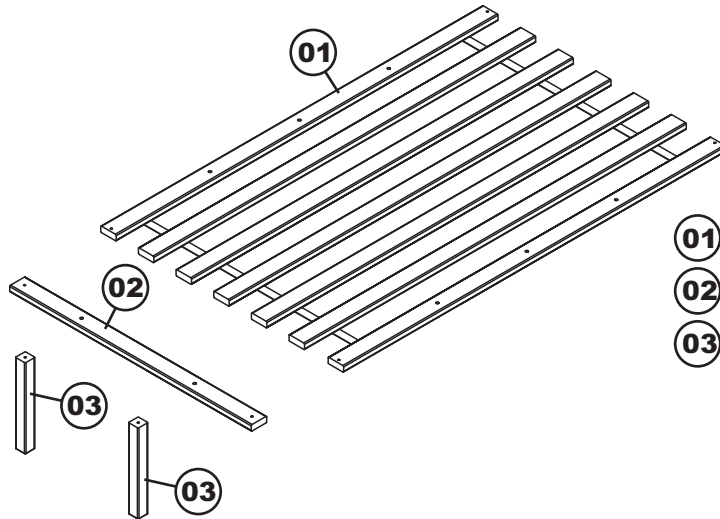

01	SLAT SECTION	2 SET
02	SUPPORT RAIL	2 PCS
03	CENTER LEG	4 PCS

HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE ALLEN WRENCH, ALLEN SCREW, OR WOOD SCREWS ARE DAMAGED DURING ASSEMBLY.

A

1 1/2" (40mm) Allen screw - 8 pcs
Spare - 1 pc

B

1 1/4" Wood screw - 8 pcs
Spare - 2 pcs

C

Allen wrench - 1 pc
Spare - 1 pc

Step 1

Assemble bed frame according to assembly instructions.


Step 2

Assemble center legs (03) and support rail (02).
Using Allen screw (A).
Tighten with the Allen wrench (C).
Repeat for other support rail.

C



Allen wrench

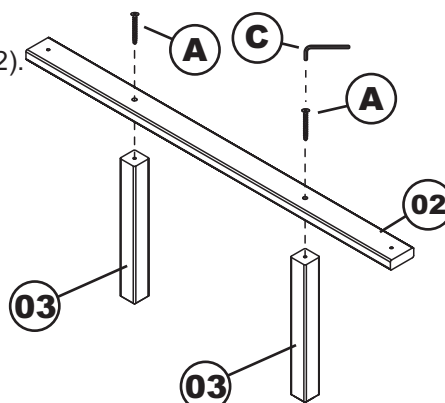

Adult assembly

A







1 1/2" Allen screw



SLAT KIT FULL LOWER BUNK

Step 3

Lay the slat section (01) onto the bed. Attach support rail assembly (02) to the slat section (01). Using Allen screw (A), tighten with the Allen wrench (C). Repeat for section 2.

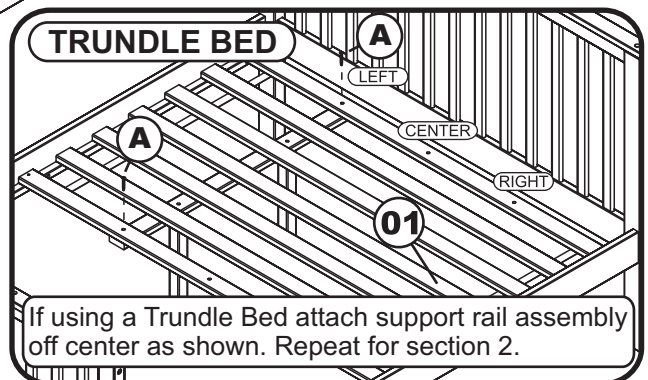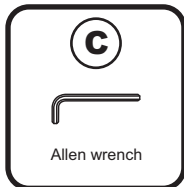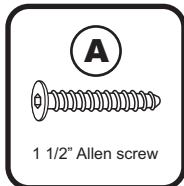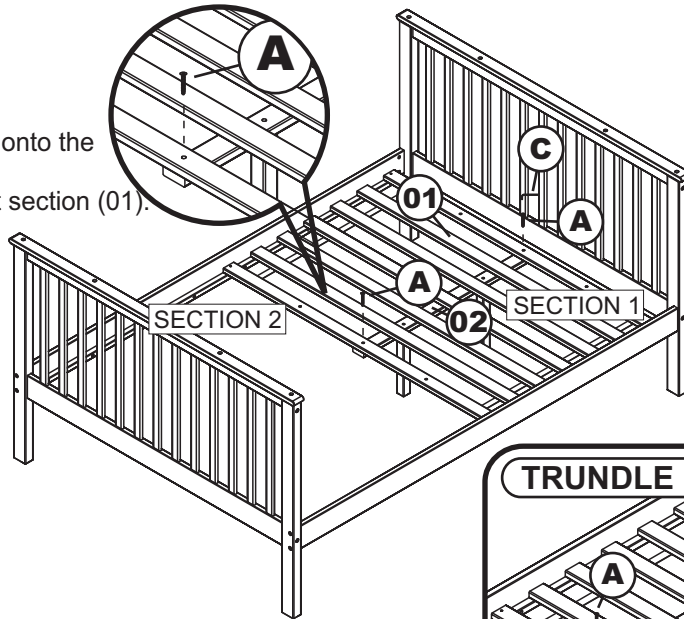

Step 4

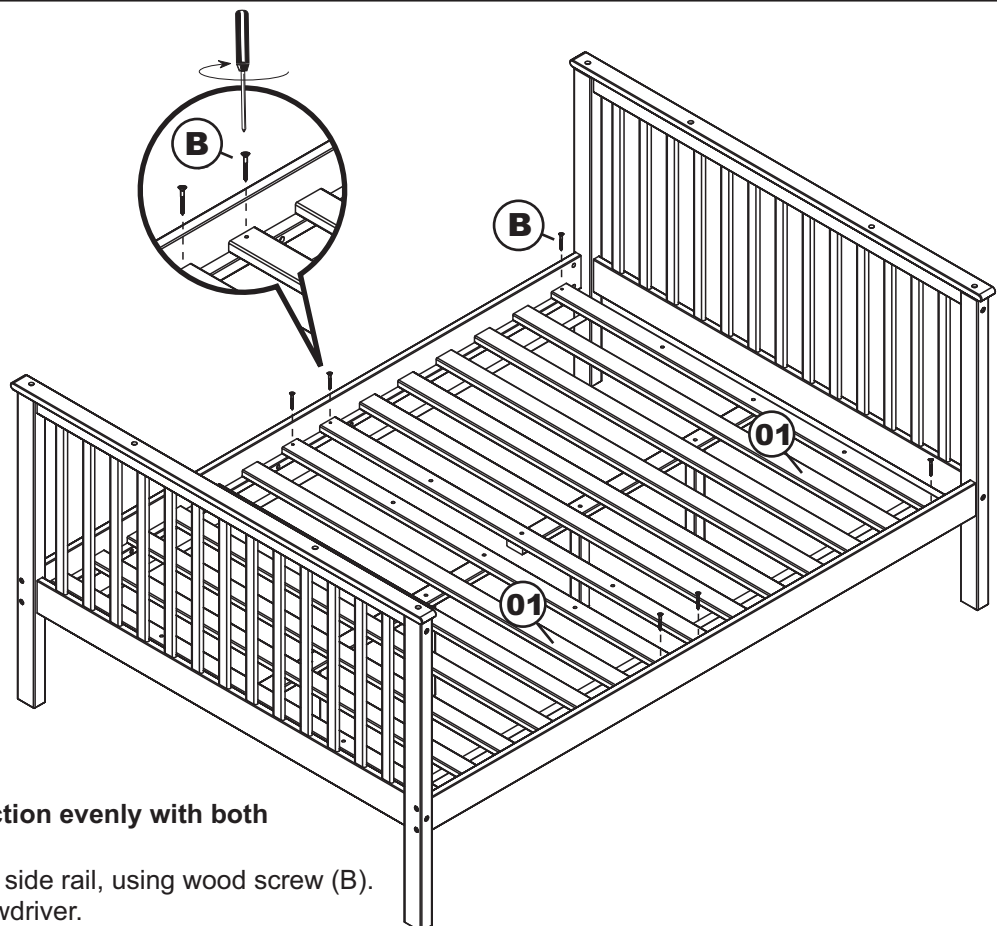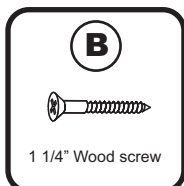

Be sure to align slat section evenly with both ends of side rail.

Screw slat section (01) to side rail, using wood screw (B). Tighten with Phillips screwdriver. Be sure the space between slats is even.