

USA/Canada: 1-800-4KOHLER
Mexico: 001-800-456-4537
www.kohler.com

WARNING: Risk of serious injury. Damage prior to installation can result in glass shattering. Inspect the glass and all parts for damage before installation.

WARNING: Risk of serious injury. Improper installation can result in glass shattering. Follow all installation instructions.

NOTICE: Do not touch the edges of the tempered glass with tools or any other hard objects. Do not set the unframed tempered glass directly on the floor or any hard surface.






WARNING: Risk of serious injury. Do not cut tempered glass. Tempered glass will shatter if cut.

WARNING: Risk of serious injury. Shower door and side panels can shatter. Regularly inspect the glass and all parts for damage, missing, or loose parts.





WARNING: Risk of serious injury. Always wear safety glasses while cutting and drilling.

IMPORTANT: Leave this manual for the end user. Read these instructions before installing or using this product.


Required Tools

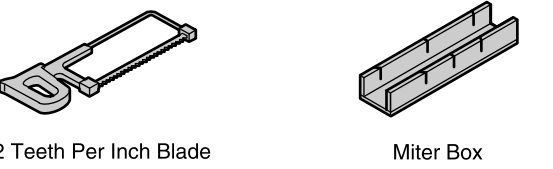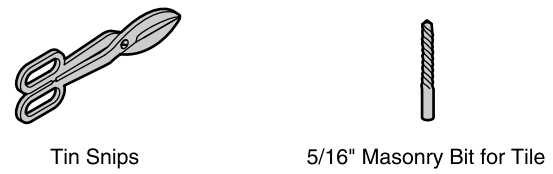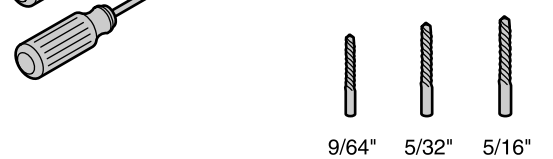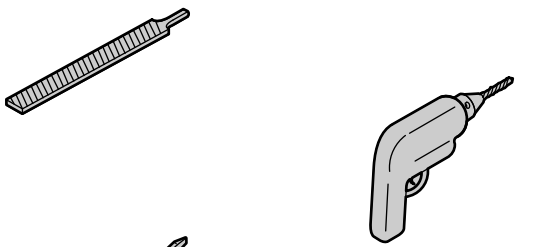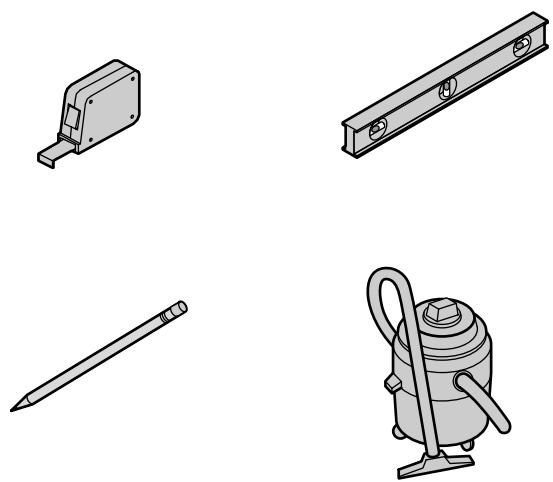


Parts Identification

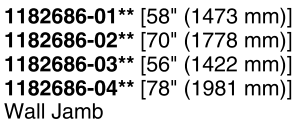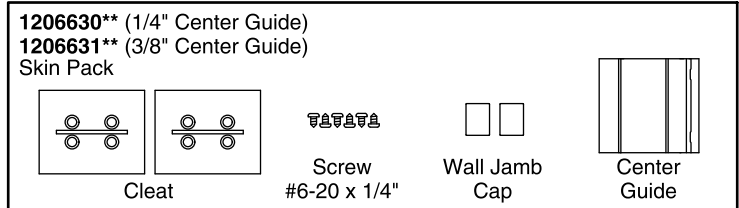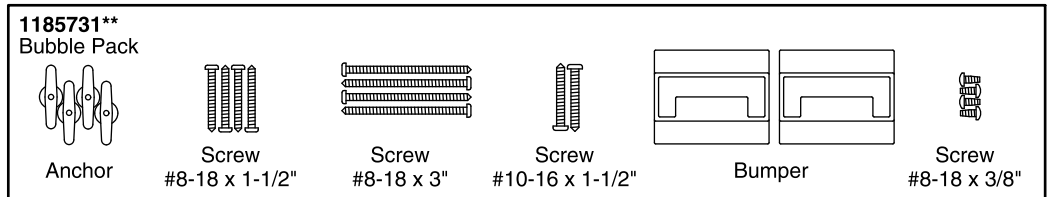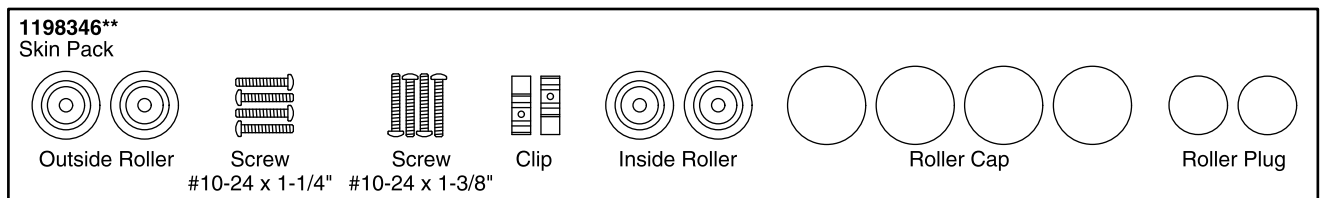


2 Position the threshold at least 2-1/2" (64 mm) from the inside ledge. Ensure parallel on the ledge and centered between the walls. File the ends to match radius corners.

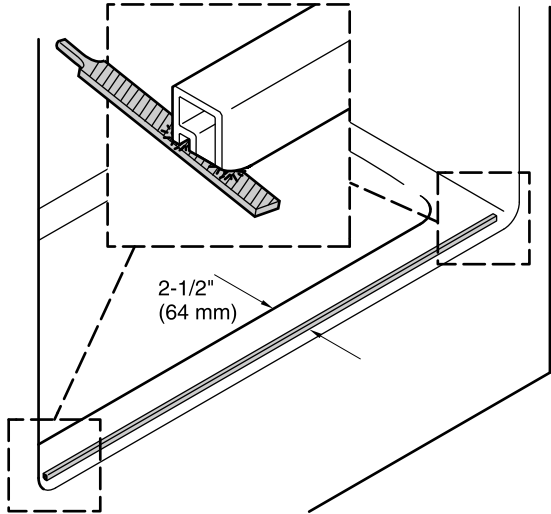


7 Mark 1" (25 mm) down inside each wall jamb. Remove the wall jambs.

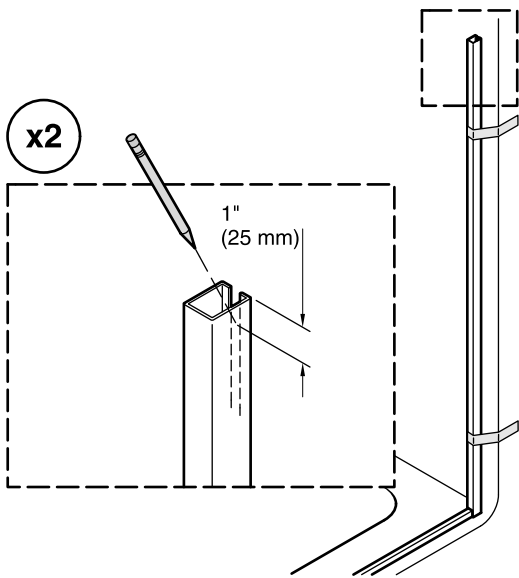

3 Apply 100% silicone sealant to the bottom of the threshold. Tape in place toward the front of the ledge.


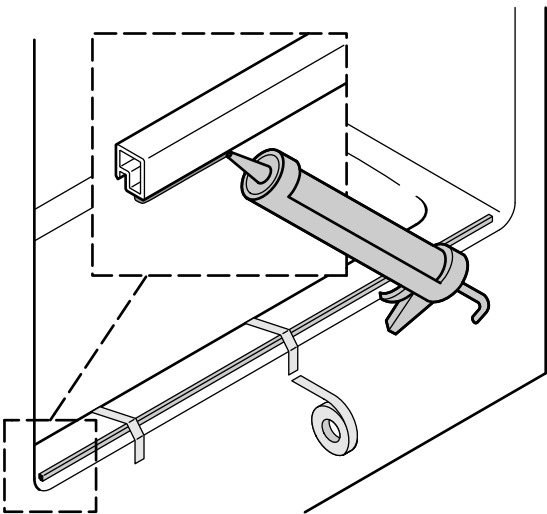


8 Drill a 9/64" hole and install the wall jamb screw, leaving 1/8" (6 mm) out.

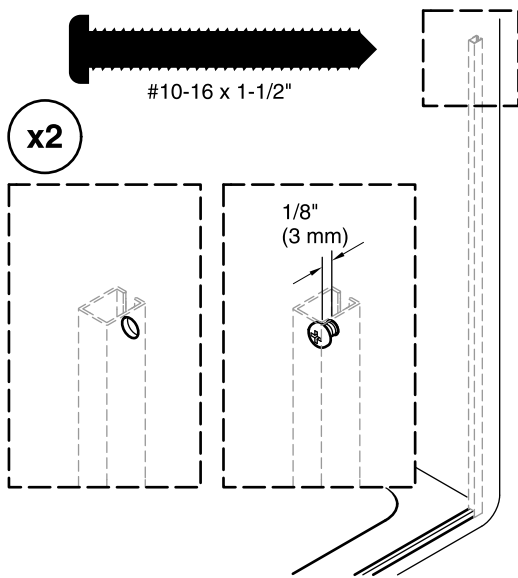


*Call Customer Care Center to order replacement parts.
**Finish/color code must be specified when ordering.
Retain this document for future servicing.
Record model number from box for reference.

Model Number: _____

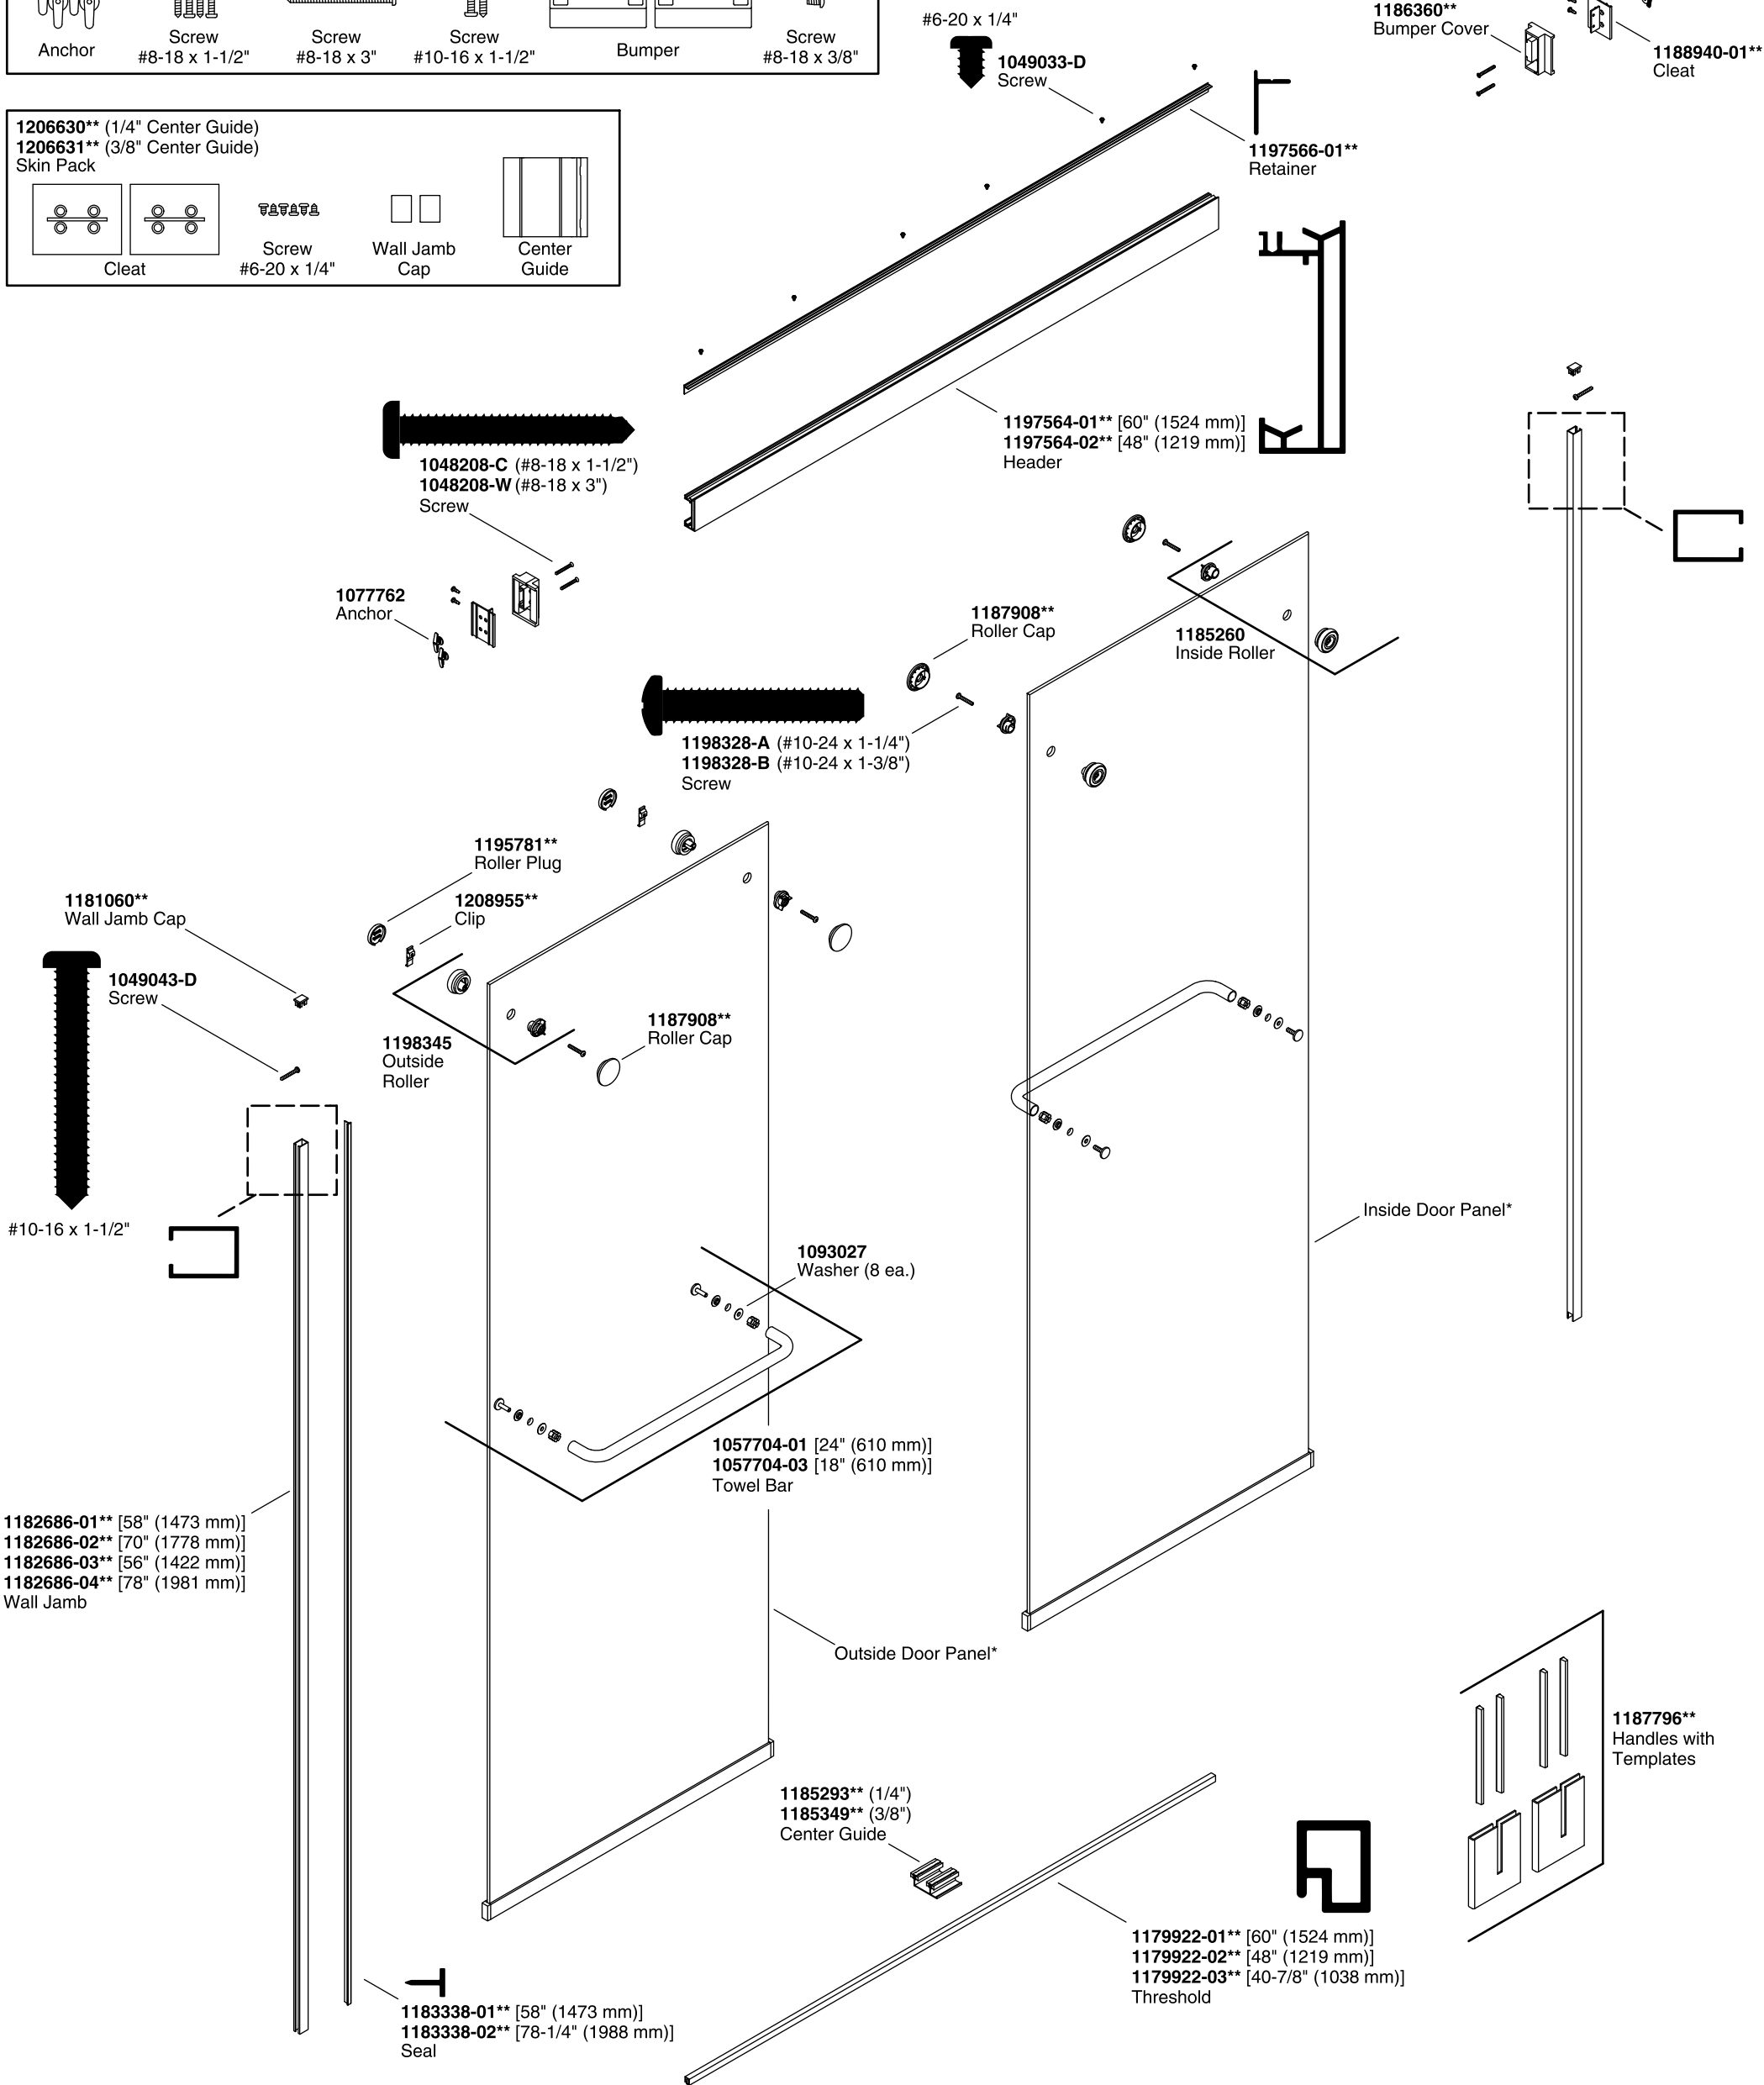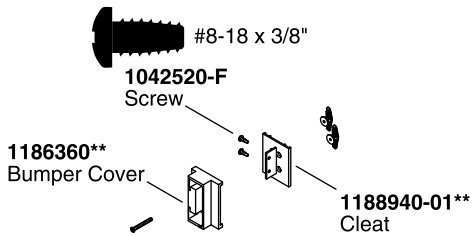


CAUTION: Risk of injury. Do not attempt to cut tempered glass.
IMPORTANT! Do not cut the header the same length as the threshold.
IMPORTANT! Walls must be within 3/8" (10 mm) of plumb. This unit will not function properly if the walls are more than 3/8" (10 mm) out of plumb.
Cover the drain with tape to avoid loss of small parts.
Follow the silicone sealant manufacturer's instructions for application and curing time.


1 Measure distance "A." Subtract 1/4" (6 mm) from "A" and cut the threshold.

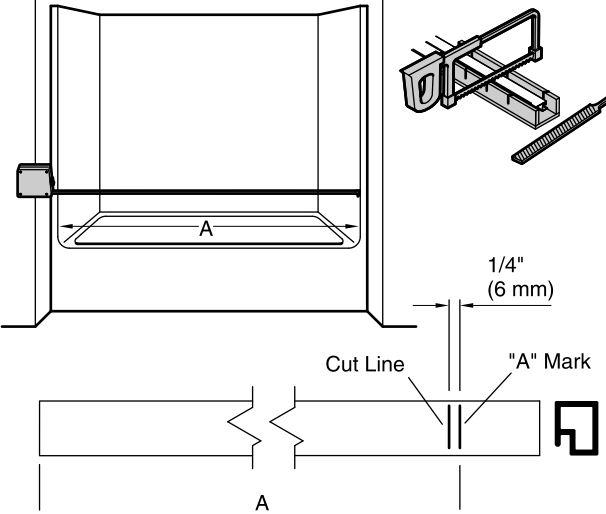


6 Position the wall jambs over the threshold. Plumb and tape in place.

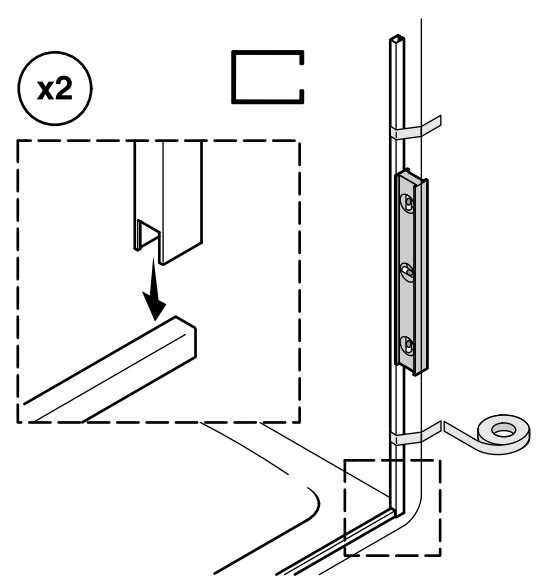

5 Important! The threshold and wall jamb must be plumb with the ledge and wall. Position the wall jamb over the threshold. Trim and file the ends to match radius corners.

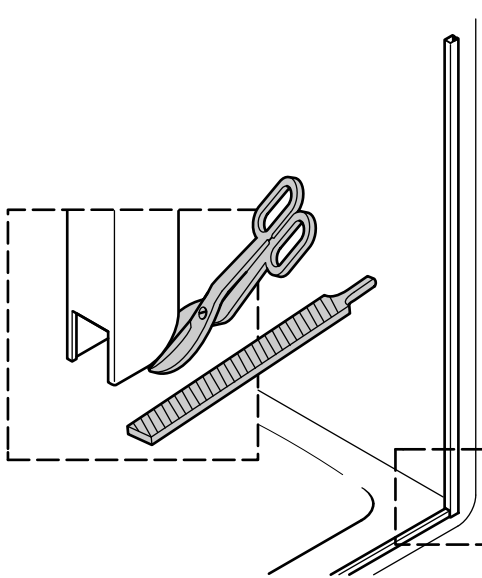

4 Mark the center of the threshold. Apply 100% silicone sealant to the bottom of the guide. Align and rotate the guide down on the center mark. Tape in place.

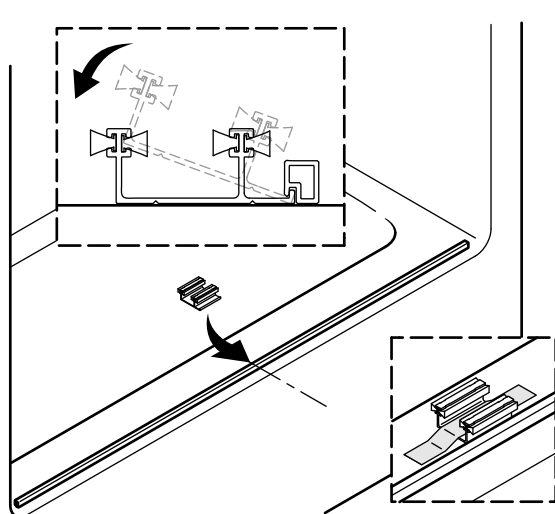

9 Slide the wall jamb up over the screw, then down onto the threshold. Important! The jamb must be tight against the wall. Adjust the screw as needed.

