


ASSEMBLY INSTRUCTION

KING BED 76"x80"


Page : 1 OF 1

Before you begin, please read Assembly Instruction carefully and recognized the part and hardware. Then follow them step by step.

STEP 1.

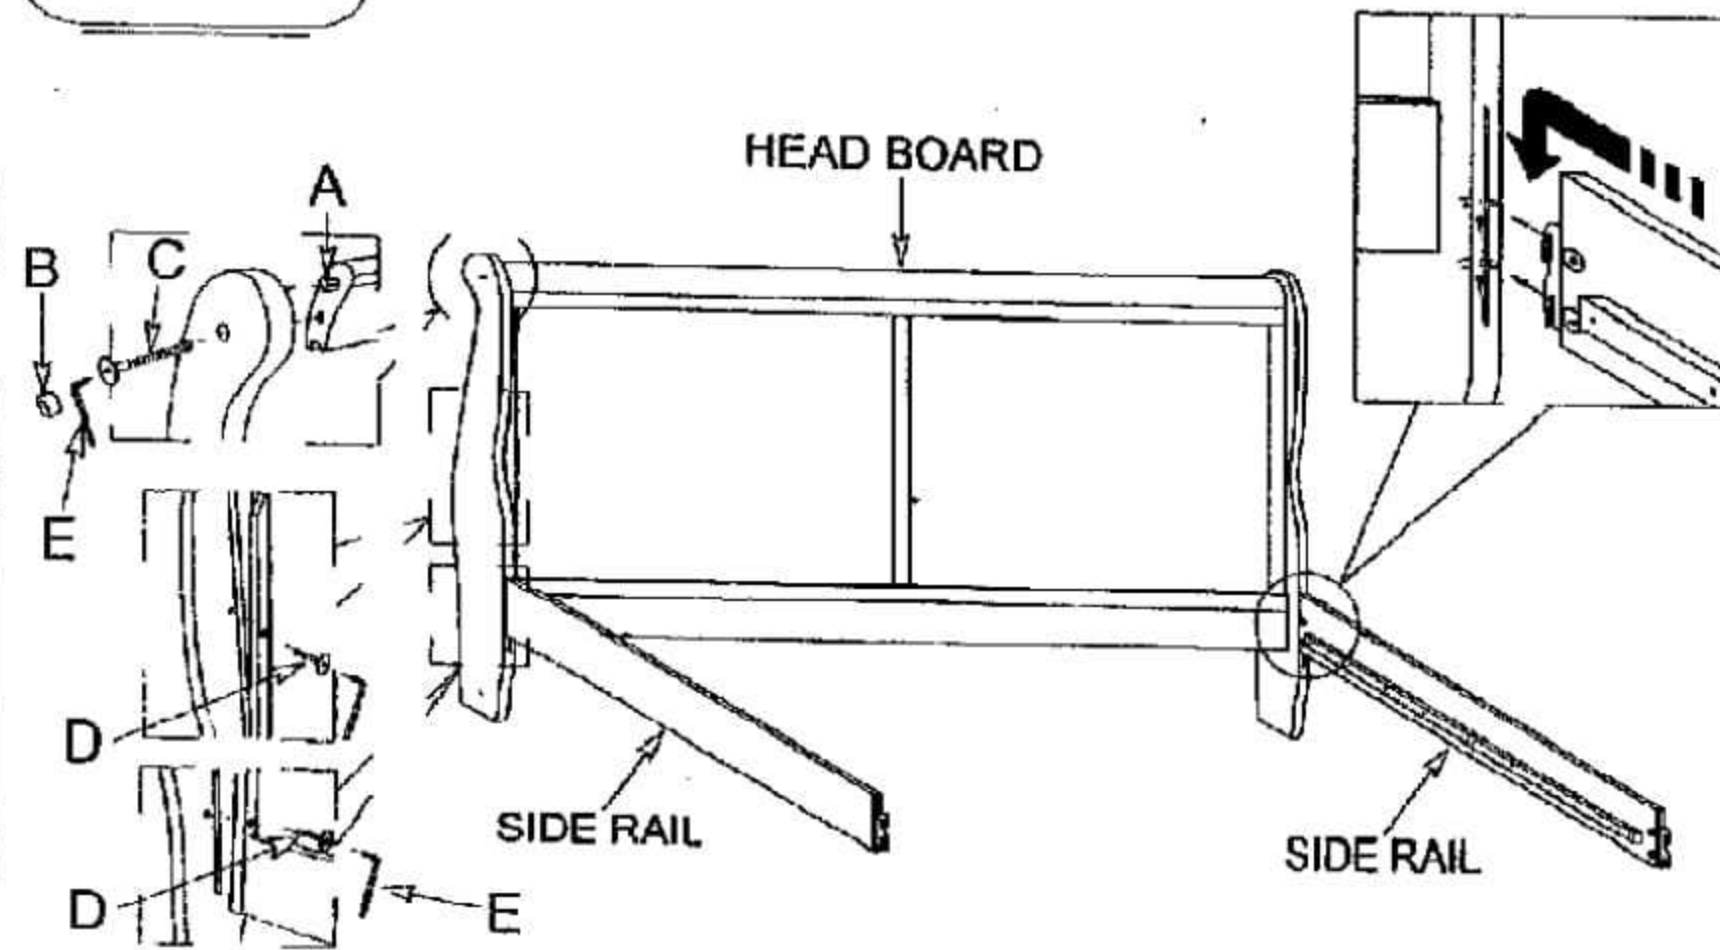

STEP 2.

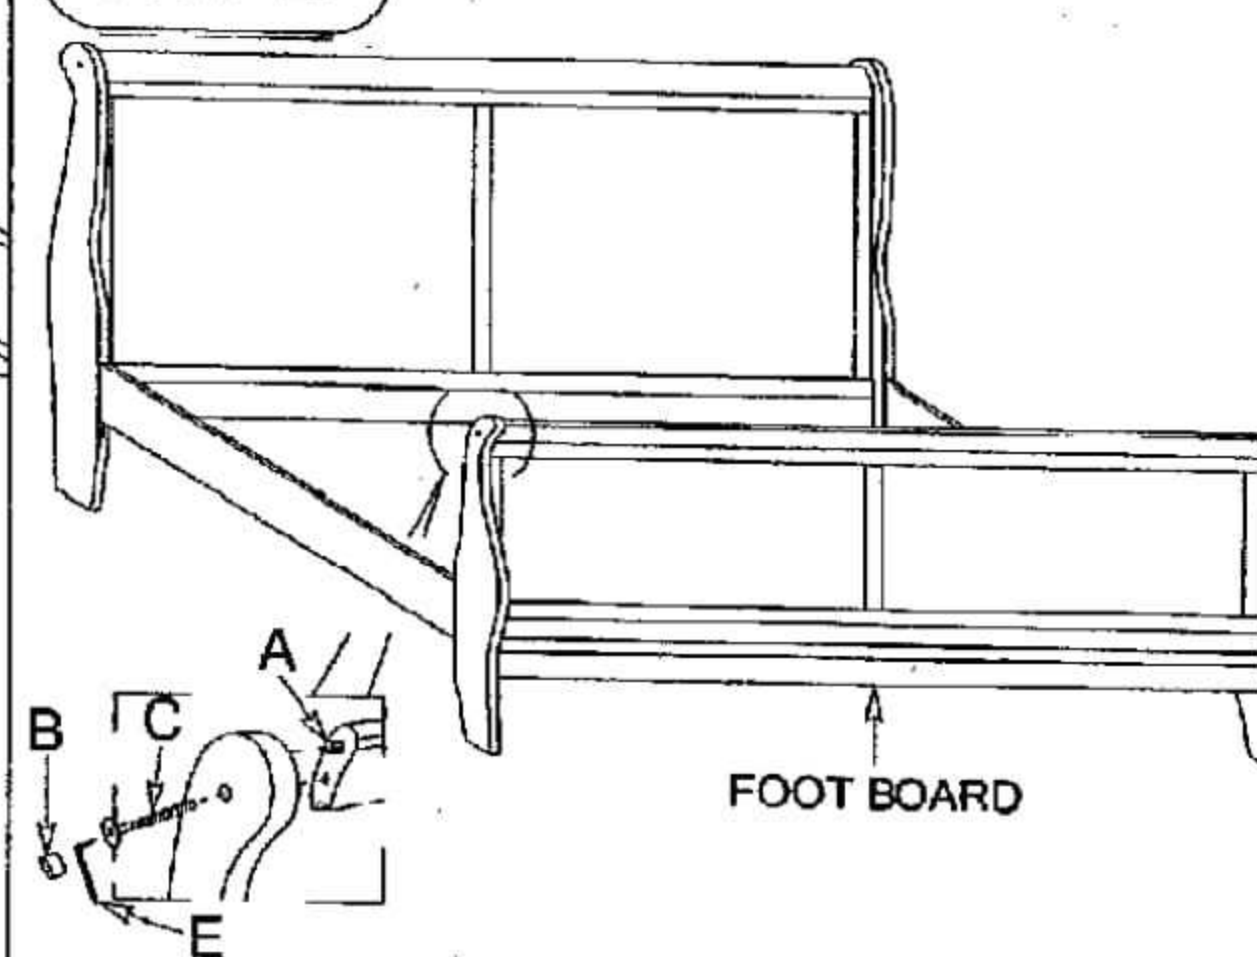

TIPS : REPEAT STEP 1 TO JOINT FOOT BOARD.

HARDWARE PART 1



NO	HARDWARE DESCRIPTION	QTY
A.	Wood Dowel M12 x 50mm	4PCS
B.	Wood Bolt M15 x 9mm	4PCS
C.	JCBC Bolt M6 x 50mm	4PCS
D.	JCBC Bolt M6 x 35mm	8PCS
E.	Allen Key	1PC

HARDWARE PART 2


NO	HARDWARE DESCRIPTION	QTY
F.	Chipboard Screw M4 x 32mm	10PCS
G.	JCBC Bolt M6 x 35mm	10PCS
H.	Adjuster Screw M6 x 24mm	10PCS

Screw Driver Not Provide !!!

STEP 3.

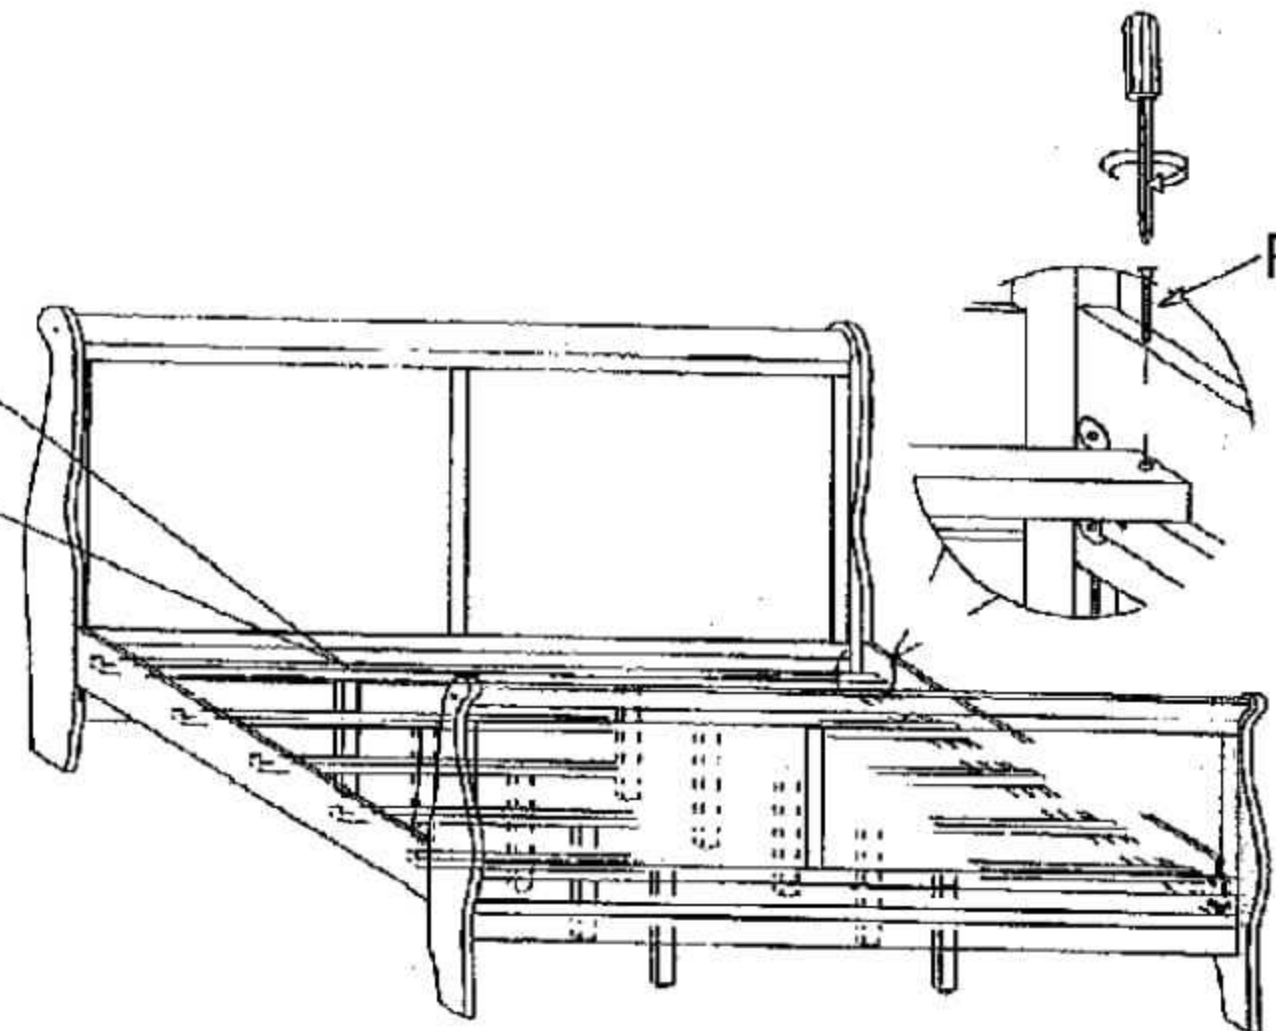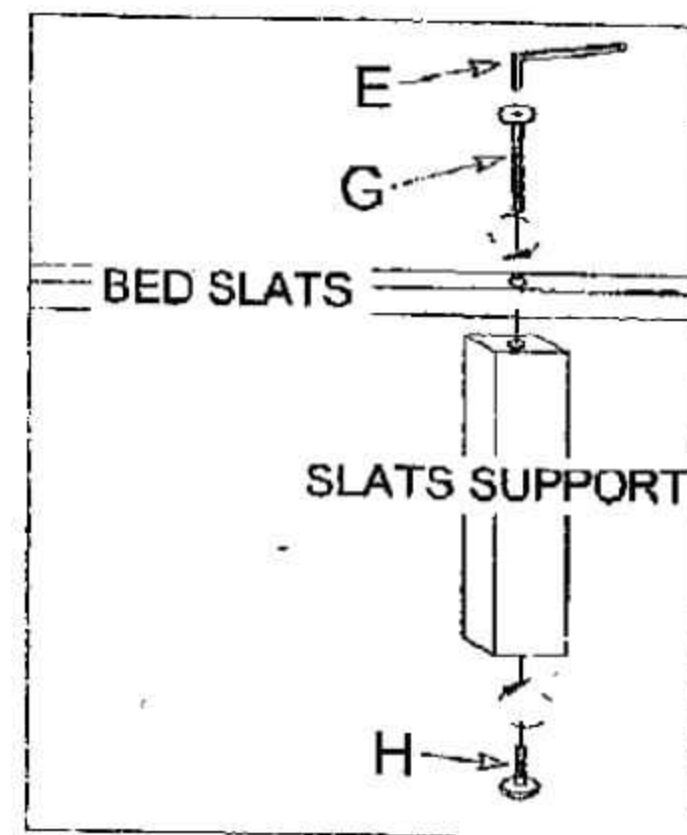

COMPLETE SET

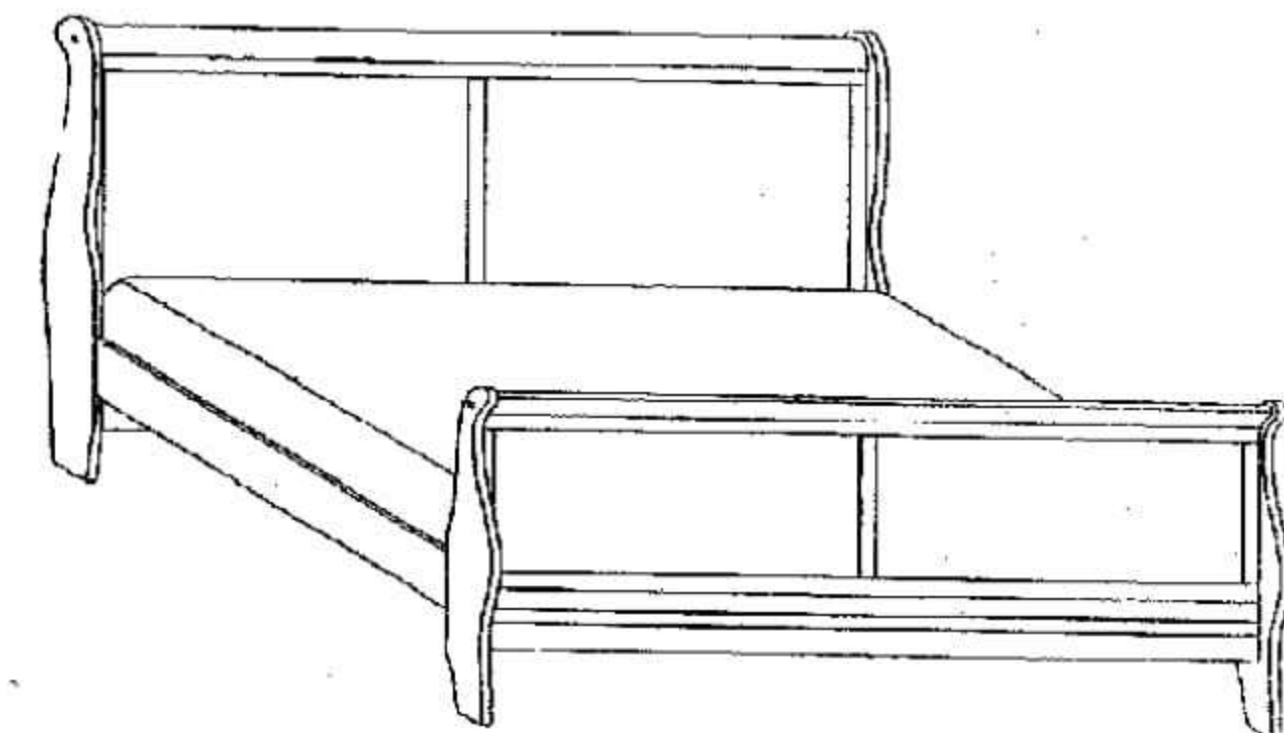

* TOTAL SLAT : 5PCS (WITH JCBC HOLE) + 10PCS (SLATS SUPPORT)