
Assembly Instructions Cabinet

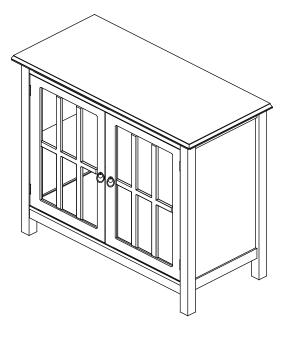

Thank you for purchasing our product!

Please assemble the products with the guidance of this manual instruction. Contact our friendly customer service department with any <u>comments</u> or in case there is any missing or damaged parts or hardware.


We appreciate your business!

Hardware List

ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
А	Cam Bolt	6*35mm	6 pcs	Н	SCREW	2.5*10mm	27pcs
В	Camlock	15*10mm	6 pcs	I	Hinge	40mm	4 pcs
С	Screw	4*40mm	7 pcs	J	Handle Bolt	در المعلم الم 4*16mm	2 pcs
D	Screw	3*14mm	2 pcs	к	Handle	Ô	2 pcs
E	Screw	3*12mm	22 pcs	L	Wooden Dowel	5 .8*30mm	22 pcs
F	Round Head Bolt	6*70mm	4 pcs	М	Magnetic Catch		1 pc
G	Barrel Nut	() 10*11mm	4 pcs	N	Magnetic Bar	35*12*1mm	2 pcs

Note:


1. Please be advised to have at least 2 persons to assemble this unit.

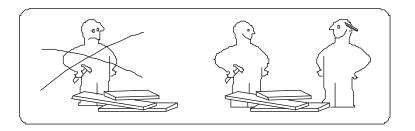

2. Tools not included, but assential for assembling this unit:

"Philips" Screwdriver	
Flat Head Screwdriver	

- 3. Place a large cloth or blanket on the floor or flat surface to protect parts from scratching.
- 4. Before assembling this unit, please check that all parts and hardware are present.

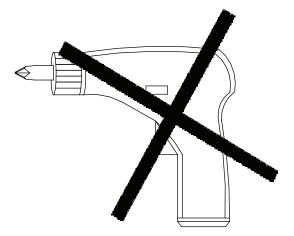


DO NOT USE POWER TOOLS

Part List


ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Connect Rail for Bottom Panel		2 pcs	6	Left Side Panel		1 pc
2	Bottom Panel		1 pc	7	Right Side Panel		1 pc
3	Connect Rail for Top Panel		1 pc	8	Left Door		1рс
4	Shelf		1 pc	9	Right Door		1рс
5	Top Panel		1 pc	10	Back Panel		2 pcs

Made In China


STEP 1

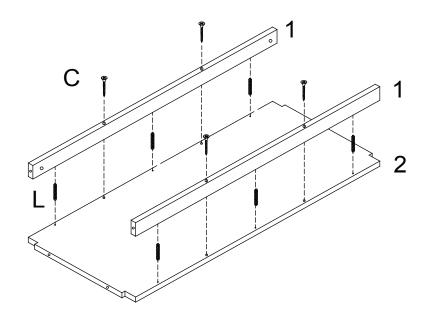


1. Attach connect rail (1) to bottom panel (2) by using screw (C) and wooden dowel (L).

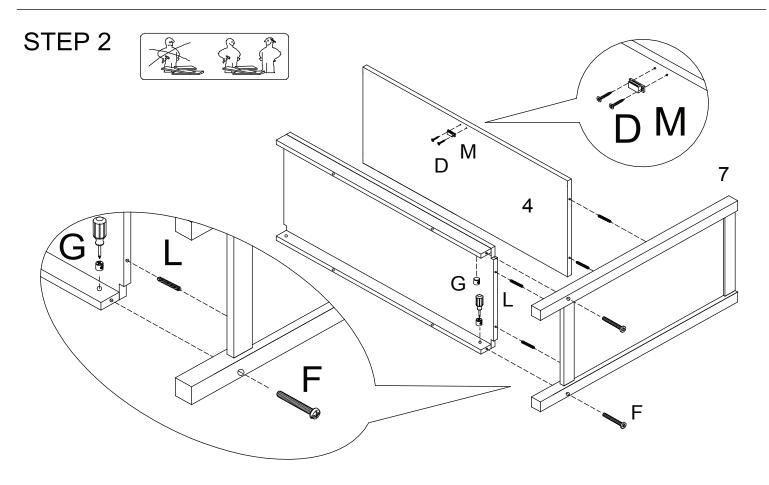

- Insert barrel nut (G) to connet rail (1) in right direction. Attach right side panel (7) to assembled unit from step 1 by using round head bolt (F) and wooden dowel (L).
 Important: the back rail should be flushed with gloove.
- 2. Attach magnetic catch (M) to shelf (4) by using screw (D).
- 3. Attach shelf (4) to side right panel (7) by using wooden dowel (L).

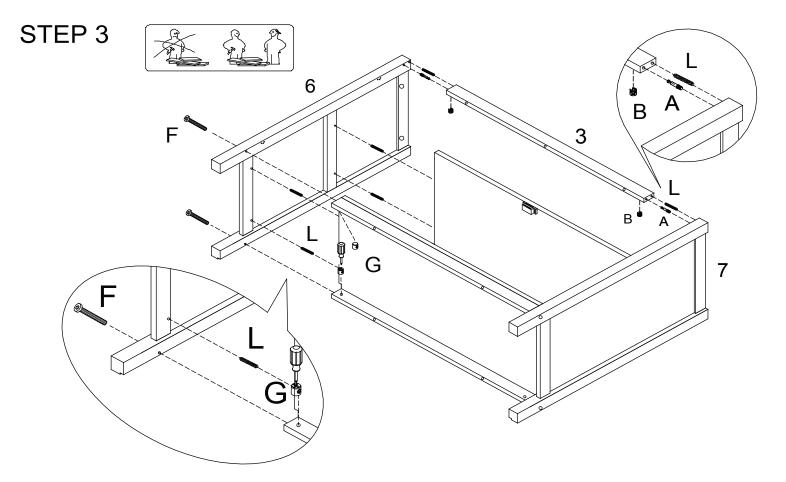

- 1. Screw cam bolt (A) to left side panel (6) and right side panel (7),then assemble connect rail (3) to right side panel (7) using wooden dowel (L). **Please hold up the connect rail (3) before attach left panel (6).**
- 2. Insert barrel nut (G) to connet rail (1) in right direction. Attach left panel (6) to assembled unit from step 2 by using allen head bolt (F) and wooden dowel (L).
- 3. Insert cam lock (B) to the hole on connect rail (3) then rotate clockwise to secure cam bolt in place.

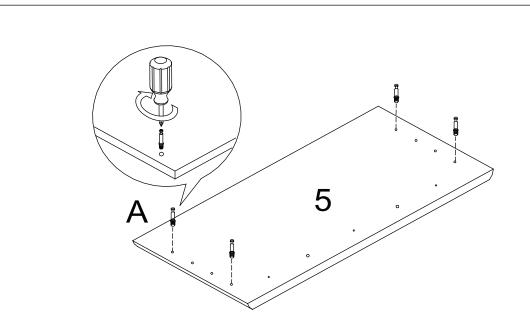


1. Screw cam bolt (A) to top panel (5).


STEP 4

STEP 5


1. Rotate the assembled unit from step 3 and attach top panel (5) using wooden dowel (L) and screw (C).

 Insert cam lock (B) to the hole on side panel (6 & 7) then rotate clockwise to secure cam bolt in place.

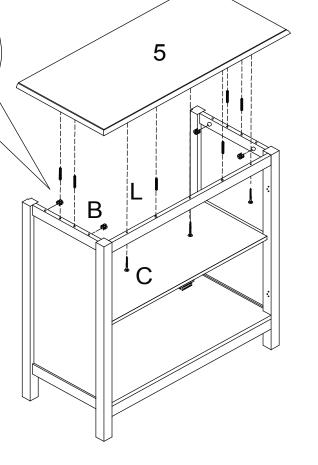

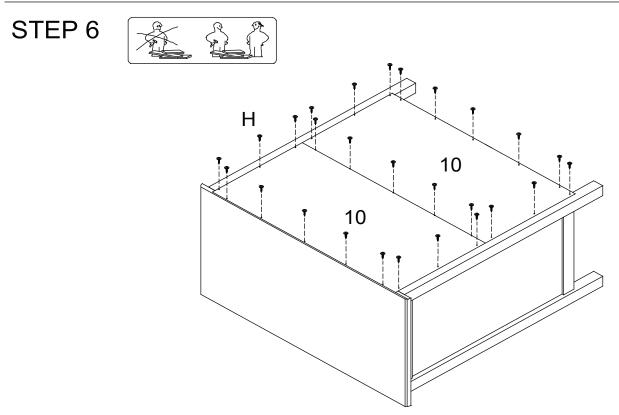


1. Attach the back panel (10) by using screw (H).

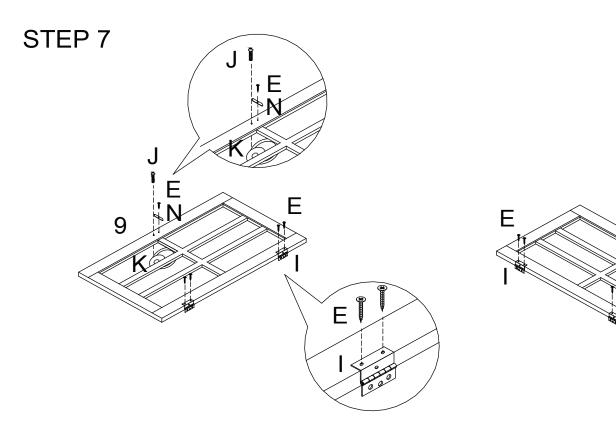

8

- 1. Assemble hinge (I) to left door (8) and right door (9) by using screw (E).
- 2. Assemble handle (K) to door by using handle bolt (J).
- 3. Assemble magnetic bar (N) to door by using screw (E).

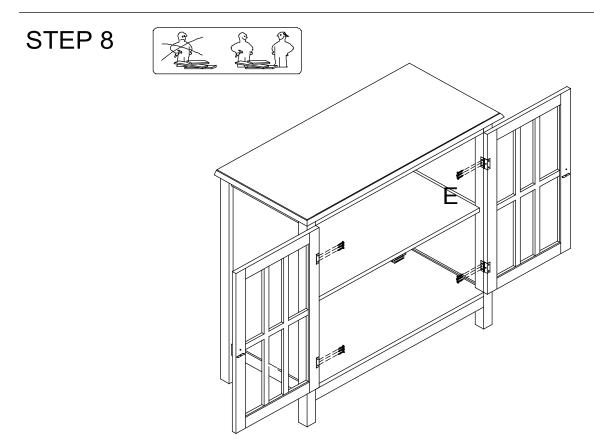

1. Attach left door (8) and right door (9) to the unit from step 6 by using screw (E).