

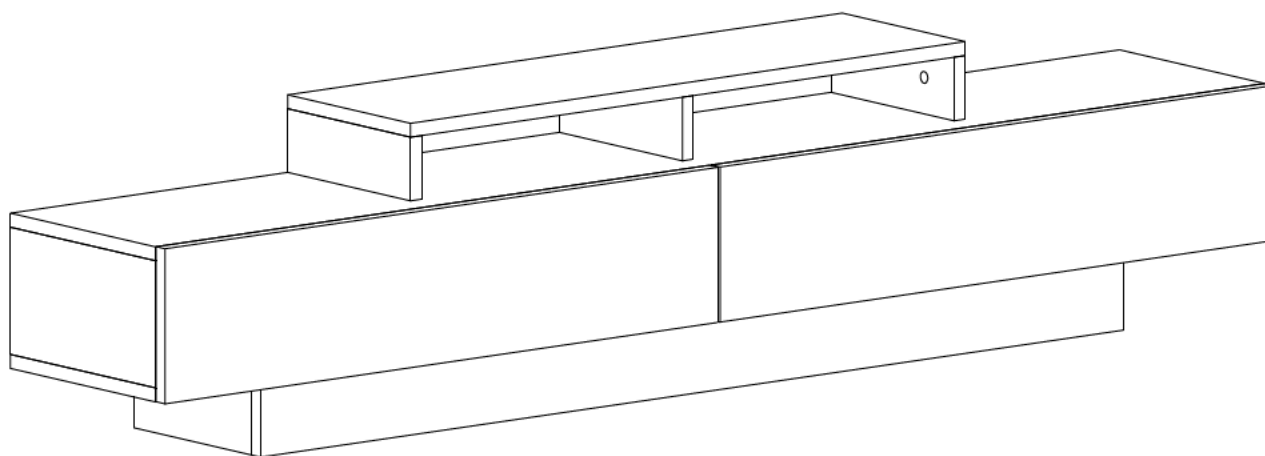


Tv Stand

Assembly Instruction

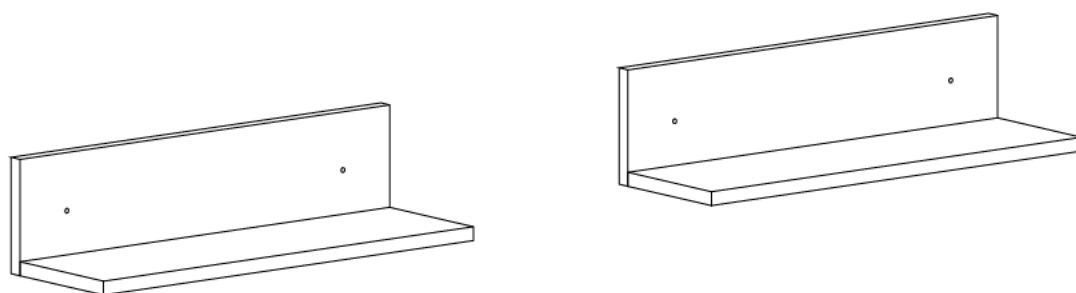


Before you start

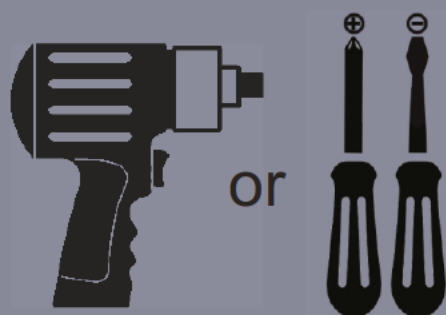


or



Get required installation tools prepared

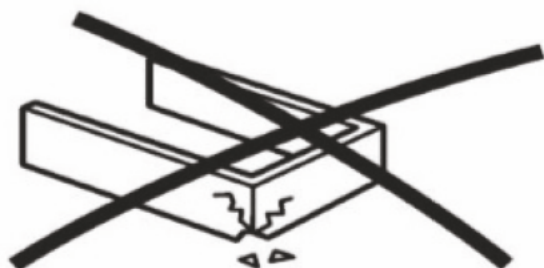


Do not install the product on rough surface.

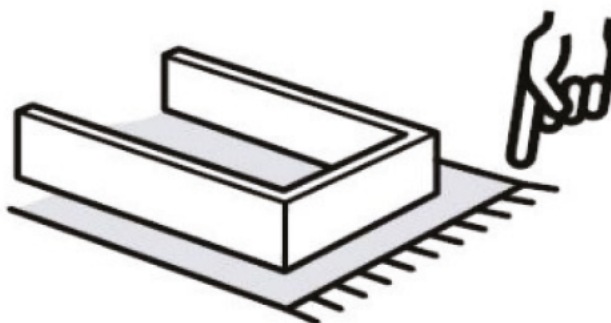



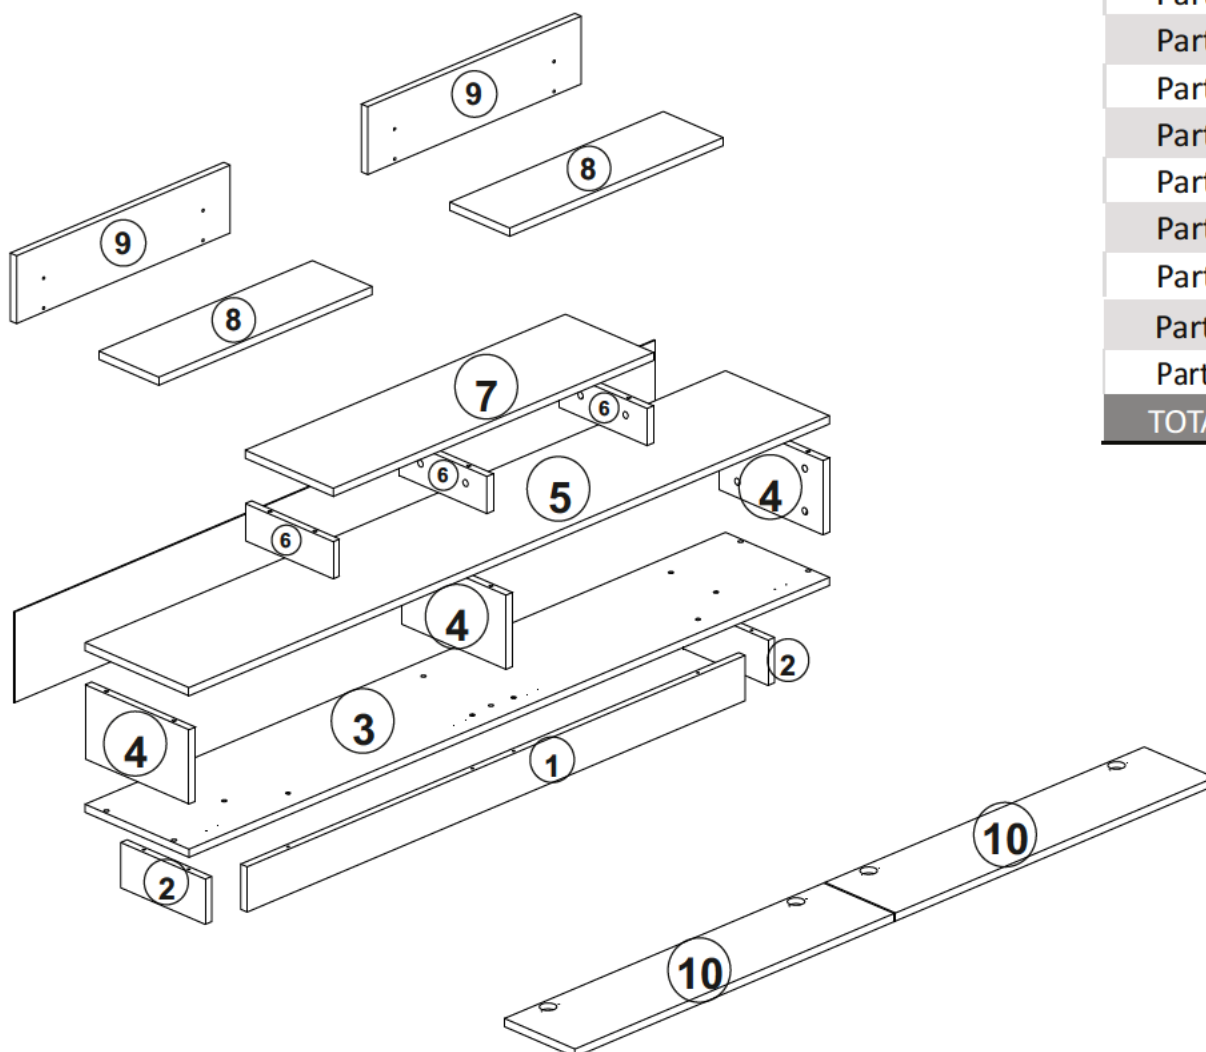








Get help from someone else!






Part1	1x
Part2	2x
Part3	1x
Part4	3x
Part5	1x
Part6	3x
Part7	1x
Part8	2x
Part9	2x
Part10	2x
TOTAL	18x

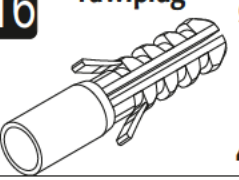Accessories

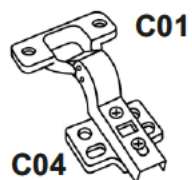
A02 minifix head  20x	A03 minifix screw  20x	A13 50 mm screw  12x	A09 3.5x18 mm screw  16x
A06 18 mm sticker  30x	A16 rawlplug Ø8  4x	A33 5x70 mm screw  4x	A40 nail  30x
C01 bracelet d1  4x	C04 pivot  4x	<p>Please be aware that C01(bracket) and C04(pivot) parts may come as attached together.</p> 	

Getting familiar with the main components

*Minifix is the main connection component used in products. Before starting, please check the below figures.

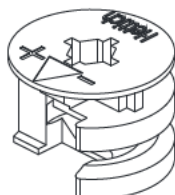


MINIFIX
HEAD

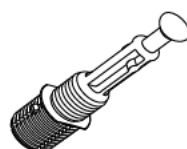


MINIFIX
SCREW


*Please insert A03 (minifix screw) as shown below.

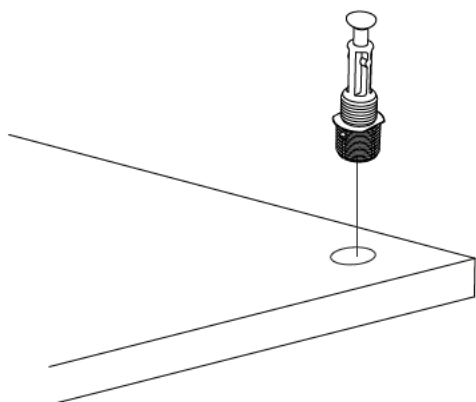


*Please notice that there is a small arrow on A02 (minifix head). This arrow should show the direction of upper hole.

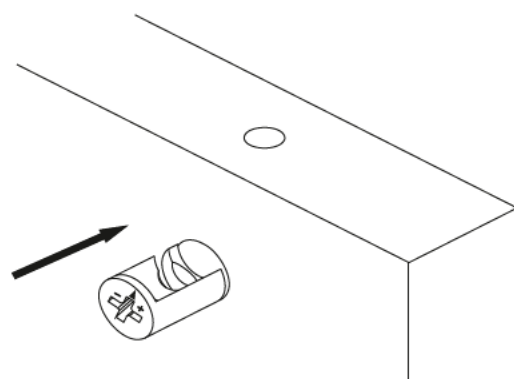

*After attaching two pieces please turn the A02 (minifix head) clockwise direction just a half tour with the help of a screwdriver.

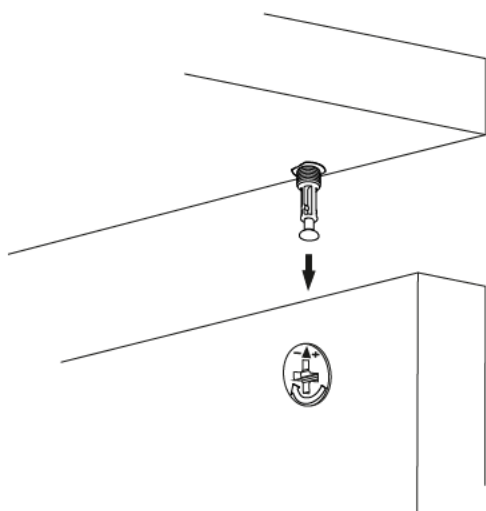


*Please do not overscrew the piece as it may break if too much power is imposed. Just make sure that it is screwed to the direction “+”, do not go any further.

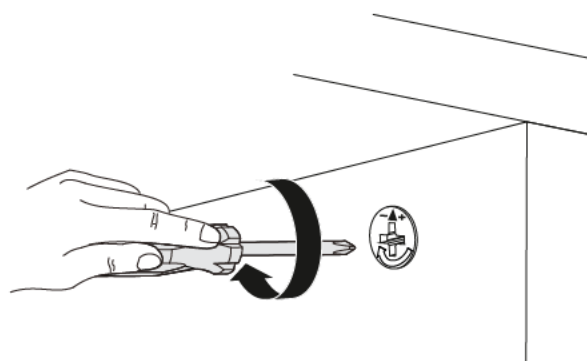



a. Installing components

- Please place A03 (minifix screws) into the part 3 holes as shown below.
- Please place A02 (minifix heads) into the part 4 holes as shown below.
- Please place C04 (pivot) into the pre-direlled pivot holes as shown below and turn the A09 (3x18 mm screw) clockwise direction.

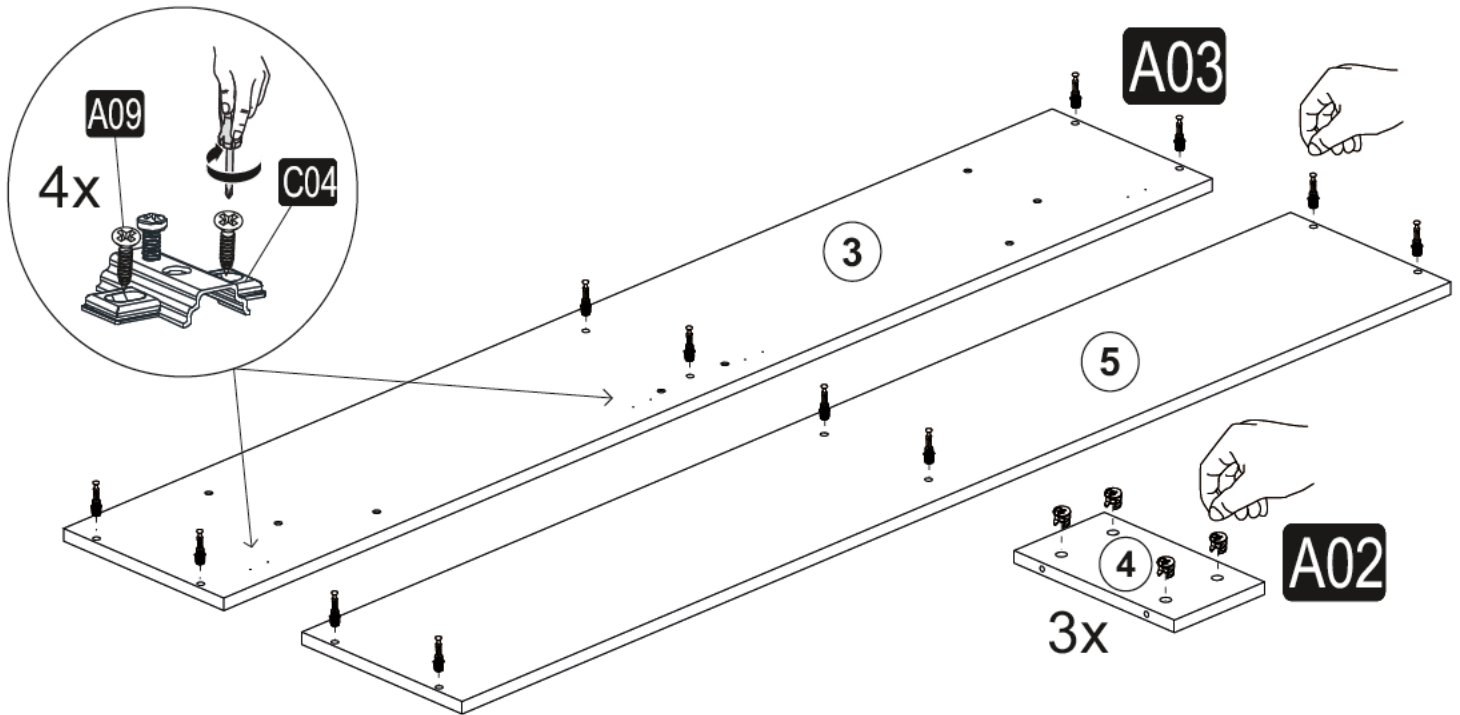


b. Installing components

Please attach part 1 and 2 to the part 3 using A13 (50 mm) screw as shown below.



The screw holes are not countersunk. Push the screw (A13) through the hole until its head sits flush with the wood surface. The screw head should not protrude above the surface.

A13 (50mm) screw

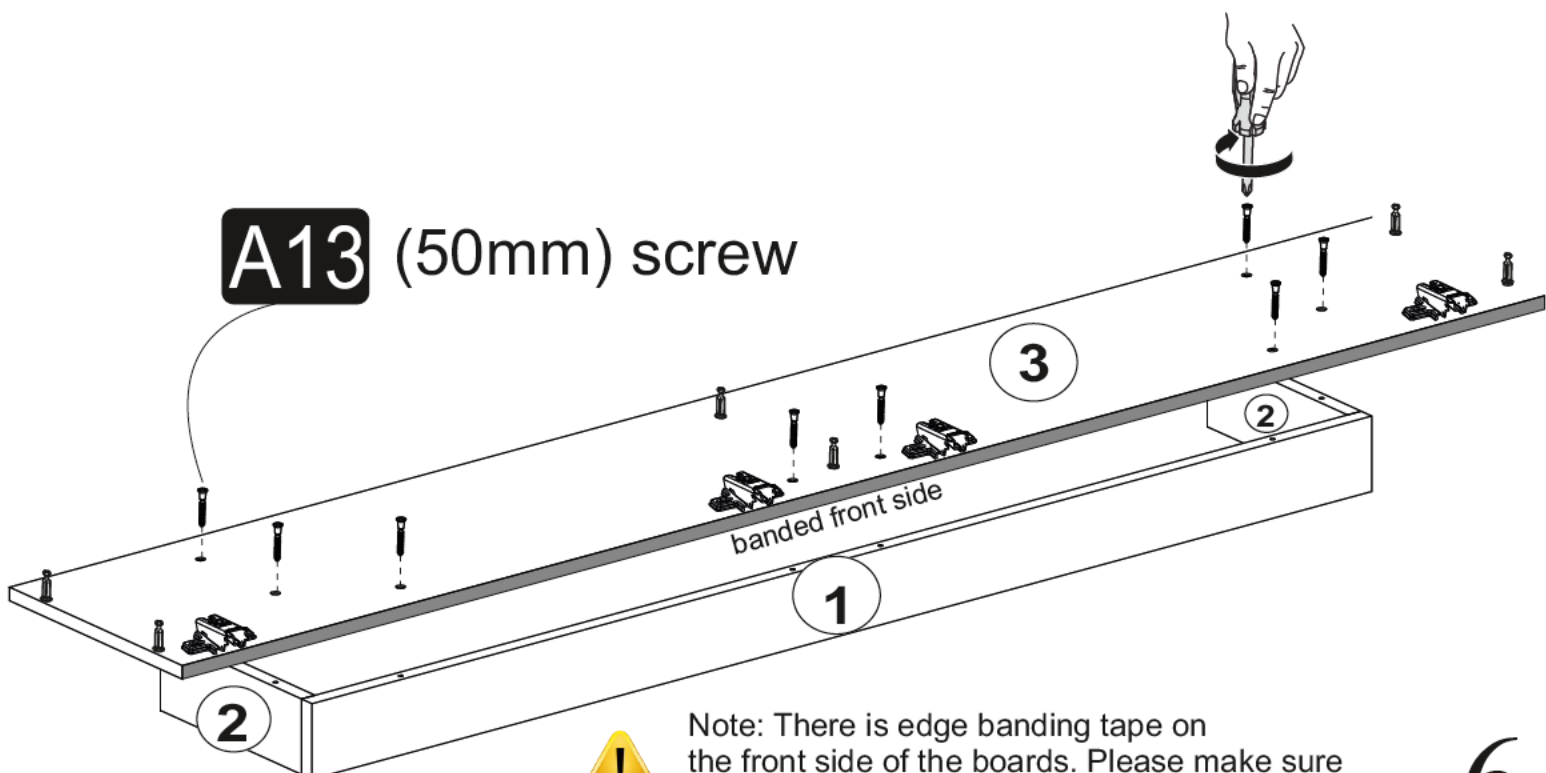


Note: There is edge banding tape on the front side of the boards. Please make sure that the banded edge should face forward.



c. Installing components

- Please insert the minifix heads into part 4 as shown below.
- Now attach the part 4 to part 3 as shown below.
- Finally screw the minifix heads (note: turn the screwdriver to + direction as specified on the minifix head)

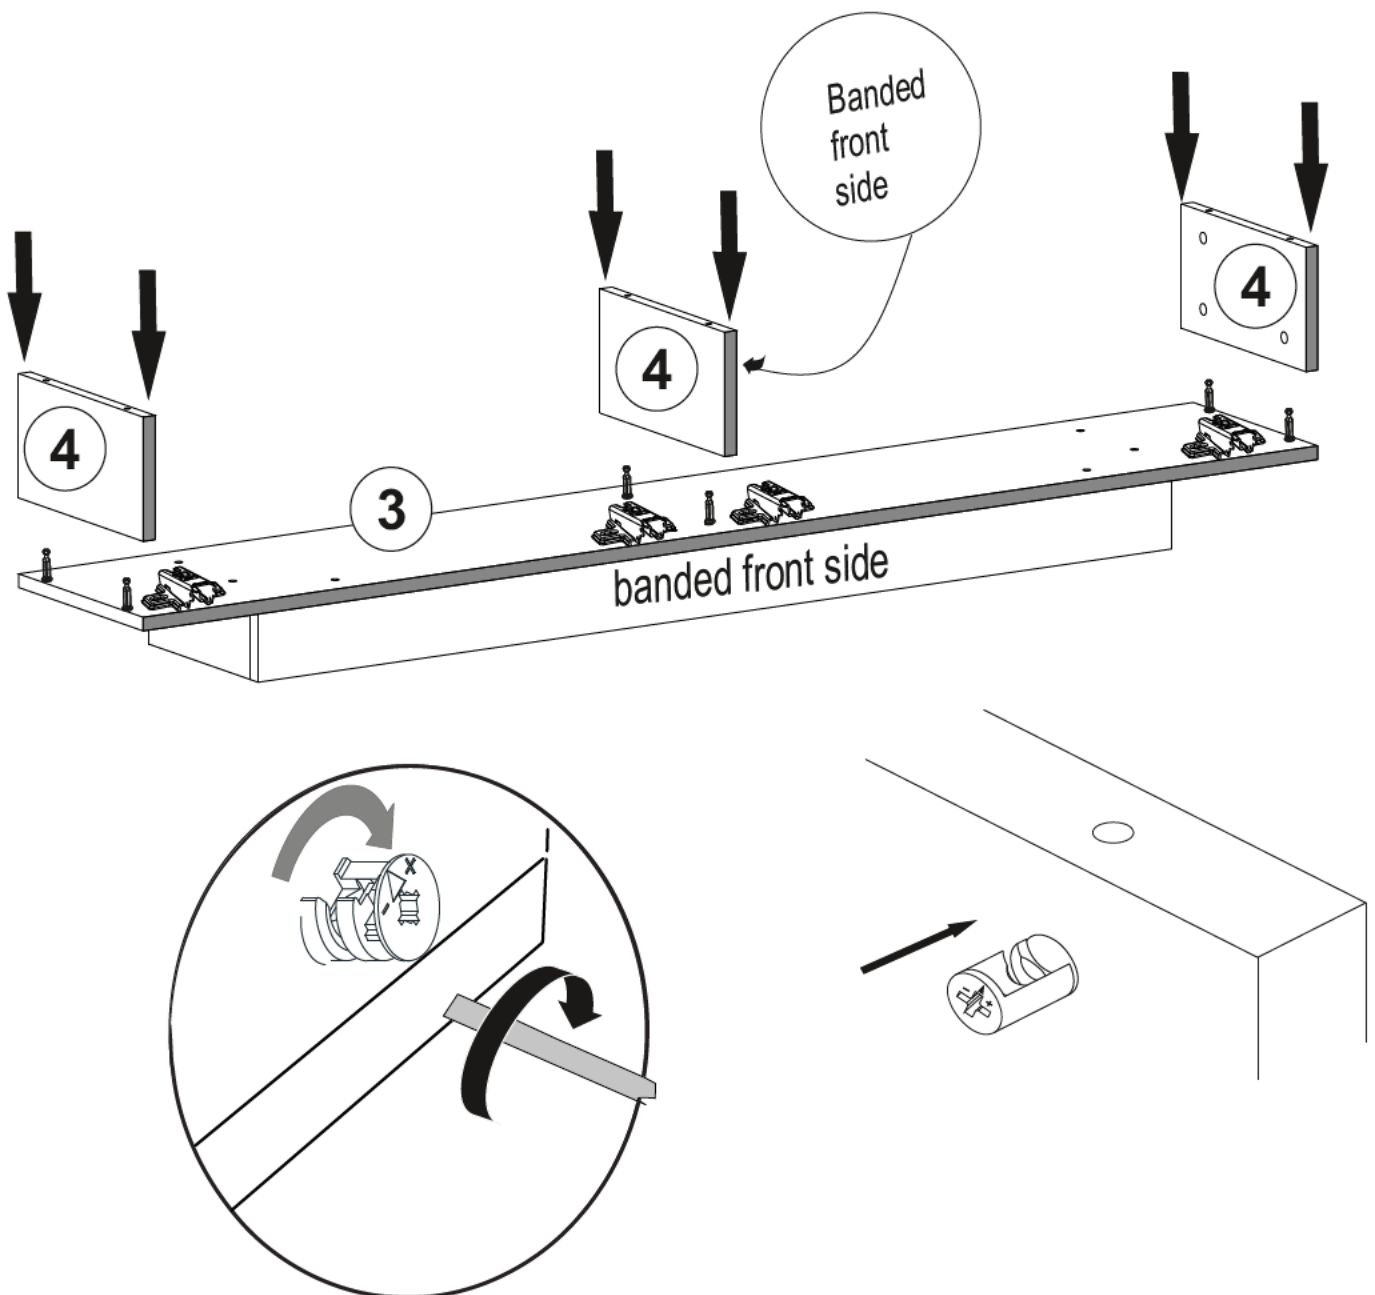



d. Installing cabinet hinges.

Place hinge (C01 bracelet) to the pre-drilled holes located on the part 10 (door) as shown in the below hinge detail figure. Then attach the doors to the TV stand, screwing it in to the panel as shown in the figure 8 below. Finally you can align/line up the door depth, height or width by turning (tightening/loosening) the screw (B) on pivot (C04) and the special screw on bracelet (C01) as shown in the hinge detail figure.





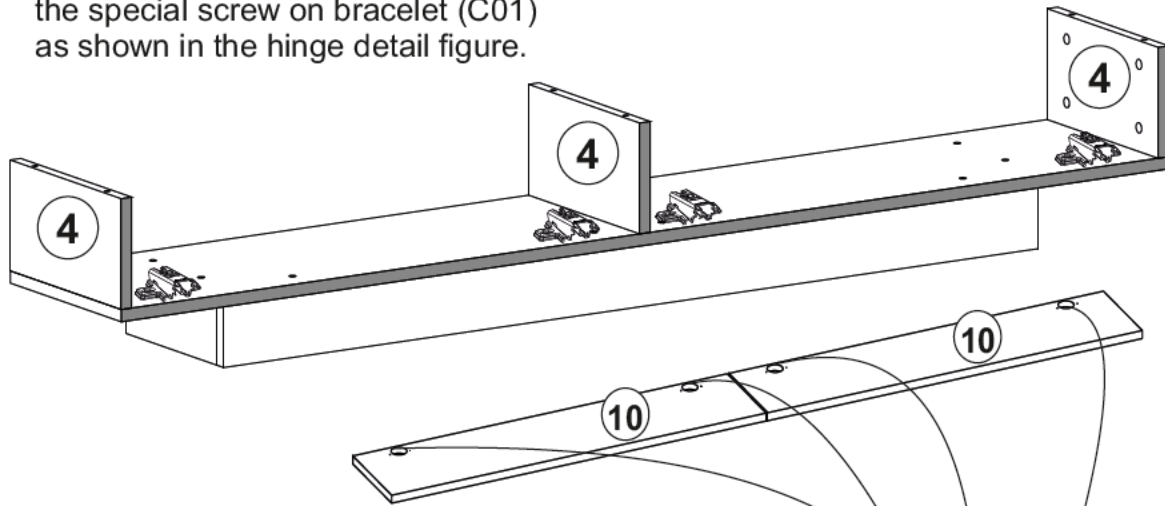



Figure 8

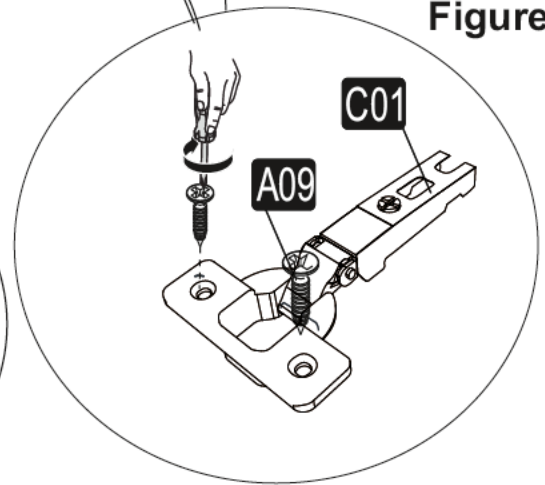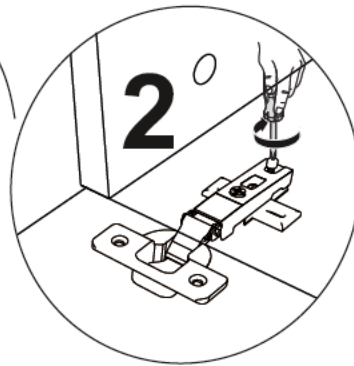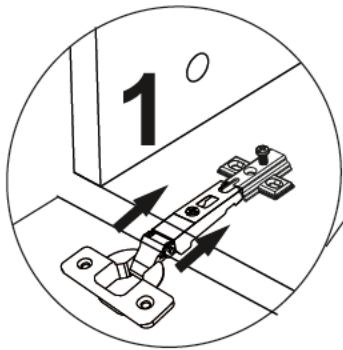

Hinge Detail Figure

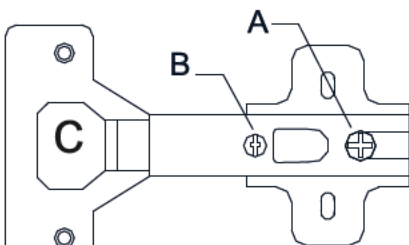


- C= Body of the door hinge (bracelet C01)
- A= Connects the door hinge (bracelet C01) to the pivot
- B= Align the door depth,width and height.

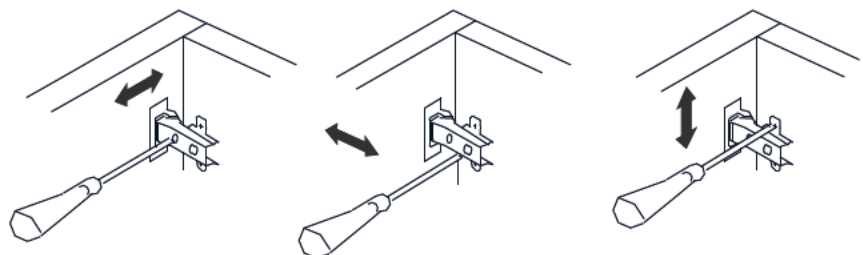


Arrows show the directions for arrangement of the doors.

5

e. Installing the top of stand

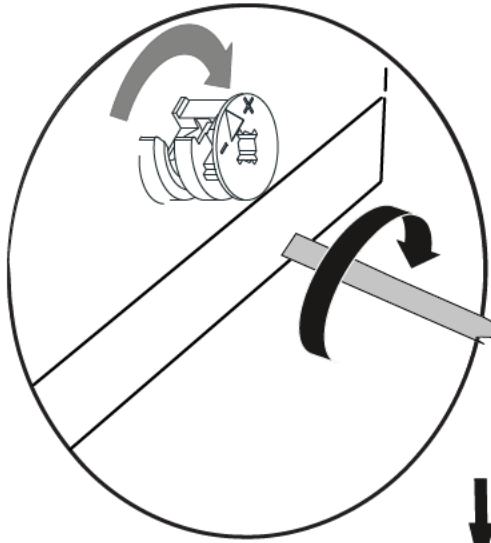


- In this step, you need to attach top part 5 to the main body that we assembled earlier. Follow the below arrows and make sure screws and holes are line up in the specified way.
- After placing the part 5 onto the main body, turn the minifix heads with a screwdriver to the + direction as specified.

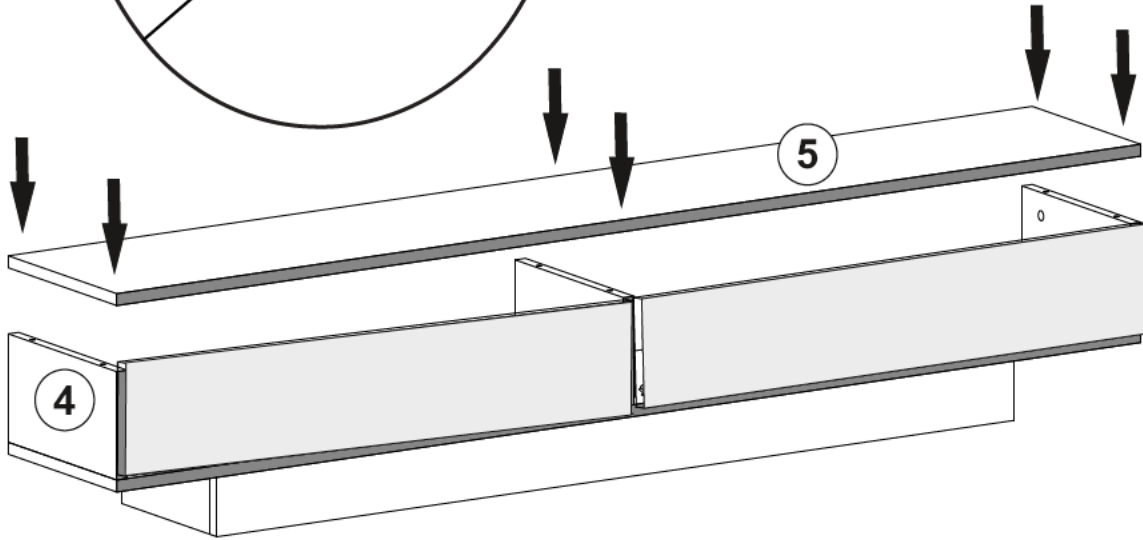

6

f. Attaching the back panel

- Place/hold the back panel and tap as lightly as is needed to drive the nail into wood, increasing force only when necessary with a hammer. Keep driving the nail until the head is either flush with or below the surface of the wood. Use all the nails given in the hardware pack for best result.

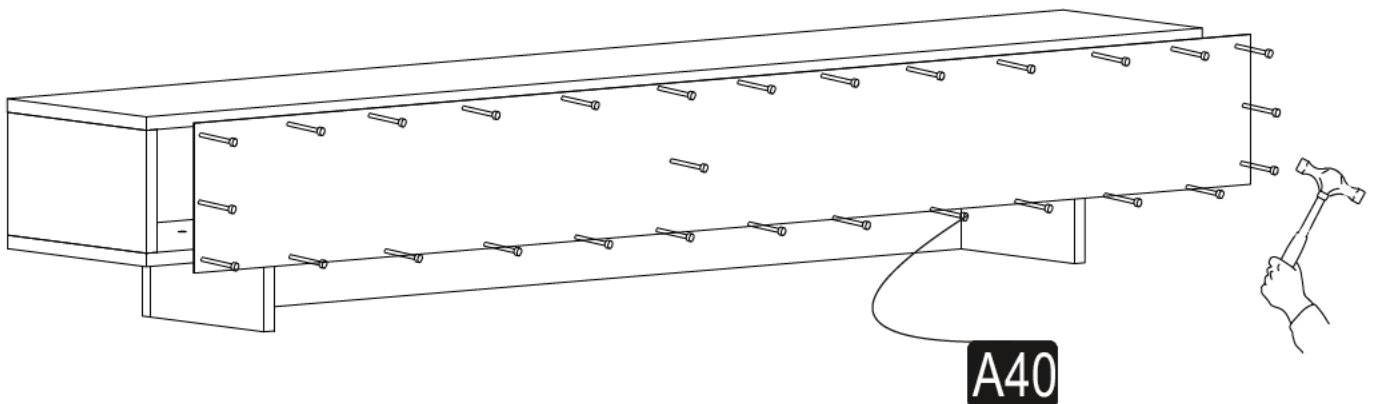


Please do not neglect installing the back panel of the TV stand. Installing the back panel will both make your TV stand sturdier and look better.


g. Installing the top shelf




- This top shelf is a complimentary shelf for our customer who would like to place her/his TV a little bit higher than usual panel.
- It is a completely personal choice to place or not to place it on the TV Stand. If you have larger TV than 55 inch, we do not recommend using this complimentary shelf.
- Please follow the diagram below to assemble the shelf.

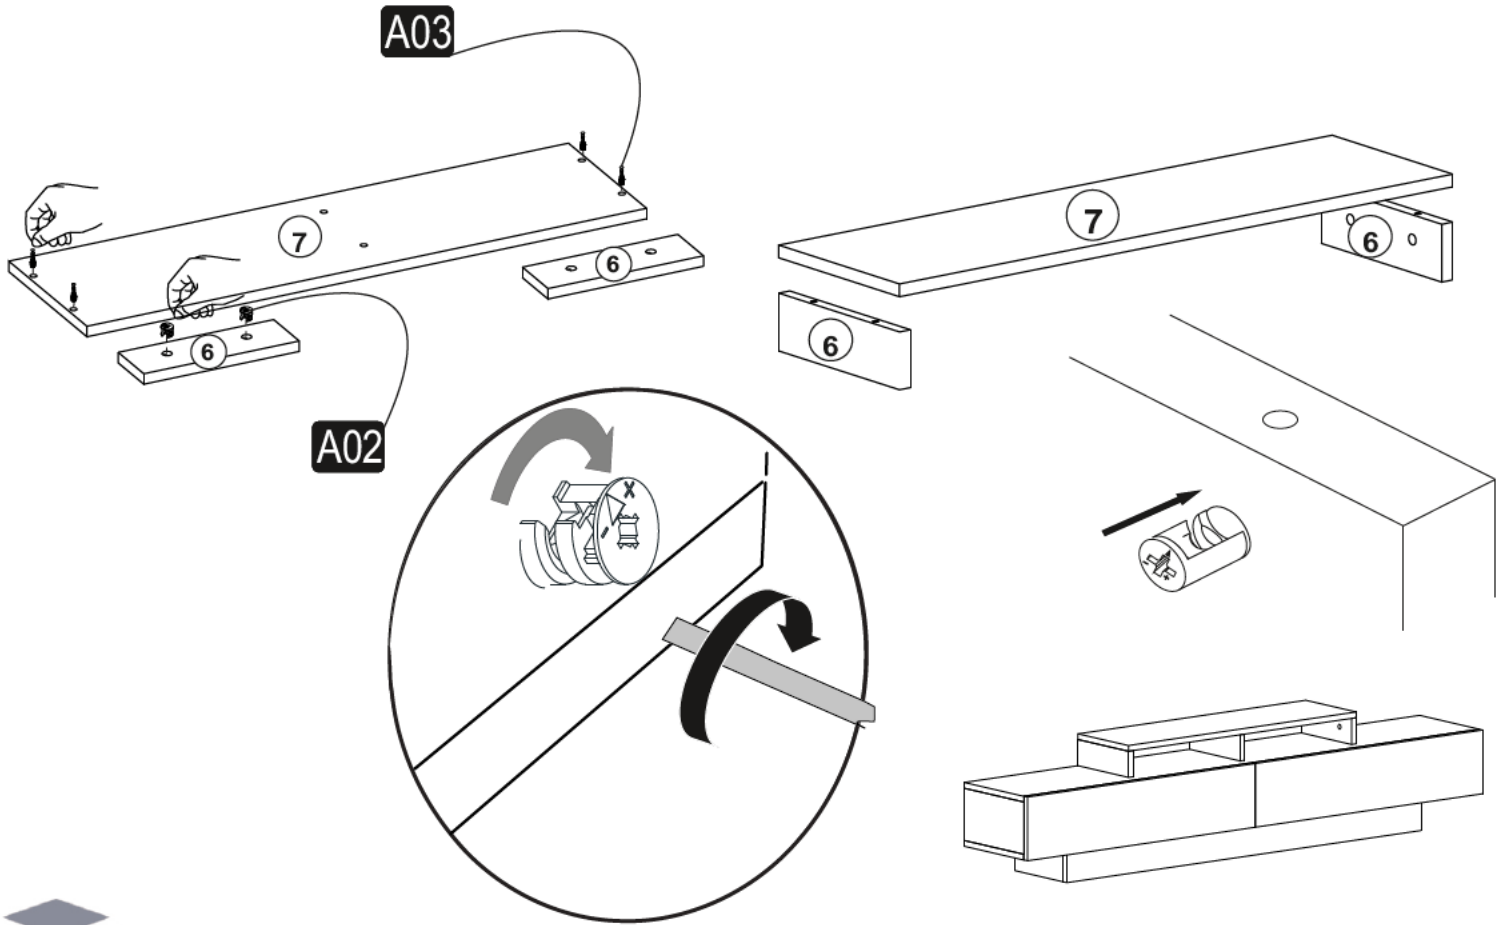

h. Assembling the wall shelf

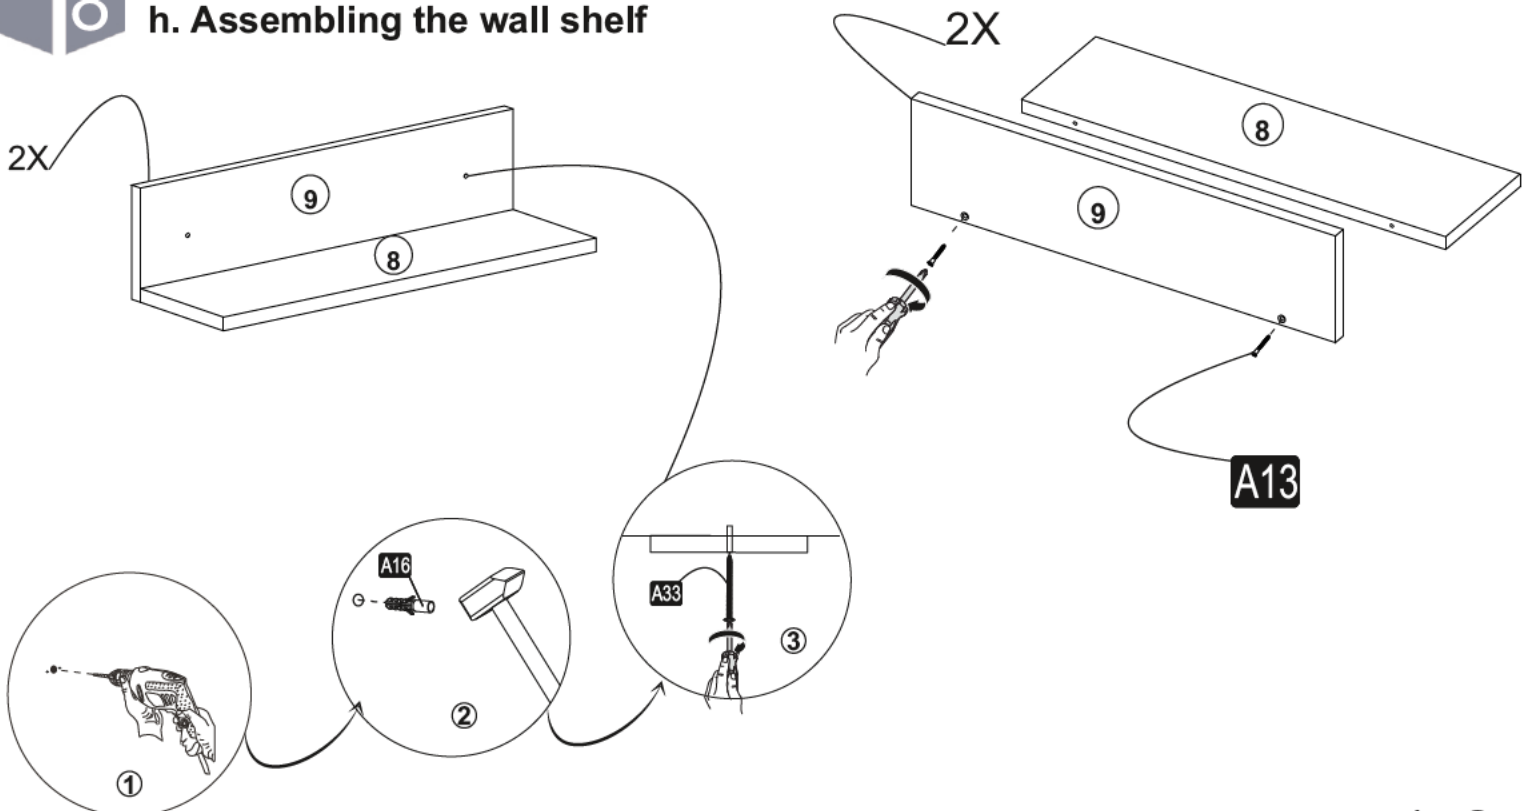

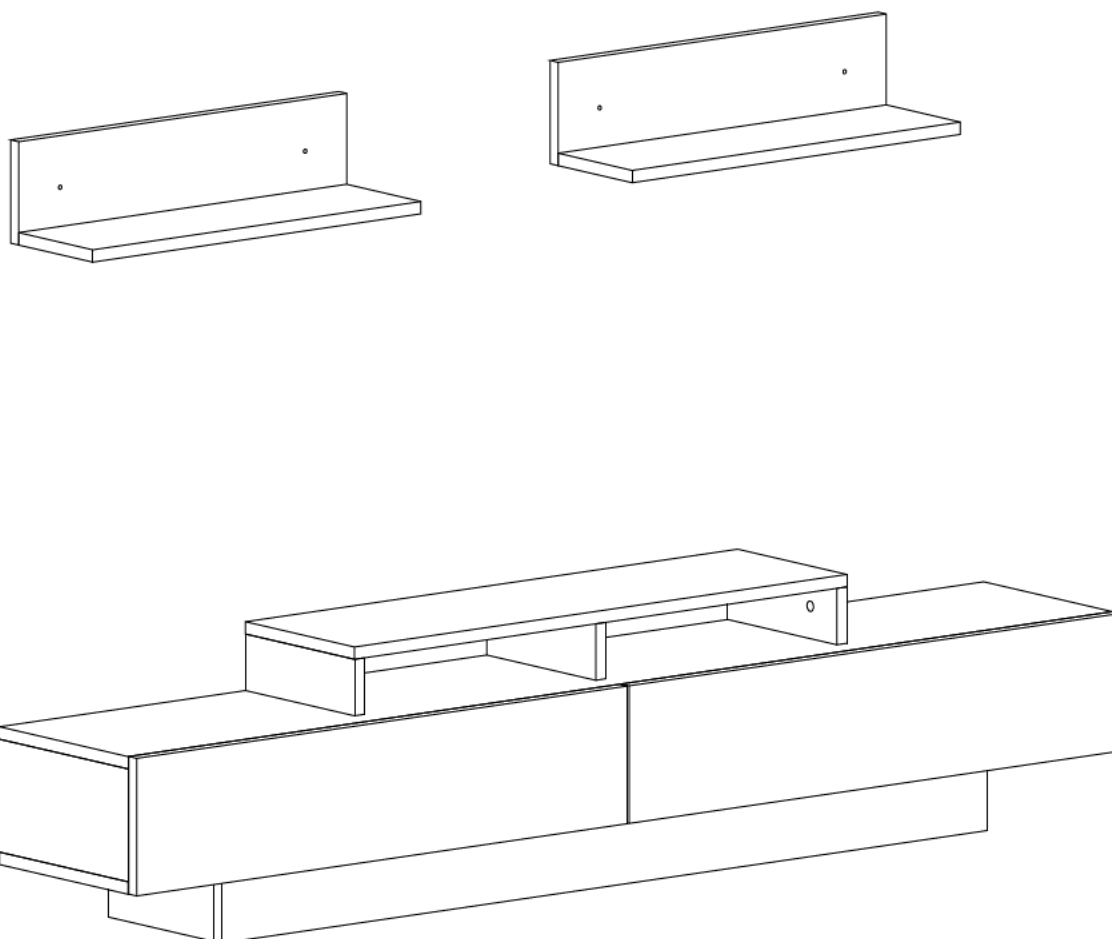

After finishing assembly, please cover the minifix (A02) and other screw heads with 18mm stickers (A06) that comes with the accessory pack for a better look of your furniture.

