

# END TABLE



---

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .

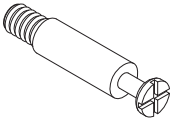
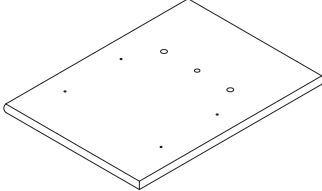
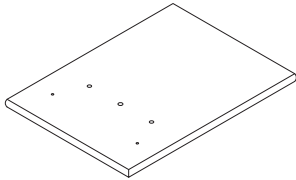

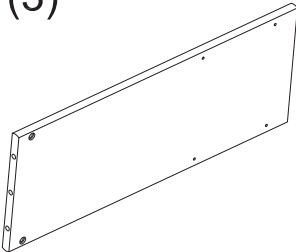
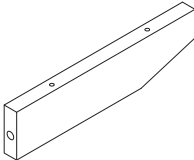










---







Please do not return to the store  
Broken or missing parts?  
Need help with assembly?

\*Special Note: We recommend the use of a hand held screwdriver to avoid the stripping of screw heads.\*

Please count and verify all parts before assembly


Hardware List		Part List	
(A)		(1)	
Cambolt (2pcs)		(2)	
(B)		(3)	
Camlock (2pcs)		(4)	
(C)		(5)	
Wood dowel (2pcs)		(6)	
(D)		(7)	
Flat head screw (14pcs)		(8)	
(E)			
Allen blot(4pcs)			
(F)			
Barrel Nut (4pcs)			
(G)			
Allen wrench (1pc)			
(H)			
Cap (10pc)			

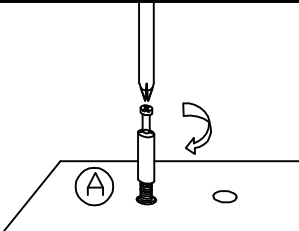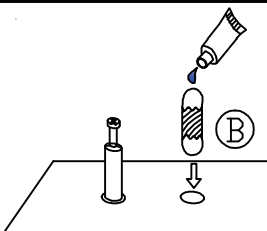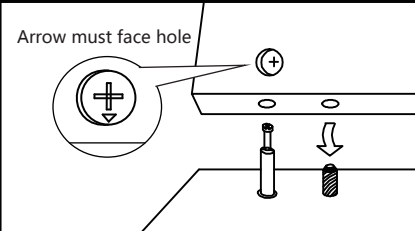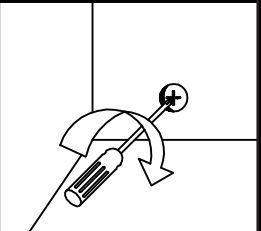Assembling the unit with camlocks and wood dowels.

			
Gently screw cambolt into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole.	Lightly glue wood dowel and connect to second panel by inserting dowels into holes.	Screw the camlock firmly into locked position.

## Step1

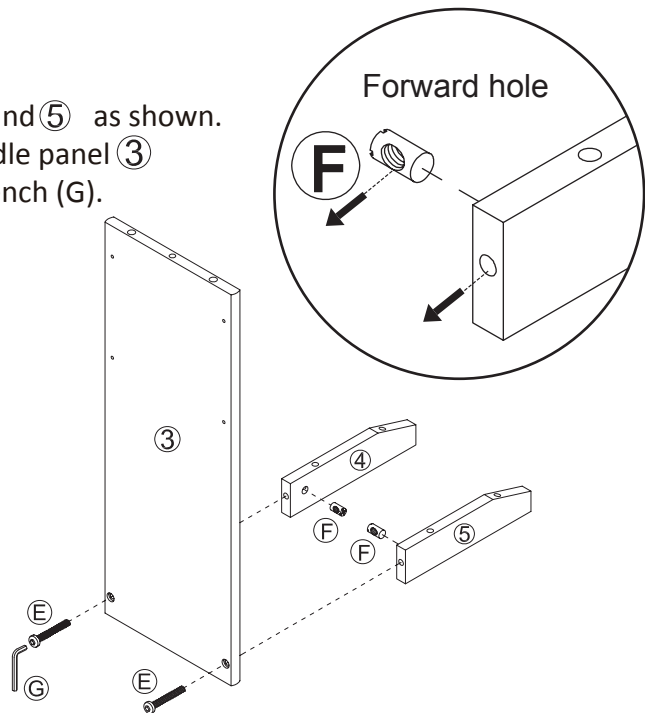
1. Insert barrel nuts (F) into support bars ④ and ⑤ as shown.
2. Connect the support bars ④ and ⑤ to middle panel ③ as shown using allen bolts (E) and allen wrench (G).



## Step2


1. Insert camlocks (B) into middle panel ③ as shown.
2. Screw cambolts (A) and insert wood dowel (C) into top panel ① as shown.
3. Connect assembly to top panel ① as shown using flat head screws (D).

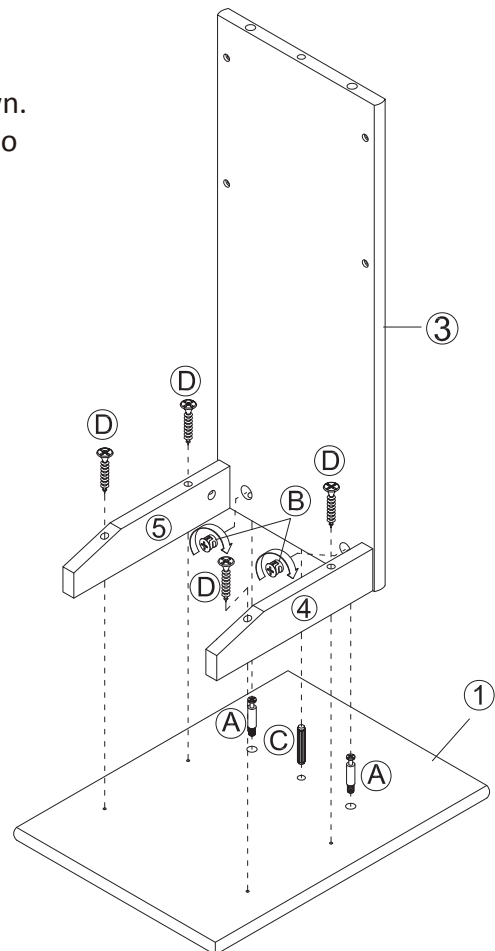\*Refer to page 2 for camlock instructions.




### Step3

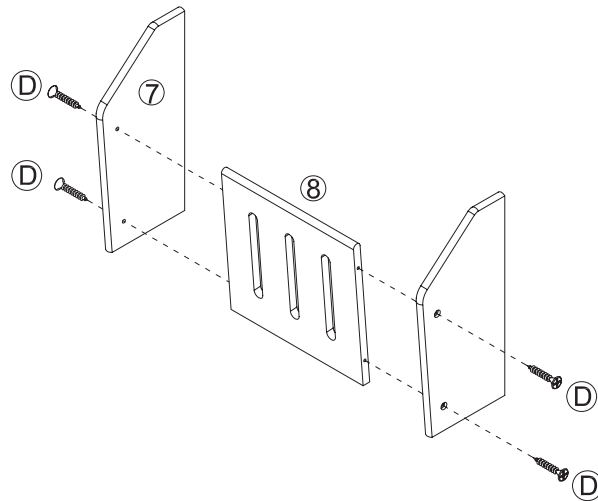1.Connect the bin front panel ⑥ and bin back panel ⑦ to bin side panel ⑧ as shown using flat head screws (D).




### Step4

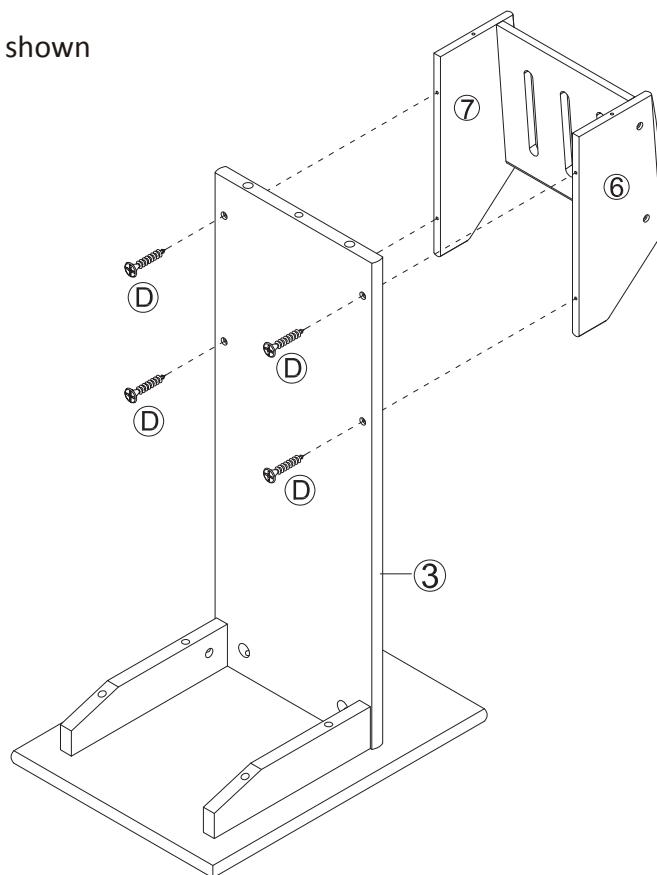1.Connect bin panel assembly to unit as shown using flat head screws (D).



## Step5

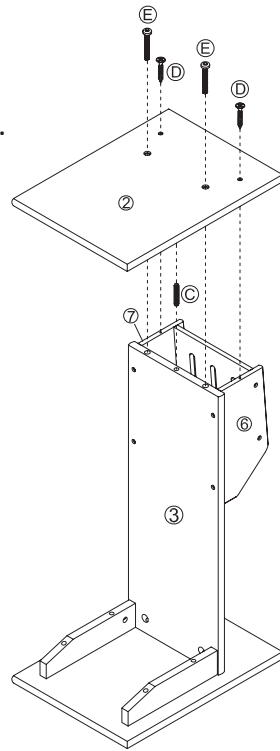- 1.Insert wood dowel (C) into middle panel ③ as shown.
- 2.Connect bottom panel ② to unit as shown using blots (E) and flat head screws (D).



## Step6

- 1.Turn unit over.
2. Cover screw holes with Caps (H) as shown .

Enjoy.

