






ASSEMBLY INSTRUCTION

DINING TABLE


Before you begin, Please follow Assembly Instruction carefully. Then follow them step by step.

| PART LIST | | |
|---------------|---|-------|
| A | TABLE TOP | 1 PC |
| B | TABLE LEGS | 4PCS |
| HARDWARE LIST | | |
| C |  HEX SCREW | 8 PCS |
| D |  FLAT WASHER | 8 PCS |
| E |  HEX WRENCH | 1 PC |
| F |  SPRING WASHER | 8 PCS |

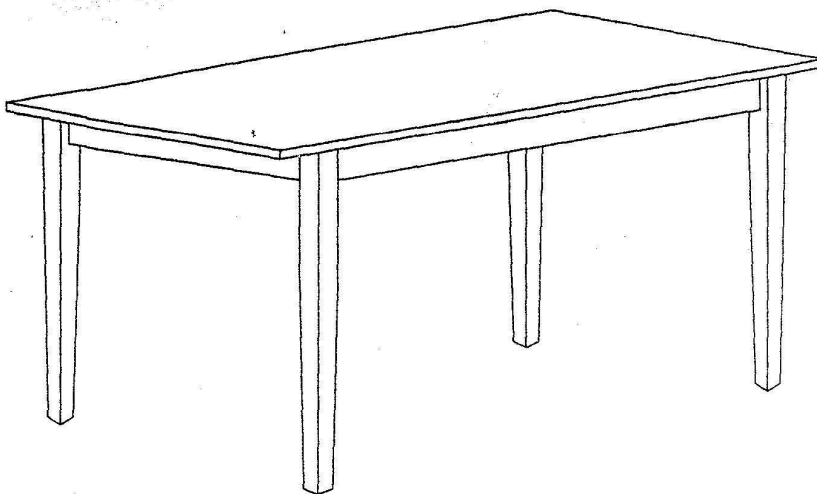

IMPORTANT NOTE : PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.

FIX THE TABLE LEGS(B) TO THE CORNER BLOCK WITH HEX SCREW (C) SPRING WASHER (F), AND FLAT WASHER (D). THEN TIGHTEN THE HEX SCREW(C) BY USING THE HEX WRENCH(E).

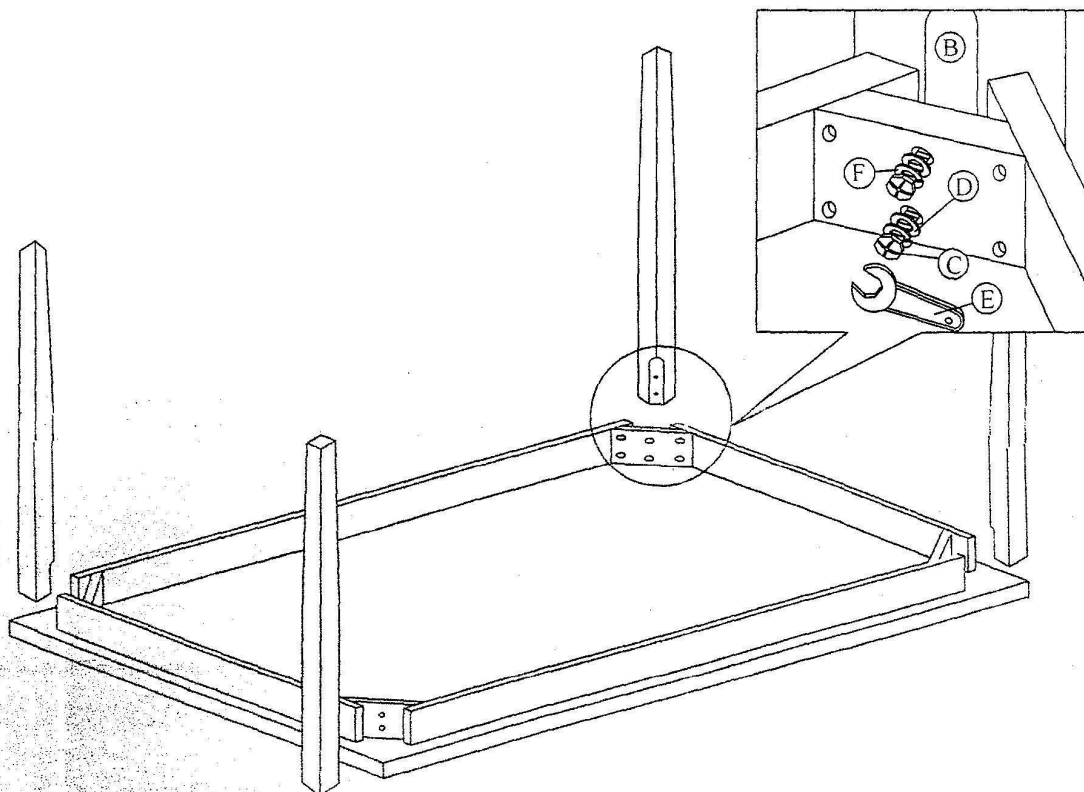


ASSEMBLY INSTRUCTIONS

DINING CHAIR

IMPORTANT NOTE:

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

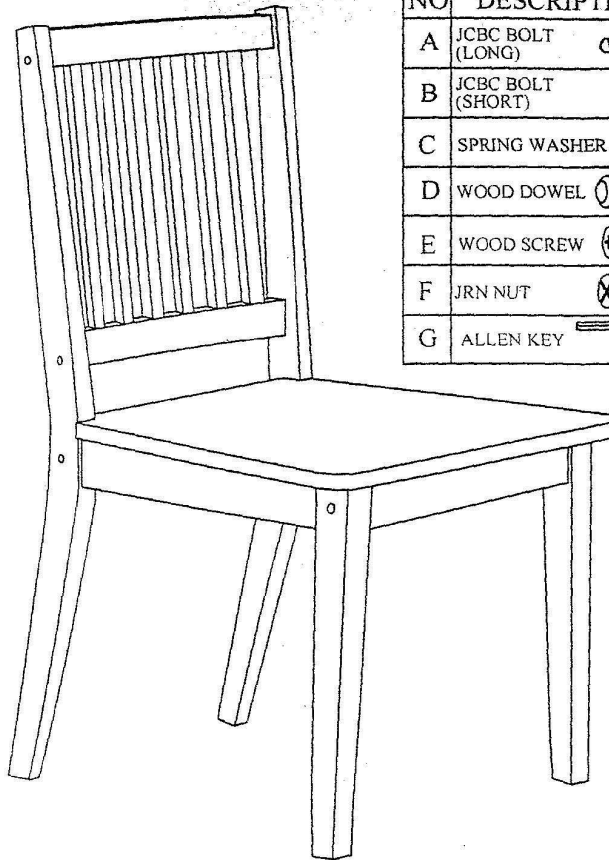

| HARDWARE LIST (FOR ONE CHAIR) | | |
|-------------------------------|-------------------|--------|
| NO | DESCRIPTION | QTY |
| A | JCBC BOLT (LONG) | 4 PCS |
| B | JCBC BOLT (SHORT) | 10 PCS |
| C | SPRING WASHER | 6 PCS |
| D | WOOD DOWEL | 12 PCS |
| E | WOOD SCREW | 4 PCS |
| F | JRN NUT | 8 PCS |
| G | ALLEN KEY | 1 PC |


| PART LIST (FOR ONE CHAIR) | | |
|---------------------------|------------------------|-------|
| NO | DESCRIPTION | QTY |
| 1 | CHAIR BACK | 1 PC |
| 2 | LEFT & RIGHT BACK LEG | 2 PCS |
| 3 | LEFT & RIGHT FRONT LEG | 2 PCS |
| 4 | SIDE RAIL | 2 PCS |
| 5 | FRONT RAIL | 1 PC |
| 6 | BACK RAIL | 1 PC |
| 7 | SEAT | 1 PC |

TOOLS REQUIRED (NOT PROVIDED):



* DO NOT USE POWER TOOLS FOR ASSEMBLY


Step 1

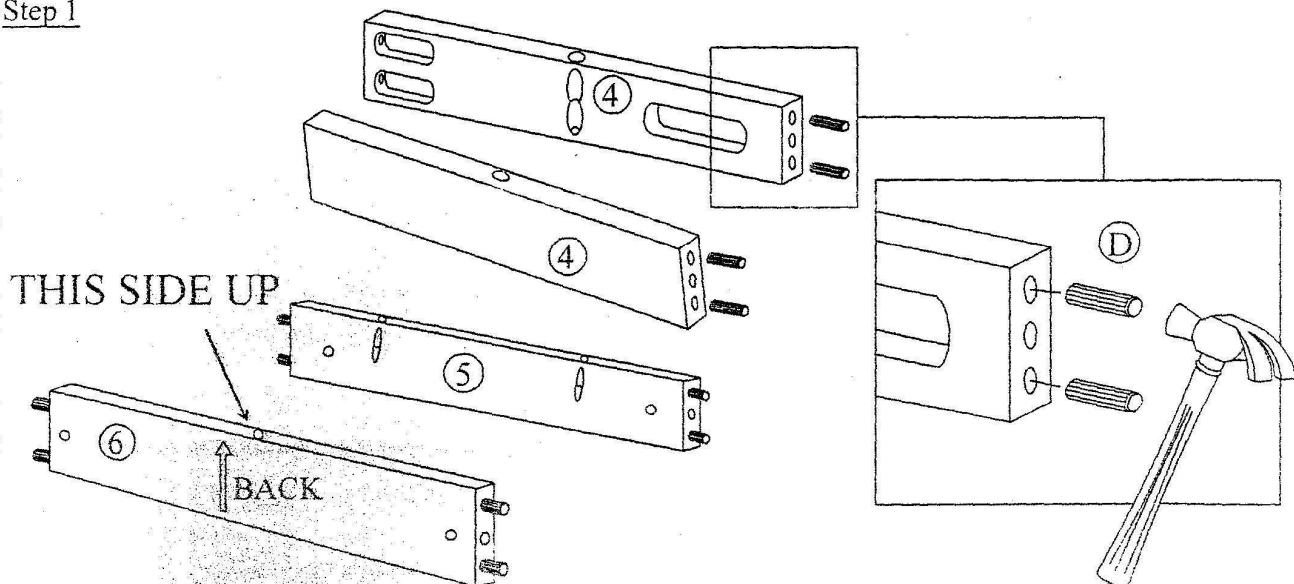


ASSEMBLY INSTRUCTIONS

DINING CHAIR


Step 2

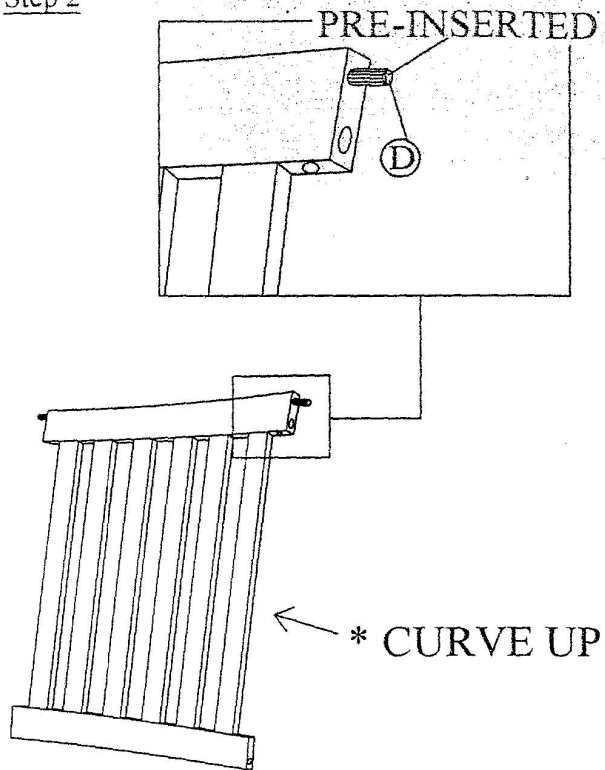


Step 3

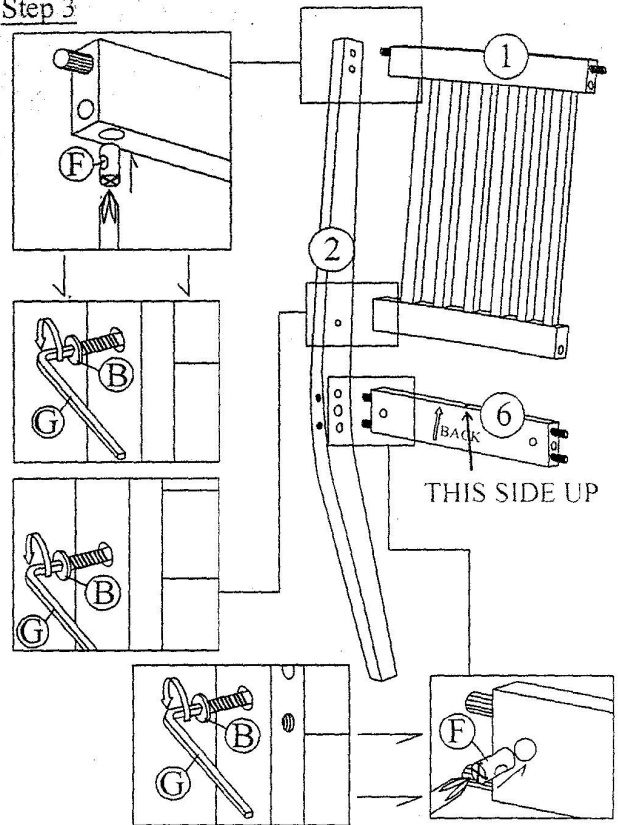

Step 4

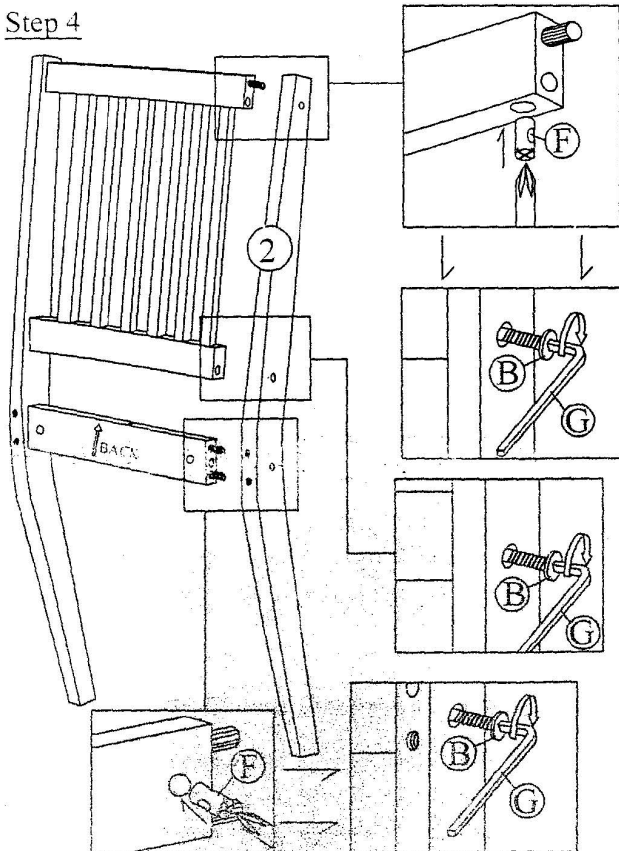


Step 5

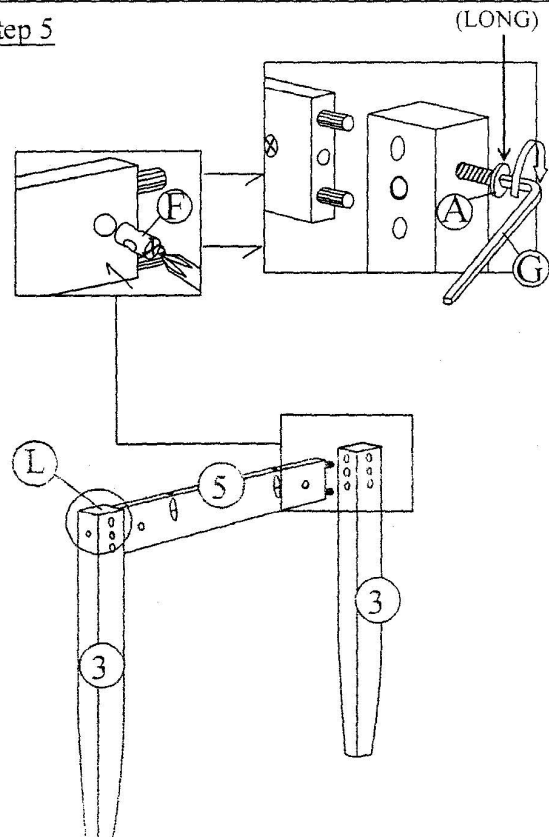


ASSEMBLY INSTRUCTIONS

DINING CHAIR


Step 6

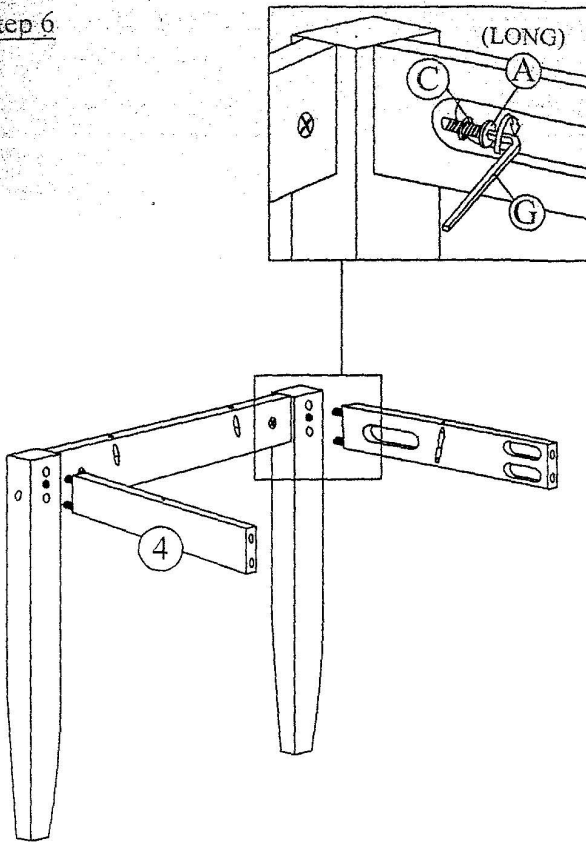

Step 7

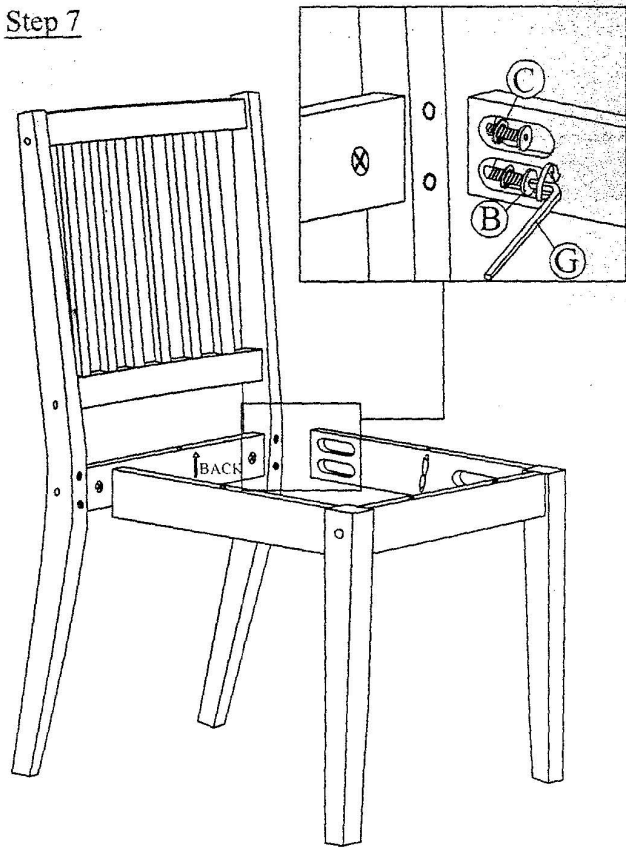


Step 8

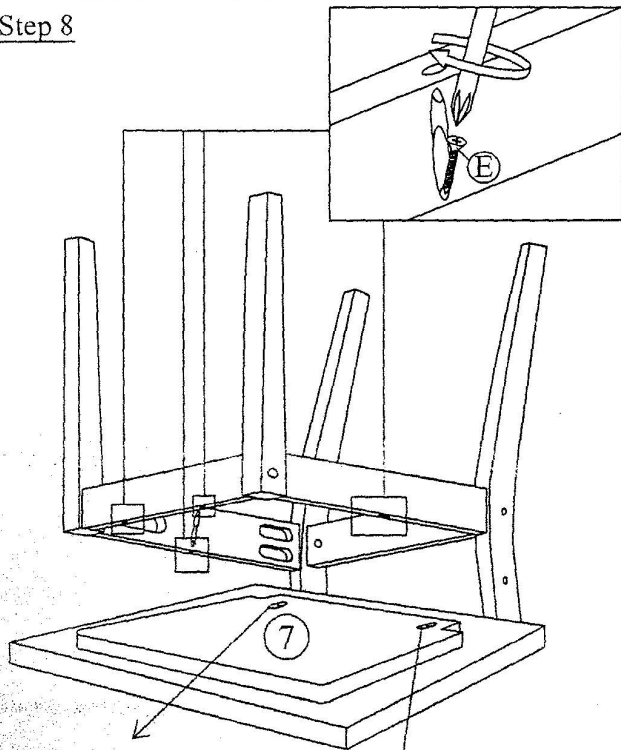

DISREGARD THE 2 HOLES ,
THESE ARE NOT PART OF ANY ASSEMBLY
*INSERT THE SEAT BEFORE FULLY TIGHT UP

Step 9

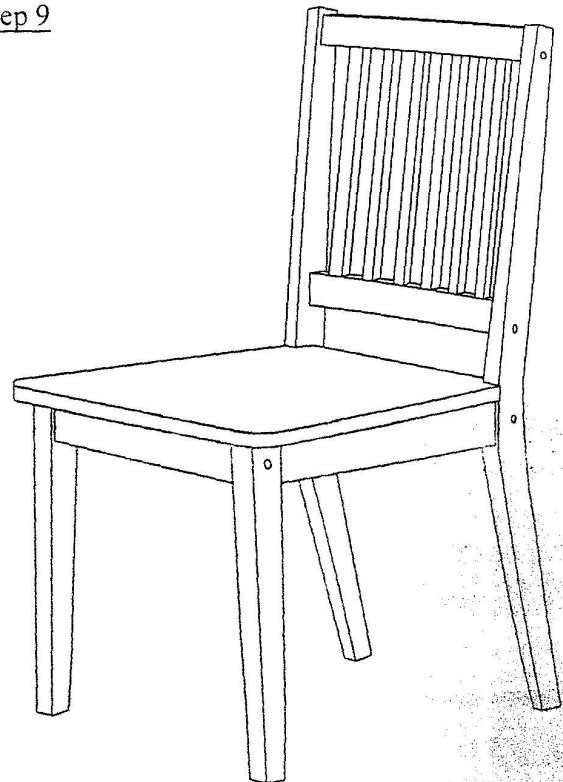

FULLY SET UP