


# COFFEE TABLE

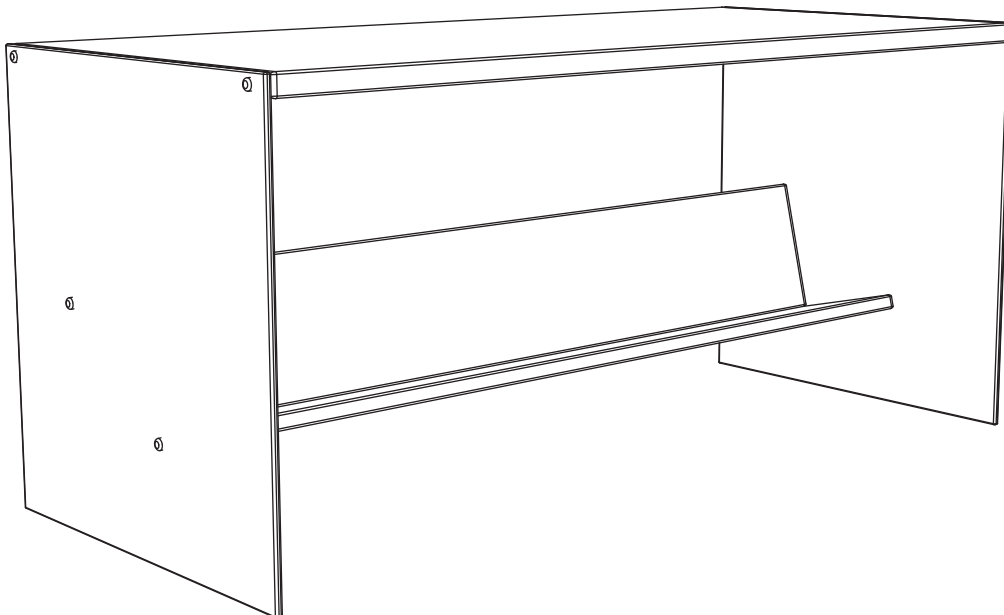

## ASSEMBLY INSTRUCTIONS

---







We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .

---




Please do not return to the store





## Hardware List

<b>A</b> 	<b>B</b> 	<b>C</b> 
Cambolt ( 3pcs )	Camlock (3pcs )	Screw and washer ( 8pcs )
<b>D</b> 	<b>E</b> 	<b>F</b> 
locking nut ( 8pcs )	sticker ( 3pcs )	wood dowel ( 2pcs )


## Panel List

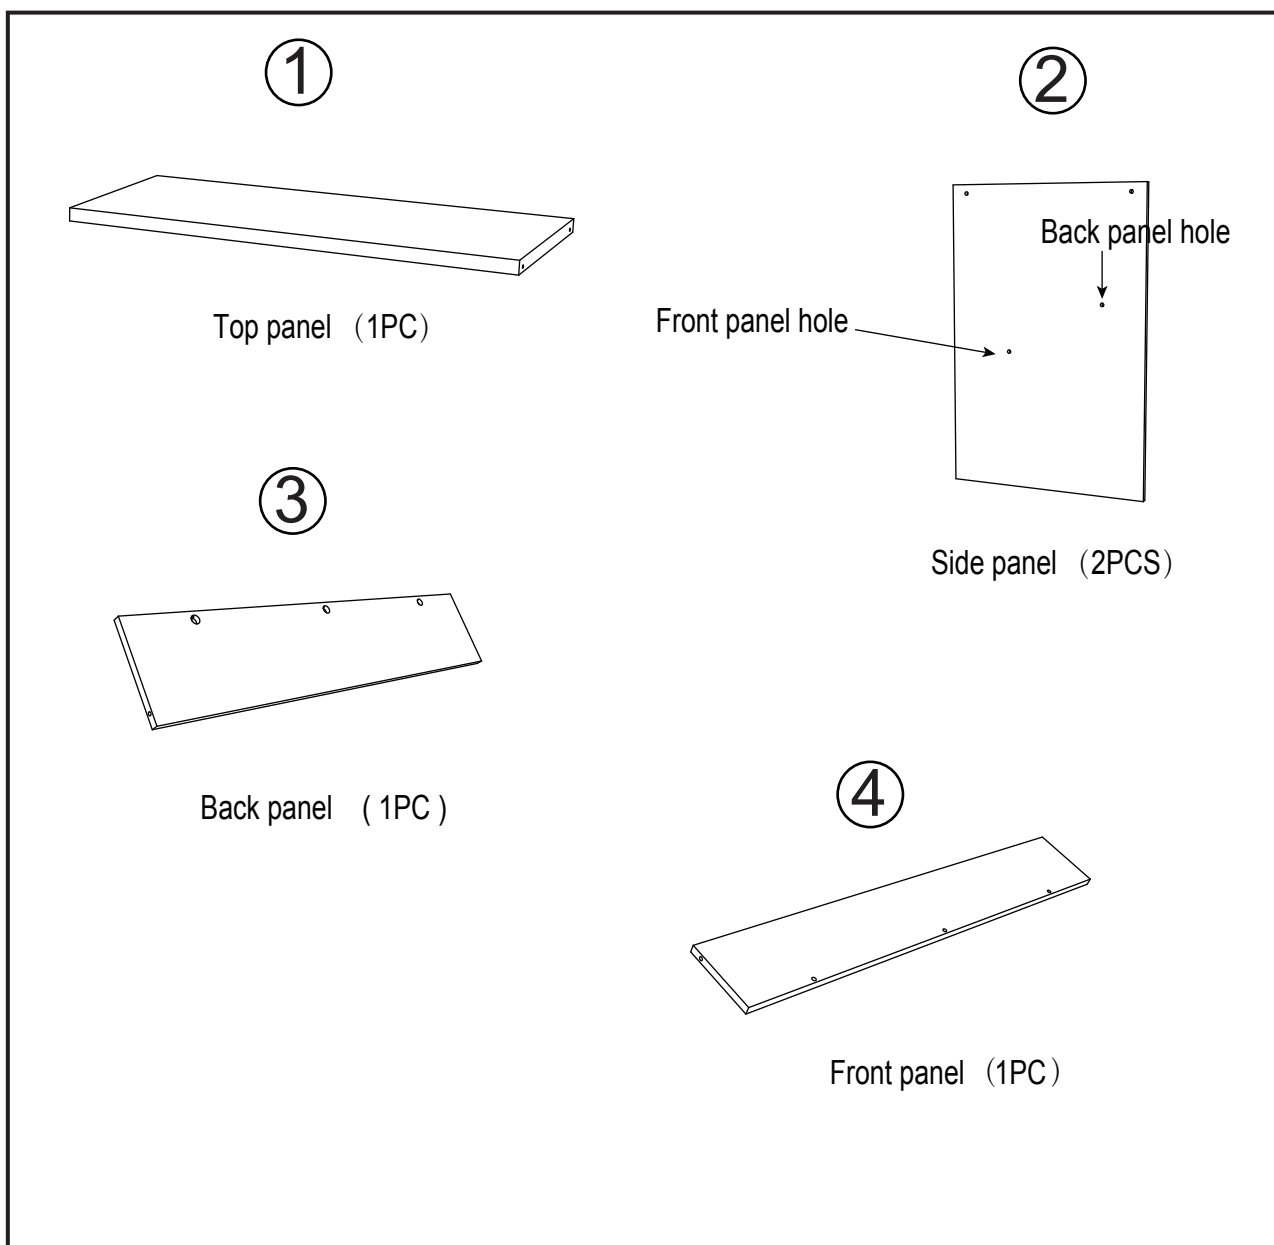

**Assembling the unit with camlocks and wood dowels.**

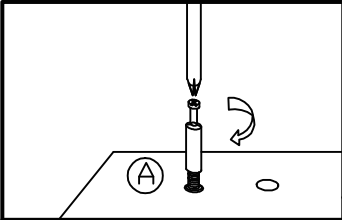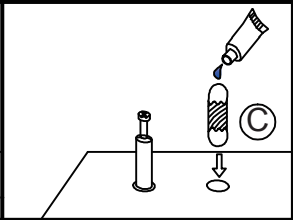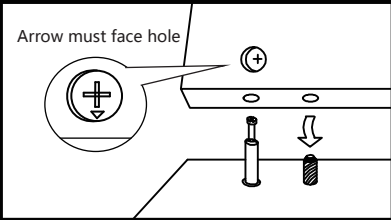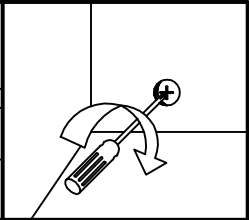			
Gently screw cam bolt into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole.	Lightly glue wood dowel and connect to second panel by inserting dowels into holes.	Screw the camlock firmly into locked position.



**Hardware List**

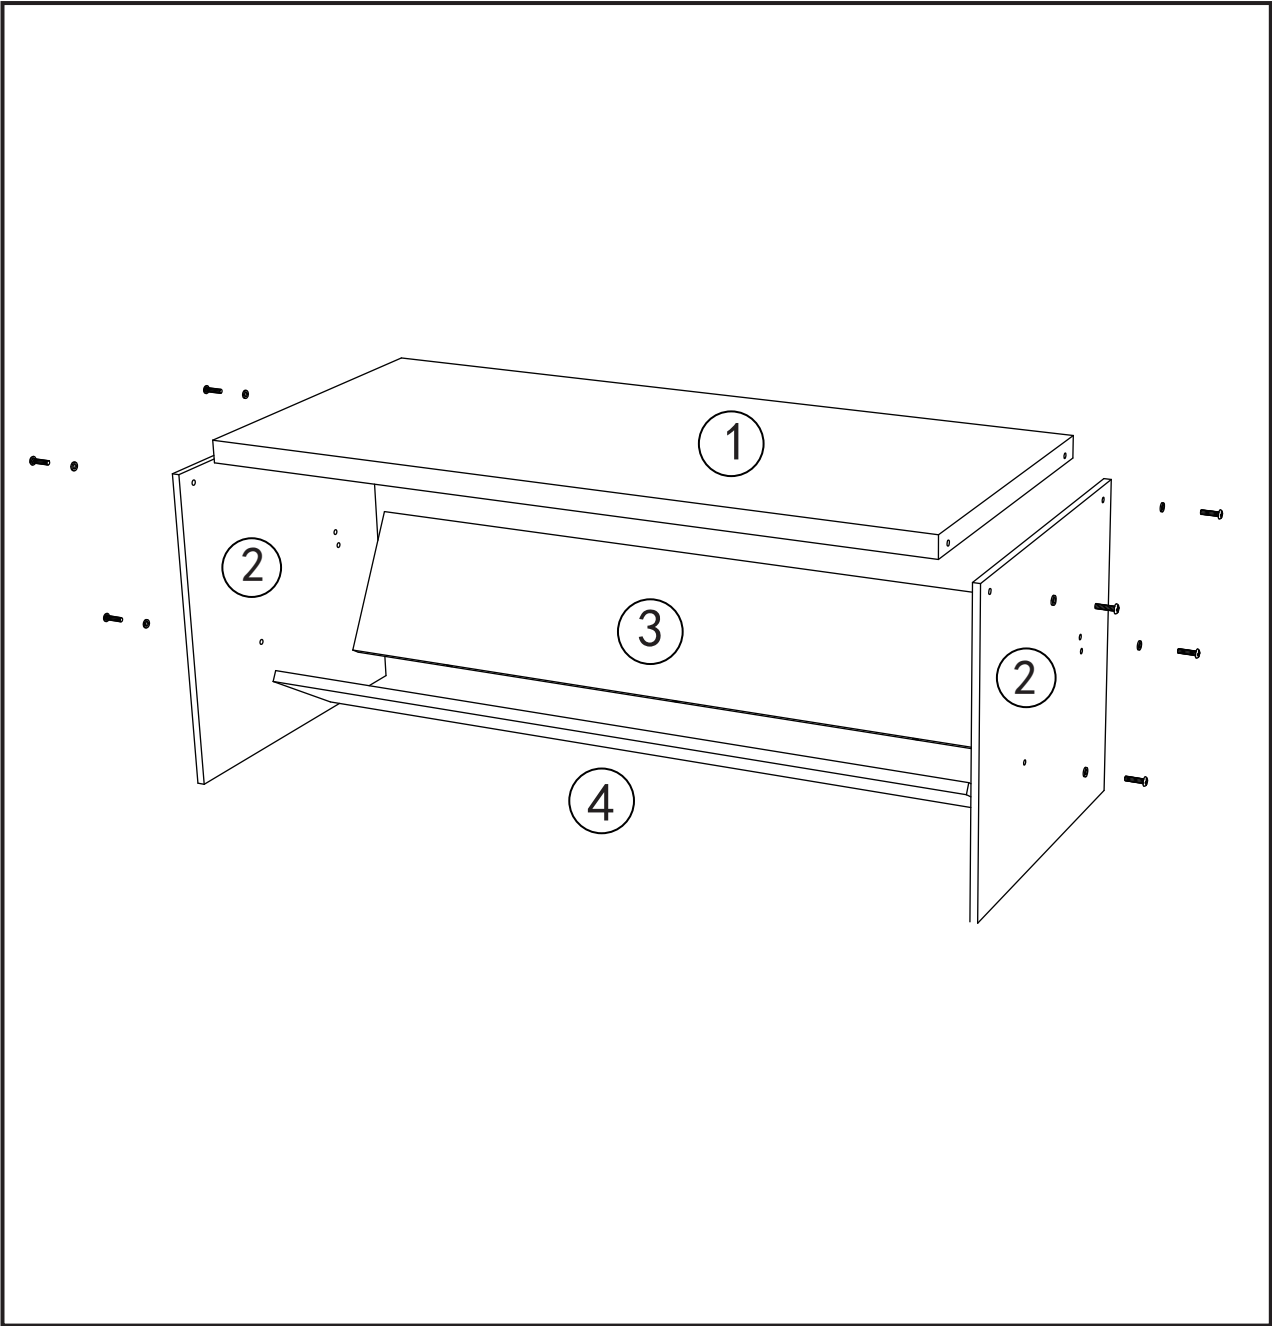

## Step 1



1. Insert locking nuts **D** into top panel **1**.

2. Connect the side panels **2** to top panel **1** using screws and washers **C**.

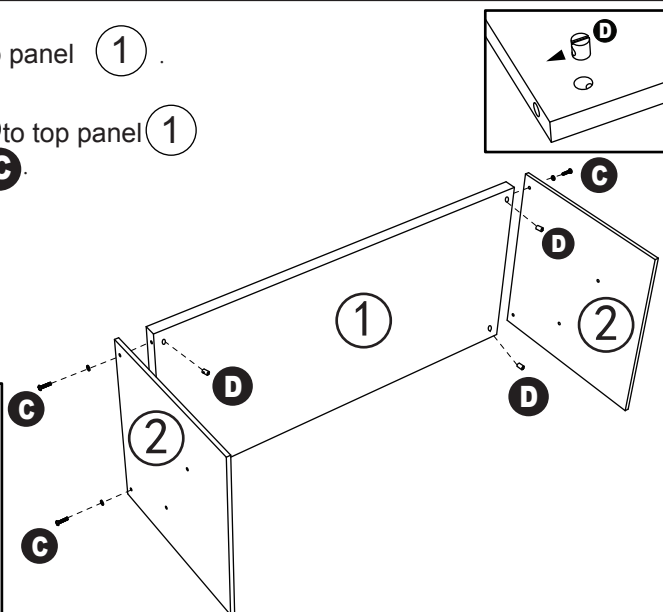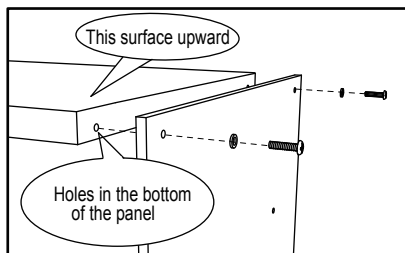

## Step 2

1. Screw cambolts **A** and insert dowels (F) into front panel **4**. Then connect back panel **3** using camlocks **B**.

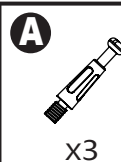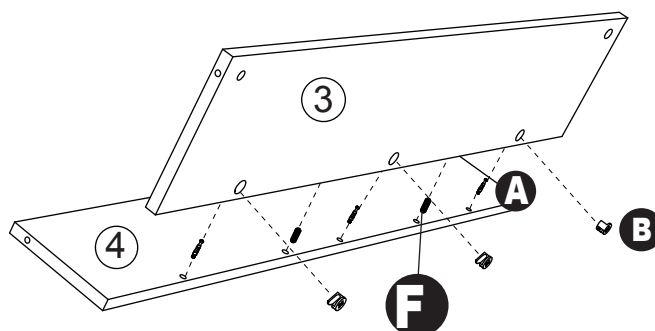

## Step 3

1. Insert locking nuts **D** into front panel **4** and back panel **3**.

2. Connect front panel **4** and back panel **3** to unit as shown using screws and washers (C).

3. Place stickers **E** over camlock holes.

Front panel hole  
Back panel hole

