

TV CONSOLE

ASSEMBLY INSTRUCTION



ASSEMBLY INSTRUCTION

ASSEMBLY TIPS:


















- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.













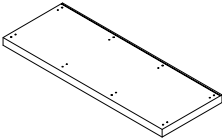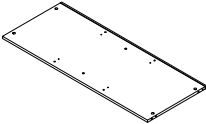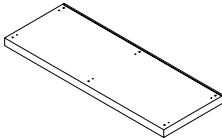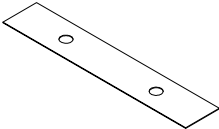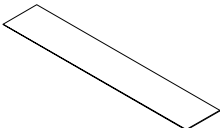






Warning !

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION:

(A) LEFT SIDE PANEL		1PC	(J) LEFT DRAWER SIDE PANEL		3PCS
(B) RIGHT SIDE PANEL		1PC	(K) RIGHT DRAWER SIDE PANEL		3PCS
(C) UPPER DIVIDER PANEL		1PC	(L) DRAWER BACK PANEL		3PCS
(D) LOWER DIVIDER PANEL		2PCS	(M) LEFT DRAWER FRONT PANEL		1PC
(E) BOTTOM PANEL		1PC	(N) RIGHT DRAWER FRONT PANEL		1PC
(F) SHELF		1PC	(O) MIDDLE DRAWER FRONT PANEL		1PC
(G) TOP PANEL		1PC	(P) DRAWER BOTTOM PANEL		3PCS
(H) UPPER BACK PANEL		1PC	(Q) METAL LEG		2PCS
(I) LOWER BACK PANEL		1PC			


ASSEMBLY INSTRUCTION

Z	HARDWARE PACKAGE						
NO	DESCRIPTION	FIGURE	Q'TY	NO	DESCRIPTION	FIGURE	Q'TY
1	GLUE 40g		1PC	10	BOLT \varnothing 4x20mm		6PCS
2	WOODEN DOWEL \varnothing 8x30mm		36PCS	11	RUBBER \varnothing 52mm		2PCS
3	CAM LOCK \varnothing 15x12mm		20PCS	12	BOLT \varnothing 6x12mm		4PCS
4	CAM BOLT \varnothing 7x35.5mm		20PCS	13	ALLEN WRENCH		1PC
5	SCREW \varnothing 3.5x10mm		42PCS	14	CIRCLE FEET \varnothing 37 x 94 mm		1PC
6	SCREW \varnothing 4.5x42mm		2PCS	15	FILLING PIECE \varnothing 15mm x 4 HOLE		1PC
7	SCREW \varnothing 5.3x75mm		8PCS	16	RAIL L = 400mm		3SET
8	SCREW \varnothing 4.3x35mm		12PCS	17	STICKER \varnothing 20mm		4PCS
9	HANDLE L=120mm		3PCS				


Z9,Z10,Z11,Z14,Z16 not included in blister packaging.

ASSEMBLY INSTRUCTION


STEP 1

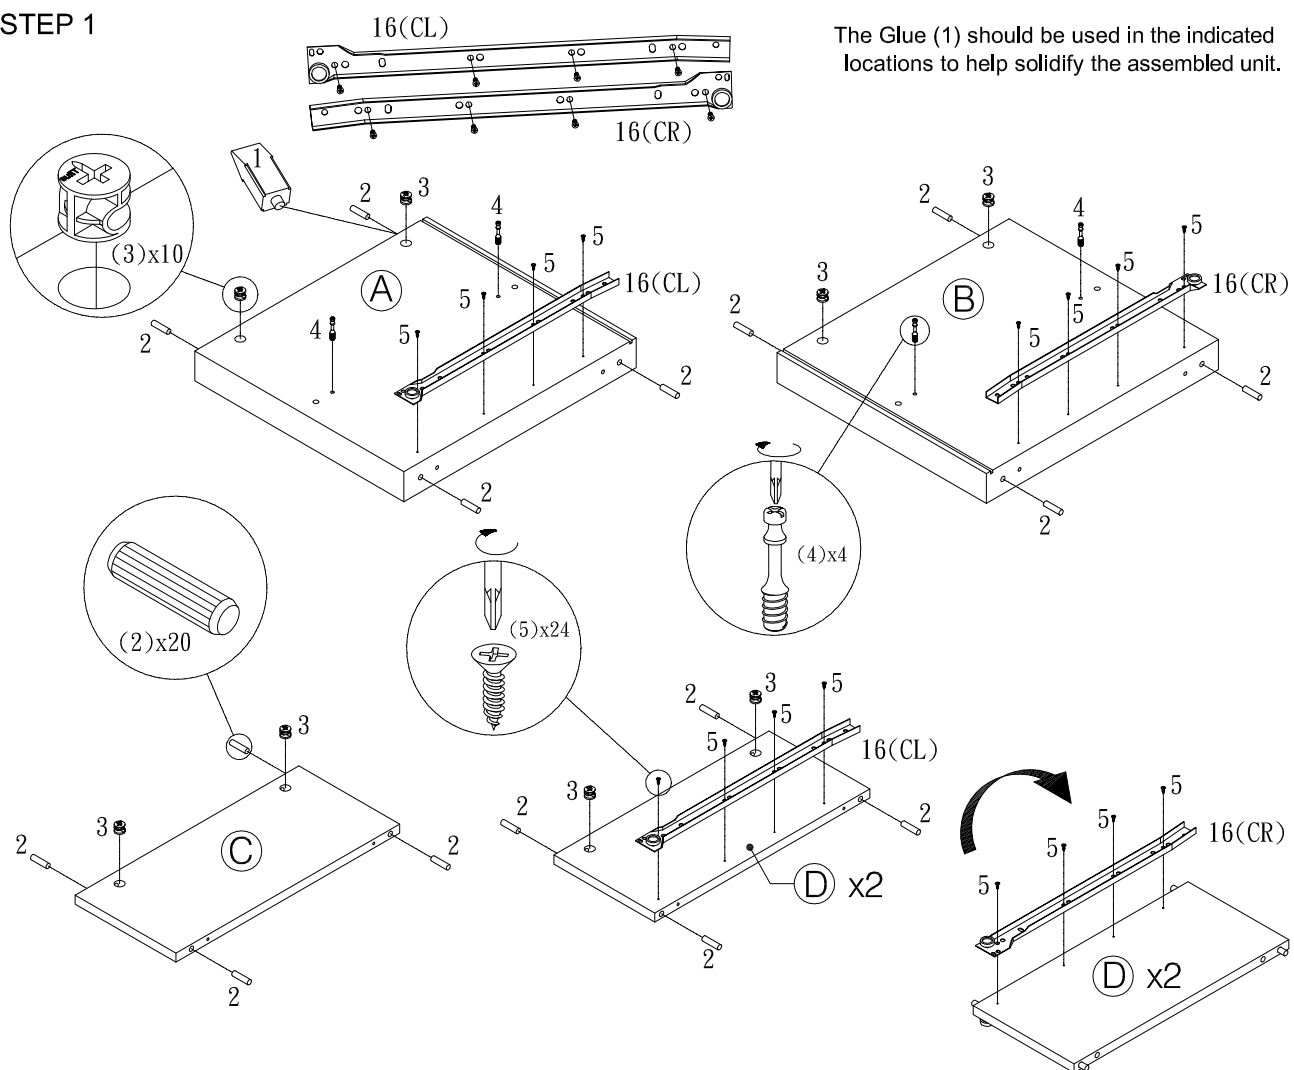


STEP 2

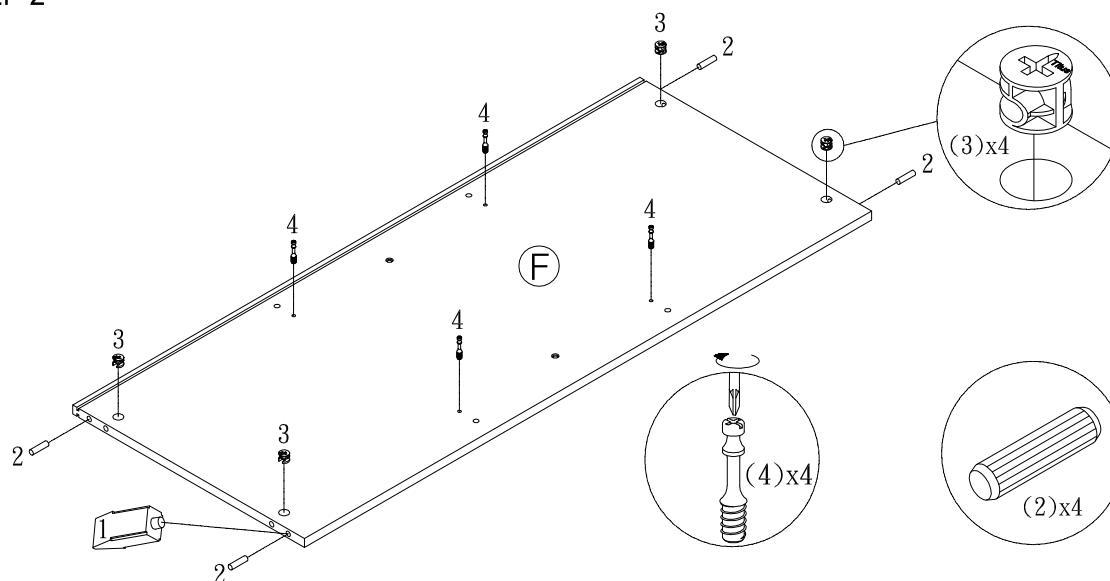


STEP 3

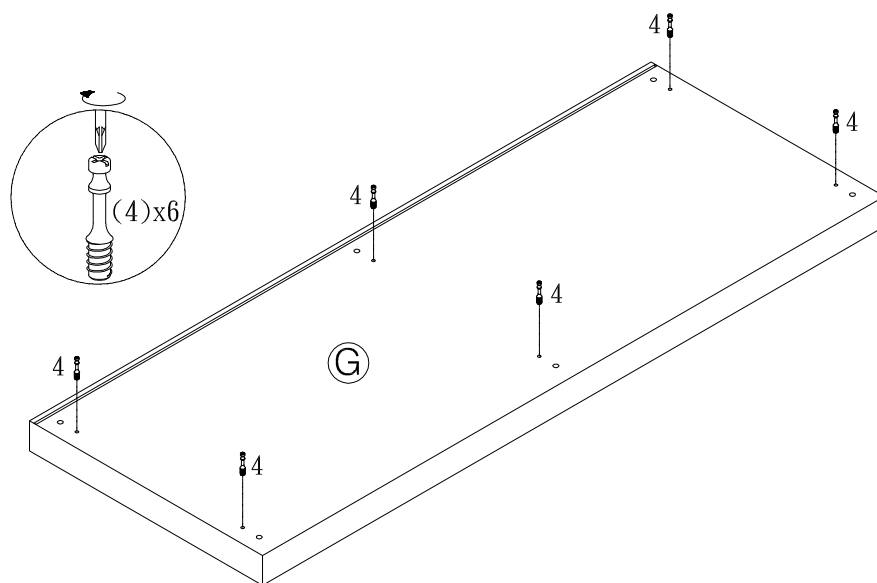


STEP 4

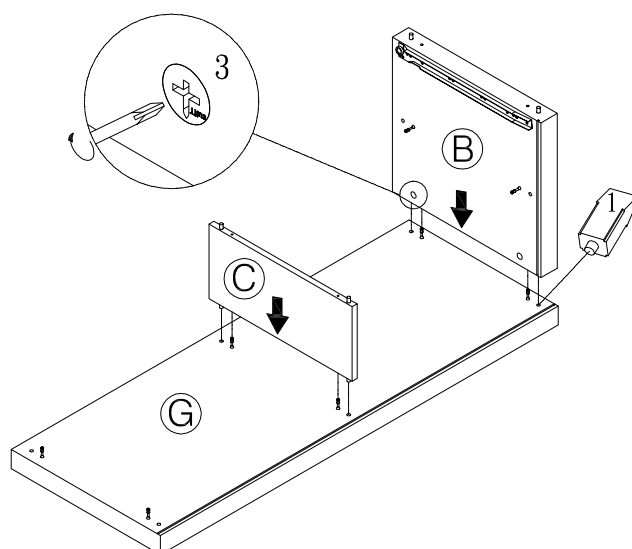


STEP 5

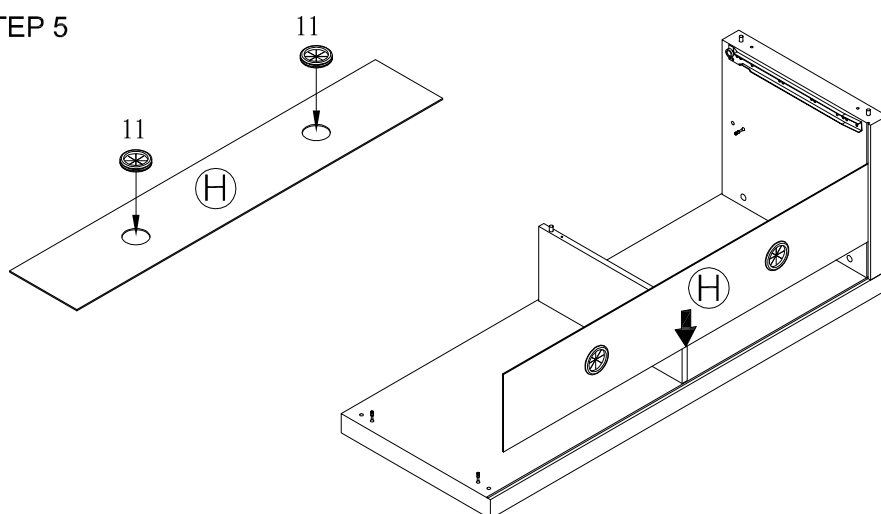


STEP 6

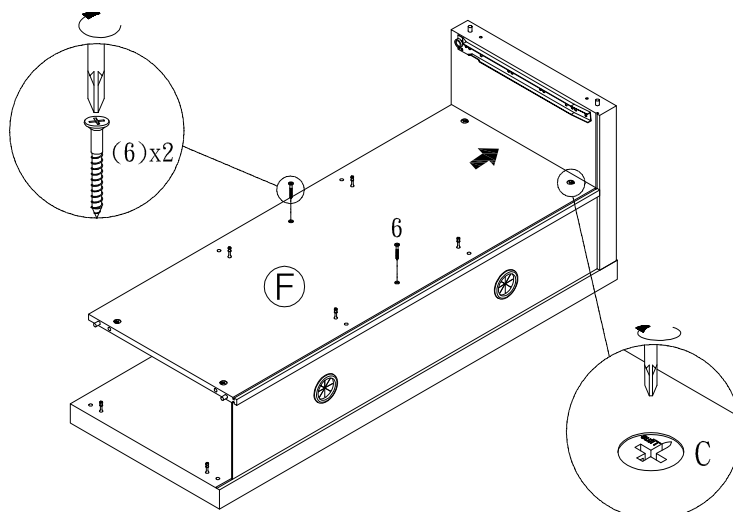


STEP 7

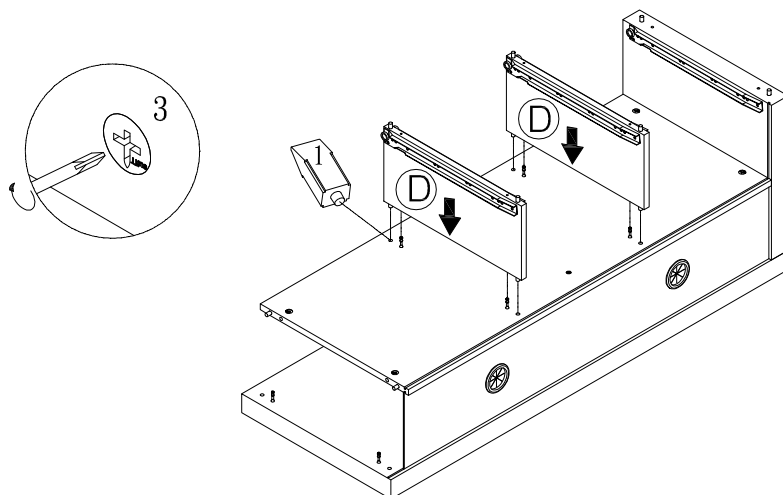


STEP 8

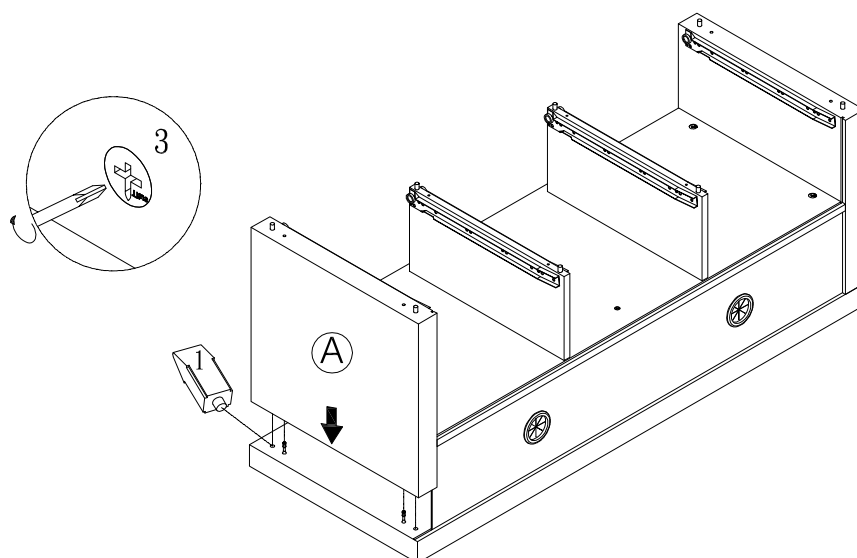


STEP 9

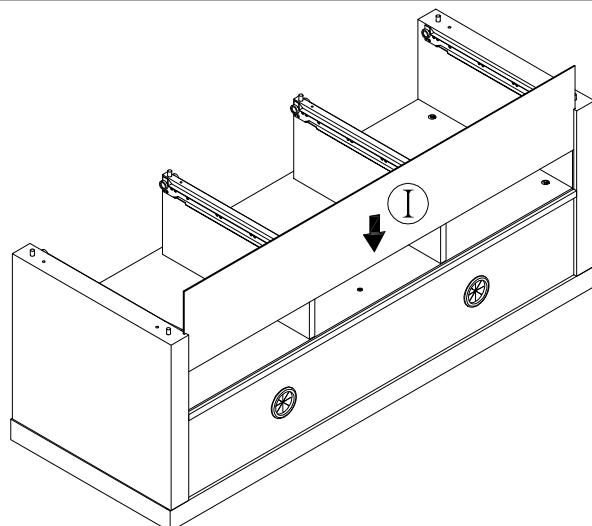

STEP 10

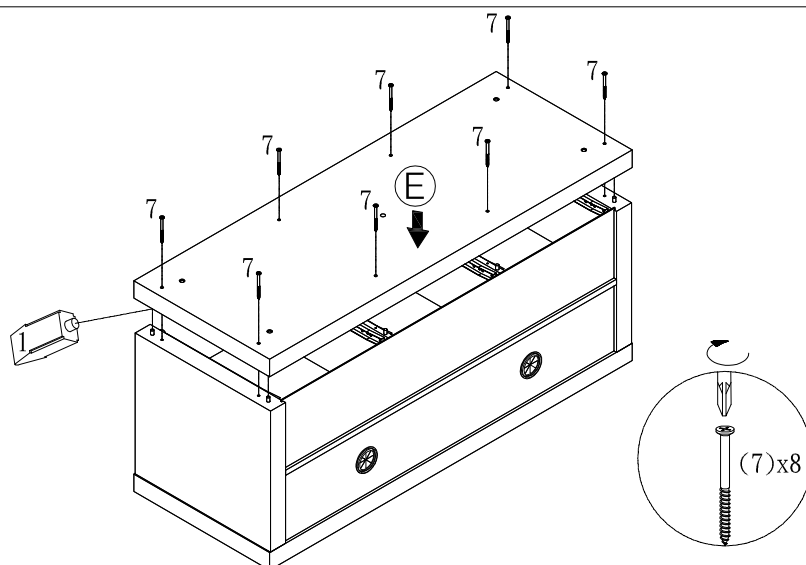


STEP 11

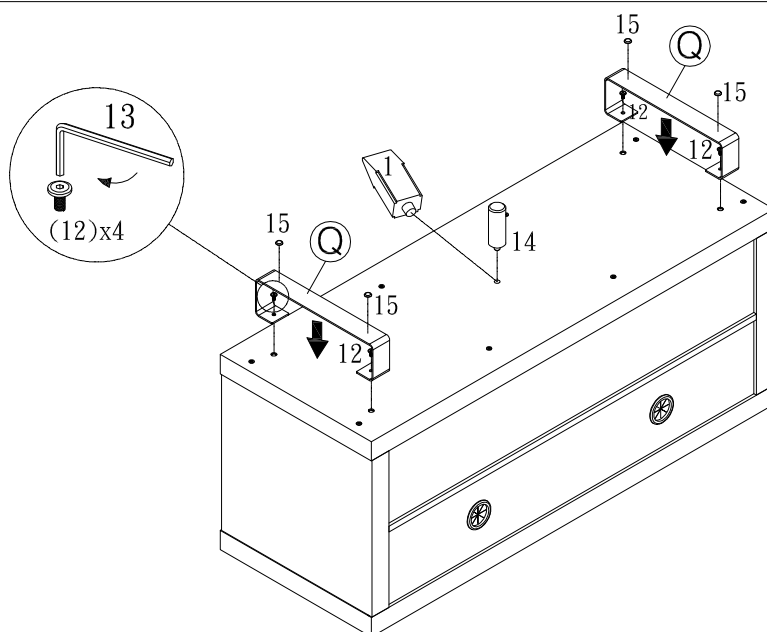


STEP 12


(1)

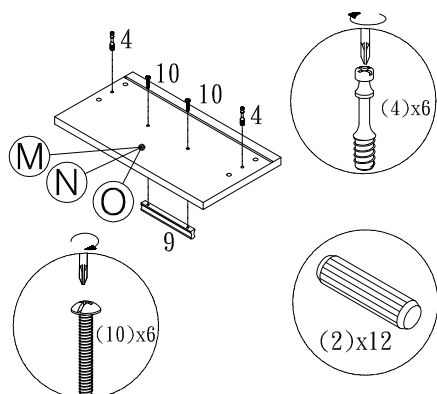


(3)

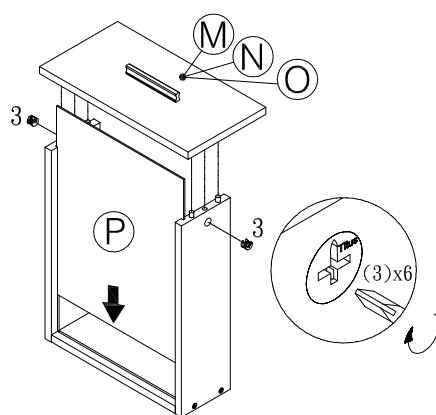


(2)

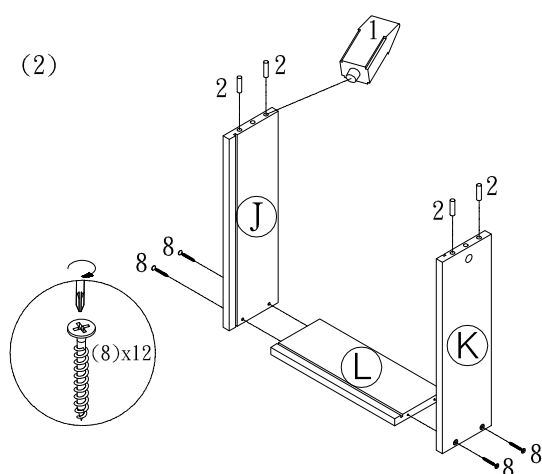

(4)

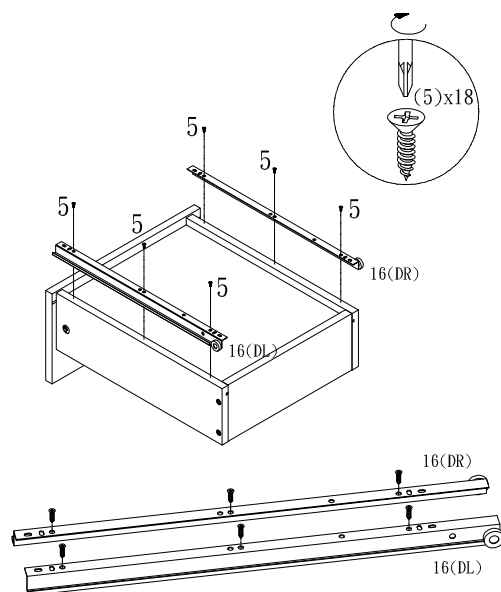

STEP 13

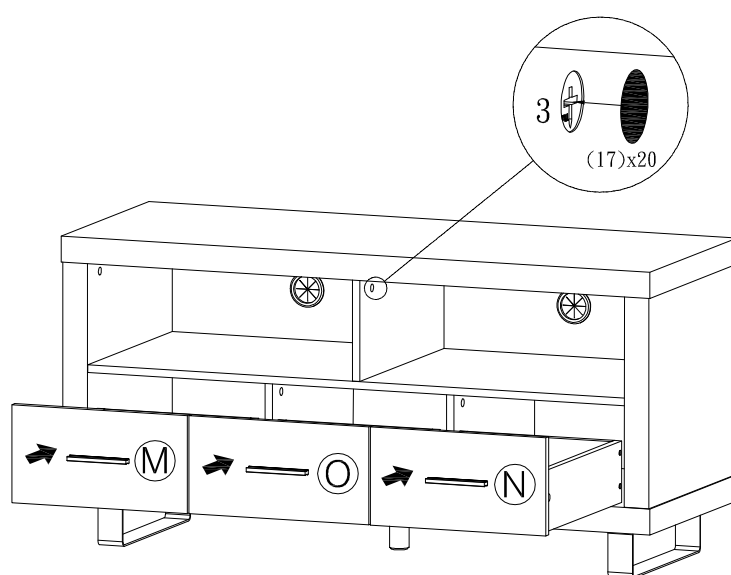

Assembly Instruction as below:

Step 1: Insert (2) into the holes at two sides of (A)/(B)/(C)/(D) , Insert (3) into the holes on the (A)/(B)/(C)/(D) , Insert and screw (4) into the holes on the (A)/(B) , then (16-CL) on (A)/(D) 、 (16-CR) on (B)/(D) by (5).

Step 2: Insert (2) into the holes at two sides of (F) , Insert (3) into the holes on the (F) , Insert and screw (4) into the holes on the (F).

Step 3: Insert and screw (4) into the holes on the (G).

Step 4: Attach (B)/(C) onto (G) , when (4) is connected inside (3), tightly fasten (3) clockwise.

Step 5: (11) built-in (H) , then insert (H) on and between (B) & (G) along slots.

Step 6: Connect (F) with Step 5 by (6).

Step 7: Continue last step , apply the same technique to connect (D) on (F).

Step 8: Continue last step , apply the same technique to connect (A) with Step 7.

Step 9: Insert (I) on and between (A) & (B) along slots.

Step 10: Connect (E) with Step 9 by (7).

Step 11: Attach (Q) on (E) by (12) , (15) on (11) , (14) on (E).

Step 12-1: Insert and screw (4) into the holes on the (M)/(N)/(O) , then (9) on (M)/(N)/(O) by (10).

12-2: Insert (2) into the holes at top of (J)/(K) , then fasten (L) on and between (J)&(K) by (8).

12-3: insert (P) on and between (J)/(K) along slots , attach (M)/(N)/(O) on (J)&(K).

12-4: Attach (16-DL) at bottom of (J) and (16-DR) at bottom of (K) by (5).

Step 13: Attach (17) on (3) , then slide drawer onto rail between (A)/(B)/(D).