

NOTICE

THE PILLOWS ARE FILLED WITH CUT SPONGE,
WHICH IS A PRODUCING TECHNIQUE.

WE PROMISE THAT ALL RAW MATERIALS

USED ARE BRAND NEW, SAFE TO USE,

AND IN ACCORDANCE WITH LAWS AND REGULARTIONS,

WILL NOT EFFECT THE QUALITY AND SAFETY.

WE RECOMMEND ASK FOR PROFESSIONAL HELP IF NEEDED,

AND WE ALSO PROVIDE INSTALLATION VIDEO WITH THIS INSTRUCTIONS.

PLEASE CHECK THE STEPS CAREFULLY BEFORE YOU START.

IF YOU HAVE ANY QUESTIONS,


PLEASE FEEL FREE TO CONTACT US ANYTIME.

HAVE A GREAT DAY!



WARRANTY

We strive to offer high quality product and we also try our best to satisfy each customer that order from us, no matter on products or services as needed. Each customer receives a record of their order, such as the order number or item receipt. For any items that are out of warranty period, you may still be able to purchase the replacement parts from our company if they are available.

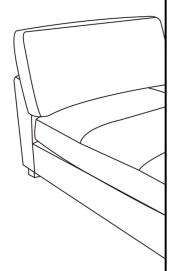

MAINTAINANCE AND WARNING

Please read the manual thoroughly before you start installing. Please keep the product away from sharp object. Packaging and small parts may have chocking hazard, please keep them away from children and pets. Please clean the product according to each clean code, check the product description for more information. Please keep the product away from fire. If you have any other questions, please contact us, we will be glad to help you out. If the product is placed under direct sunlight, the pattern or color might fade away overtime. Check the product periodically to make sure everything is secured and tightened. Always use proper tools for installation. Do not jump on the product.









PRDOUCT DESCRIPTION

Coruroy fabric ensures high softness, make sure you have a good rest. The solid wood support will be your firmly backup, all the way up to 800lbs.


Decorate your own couch with your favorite blanket or rugs, make it your private collection.

Adjustable neckrest, say bye to your neckpain.

The thickness and resilience are no doubt on this seat cushion. After long time use, still good as new.


Designed to be removable, easy to take care of.

EXPLODED VIEW

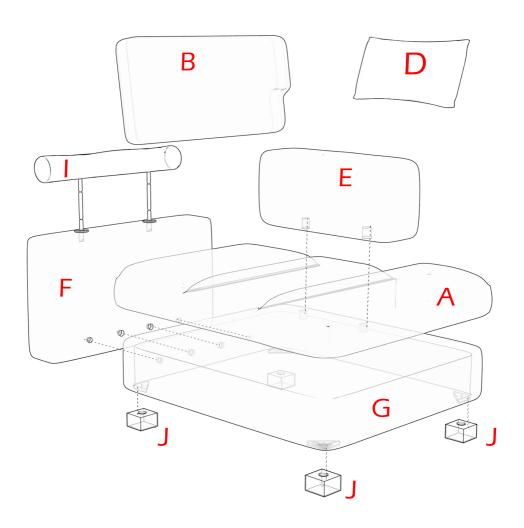




PARTS



Item A*1
Seat cushion




Item B*1
Back cushion



Item C*1 Back cover



Item D*1
Armrest cushion



Item E*1
Armrest frame



Item F*1 Backrest frame



Item G*1 Sofa frame



Item H*1 Sofa cover




Item I*1 Headrest

HARDWARE

TOOL LIST


NOTE: Designated with (★) We provide additional spare parts in the hardware package

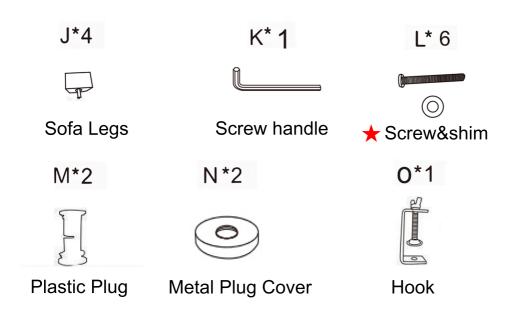


Please make sure all hardware&packing material fitting the list. Especially some small accessories may be missing during transportation. Please contact us if you have any question.



Cut open the compression bag along the paper strip on the roll bag. Remove the seat cushion (A) and let them rest to recover their shape. Full recovery may take up to 48 hours, but you can gently slap the cushions to speed up the process.

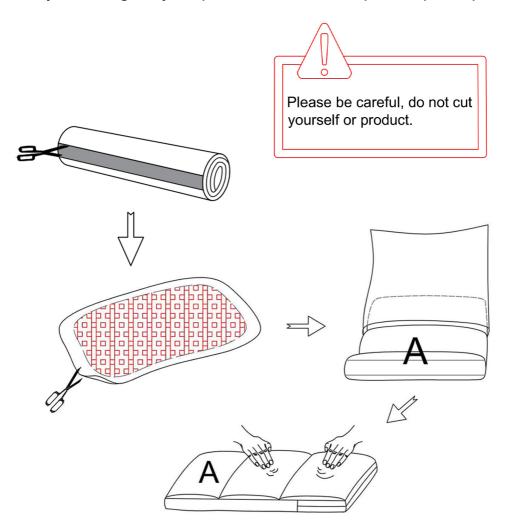


For cushion(B), please put it into the cushion cover(C) after fully recoverd from compression and zip the cover as shown.

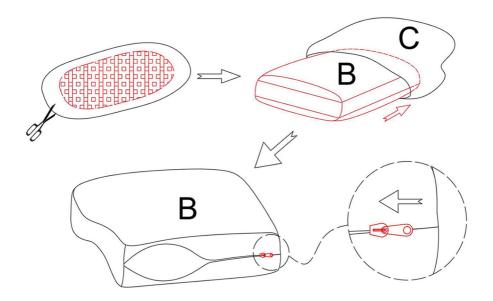


Please remember to remove the plastic covers from all the sofa legs.

Place the wood sofa frame(G) upside down as shown, gently rotate the legs(J) clockwise into the screw holes on each corner of the frame.

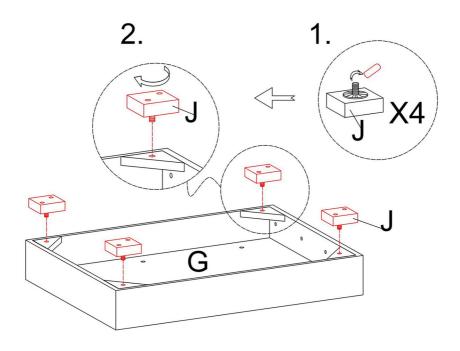


we suggest the whole process to be done on a clean carpet or rug, to protect your floor and your sofa.


Place the sofa frame (G) on its side as shown, and put all four screws (L) into the predrilled holes. Then place the backrest(F) near the sofa frame (G) as shown. Align all four screw holes, then use the wrench (K) provided to tighten them.

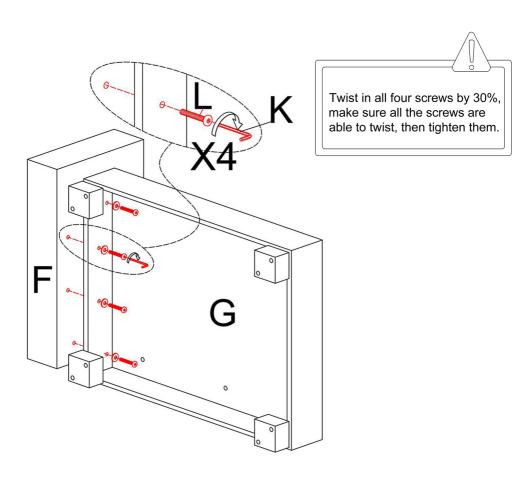

Flip over the sofa by standing on its backrest(F) as shown, then align the armrest(E) with the predrilled holes on surface(G), then use the wrench to twist both screws to fix the armrest (the screws need to be tightened from the bottom of the frame).

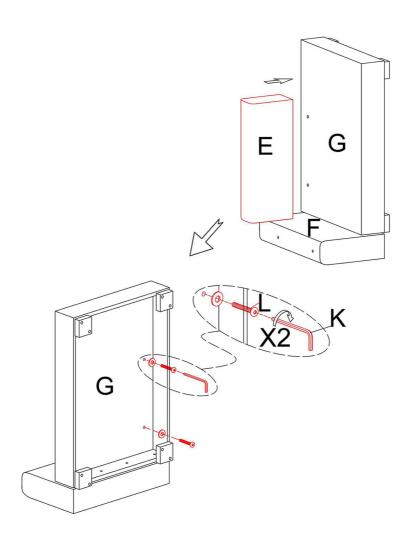


Put the sofa cover (H) onto the surface of the sofa, making sure the positions of the armrest and backrest are correct. then, pull the edges of the cover to stretch it evenly.

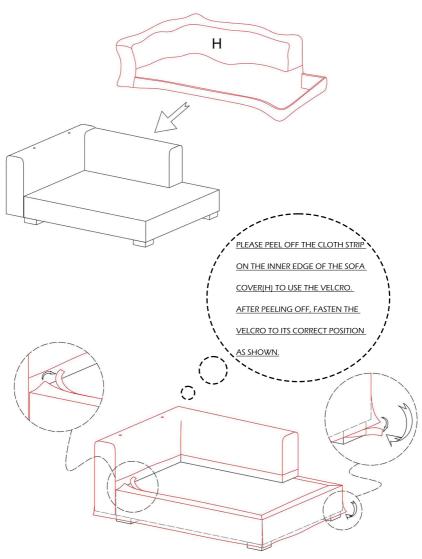




Insert the plastic plugs (M) into both holes on the backrest, then twist the metal plug covers (N) onto them.

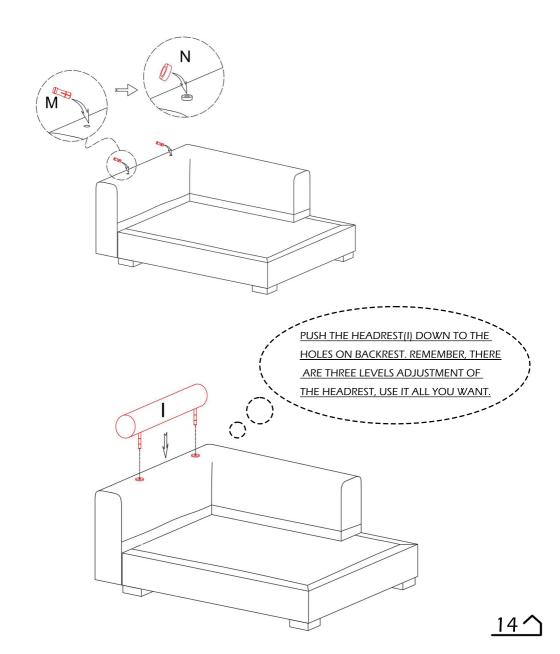


The metal hooks(O) are connecters which can put the ottoman and the sofa, or unilateral sofas together. if you want to try this feature, just simply flip the sofa on its side, and put an unilateral sofa or ottoman right next to the correct edge. then use the metal hook(O) to clamp both edges as shown, then tighten the hooks, make sure they are all firmly tight before you use or move the sofa. we suggest you do this step before you put cylindrical pillow(headrest).

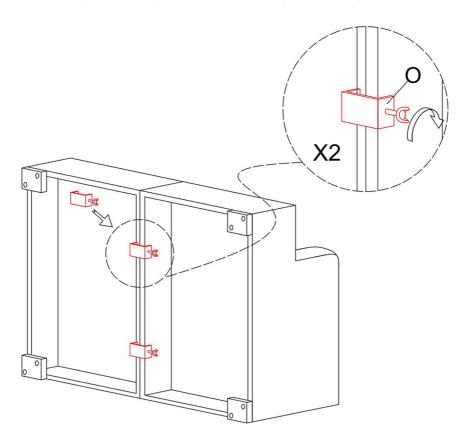




Place the cushion (A) as shown.

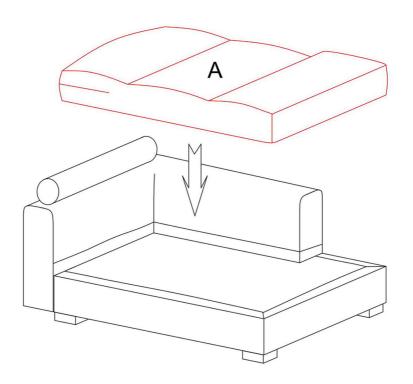

Place the back (B) and arm cushions (D) onto the sofa as shown.

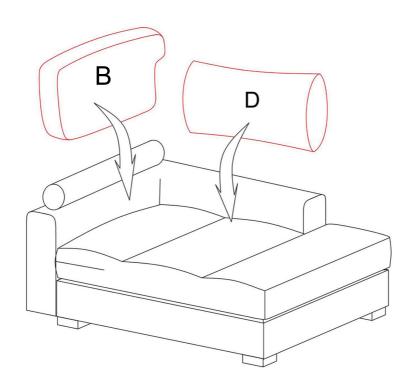

Clean up the mess and start enjoying it. congratulations! you have completed the assembly—now it's all yours. thank you for reading!

