


# SLAT KIT TWIN

## ASSEMBLY INSTRUCTION

Please note that you will require a Phillips screwdriver.  
**ATTENTION!** If you receive a damaged or defective item,  
please contact us.


### PARTS LIST

**01** SLAT KIT 1 SET

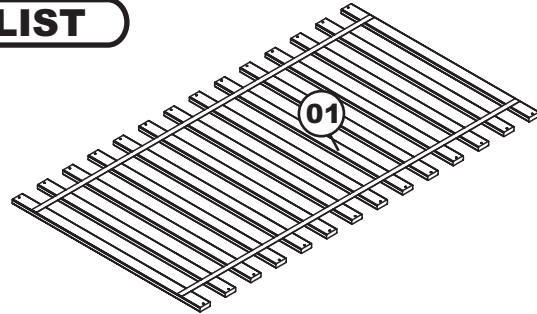

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE WOOD SCREWS ARE DAMAGED DURING ASSEMBLY.

**A**



1 1/4" Wood screw - 28 pcs Spare - 2 pcs

**HARDWARE**


### Step 1

Assemble bed frame or bunk bed according to assembly instructions.

### Step 2

Lay the slat kit onto the bed.

**PLATFORM BED**

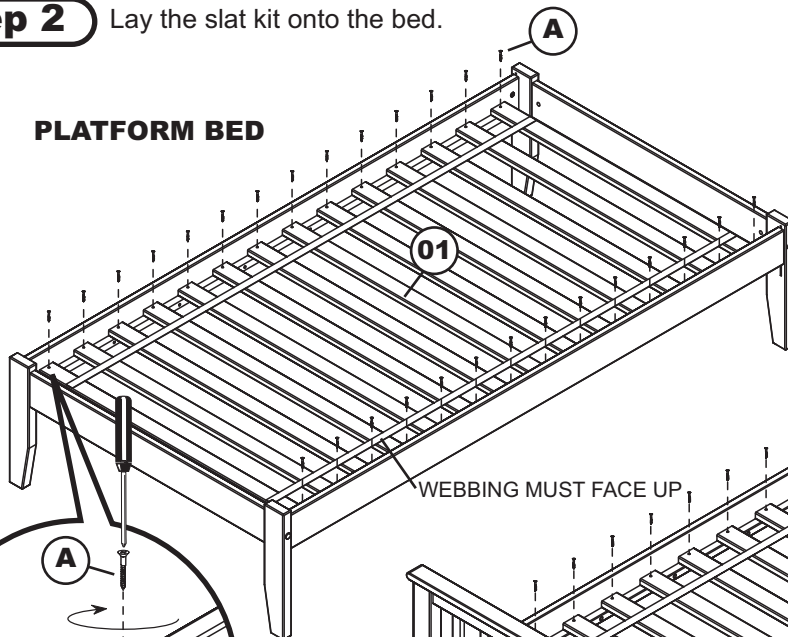

WEBBING MUST FACE UP




Adult assembly

**A**



Wood screw

**BUNK BED**

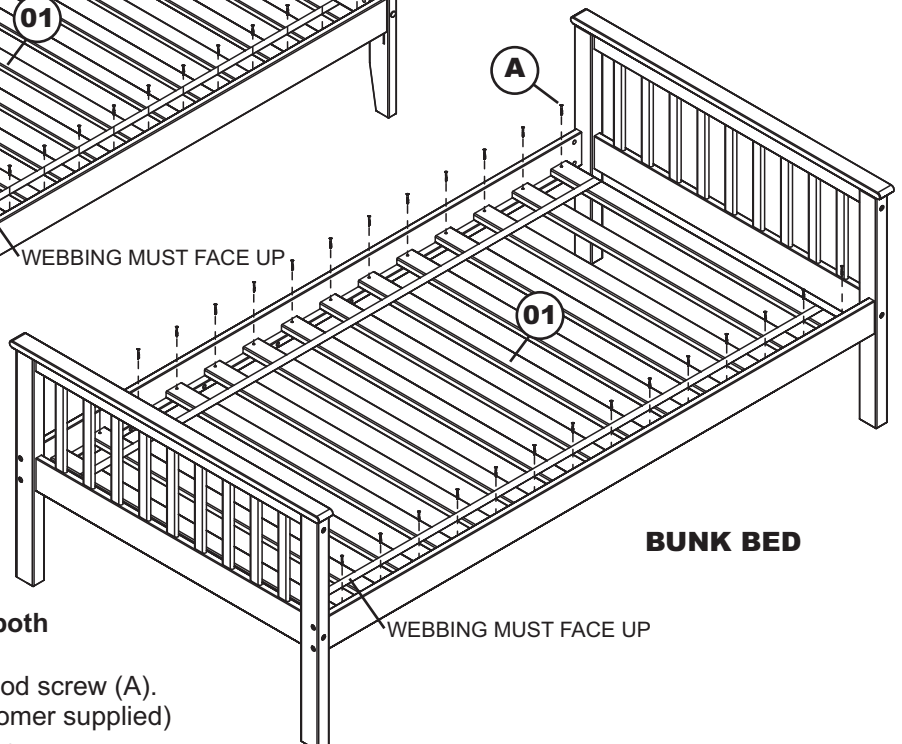

WEBBING MUST FACE UP

**Be sure to align slat kit evenly with both ends of side rail.**

Screw slat kit (01) to side rail, using wood screw (A).  
Tighten with Phillips screwdriver. (Customer supplied)  
Be sure the space between slats is even.

**NOTE: WEBBING MUST FACE UP**