


# TRUNDLE + MODESTY PANEL - FULL

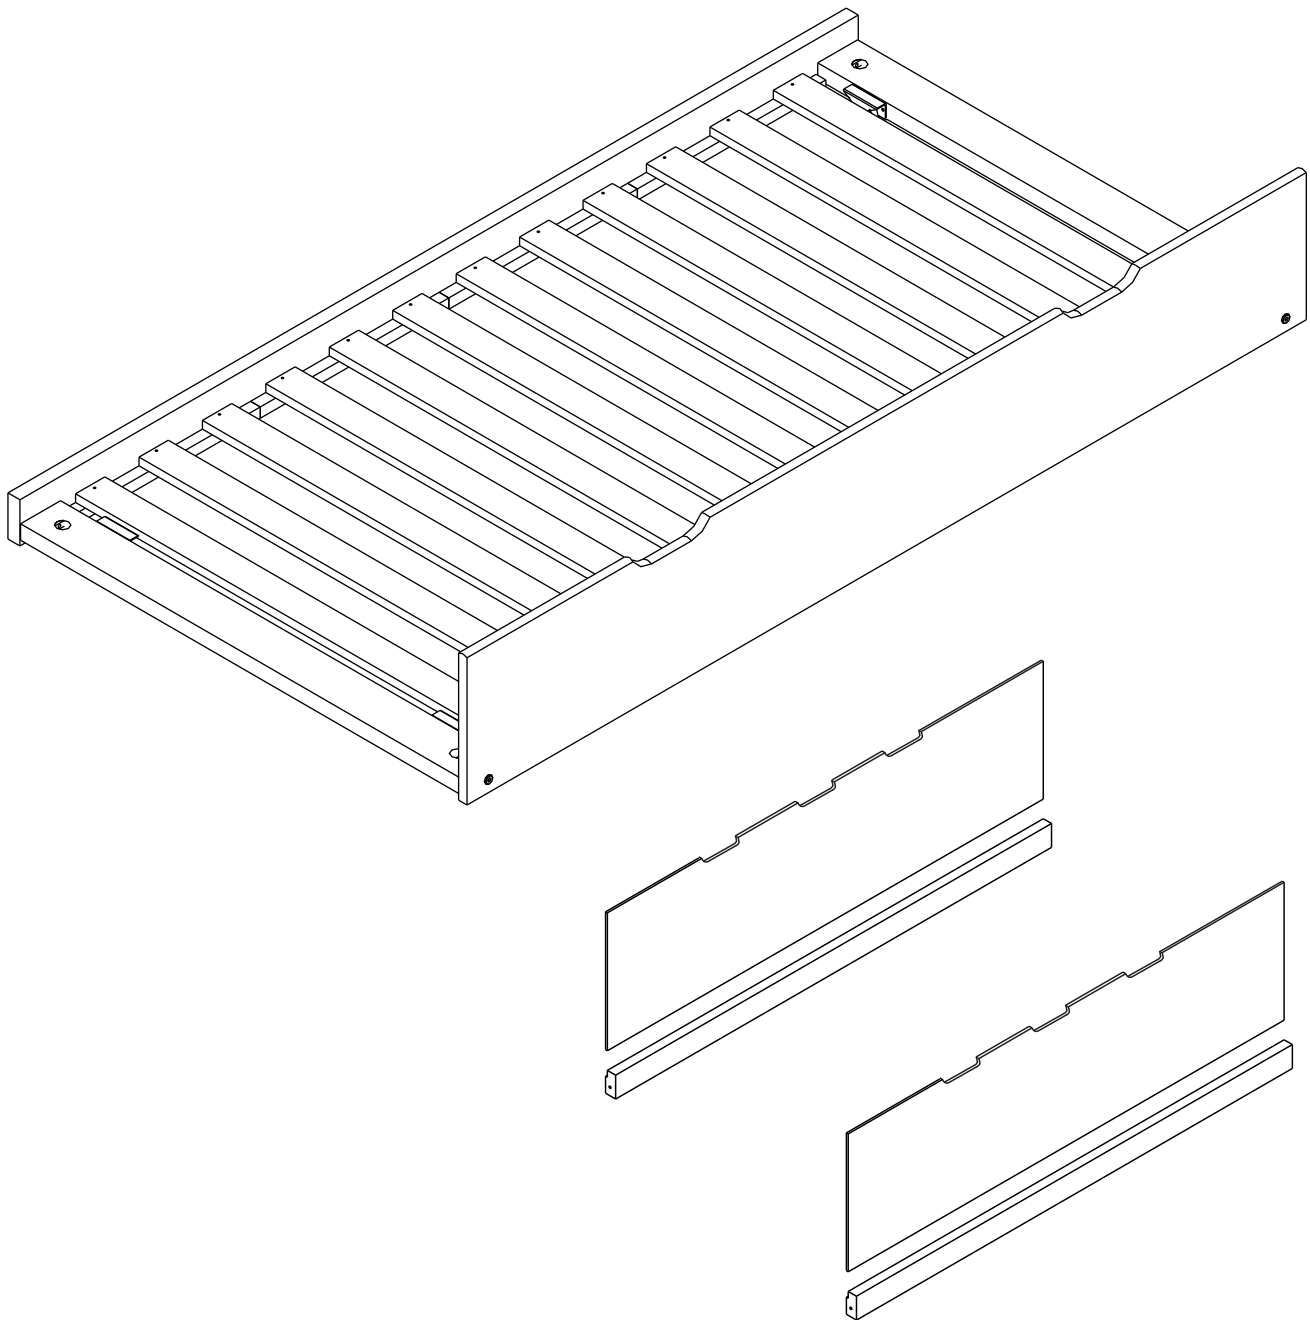


## ATTENTION





- 1 - Read and observe carefully all the assembly instructions before beginning assembly.
- 2 - The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- 3 - The screw must be tightened periodically.
- 4 - Avoid contact with sharp objects.
- 5 - Avoid banging pieces together.




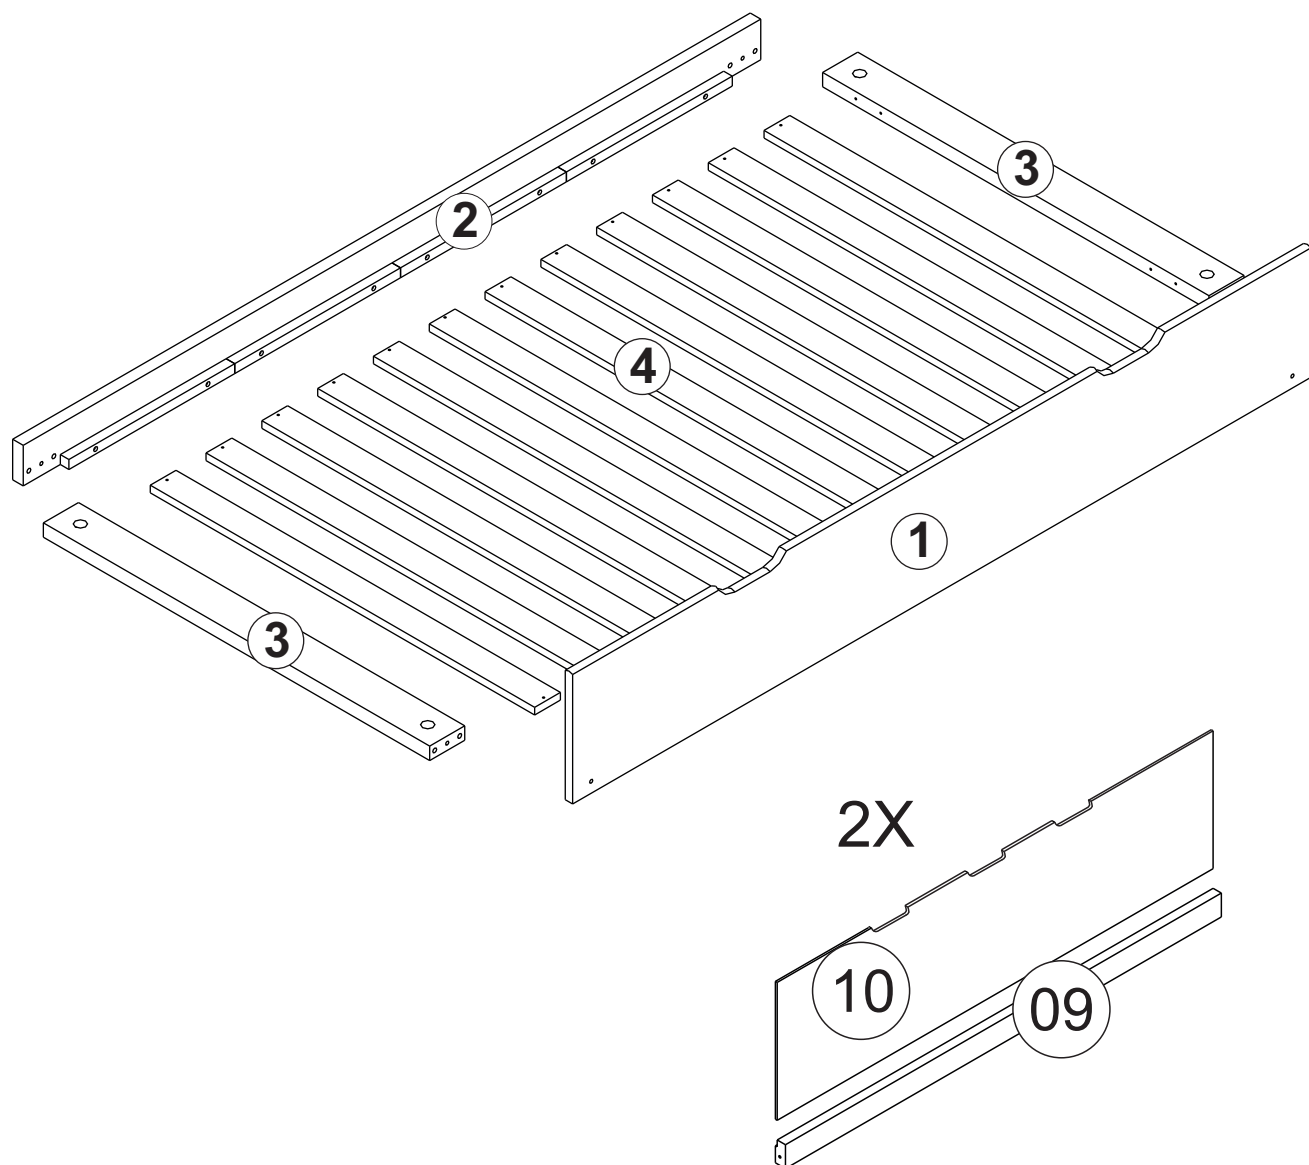


“Please! Confirm all parts and hardware are included to assemble!”




### Hardware - Carton SKU# E3131/2/3

F		01x
I	 Ø1/8" x 1 3/8"	28x
K	 Ø1/4" x 3 1/8"	04x
Y	 1 15/16"	04x

Z	 Ø1/8" x 5/8"	32x
AW	 Ø 3/8" x 1 3/8"	08x
BC	 1/4"	04x
BH		02x

# ASSEMBLY INSTRUCTIONS

## Step 01

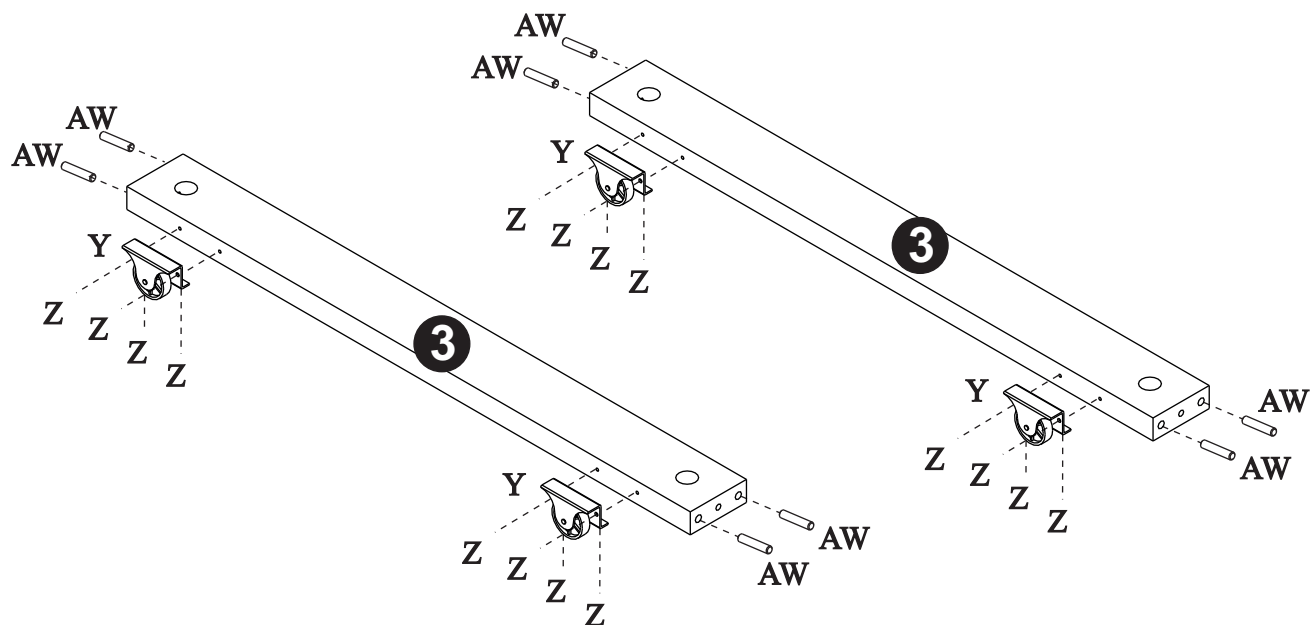


Parts needed for this step:

AW(8x)




Z (16x)



Y (4x)




## Step 02

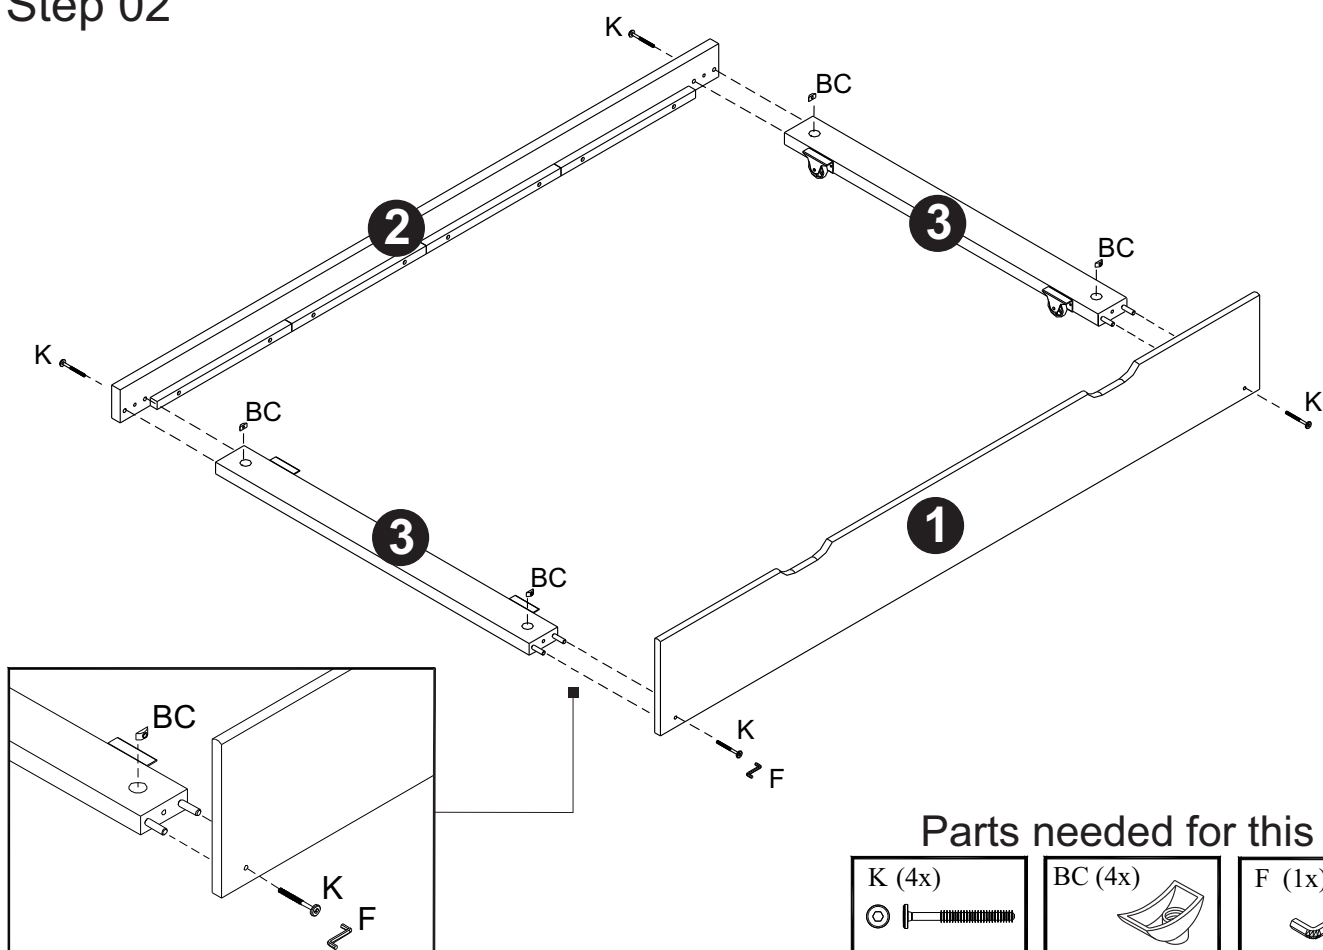

Parts needed for this step:

K (4x)





BC (4x)




F (1x)





## Step 03

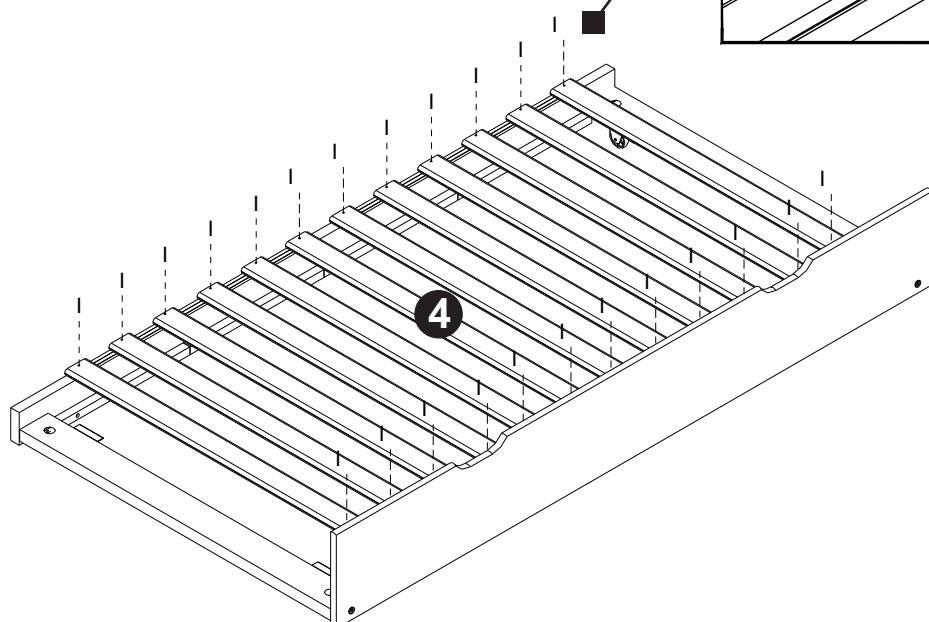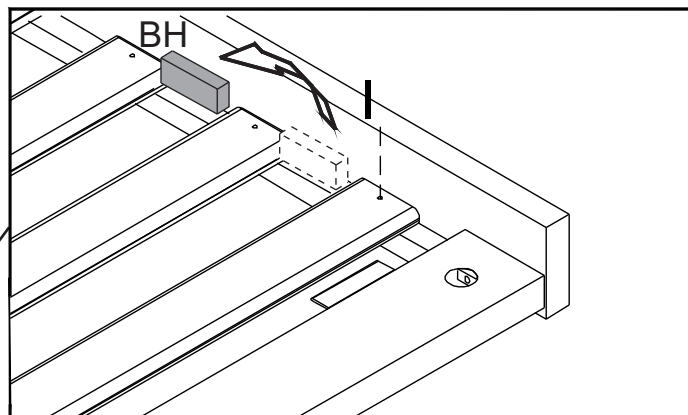


Parts needed for this step:



## Step 04

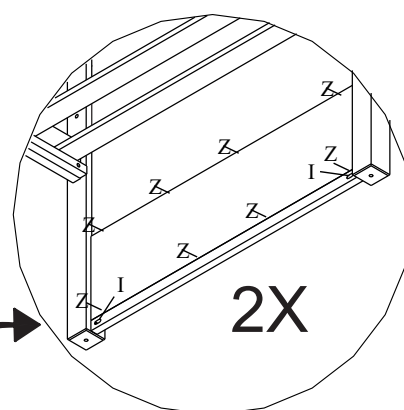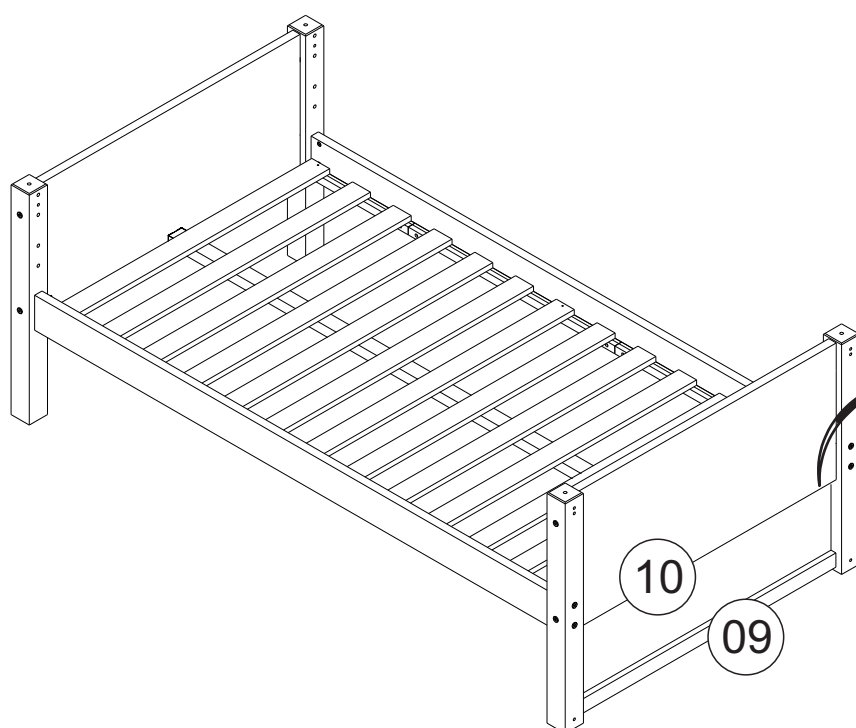

Parts needed for this step:

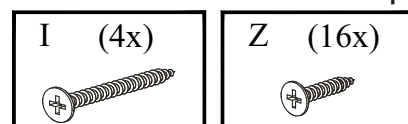

## Step 05

