
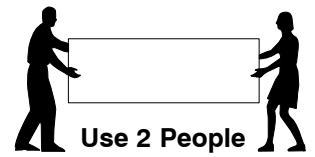


Assembly Instructions

1 Assembled View

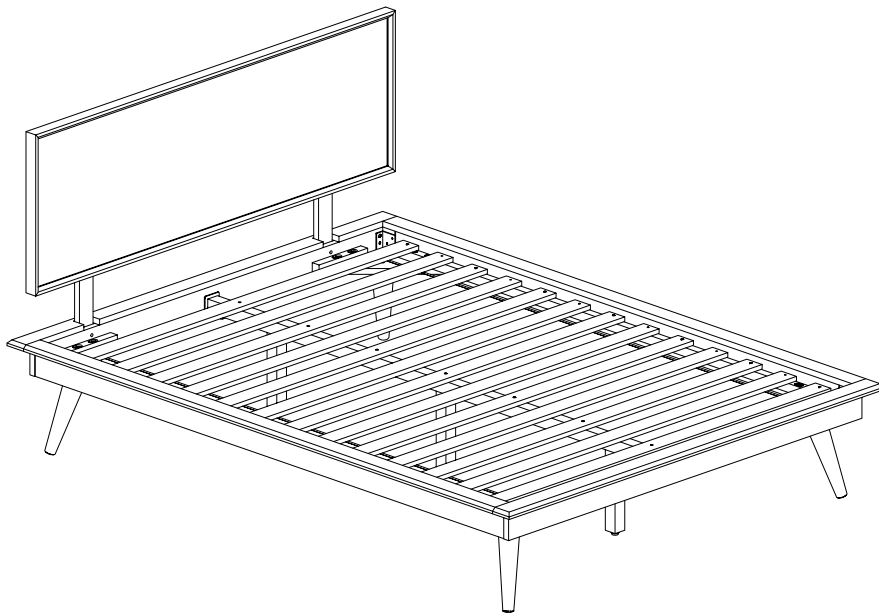

Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List

Parts in Box 1:




A Headboard Panel x 1




B Support Bar x 2

Parts in Box 2:

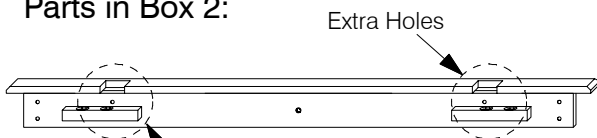


Extra Holes


C Headboard Panel x 1



D Footboard Panel x 1



E Side Rail x 2




F Long Support x 1




G Support Leg x 3



H Post x 4




J Support Panel x 4

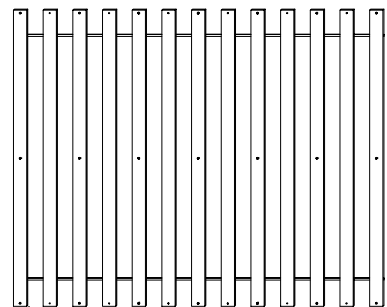


K Set of Bed Slats x 1

Assembly Instructions


3 Hardware List

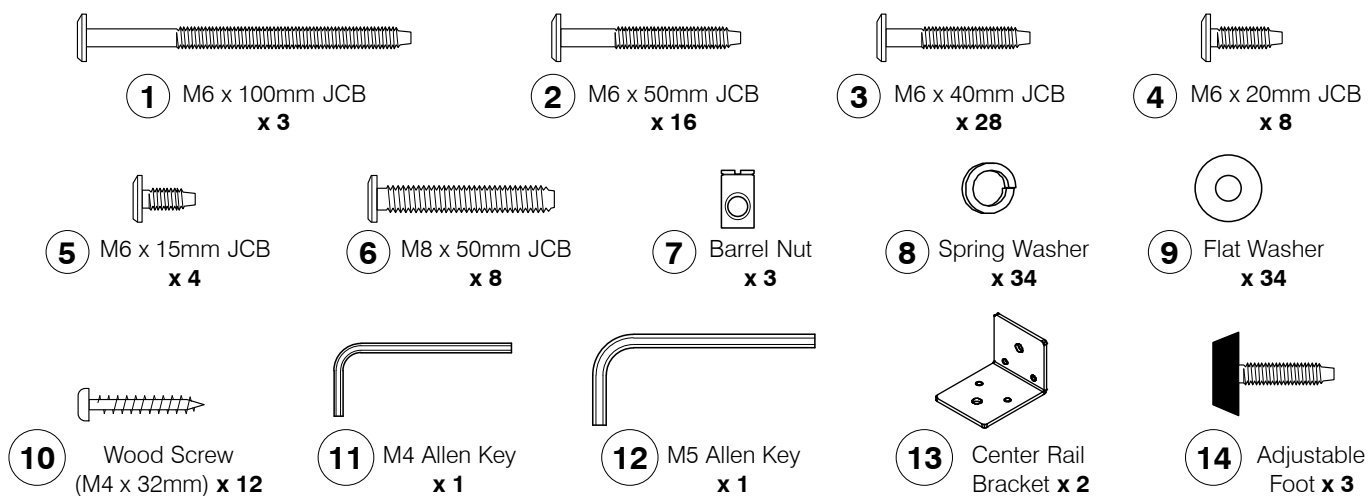


4 Fix the Adjustable foot to the bottom of the Support Leg (G).

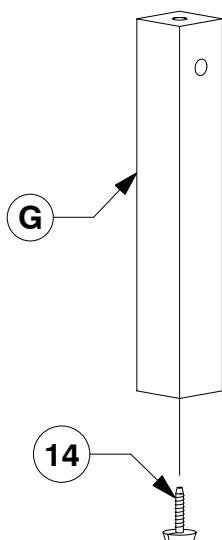


5 Fit the Post (H) to the Support Panel (J).

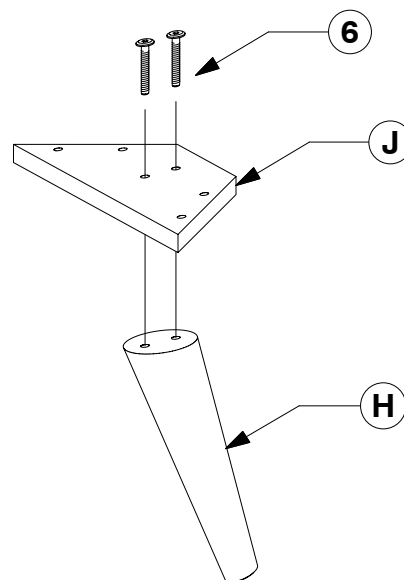


6 Fit the Center Rail Bracket to the Headboard Panel (C).

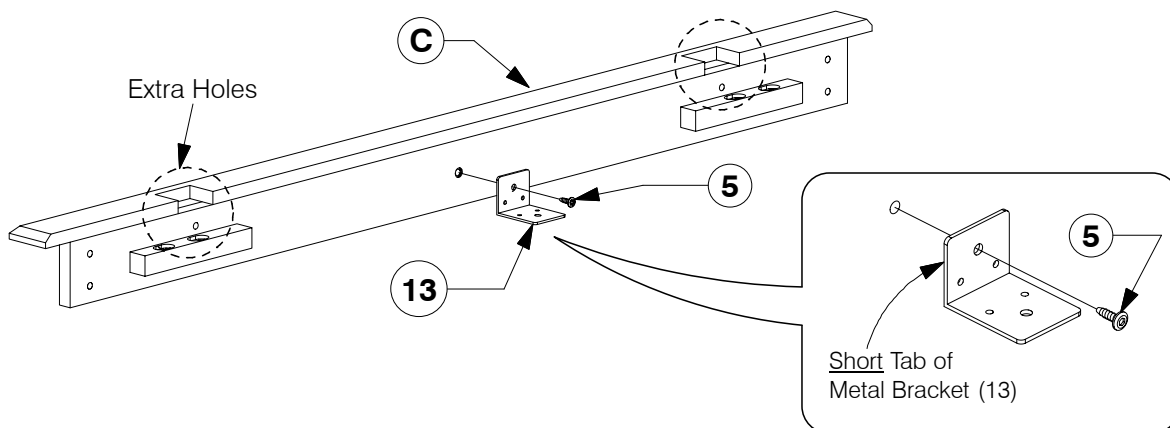


- 7 Fit the Center Rail Bracket to the Footboard Panel (D).**

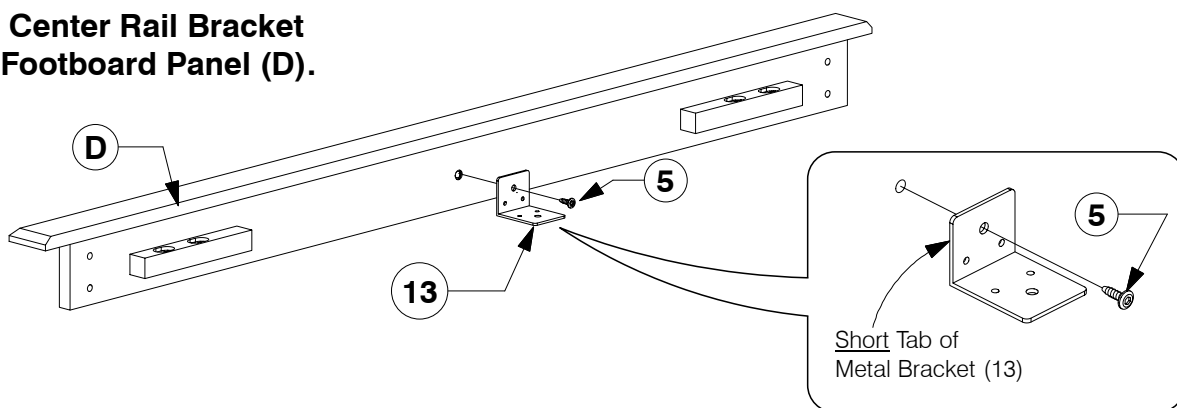


- 8 Bolt the Support Panel (H & J) to the Side Rail (E).**

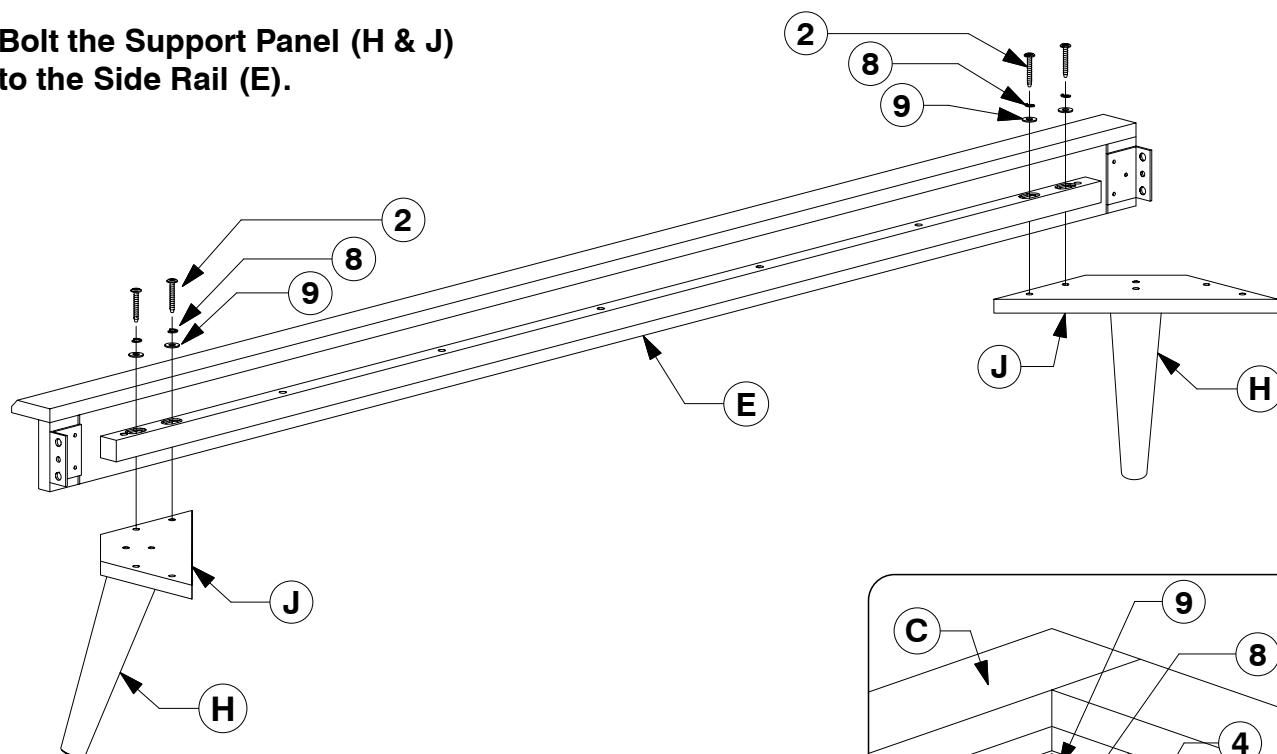


- 9 Assemble the Side Rail (E) to the Headboard & Footboard Rail (C & D).**

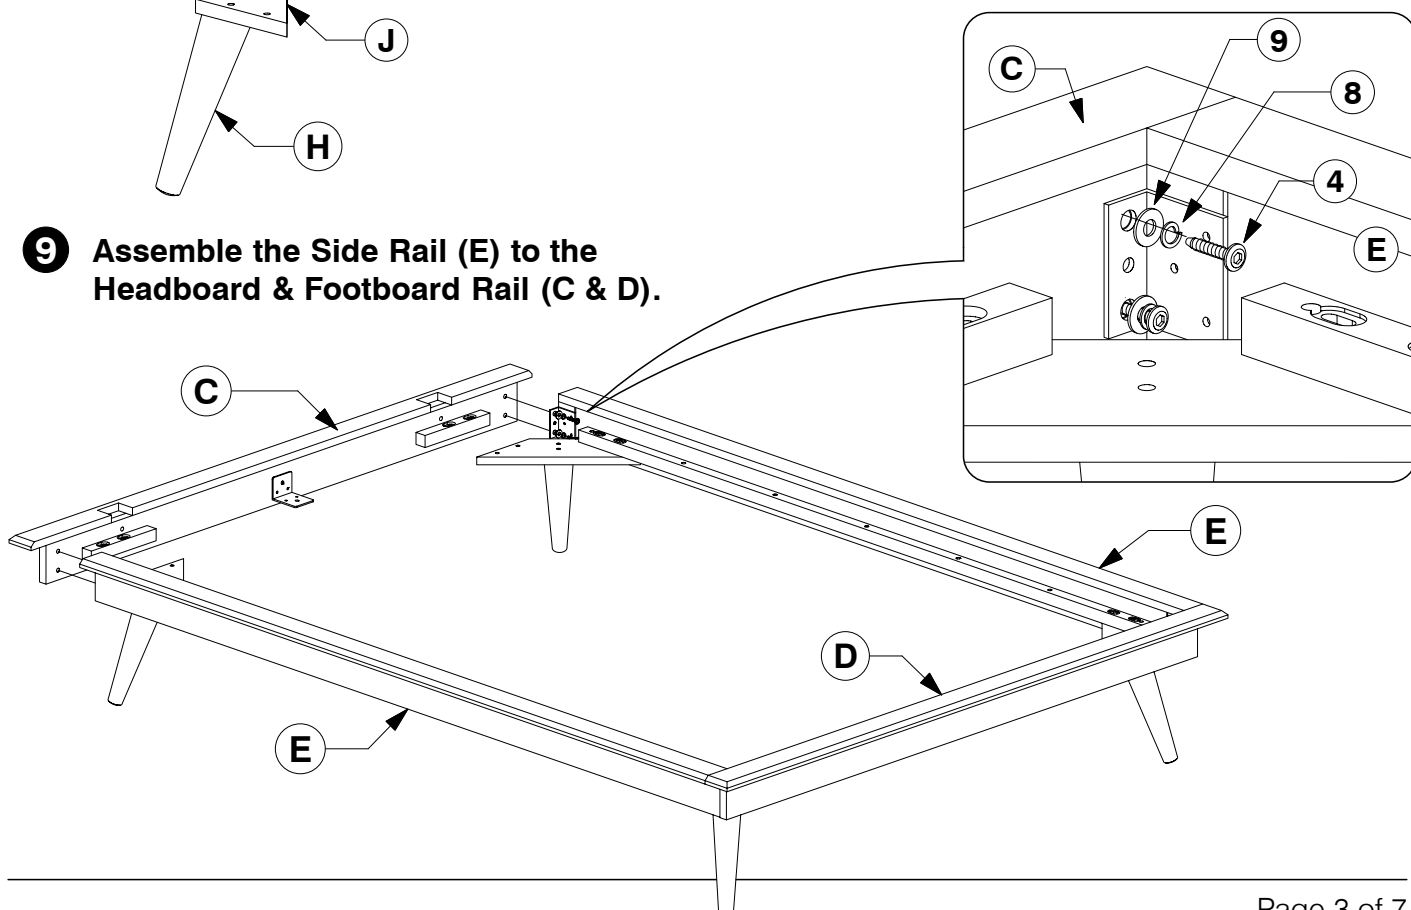


- 10 Bolt the Support Panel (J) to the Headboard & Footboard Rail (C & D).**

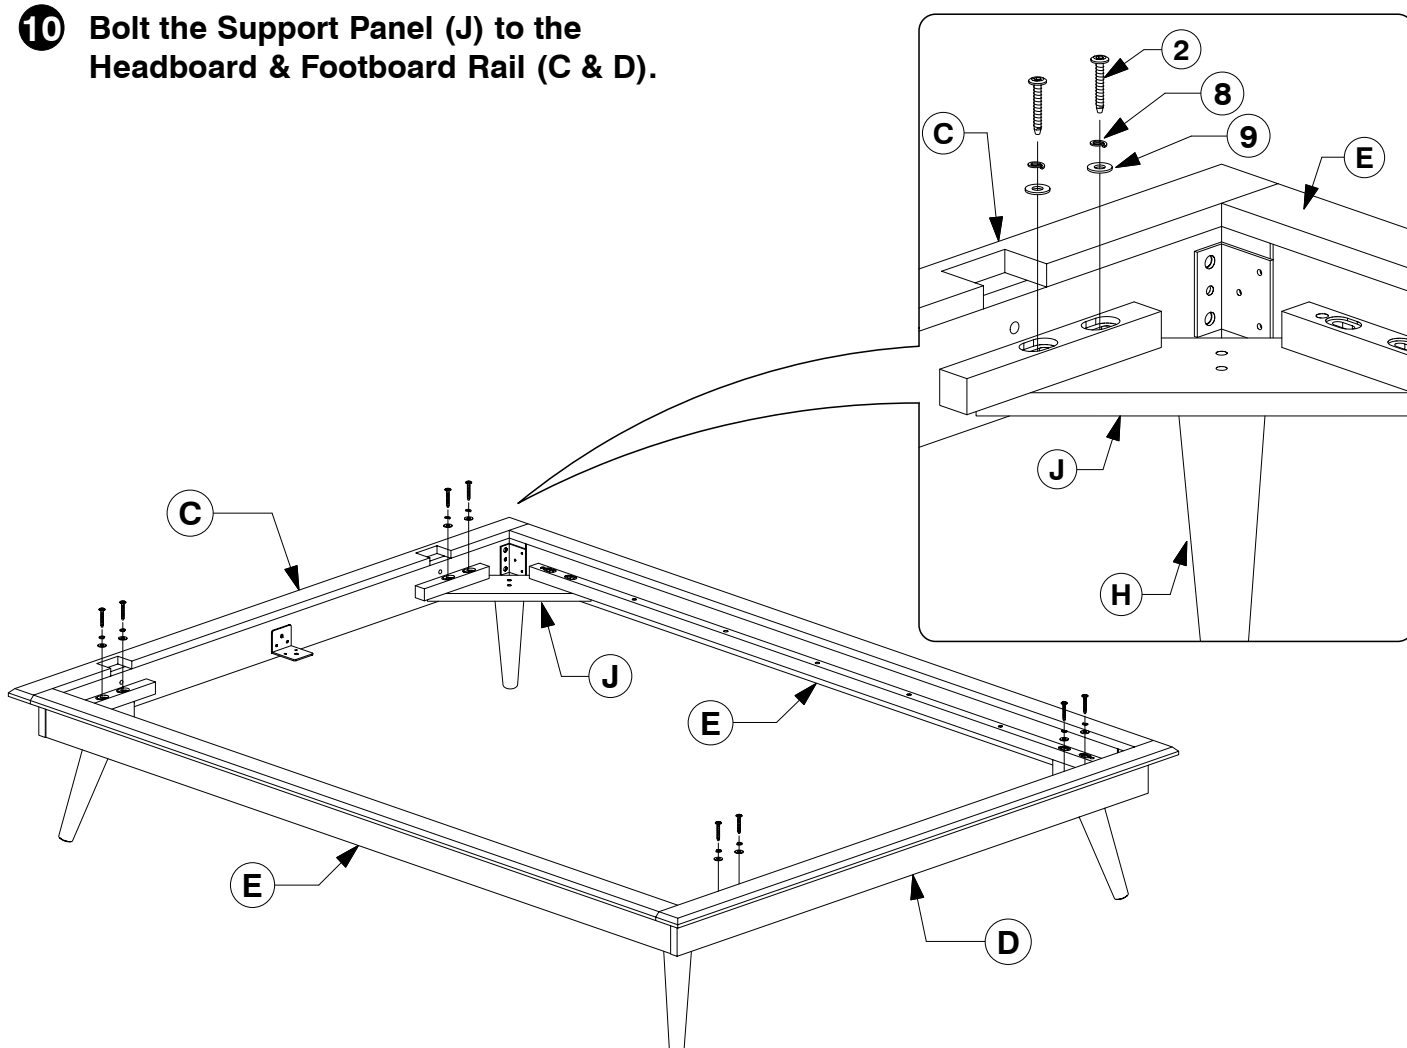


- 11 Assemble the Support Bar (B) to the Headboard Panel (C).**

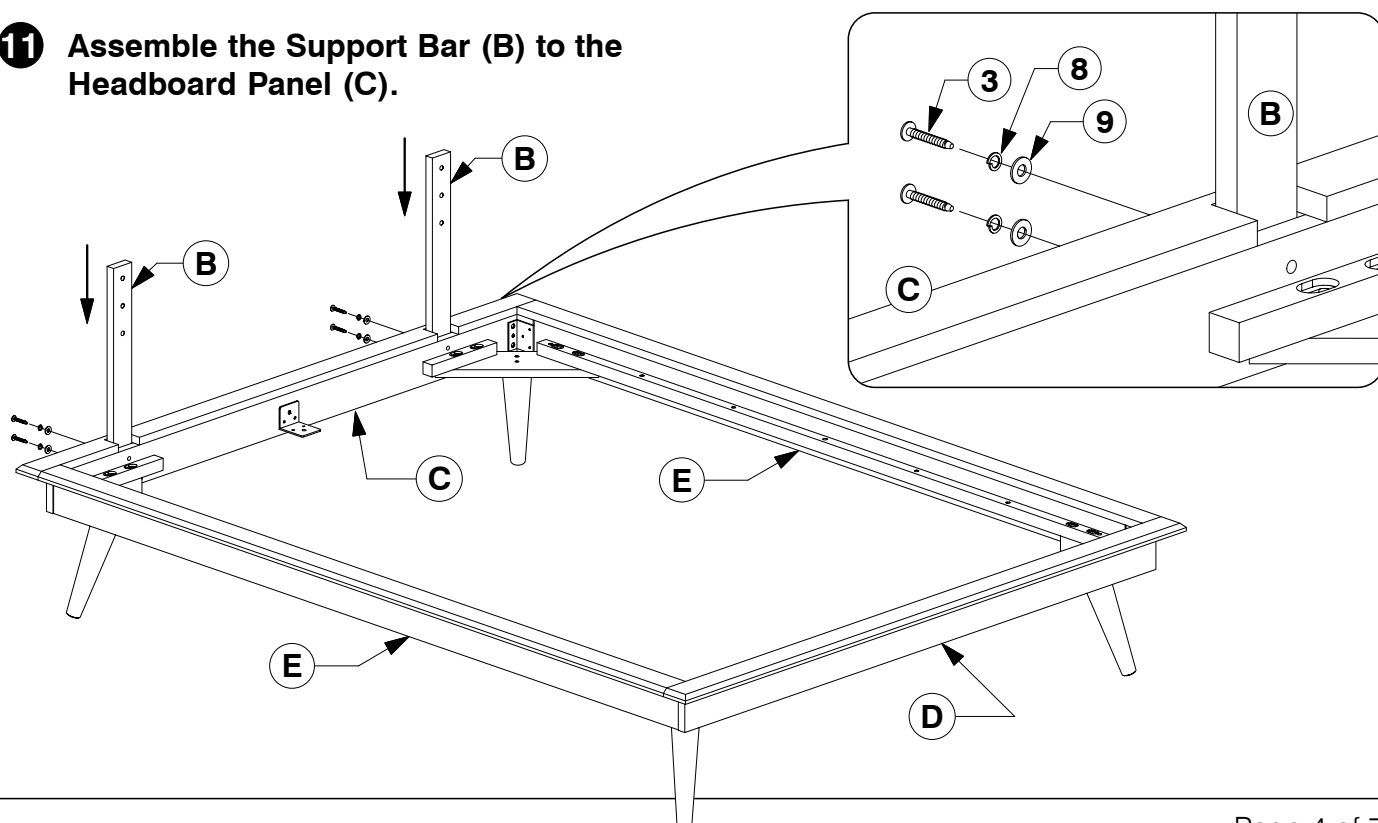


12 Assemble the Headboard Panels (A) to the Support Bar (B).

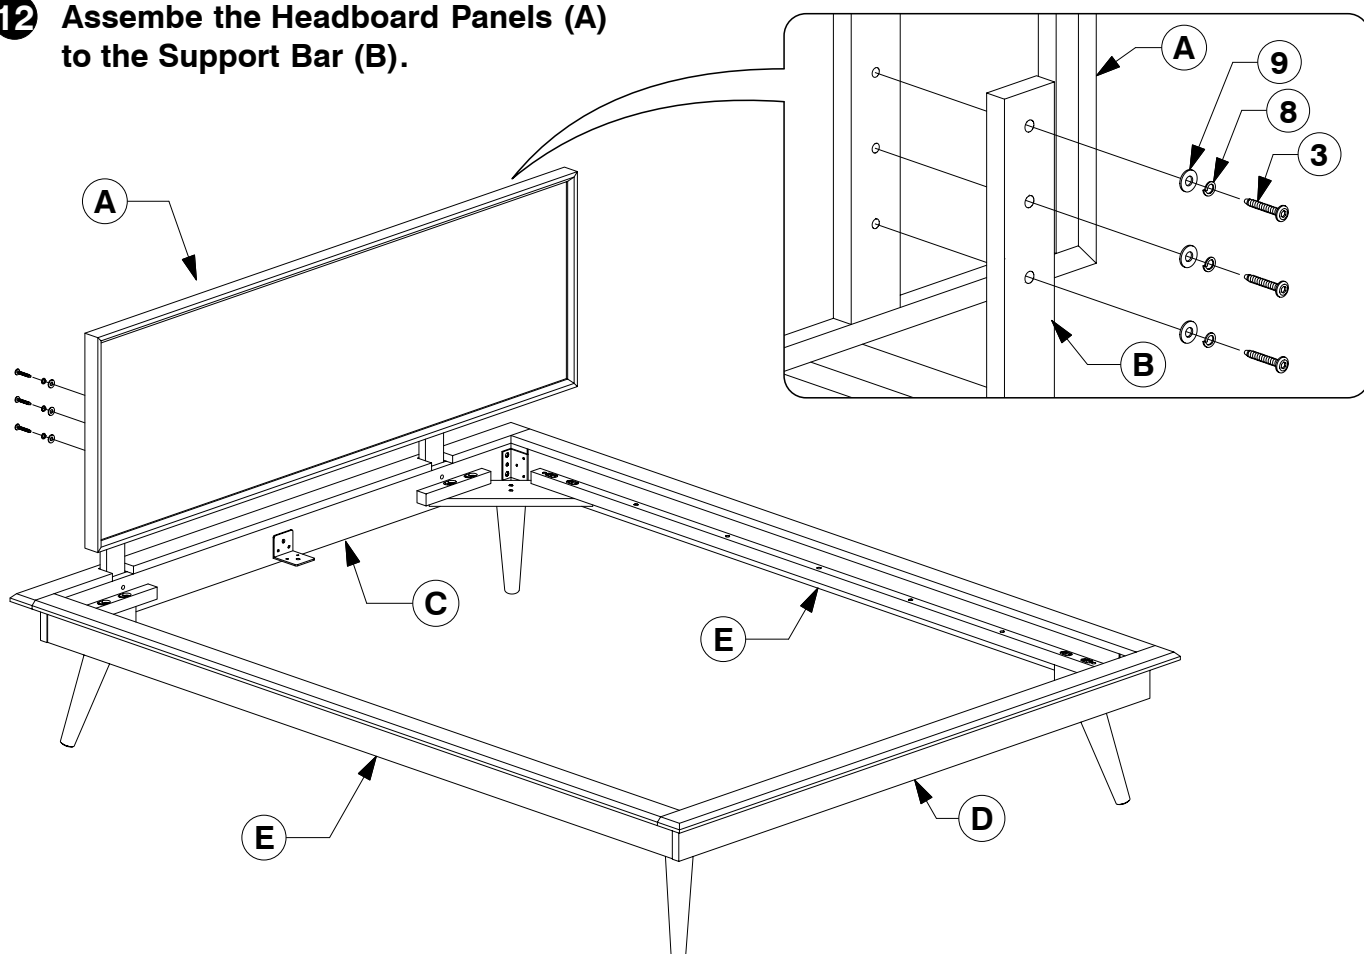


13 Bolt the Long Support (F) to the Center Rail Brackets (13) on the Headboard & Footboard Panel (C & D).

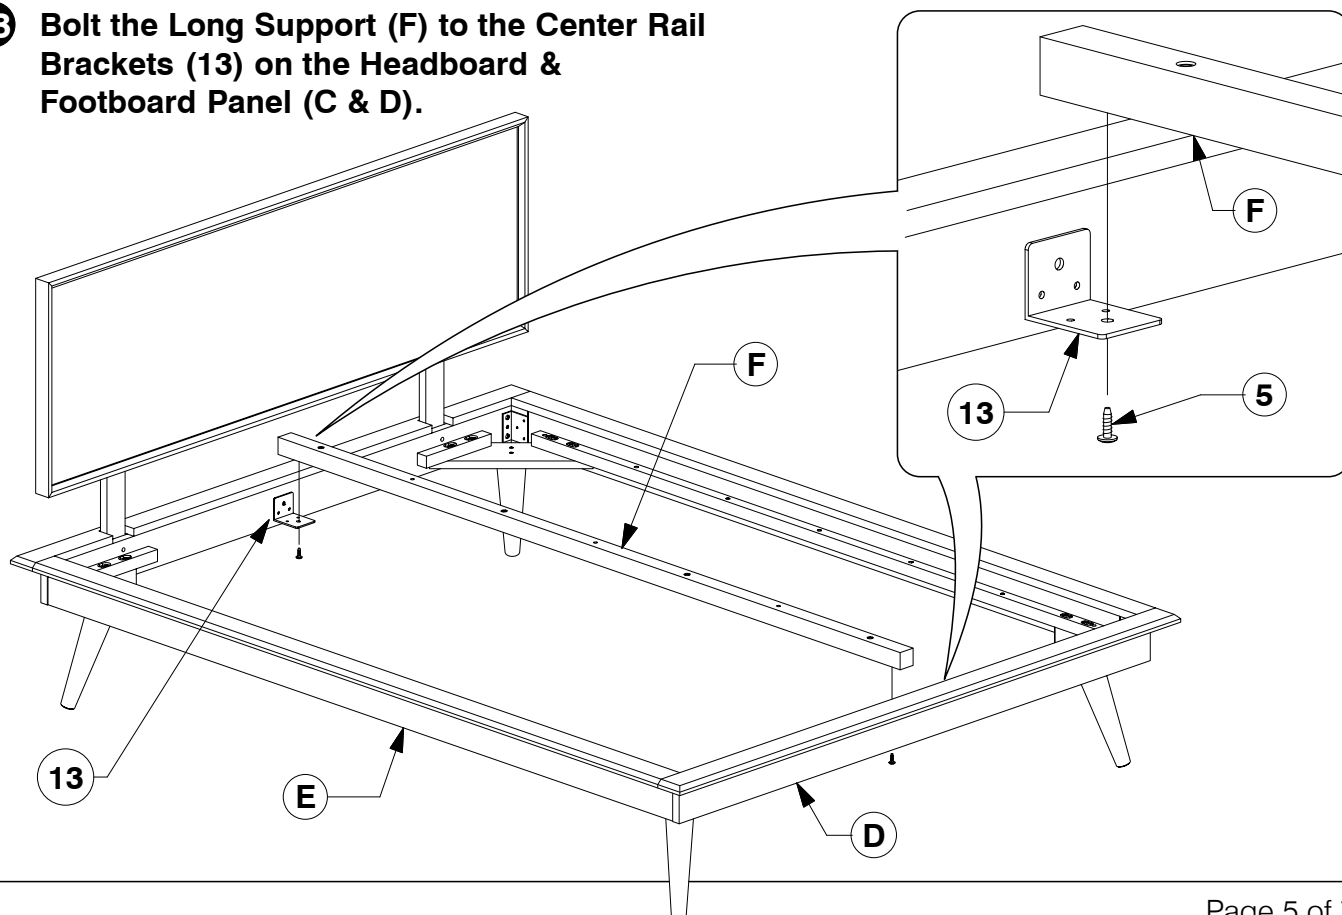


- 14** Fit the first 3 Slats and assemble the Support Leg (G) to the Bed Slat (K). Bolt & screw the Bed Slats (K) to the Side Rail (E) & Long Support (F).

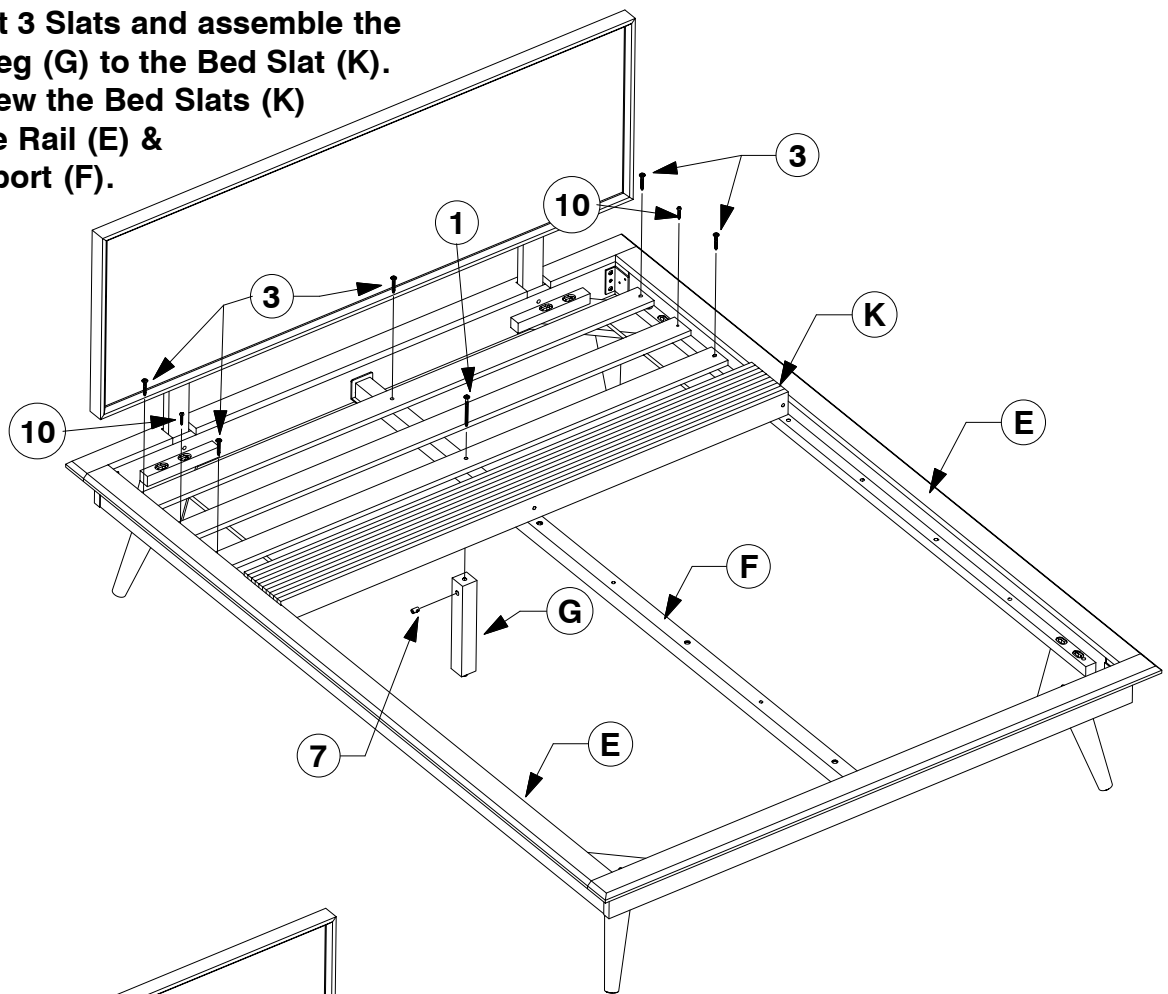


- 15** Fit the other Slats out and assemble the Support Leg (G) to the Bed Slat (K). Bolt & screw the Bed Slats (K) to the Side Rail (E) & Long Support (F).

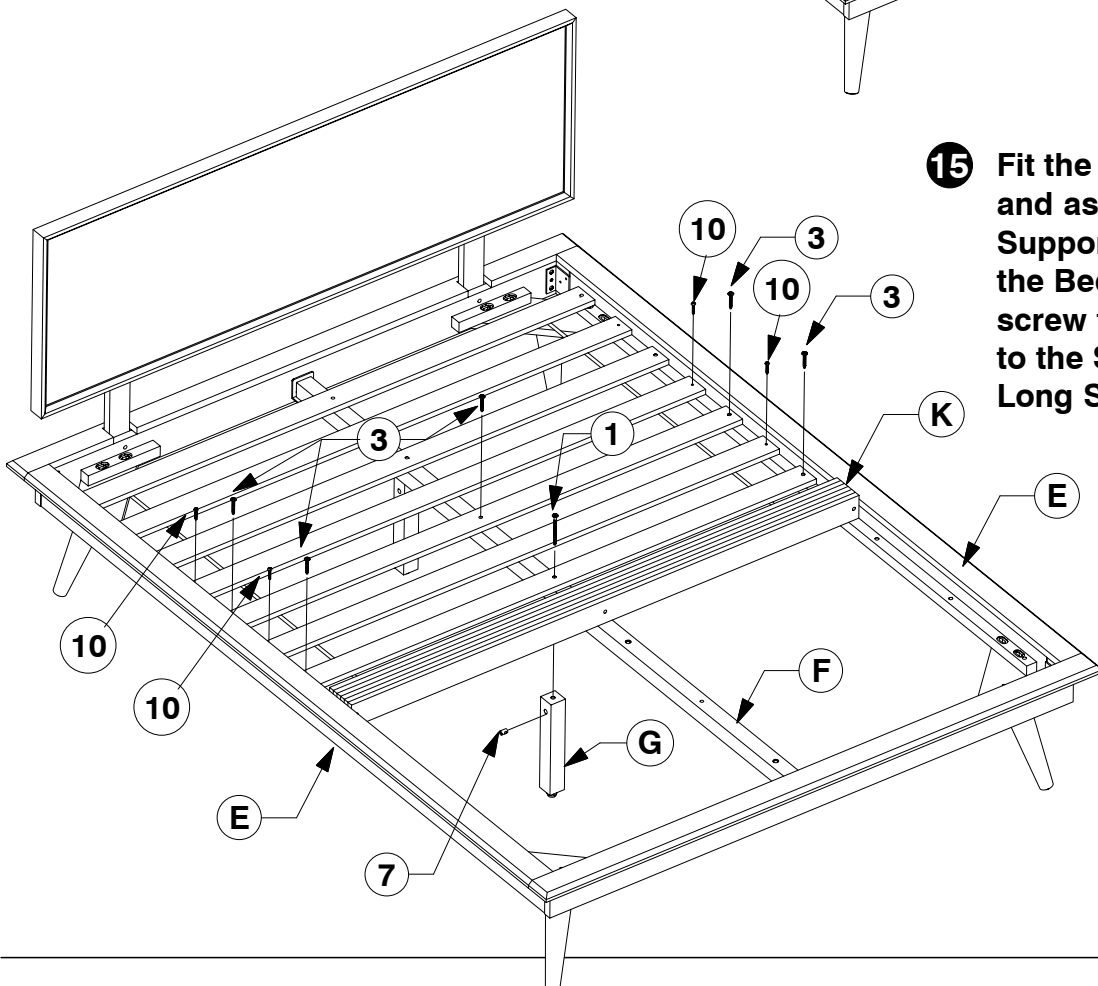

- 16** Fit the other Slats out and assemble the Support Leg (G) to the Bed Slat (K). Bolt & screw the Bed Slats (K) to the Side Rail (E) & Long Support (F).

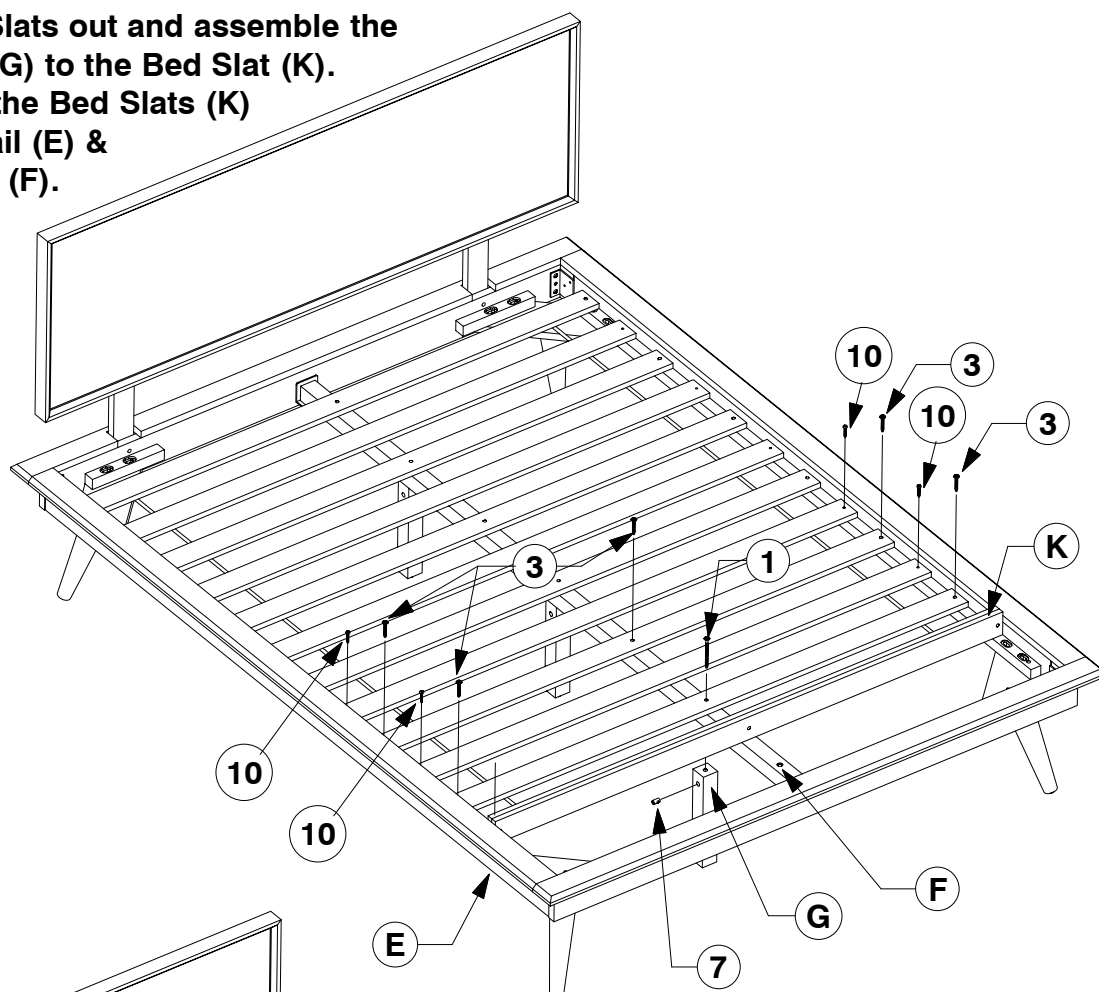




- 17** Bolt & screw the remaining Bed Slats (K) to the Side Rail (E).

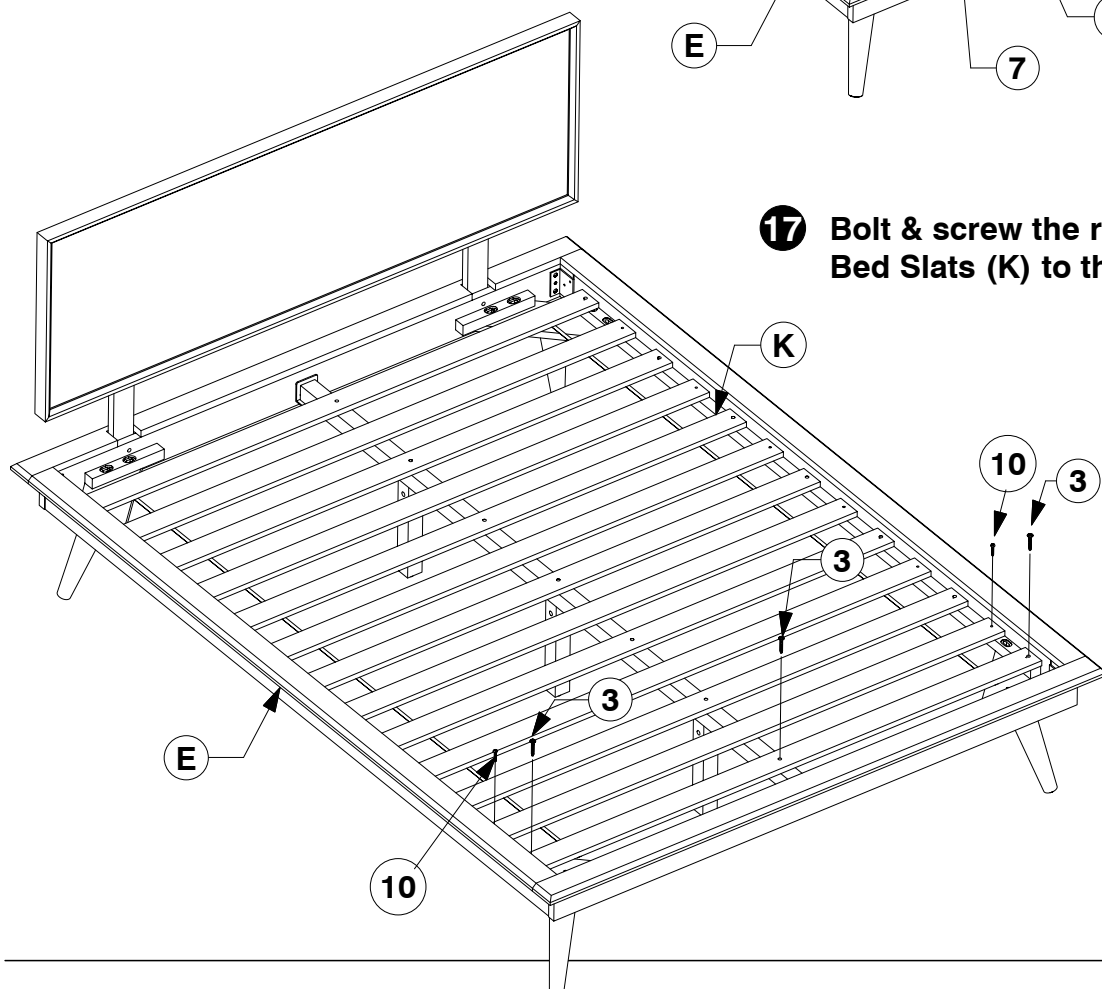

Full Headboard

Assembly Instructions

1 Parts List

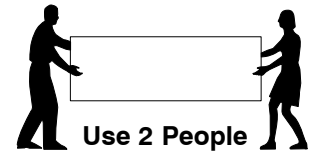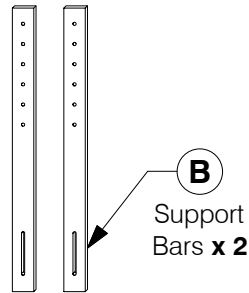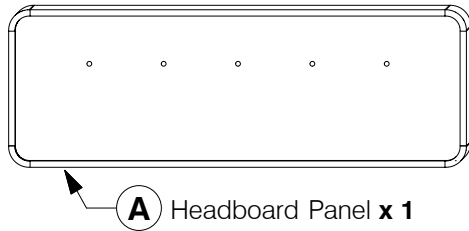

2 Hardware List



1 M6 x 35mm JCB
x 4



2 Spring Washer
x 4




3 Flat Washer
x 4



4 Allen Key
x 1

Note: Do not assemble
using power tools.
This can cause the bolts
to be overtightened

3 Assemble the Support Bars (B) to the Headboard Panel.

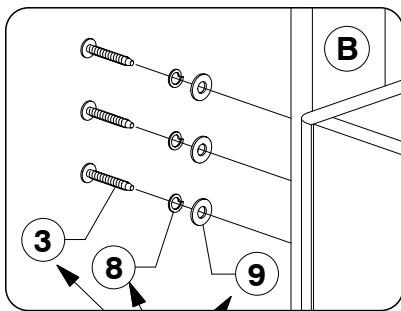

*Note: Bolts & Washers from
Footboard, Rails & Slats Box.*

✓ Footboard, Rails & Slats
are packed in separate
Boxes with Bolts.

4 Assemble the Headboard Panel (A) to the Support Bars (B).

