

2 Tier Console Table














ASSEMBLY INSTRUCTIONS

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give you years of enjoyment.










Please do not return to the store
Broken or missing parts?
Need help with assembly?





Hardware List

A 	B 	C 	D 	E 
Cambolt (12pcs)	Wooden dowel (6pcs)	Camlock (12pcs)	Allen screw (28pcs)	Allen wrench (1pc)
F 	G 	H 	I 	J 
Foot (4pcs)	Cable tie (2pcs)	Eyelet screw (2pcs)	Anchor (2pcs)	Sticker (6pcs)
	K 			
	Glue (1pc)			


Panel List

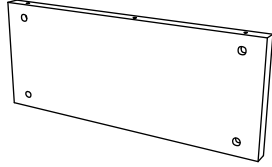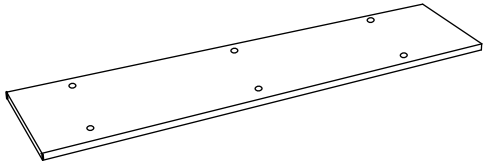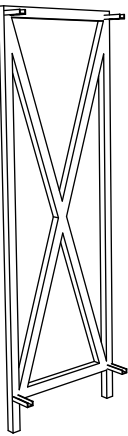1 	2 
Top panel (1pc)	Divider panel (3pcs)
3 	4 
Middle panel (1pc)	Top metal tube (2pcs)
5 	6 
Frame (2pcs)	Bottom metal tube (2pcs)
	7 
	Bottom panel (1pc)

Assembling the unit with camlocks and wood dowels.

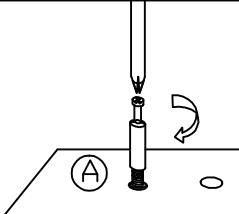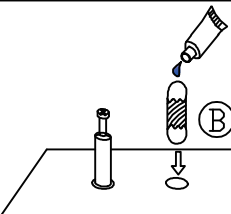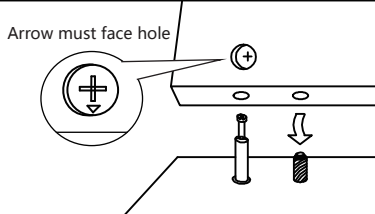
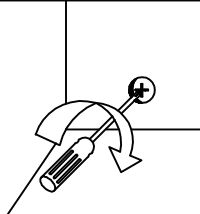
			
<p>Gently screw cam dowel into the threaded anchor.</p>	<p>Lightly glue one end of the wood dowel and tap halfway into hole.</p>	<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

Exploded Views

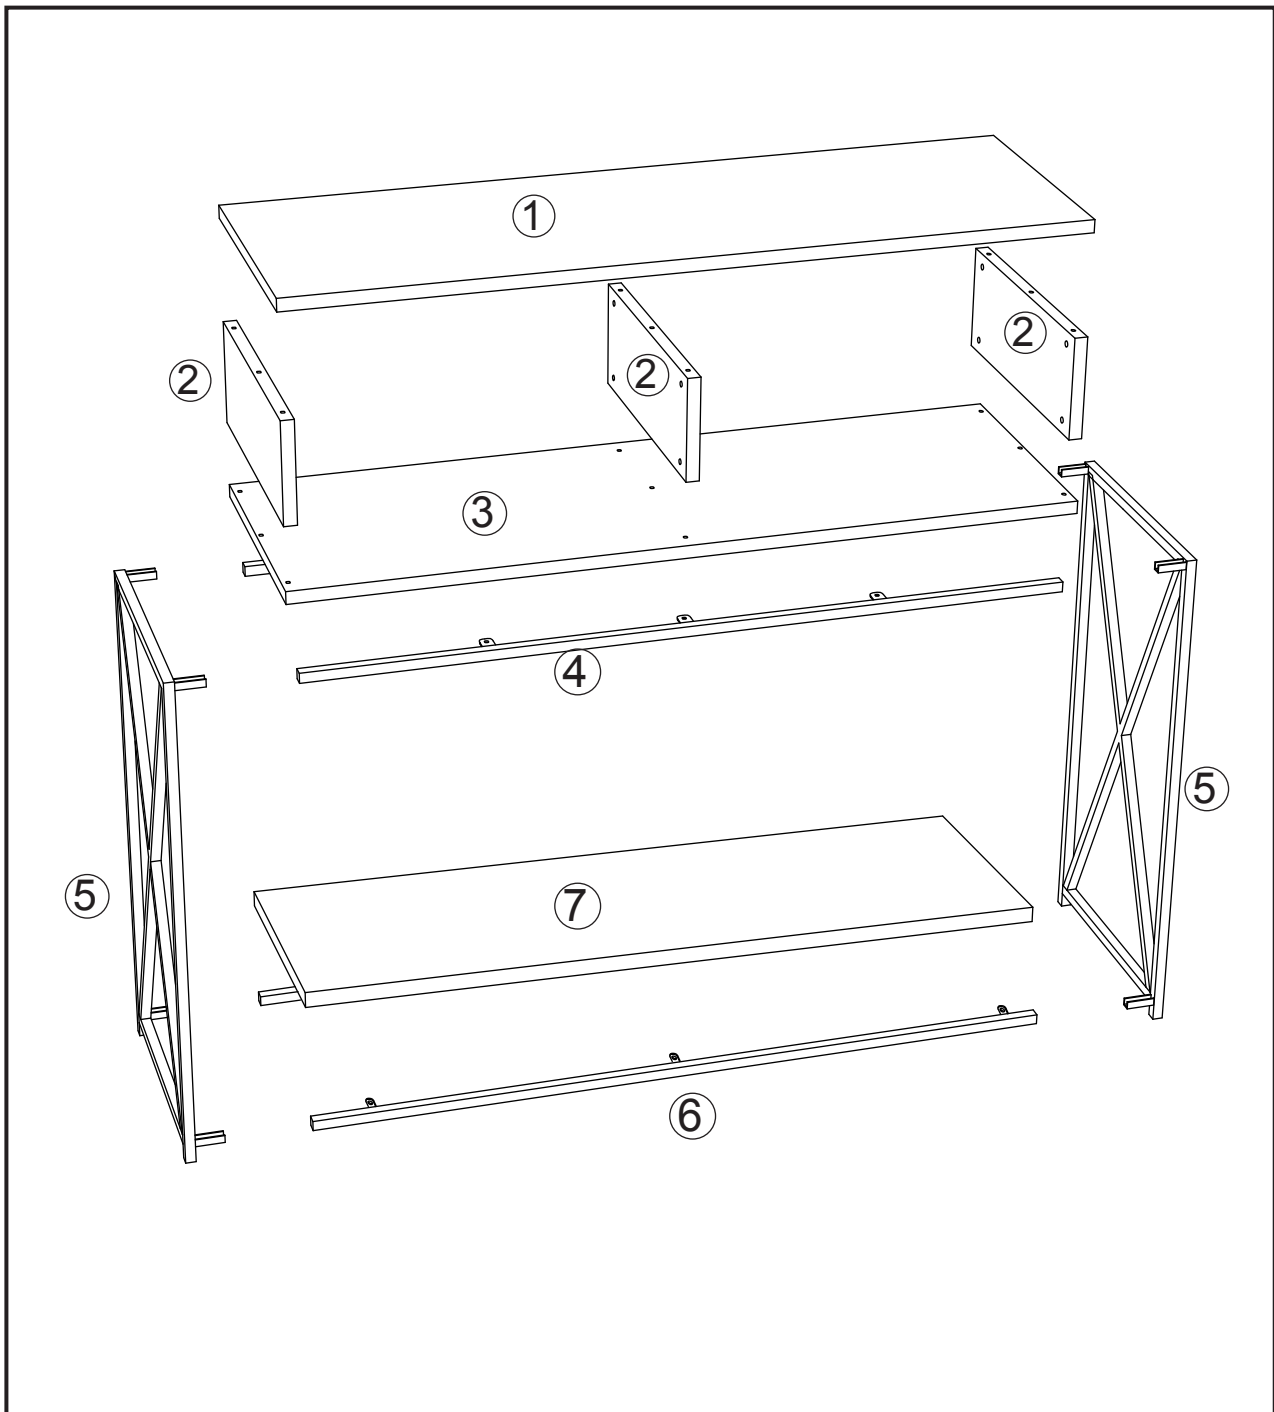


Step 1

1. Insert cambolts (A) and wooden dowels (B) into middle panel ③ as shown.

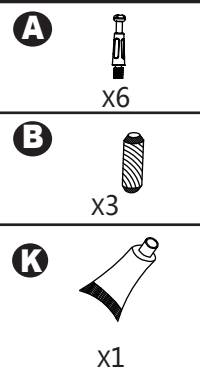
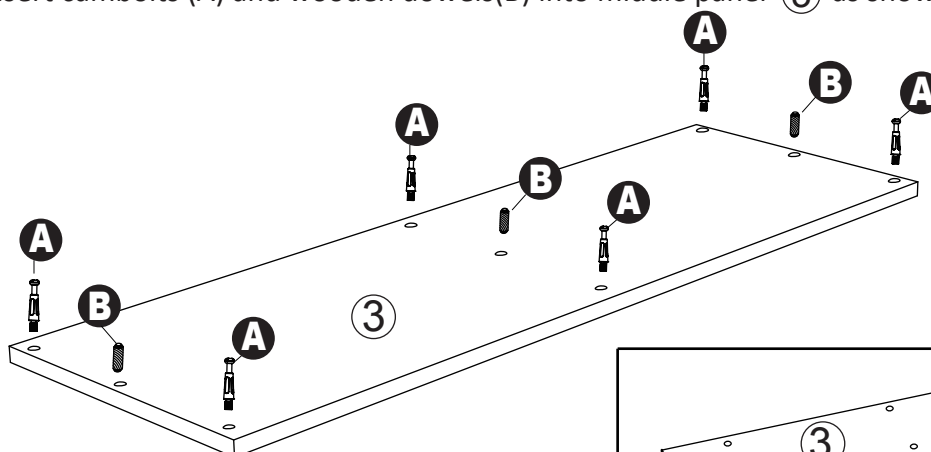


*Refer to page 3 for dowel assembly.

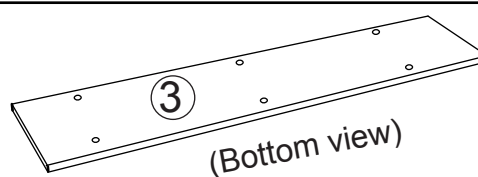




Step 2

1. Insert camlocks (C) into divider panels ②.
2. Connect divider panels ② to the middle panel ③ as shown.
3. Gently tighten camlocks.

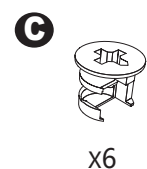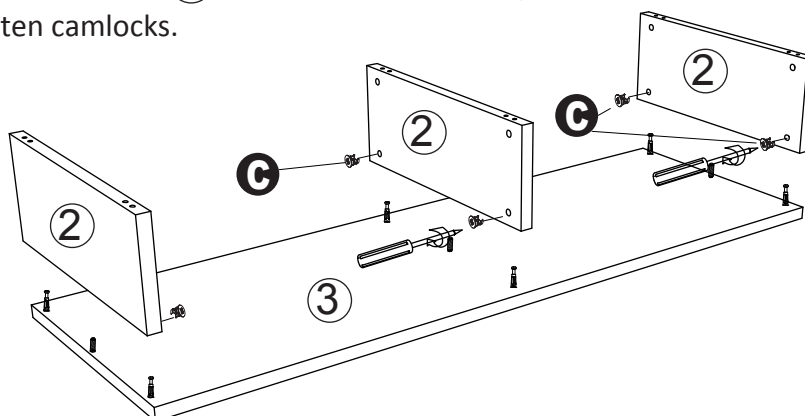




Step 3

1. Insert cambolts (A) and wooden dowels (B) into top panel ① as shown.

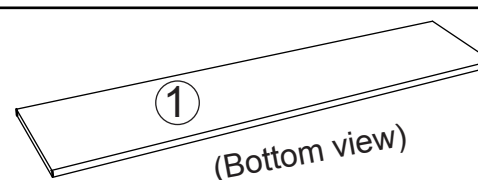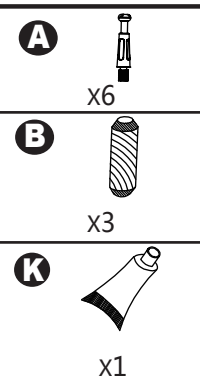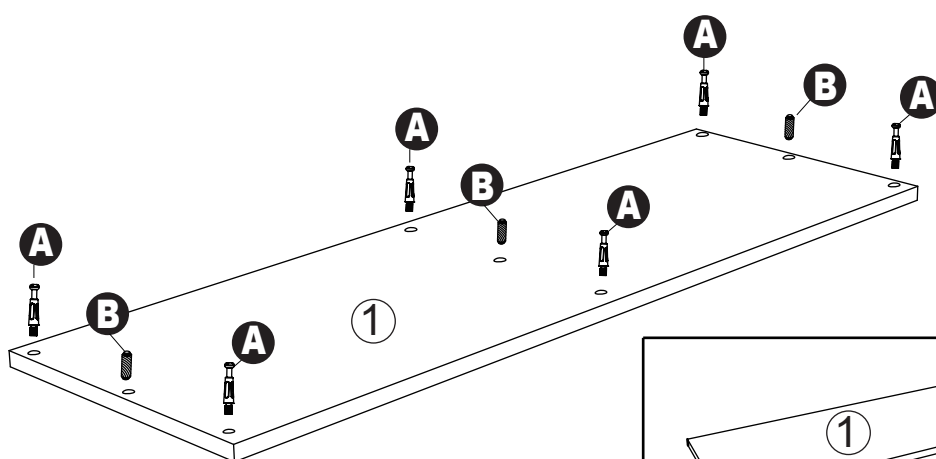



Step 4

1. Place top panel(1) onto assembly and gently tighten camlocks.

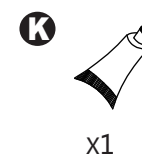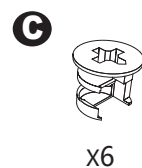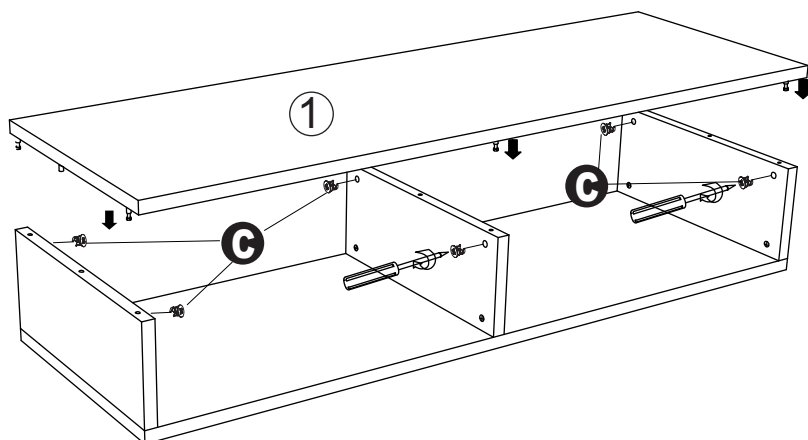

Step 5




1. Connect frames (5) to top and bottom metal tubes (4) and (6) using allen screws (D) and allen wrench (E).

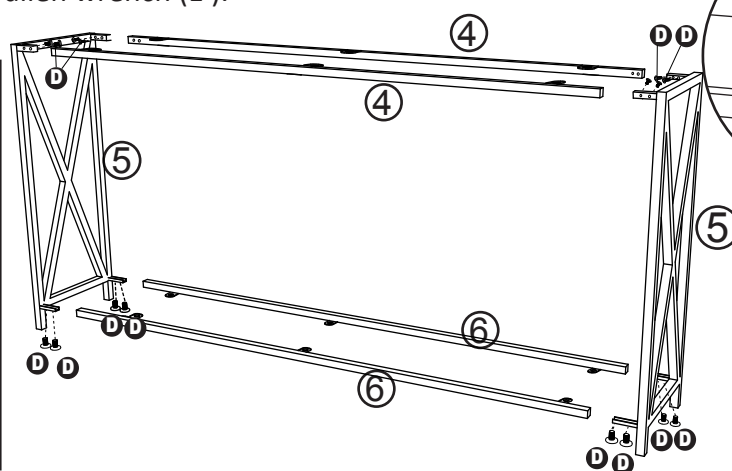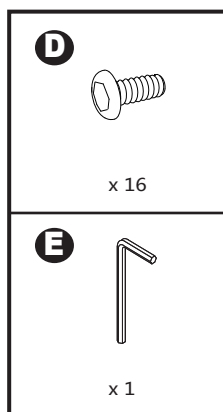

Step 6

1. Connect the bottom panel (7) to frame assembly as shown using allen screws (D) and allen wrench (E).


2. Screw feet (F) into frame assembly as shown.

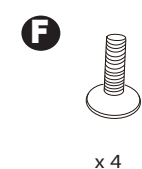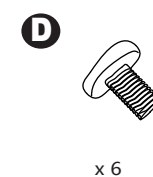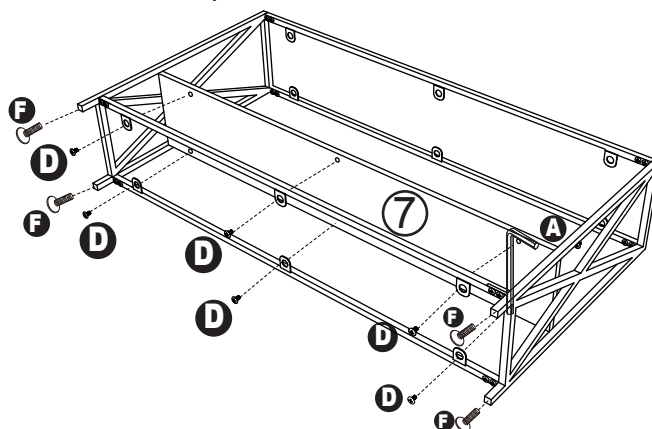

Step 7

*assemble face down on carpet or soft surface.

1. Connect the frame assembly to panel assembly as shown using allen screws (D) and allen wrench (E) .

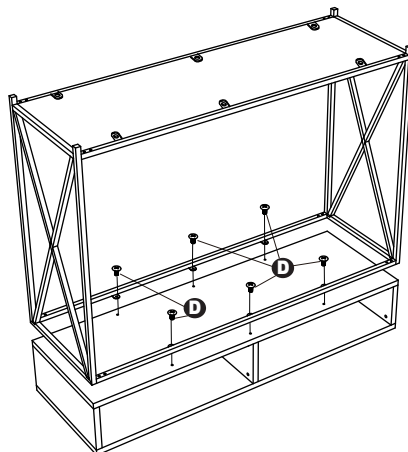

x 6



x 1

Step 8

1. Drill holes slightly smaller than anchors (I) into drywall and gently tap anchors into holes.
2. Insert eyelet screws (H) into anchors and fasten unit to wall using cable ties (G).
3. Place stickers (J) over camlock holes.

Finish and enjoy!

