



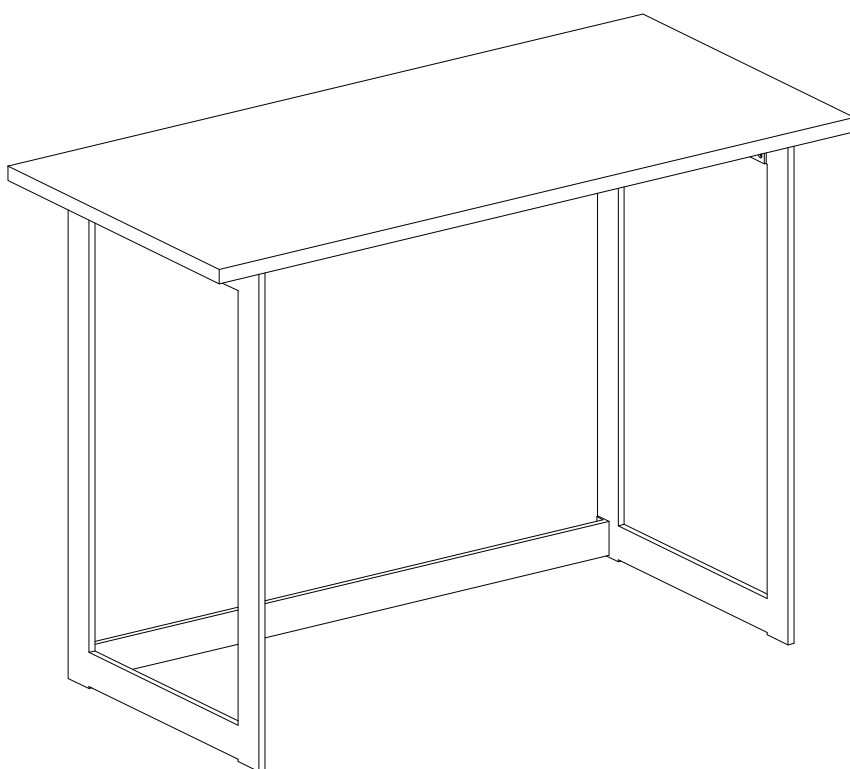


Assembly Instructions



Parts List

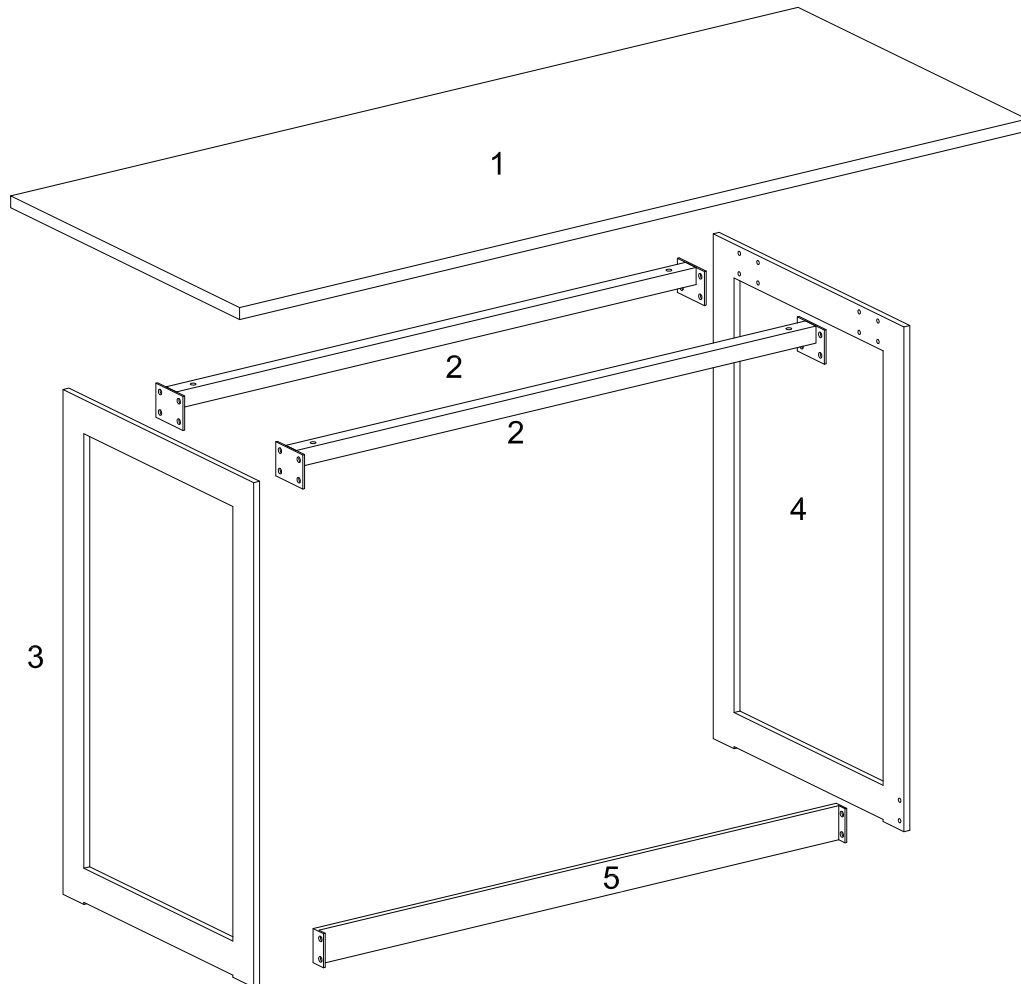


Hardware List

A		M6*10	Bolt	20 pcs
B		M6*35	Bolt	4 pcs
C		M4	Hex Key	1 pc


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

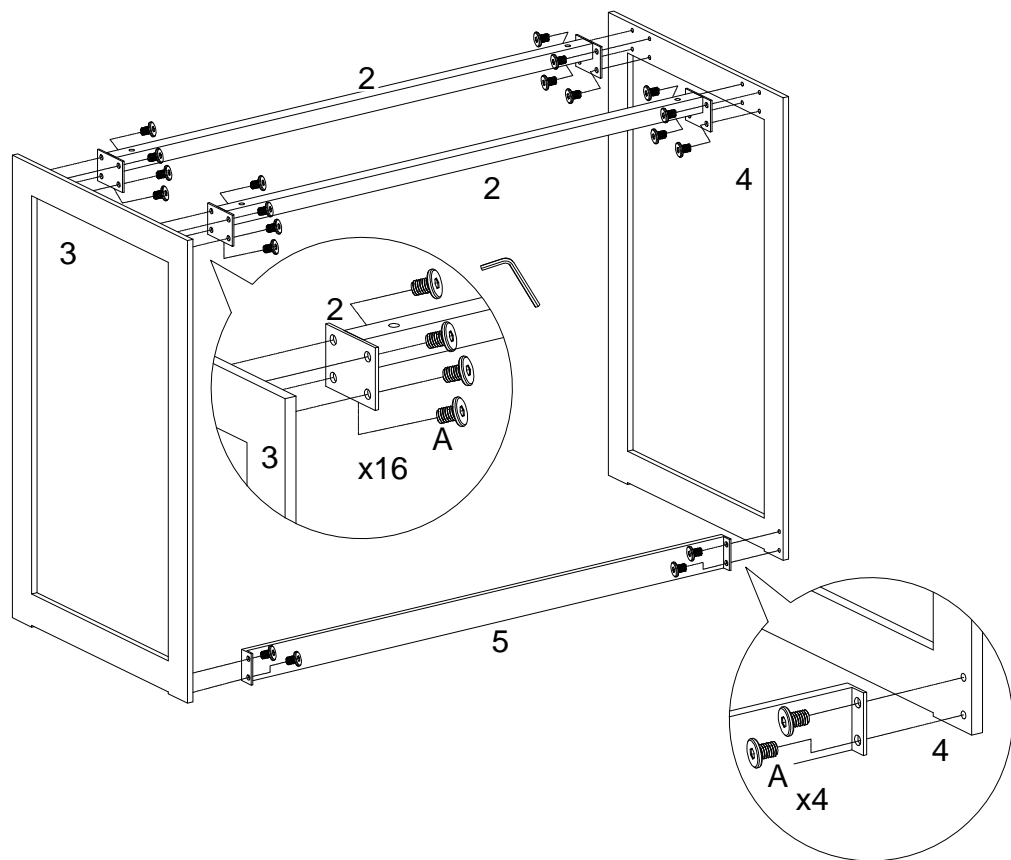


Attach part (2, 5) to part (3, 4) using bolt (A) with hex key (C).

Step 2

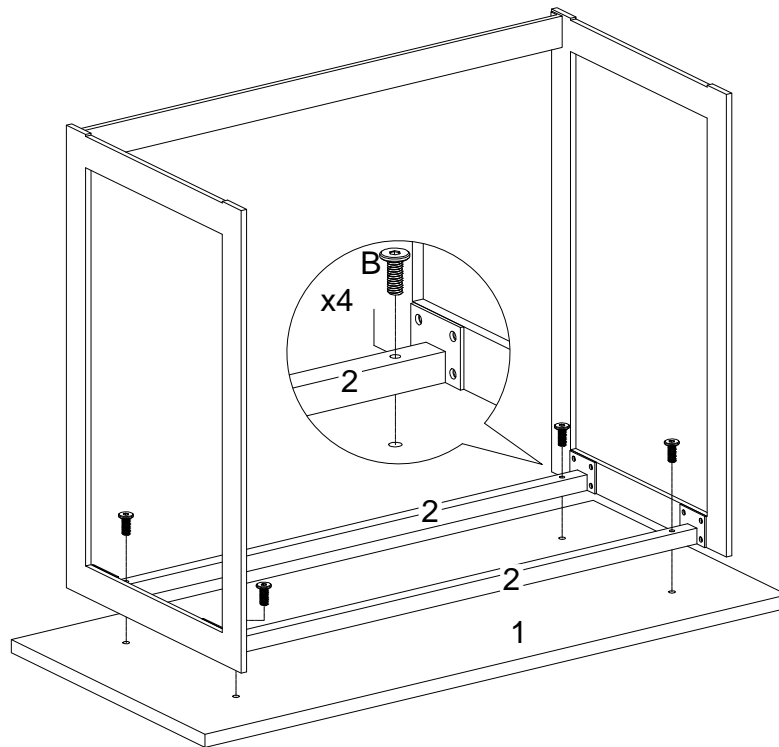

Attach part (3, 4) to part (1) using bolt (B) with hey key (C).

Step 3

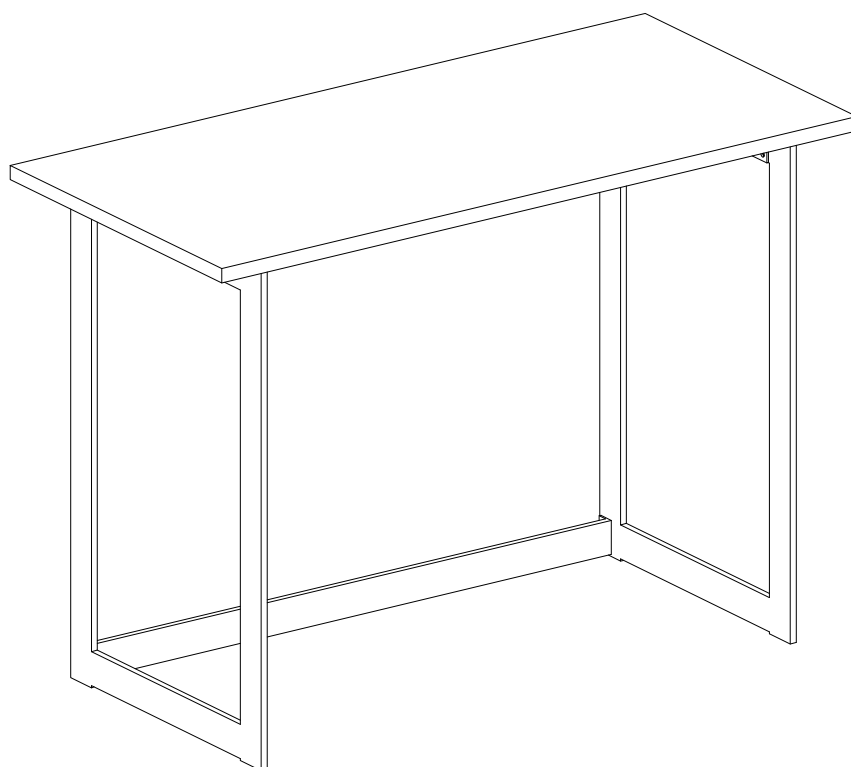

Final Assembly