

# HEADBOARD / BED

## ASSEMBLY INSTRUCTIONS

### HEADBOARD COMPONENTS

---



(1) Headboard



(2) wings



(2) metal legs

### HEADBOARD & SIDE RAILS HARDWARE

---



(8) 2" x 5/16" bolts



(10) 1" x 5/16" bolts



(4) 1" x 1/4" bolts



(26) 1 1/4" washers



(4) 1/4" nuts

You will need:

- phillips screwdriver
- flat head screwdriver
- pliers

\*Open all hardware packets  
before proceeding

---

IF YOU HAVE ANY QUESTIONS, PLEASE CALL US


---

#### LIMITED WARRANTY


*We guarantee its upholstered furniture against defects in construction for a period of one (1) year. When a structural defect is brought to our attention, we will repair or replace it at our option at no charge to the customer (includes parts and labor, not transportation costs). Fabric wearability for upholstered furniture is not covered by the warranty. Vacuum for regular cleaning.*

*PLEASE DISPOSE OF PLASTIC BAG (S) AND CARTON (S) RESPONSIBLY.*

## BED COMPONENTS

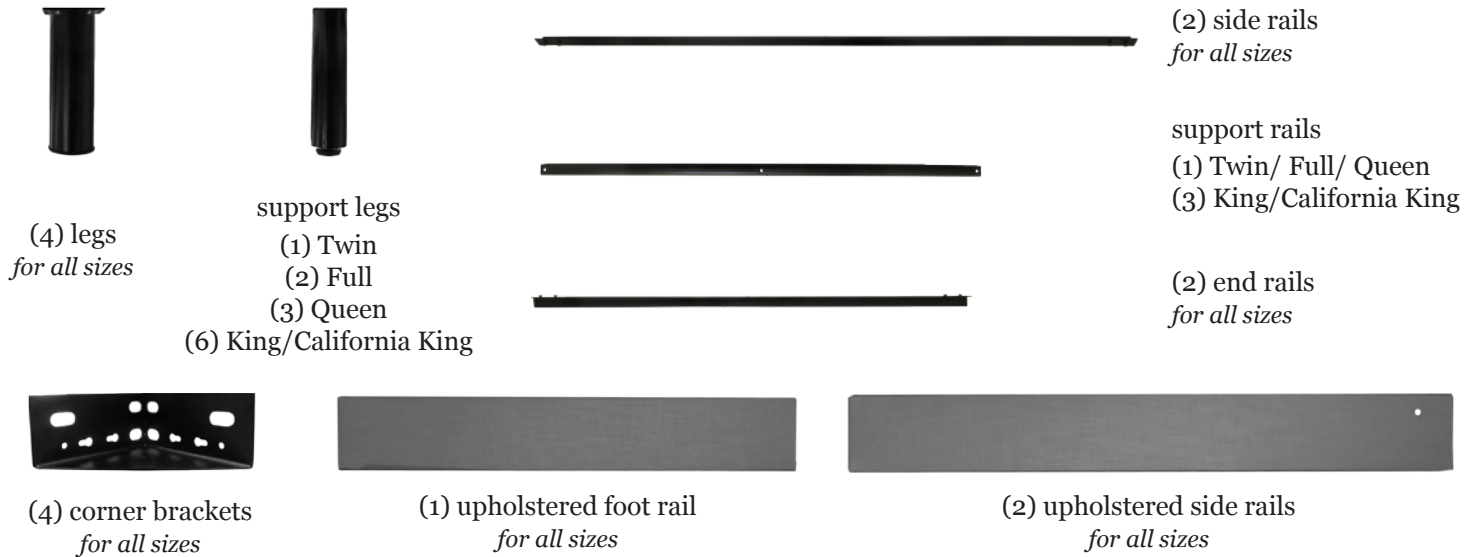


## BED HARDWARE

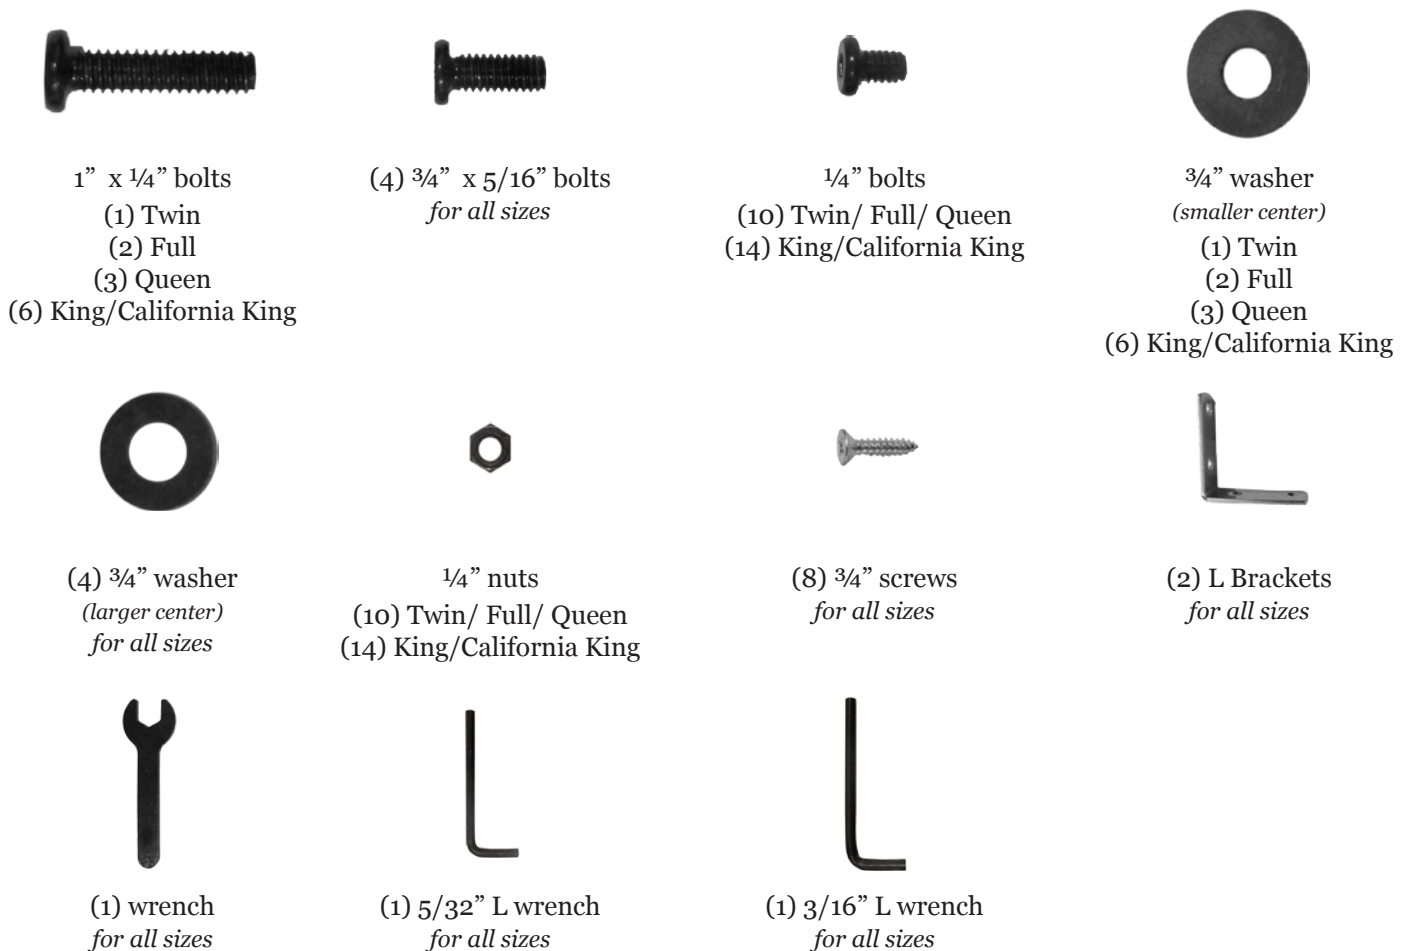

## STEP 1

---

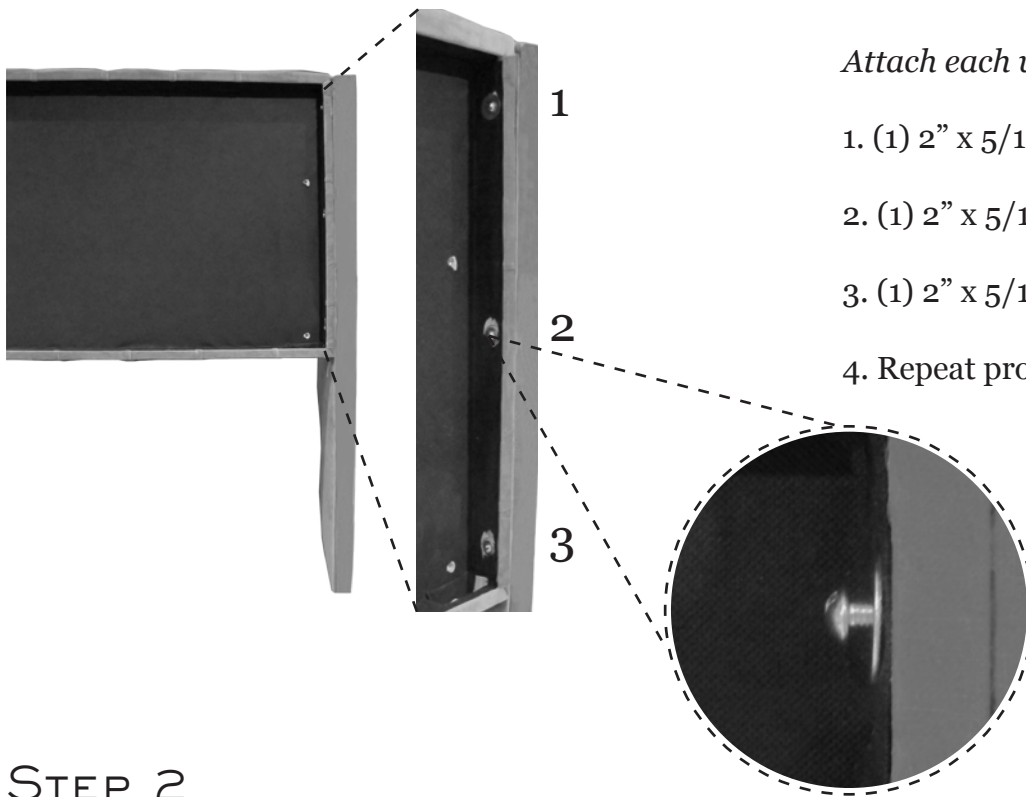


*Attach each wing to headboard using:*

1. (1) 2" x 5/16" bolt and (1) 1¼" washer
2. (1) 2" x 5/16" bolts and (1) 1¼" washer
3. (1) 2" x 5/16" bolts and (1) 1¼" washer
4. Repeat process for the other wing.

## STEP 2

---

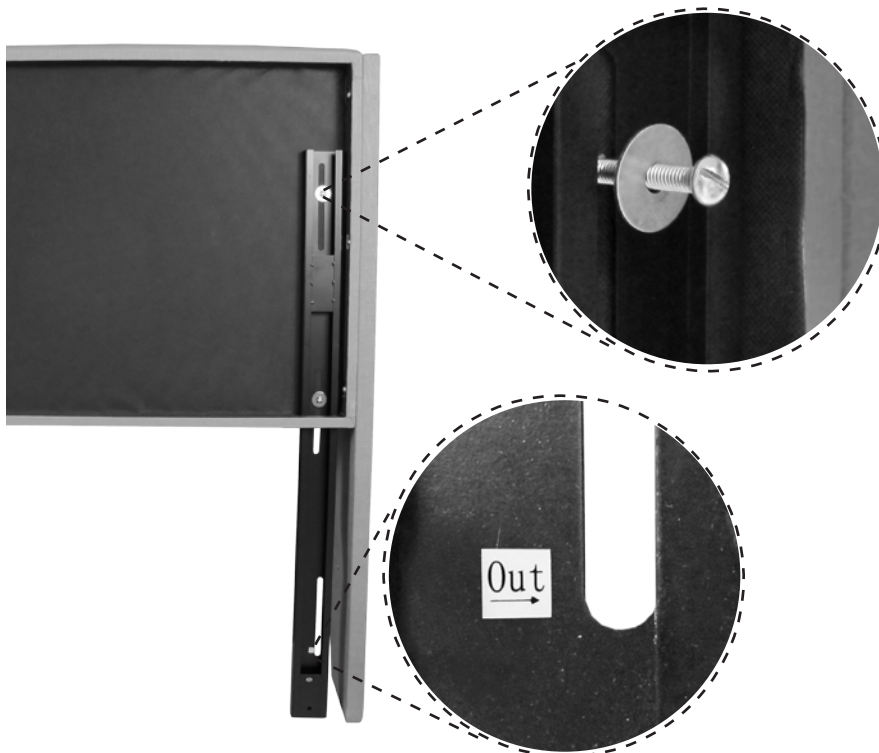


*Insert metal legs through the holes in the headboard. Make sure that you place the correct leg facing "Out."*

*Attach each metal leg to the headboard using (2) 1" x 5/16" bolts and (2) 1¼" washers for each leg.*

*Continue onto step 3 if building a bed or step 5 to attach the headboard to your bed frame.*


## STEP 3

---

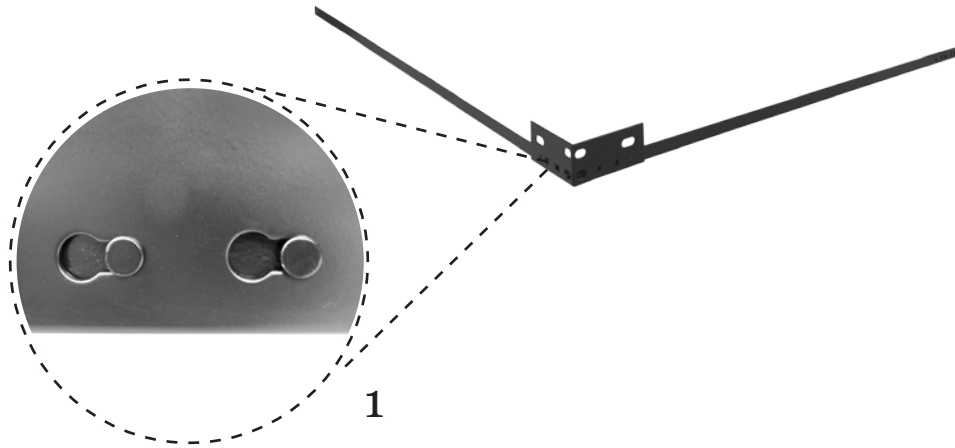


*1. Attach side rail and end rail to corner bracket. Make sure to align holes and snap into thinner slot.*

*Continue this action until you have a rectangular frame.*

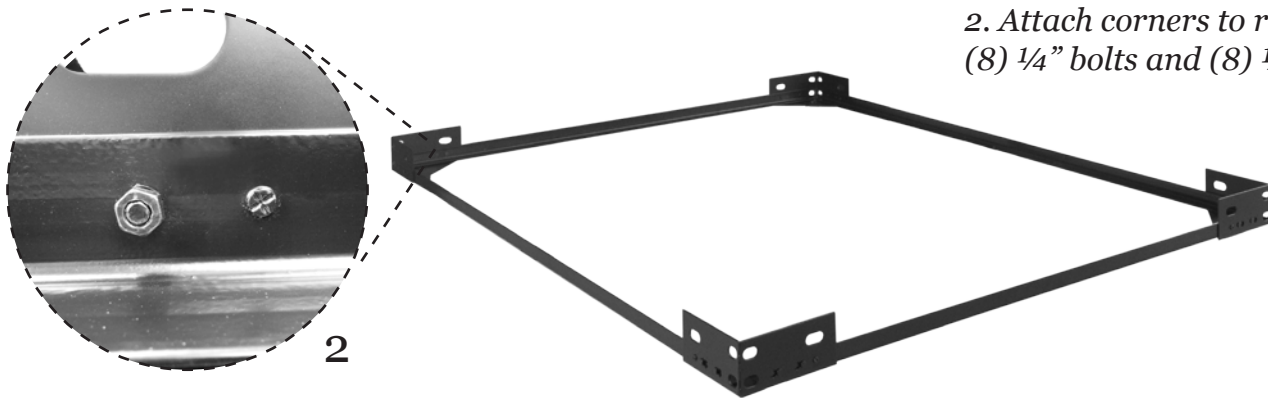


*2. Attach corners to rails using (8) 1/4" bolts and (8) 1/4" nuts.*

*3. Attach legs to rails using (4) 3/4" x 5/16" bolts and (4) 3/4" washers.*

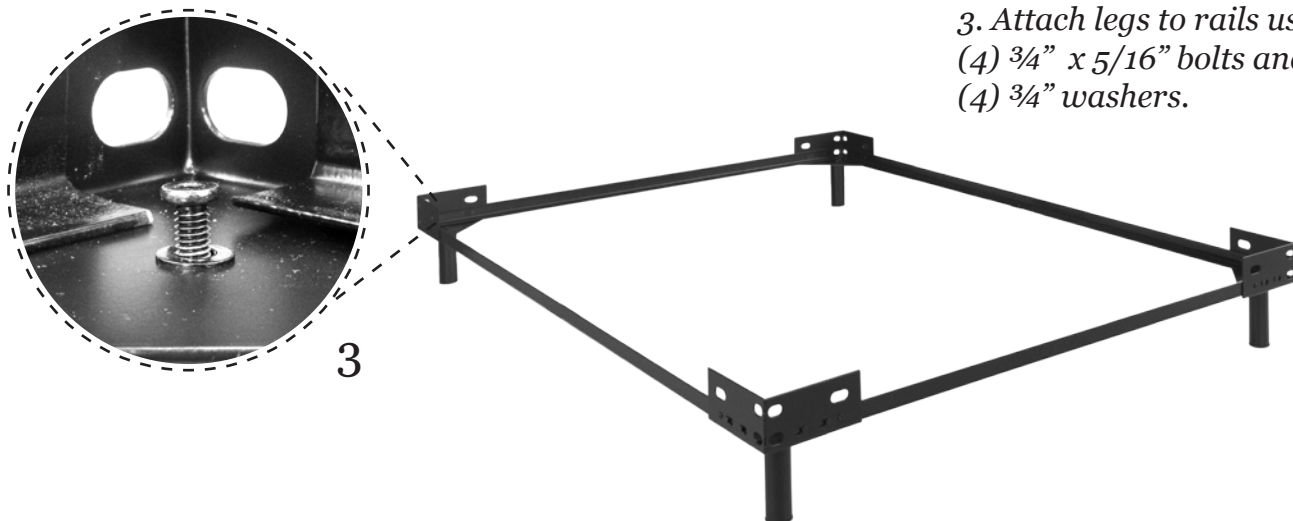

## STEP 4

---

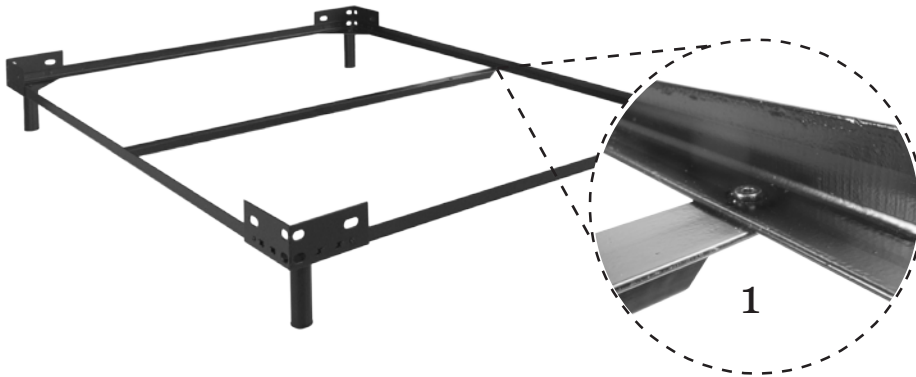


*1. Attach each support bar using (2) 1/4" bolts and (2) 1/4" nuts. Make sure to attach the support bar underneath the bed frame.*

*Note:*

Twin/ Full/ Queen = 1 support bar

King/California King = 3 support bars

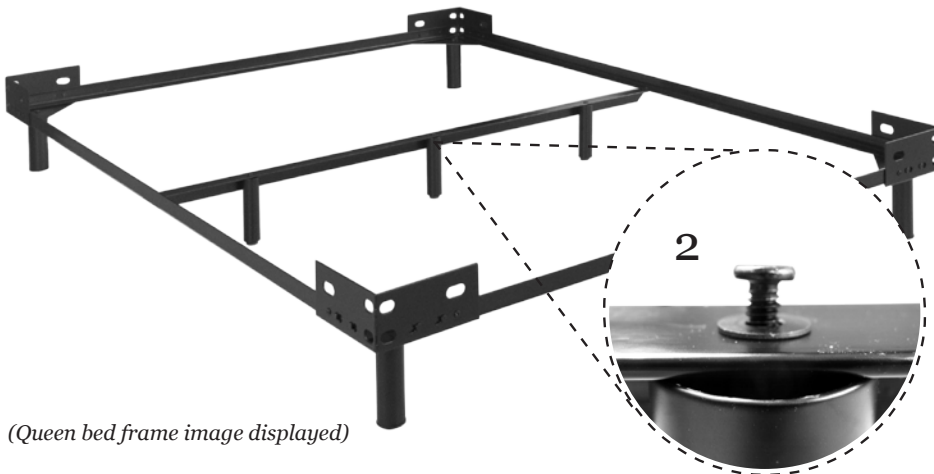

*(Queen bed frame image displayed)*

*2. Attach each support leg to the bar using (1) 1" x 1/4" bolts and (1) 3/4" washer.*

*Note:*

Twin = 1 support leg


Full = 2 support legs

Queen = 3 support legs

King/California King = 6 support legs.  
(2 legs for each support bar)

## STEP 5

---

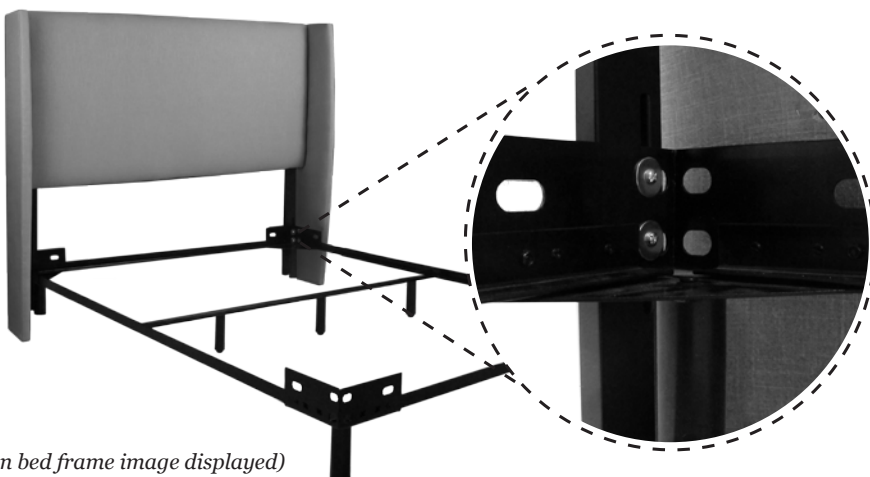


*(Queen bed frame image displayed)*

*Attach bed frame to headboard using (4) 1" x 1/4" bolts, (8) 1 1/4" washers\*, and (4) 1/4" nuts.*

*\* Use a washer on each side of the metal legs when attaching headboard to the bed frame.*

## STEP 6

---

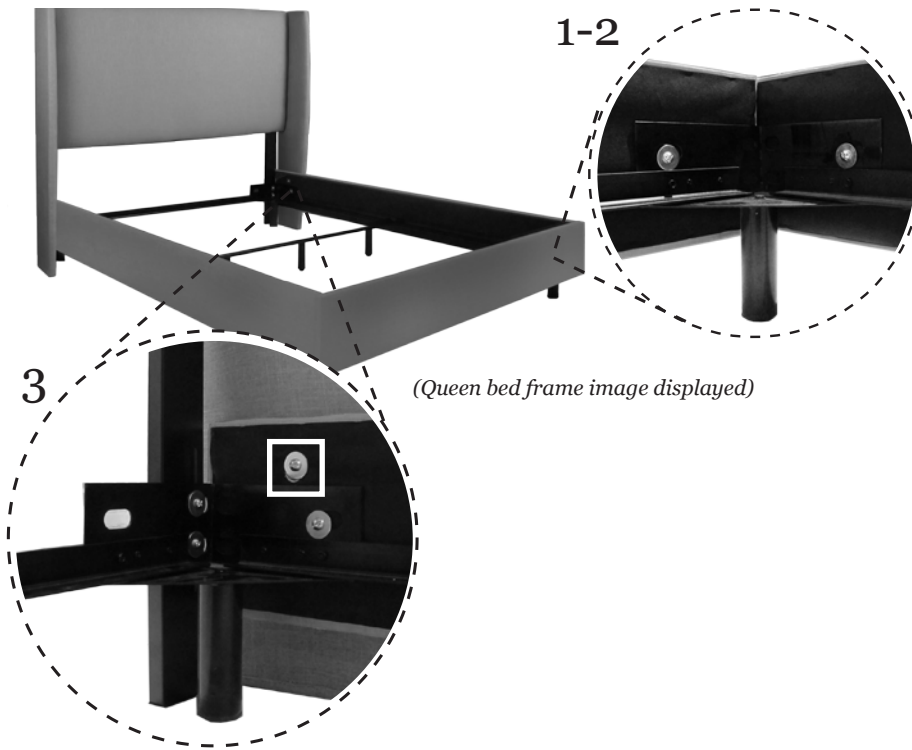

(Queen bed frame image displayed)


1. Use (6) 1" x 5/16" bolts, (6) 1 1/4" washers to attach rails to bed frame loosely. Screw in side rails before attaching the foot rail.

2. Push side rails towards foot rail, so that there is no gap.

3. Use (2) 2 1/2" x 5/16" bolts and (2) 1 1/4" washers for the top hole (see image). Begin final tightening of all bolts.

## STEP 7

---

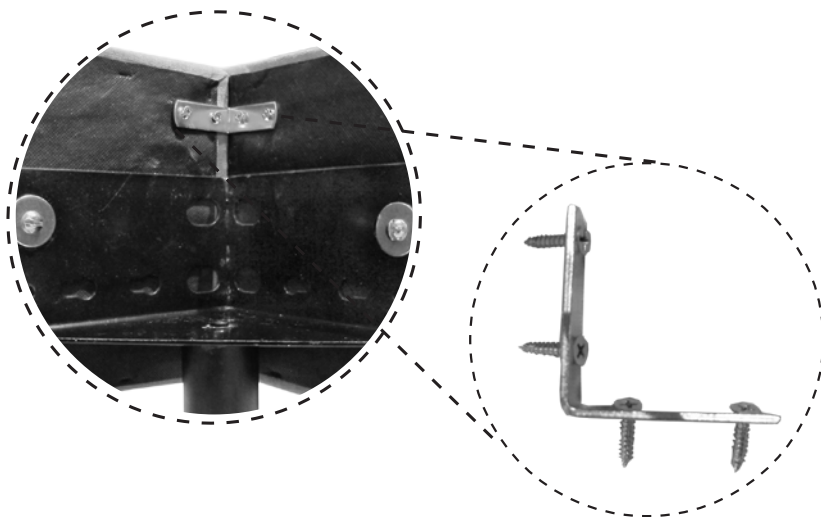

With a phillips screwdriver, attach (2) L brackets and (8) 3/4" self-tapping screws in the corners of the foot rail. This is needed to increase stability of upholstered rails.