
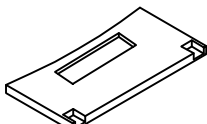




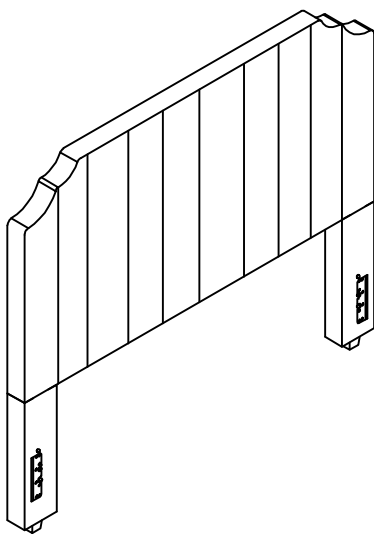


# ASSEMBLY INSTRUCTION

## HEADBOARD


<b>A</b>	HEADBOARD	<b>B</b>	COLMN	<b>C</b>	BOLT 5/16"*2-1/2"	<b>D</b>	LOCK WASHER 5/16"
							
1PC		2PCS		4PCS		4PCS	
<b>E</b>	FLAT WASHER 5/16"*22MM	<b>F</b>	ALLEN WRENCH 5MM				
							
4PCS		1PC					



**Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.**

**Hardware package with white sticker is for customers using a bolt-on metal bed frame.**

- 
- 1** ATTACHED HEADBOARD(A), COLMN(B), FLAT WASHER(E), LOCK WASHER (D),BOLT(C), BY ALLEN WRENCH(F).

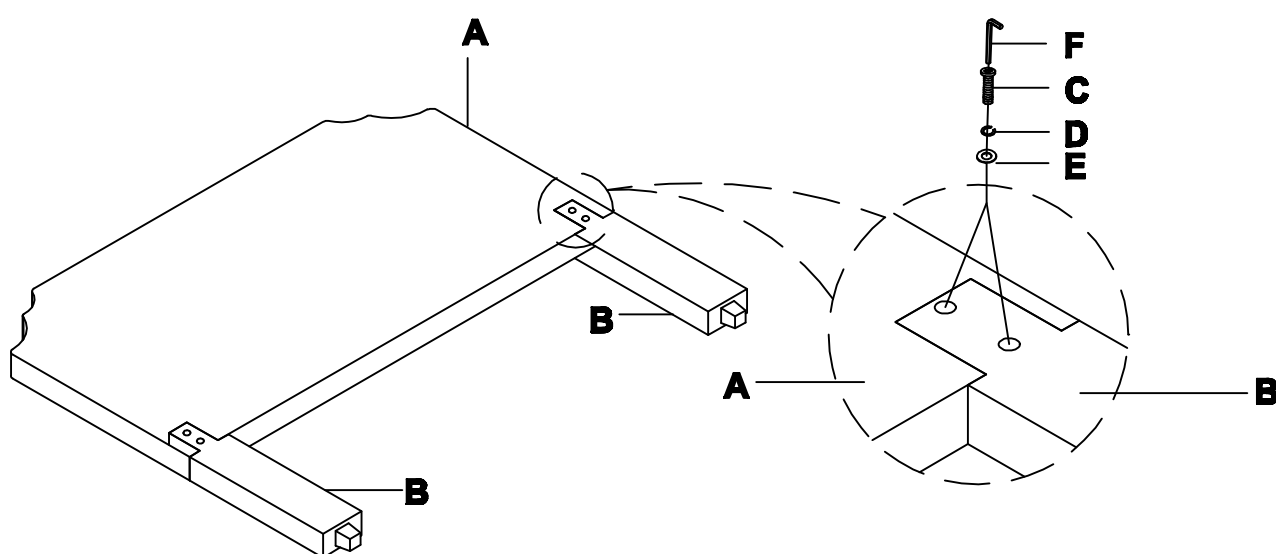

---





#### **Cleaning & Care**

**Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.**

# ASSEMBLY INSTRUCTION

- 1.This Assembly instruction is for customers using a bolt-on metal bed frame on headboard only.
- 2.Please refer to hardware package with white sticker when using this Assembly Instruction.
- 3.Full/Queen/King Headboard need to use the other Assembly Instruction in the carton to assemble the headboard first,then use this one.
- 4.Twin Headboard is fully assembled,customers only refer to this Assembly Instruction to assemble with their own mattress frame.

## HEADBOARD ONLY -SCREW

<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>
BOLT 5/16**2-3/8"	FLAT WASHER 5/16**22MM	LOCK WASHER 5/16"	ALLEN WRENCH 5MM
			
6PCS	6PCS	6PCS	1PC

Assembly diagram below for attaching bolt-on metal bed frame to headboard only.

- 1 ATTACH MATTRESS FRAME TO THE HEADBOARD USE BOLT(A),LOCK WASHER(C),FLAT WASHER(B) AS SHOWN.TURN THE ALLEN WRENCH(D) IN BOIT(A).**

