















## Parts & Hardware List


Part#	Description	Quantity	Picture
1	Large Wooden Seat Base Central Post, Wooden Seat Frame(larger), Metal Arm Rest Frame & Seat Cushion	1	
2	Back Cushion	1	
3	Arm Pads	1	
4	Ottoman Cushion	1	
5	Smaller Wooden Ottoman Frame	1	
6	Smaller Wooden Ottoman Base	1	
7	1" Big Screws	2	
8	Nuts	2	
9	2-1/4" Big Screws	2	
10	1-5/8" Big Screws	4	
11	1" Small Screws	8	
12	Flat Washers	4	
13	Spring Washers	4	
14	Wrenches	2	

**NOTE:** Before using your recliner, ensure that all the screws are tightened fully for safety. Keep the allen wrenches and check all screws periodically to ensure these remain tightly fastened.


## Recliner Assembly Instructions

Please read the assembly instructions thoroughly and assemble this recliner per the assembly instructions. Please note that using an incorrect assembly method may damage the structure of this recliner!

**TWO PEOPLE ARE RECOMMENDED FOR BACK CUSHION ASSEMBLY!**

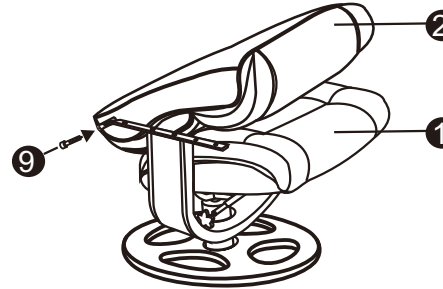

**Step 1:** Attach the back cushion (2) onto the pre-assembled large wood seat base, central post, large wooden seat frame, metal arm rest frame & seat cushion (1). Align the holes of the metal arm rest frame (1) to both sides of the back cushion (2). Fasten by using 2-1/4" big screws (9).

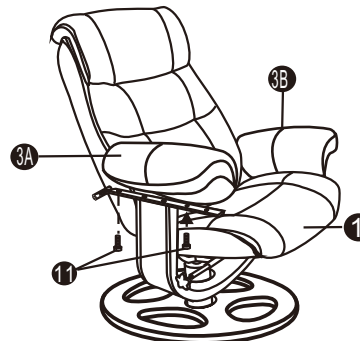


**Step 3:** Attach the right arm pad (3A) and left arm pad (3B) onto the metal arm rest frame (1) using 1" small screws (11). Do not tighten screws fully until you have completed assembly.




**Step 2:** After assembling the back cushion to the arms, loosen the tension adjustment knob at the right side of the recliner and slide the seat forward. While pulling slightly on the back cushion from behind the recliner, align the holes of each bracket on the bottom of the back cushion (2) to the metal rings on the rear of the seat cushion (1). Insert the 1" big screws (7) through the metal rings in the nuts (8) and tighten the screws.

## Ottoman Assembly Instructions

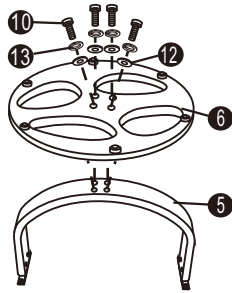

**Step 4:** Attach the smaller wooden ottoman base (6) on top of the smaller wooden ottoman frame (5). Attach by using 1-5/8" big screws (10) with spring washers (13) and flat washers (12). Tighten all screws.

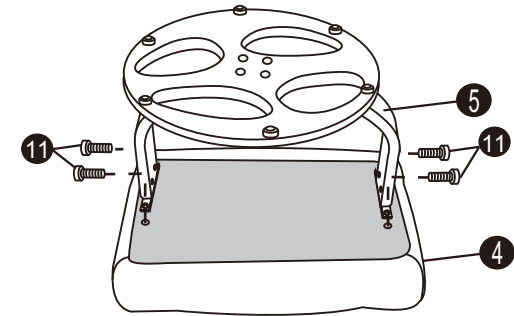


**Step 5:** Turn the ottoman cushion (4) upside down on the floor and attach the wooden ottoman frame (5) to the ottoman cushion (4) by using 1" small screws (11). Tighten all screws. Turn the ottoman upright.

## OPERATING INSTRUCTIONS



1. While seated in the recliner, reach to the right side of the recliner and find the adjustment knob. Turn the adjustment knob counter-clockwise and the back seat cushion will recline back. To lock the back seat cushion into desired position, turn the adjustment knob clockwise until tightened.

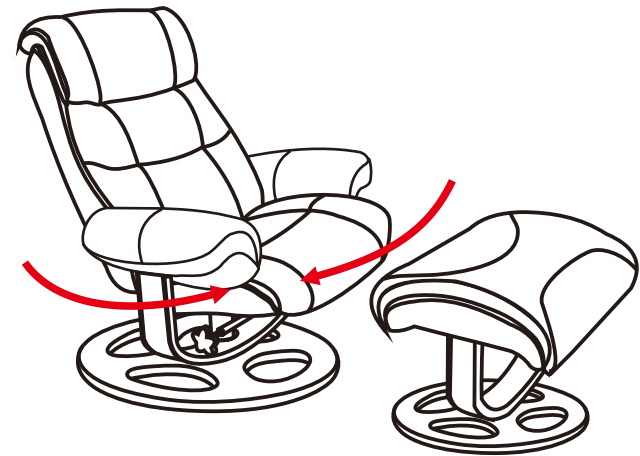

2. 360 degree swivel.