

HIGH PERFORMANCE
FURNITURE FOR YOUR
H O M E



Shown with Eileen Mirror

Eileen Shelf TM

Assembly Instructions


Your Eileen Shelf™ is designed and engineered for easy assembly. Carefully follow this procedure to prevent any damage.

Placement and Maintenance

Eileen™ is designed for indoor use on level floors. Clean glass with glass cleaner, and wood veneer with a moist cloth.


Step 1 - Unpack and identify parts listed below.

The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, please contact BDI Customer Service at: customerservice@bdiusa.com For all other concerns please contact your local BDI Retailer.

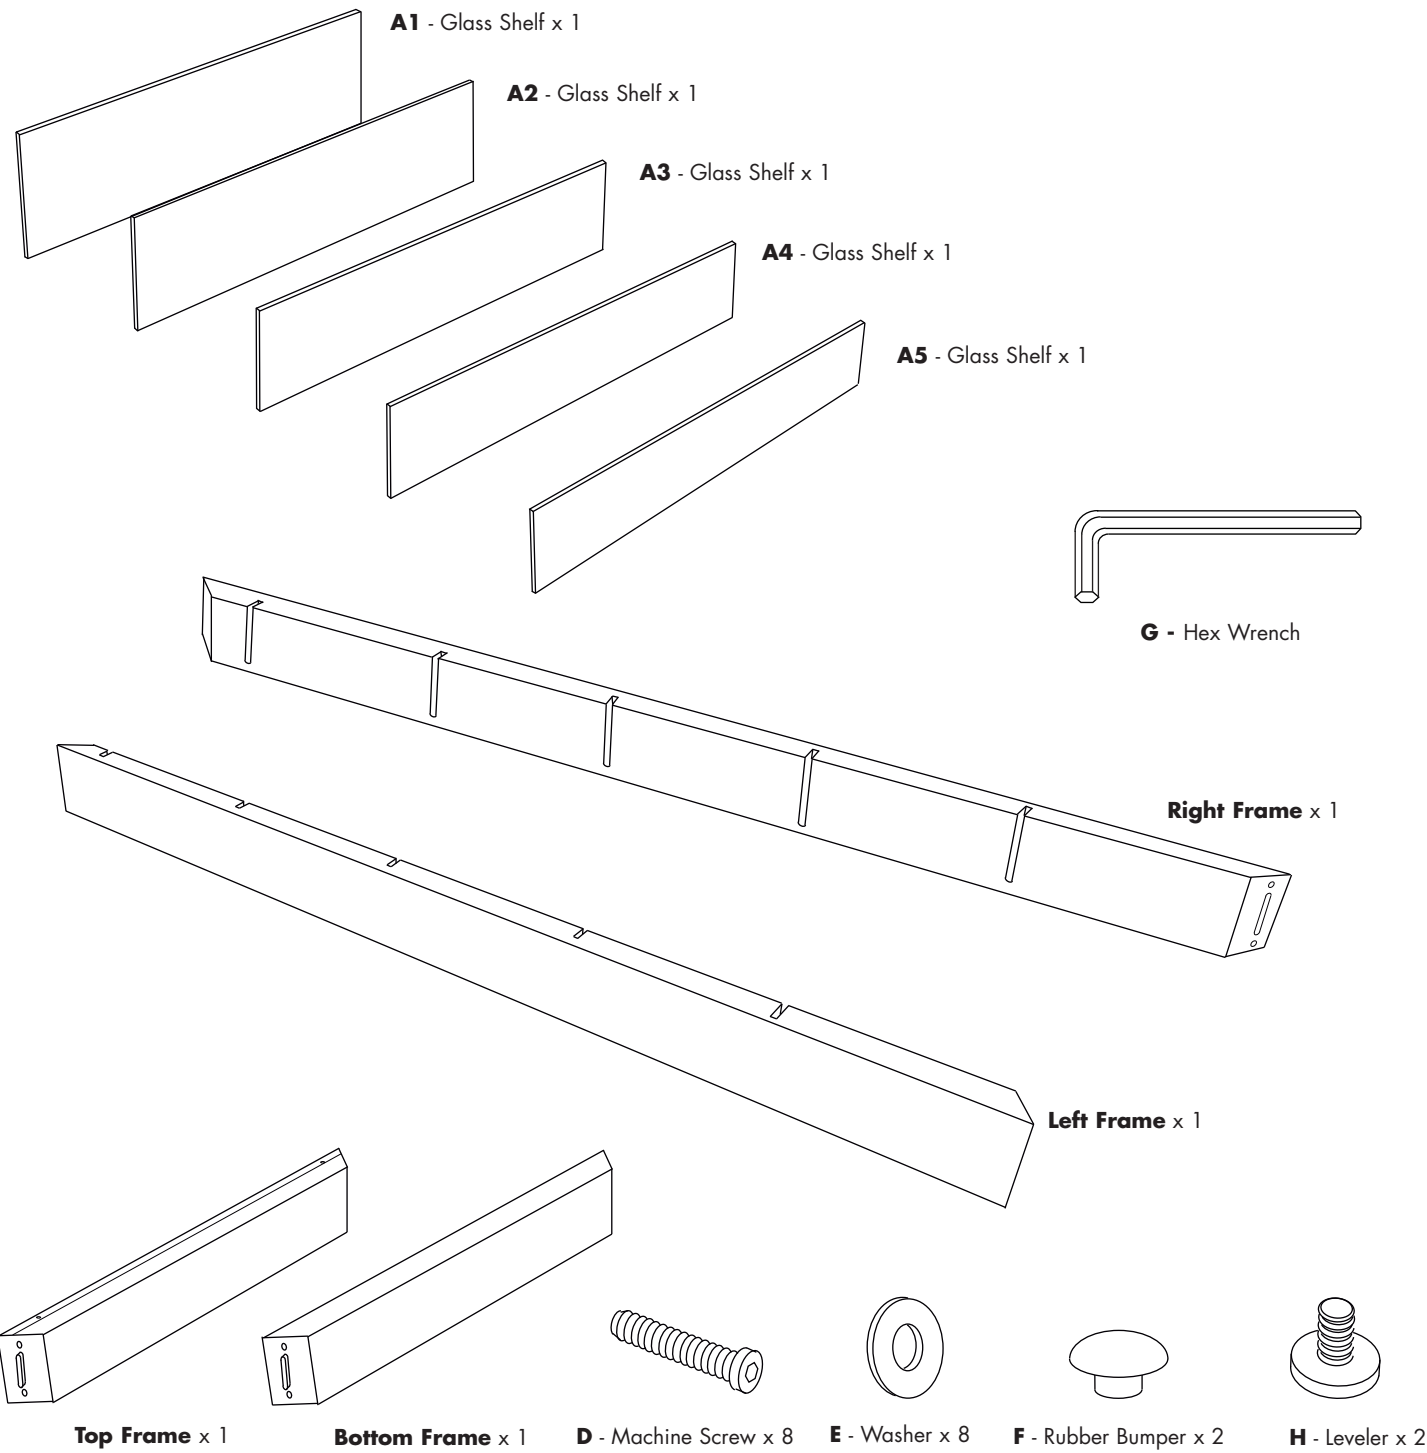


Step 2 - Assemble wood frame.



Connect **left frame** and **right frame** with **top frame** and **bottom frame** using **machine screw (D)**, **washer (E)**, and **hex wrench (G)**.

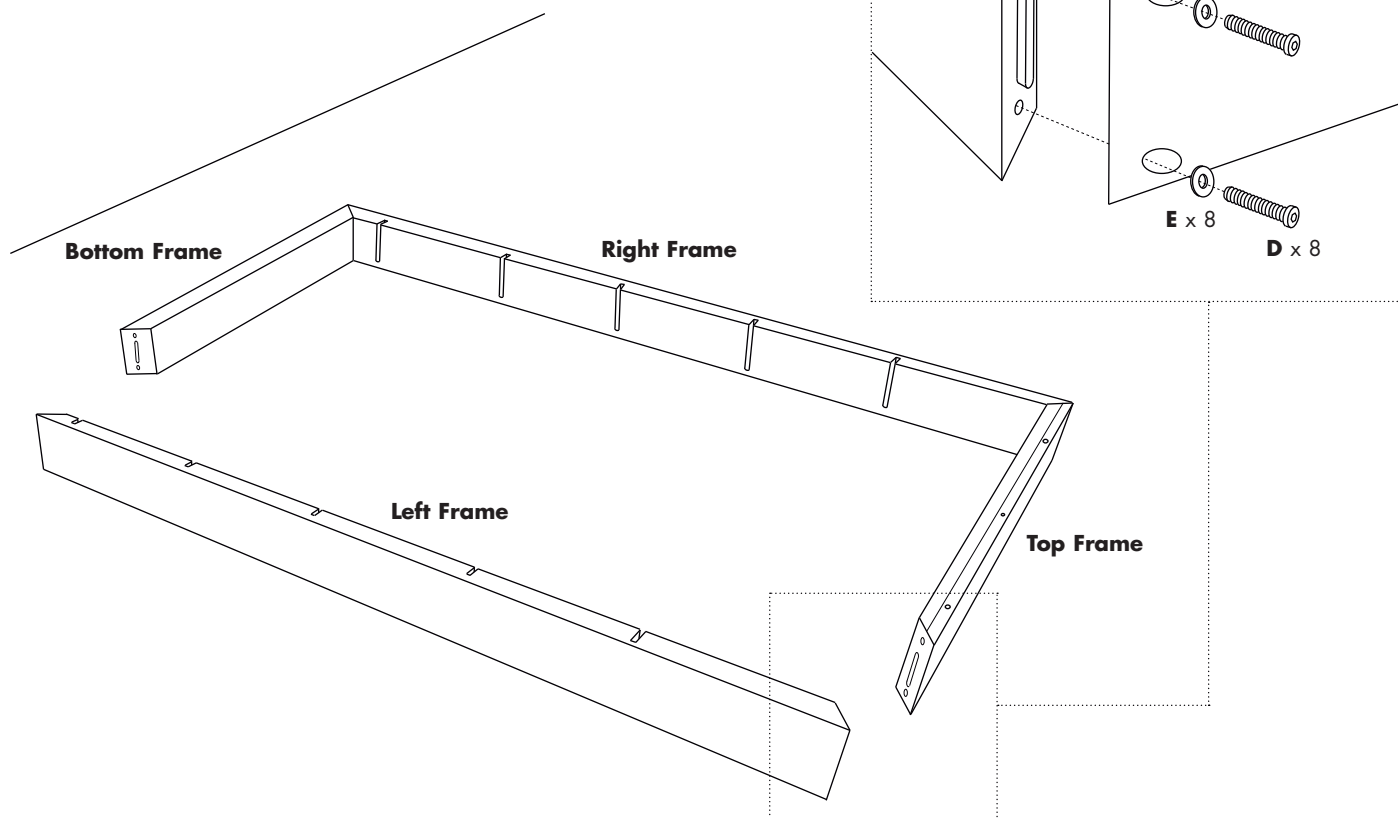

Step 3 - Install levelers (H) and rubber bumper inserts (F) as shown below.

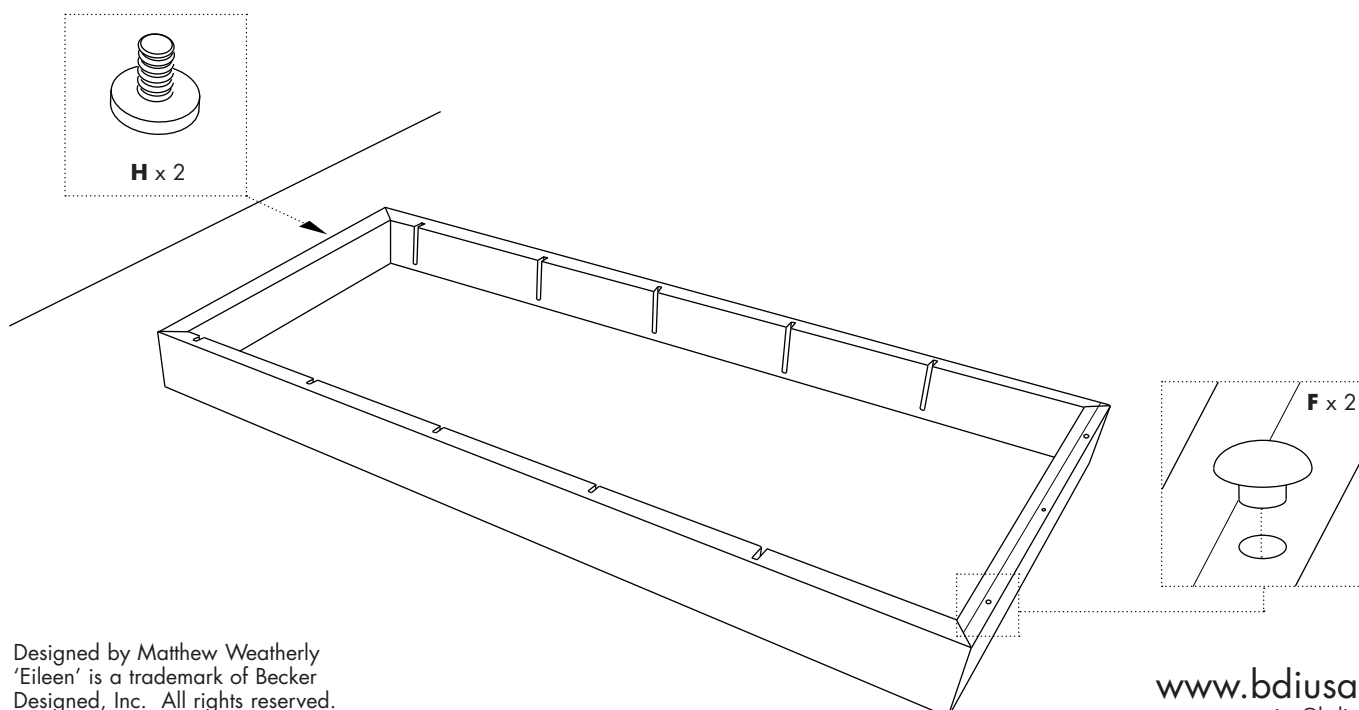


Step 3 - Install glass shelves to all slot locations on left frame and right frame.

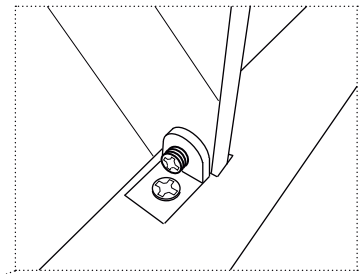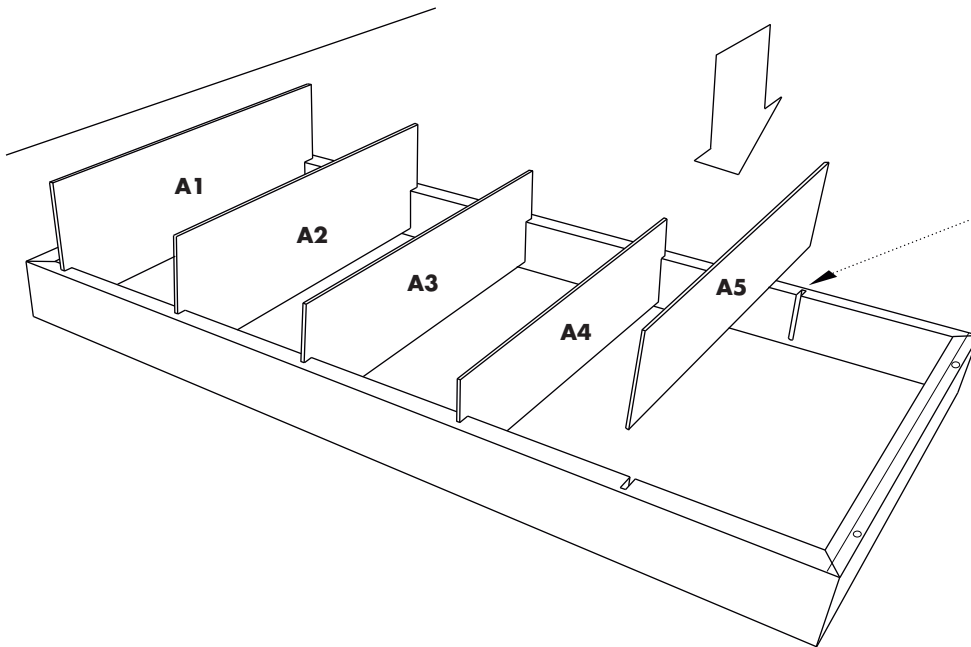


Step 4 - Once shelves have been installed, tighten the plastic threaded insert on the bottom of shelf bracket using Phillips screwdriver.

Step 5 - Once step 4 and 5 have been completed, lift assembled Eileen against the wall. The rear edge of all shelves (except bottom shelf) should be as close to the wall as possible.

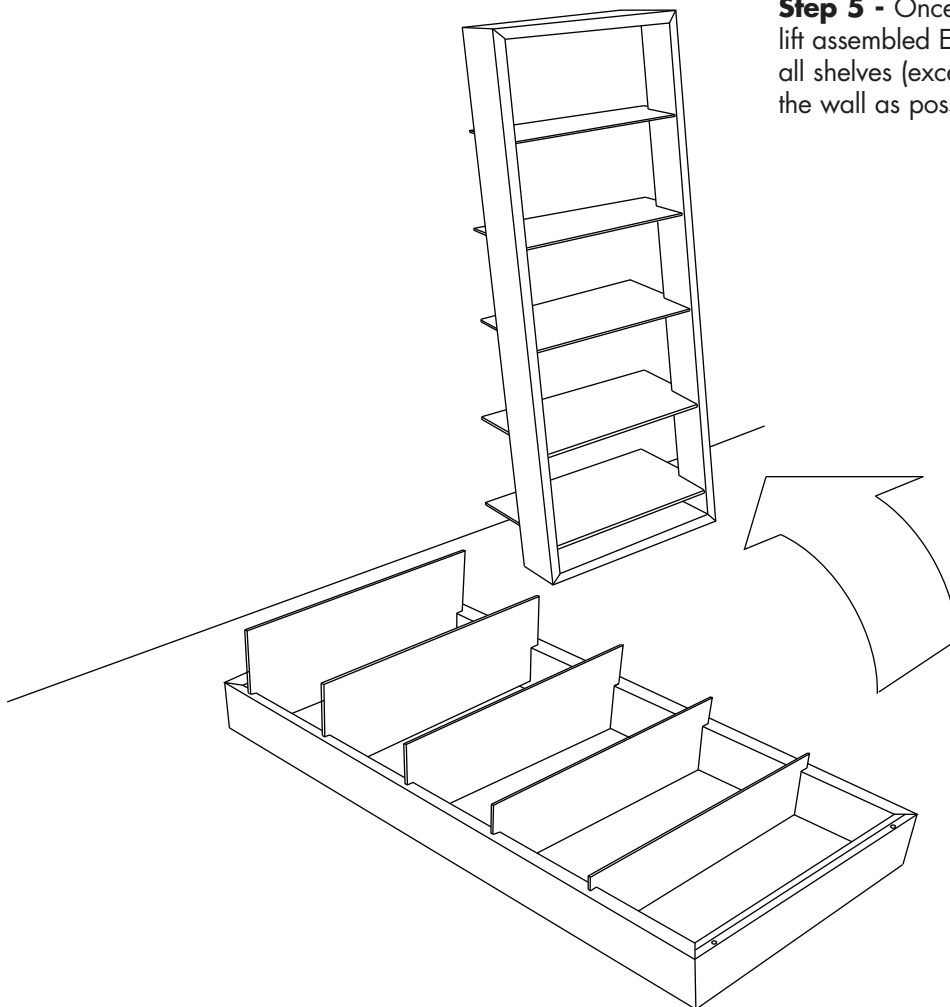

Step 6 - Optional Tipping Restraint Kit. On the rear side of the top frame, there is a pre-drilled hole for installing the the HH-510 Furniture Tipping Restraint Kit*. Follow instructions below:

1. Attach the **furniture bracket** securely to the back edge of top frame using **short screw**.
2. Determine where furniture is to be placed and mark location on the wall for wall bracket hole approx. 2" above or below furniture bracket mounted to rear side of furniture.
3. Drill a 3/16" hole in the wall. Press the **wall anchor** into the hole and gently tap until flange on anchor is flush with wall.
4. Position **wall bracket** over wall anchor and use **wall screw** and Phillips screwdriver to securely attach bracket to wall.
5. Place furniture so that the furniture bracket is in line with wall bracket.
6. Lace the end of the **restraint strap** through the larger hole in each bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
7. Confirm that strap is securely laced and locked.

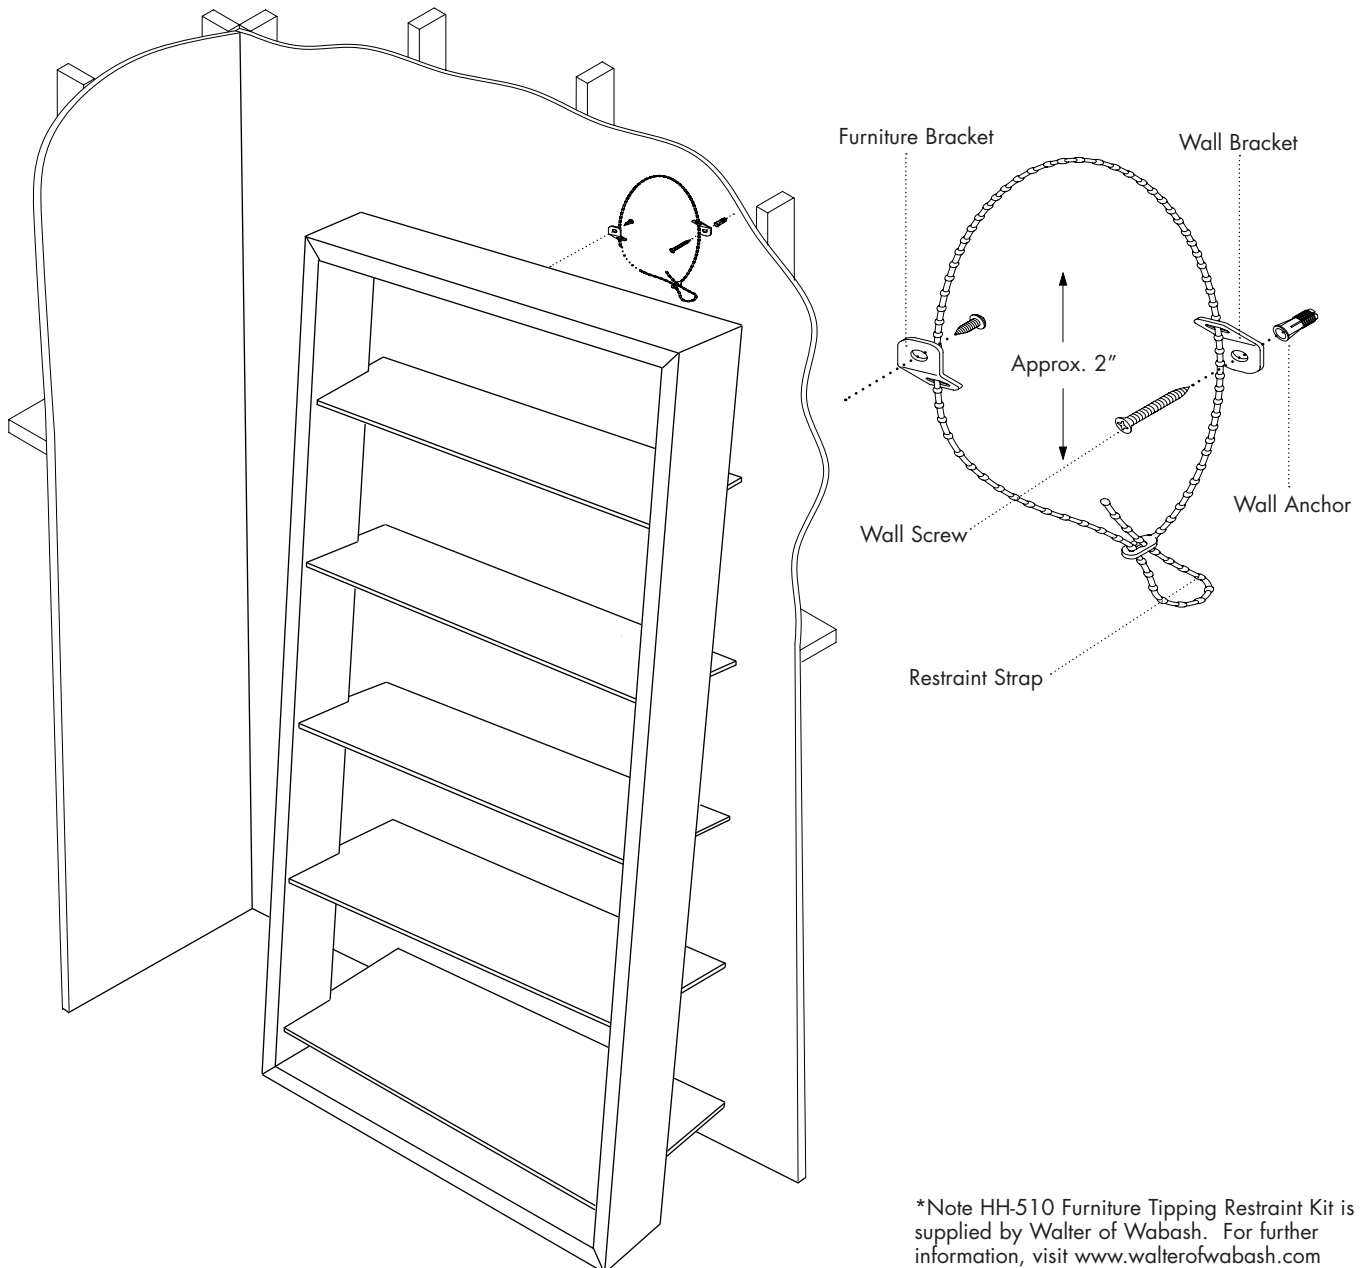

*Note HH-510 Furniture Tipping Restraint Kit is supplied by Walter of Wabash. For further information, visit www.walterofwabash.com