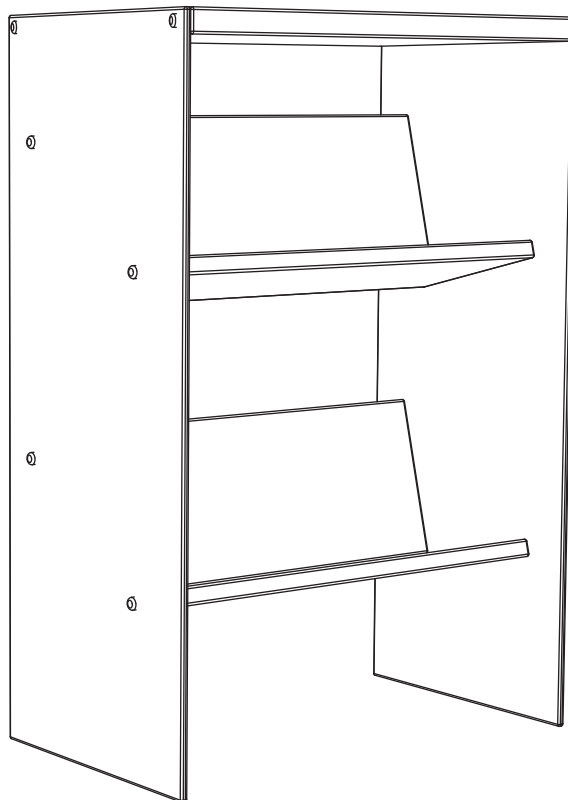


BOOKCASE








ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish . Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .


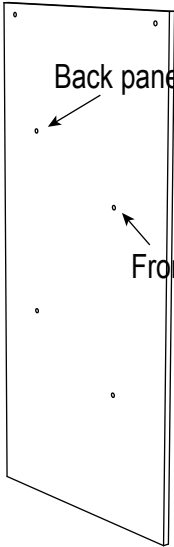
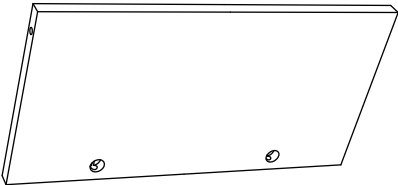
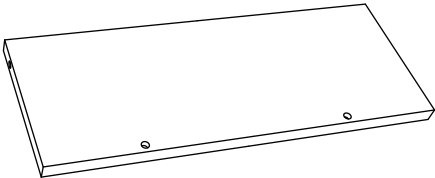


Please do not return to the store

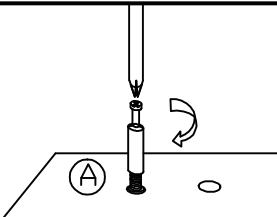
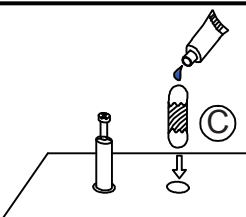
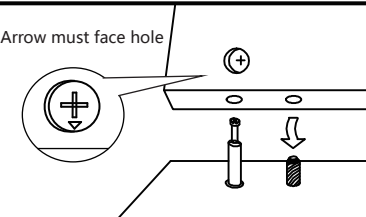
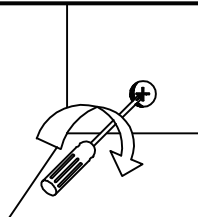
Hardware List

A 		B 	
Cambolt (4pcs)		Camlock (4pcs)	
C 	D 	E 	
Screw and washer (12pcs)	locking nut (12pcs)	sticker (4pcs)	

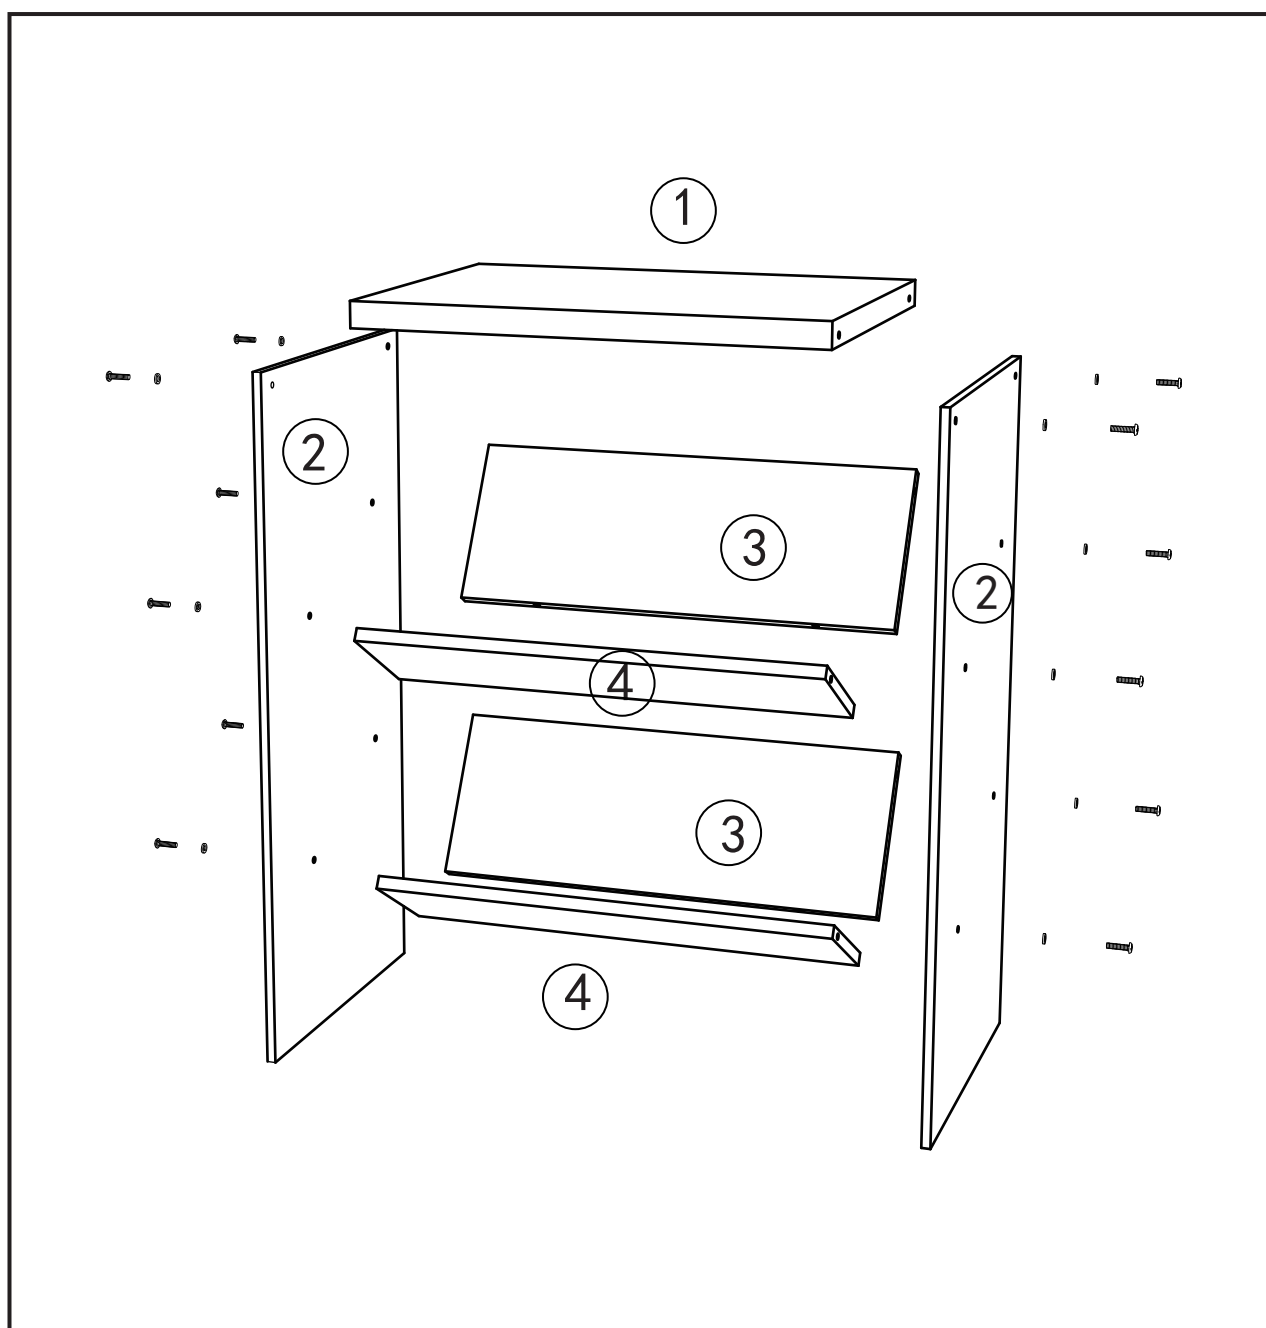
Panel List

1  Top panel (1PC)	2  Back panel hole Front panel hole Side panel (2PC)
3  Back panel (2PCS)	4  Front panel (2PCS)

Assembling the unit with camlocks and wood dowels.

			
<p>Gently screw cam bolt into the threaded anchor.</p>	<p>Lightly glue one end of the wood dowel and tap halfway into hole.</p>	<p>Lightly glue wood dowel and connect to second panel by inserting dowels into holes.</p>	<p>Screw the camlock firmly into locked position.</p>

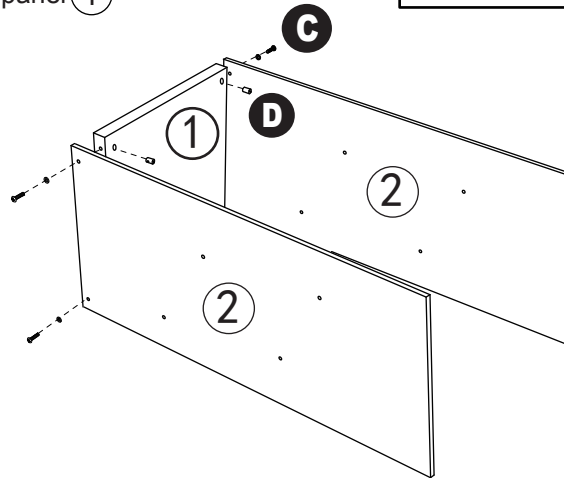
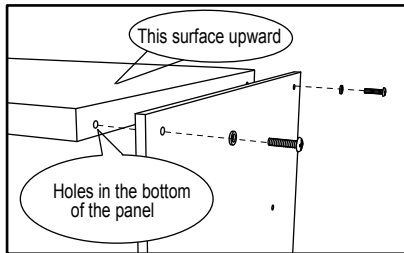
Hardware List



Step 1

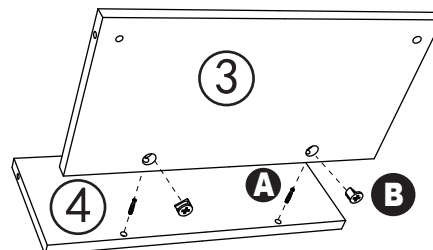
*Assemble unit on carpet or soft surface.

1. Insert locking nuts **D** into top panel **1**.
2. Connect the side panels **2** to top panel **1** using screws and washers **C**.



Step 2

1. Screw cambolts **A** into front panel **4**. Then connect back panel **3** using camlocks **B**. Use care not to overtighten.
2. Repeat for second shelf.



*Refer to page 3 for camlock/ cambolt instructions.

Step 3

1. Insert locking nuts **D** into front panel **4** and back panel **3**.
2. Connect front panel **4** and back panel **3** to unit as shown using screws and washers (C).
3. Place stickers **E** over camlock holes.

Front panel hole
Back panel hole

