

BED FRAME

ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.



PARTS LIST

- | | | |
|---|-----------|-------|
| 1 | END RAIL | 1 PC |
| 2 | TALL LEG | 2 PCS |
| 3 | SHORT LEG | 2 PCS |
| 4 | SIDE RAIL | 2 PCS |

Instructions apply for all bed sizes
Twin > Full > Queen > King


HARDWARE

- | | | | |
|---|---|---|-------------------------------------|
| a | Wooden dowels - 4 pcs
Spare - 1 pc | d | Wood button - 2 pcs
Spare - 1 pc |
| b | JCB M6 X 100mm (4") - 2 pcs
Spare - 1 pc | e | Allen wrench - 1pc
Spare - 1pc |
| c | Barrel nut - 2 pcs
Spare - 1 pc | | |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Insert wooden dowels (a) into the locator holes on (1) both ends of end rail.

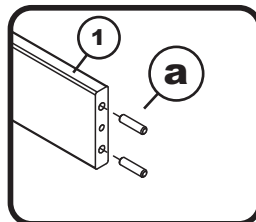


Choose the **tall legs** when using storage drawers, Trundle bed or mattress only, choose the **short legs** if using both foundation and mattress.



Step 2

Attach the legs (2) or (3) to end rail (1), using JCB M6 X 100mm (b) and barrel nut (c). Tighten with the Allen wrench (e). Cover holes with wood button (d).

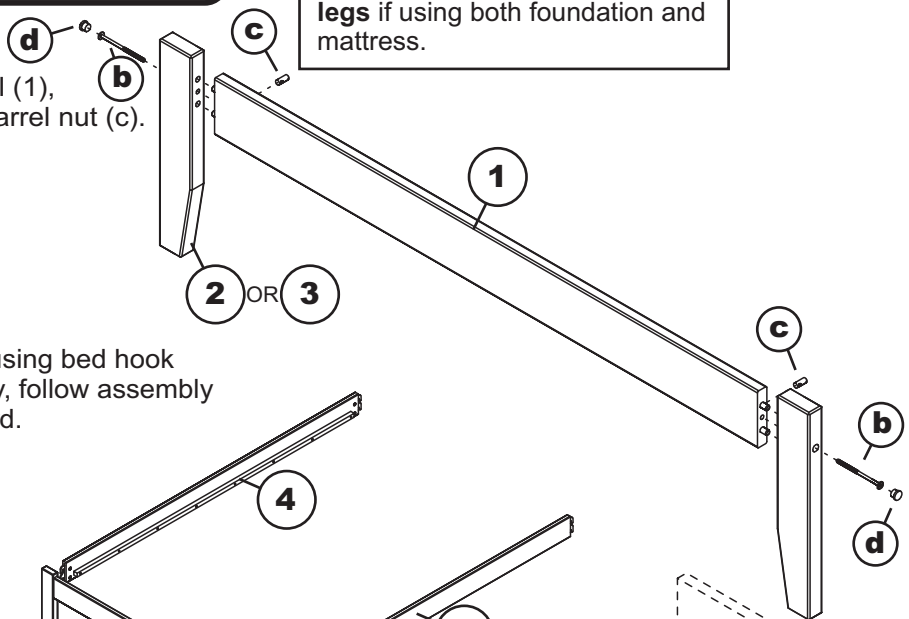

Step 3

Attach side rails (4) to the end rail using bed hook as shown. For headboard assembly, follow assembly instructions included with headboard.

