
HOLLAND BAR STOOL CO.

Table Base Assembly Instructions

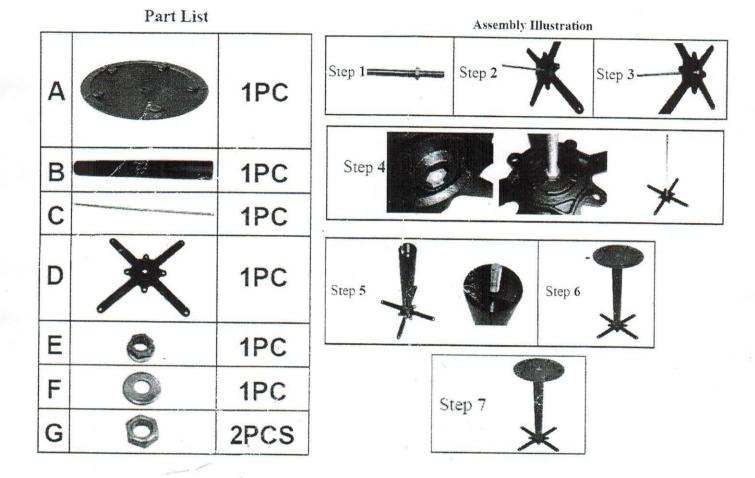

Assembly:

- 1. Thread one mit (G) on the threaded rod (C) about 4 inches down
- 2. Place the table mount (D) on the threaded rod (C) down to the nut (G) making sure to have the flat side of the table mount (D) out (away from the long end of the threaded rod (C)
- 3. Thread the remaining nut (G) on the end of the threaded rod (C) just until the threaded rod completely threads through the nut.
- 4. Now tighten the first nut (G) down so that the table mount (D) is sandwiched between the two nuts (G) and is secured tightly
- 5. Next, slide the column (B) down the threaded rod (C) so that the rod guide that is welded into the column (B) is up
- 6. Place the foot (A) down onto the column (B) guiding the threaded-rod (C) through the center hole of the foot (A)
- 7. There is a small tab on the bottom side of the column (B) that will lock into the table mount (D). To make sure this engages simply turn the pedestal (B) until you feel it lock into place
- 8. The foot (A) also has a groove that will engage with the column (B). Do the same here and turn the foot until you feel it engage
- 9. First place the washer (F) on the threaded rod (C) followed by the locknut (E) and tighten www.HollandBarStool.com