

IMPORTANT SAFETY NOTICE READ CAREFULLY BEFORE BEGINNING ASSEMBLY!

- * Before you begin, please read the Assembly Instruction carefully, identify all the parts, and hardware included. Do Not skip any steps and follow the assembly steps in order.
- * Place parts on the carton while installing to prevent damage or scratches. Be sure to check all packing materials carefully for small parts may have come loose inside the cartoon during shipment. If parts are missing, contact the retailer from which your purchased the product to obtain any missing part. DO NOT USE SUBTITUTE PART.
- * Some steps may require two or more people, do not attempt by yourself as there is a risk injury.

NOTE: WE DISCLAIMS ANY LIABILITY FOR DAMAGES OR INJURIES WHICH MAY OCCUR DUE TO FAILURE TO PROPERLY FOLLOWASSEMBLY INSTRUCTION, FAILURE TO PROPER ASSEMBLY OR FAILURE TO PROPERLY USE OF THE PRODUCT.

NOTE: YOUR UNIT MAY LOOK DIFFERENT IN APPEARANCE FROM THE ONE SHOWN IN THE ILLUSTRATIONS ON THIS INSTRUCTION SHEET.

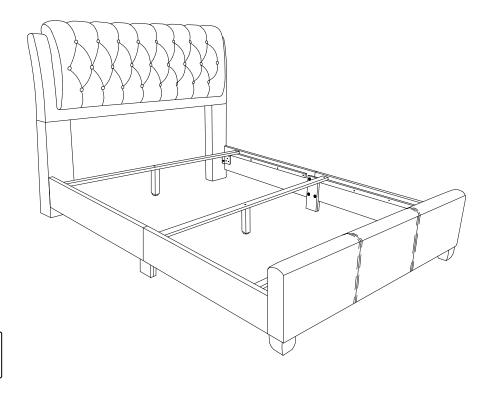


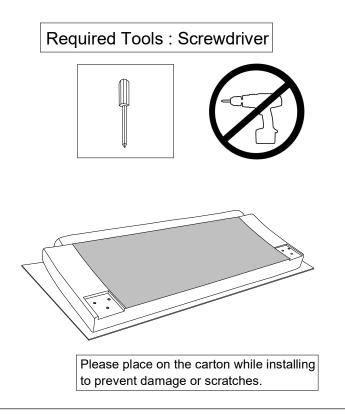

Page : 1 OF 6

ASSEMBLY INSTRUCTION


QUEEN BED

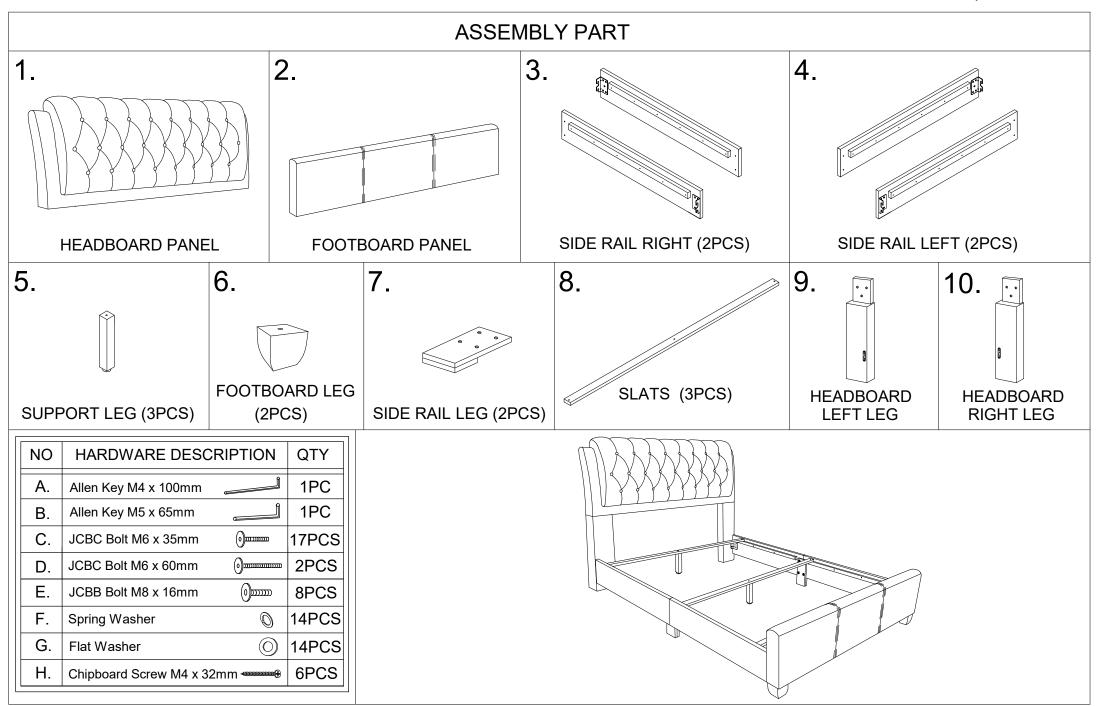

Page : 2 OF 6


STEP 1.

Open the cover cloth located behing the Headboard and remove all parts and hardware.

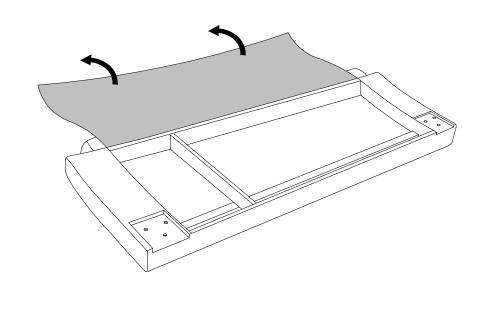

STEP 2.


Attach the Headbord Right Leg (10) and Headboard Left Leg (9) use JCBC Bolt (C), Spring Wahser (F) & Flat Washer (G) and Allen Key (A) to fix.

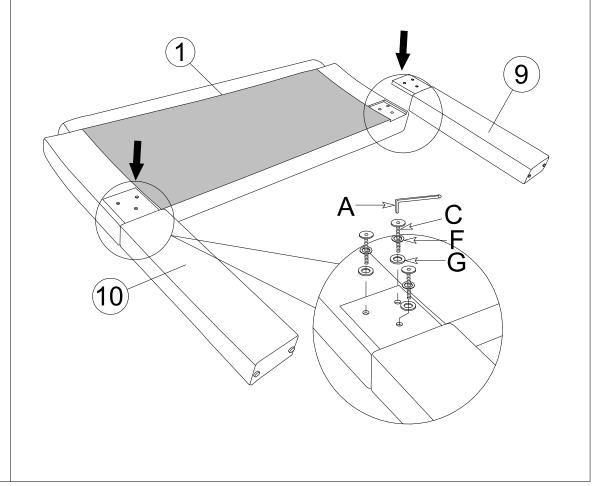

Page : 3 OF 6


STEP 3.

Attach the Slats (8) to Support Leg (5). Use JCBC Bolt (C) and Allen Key (A) to fix.

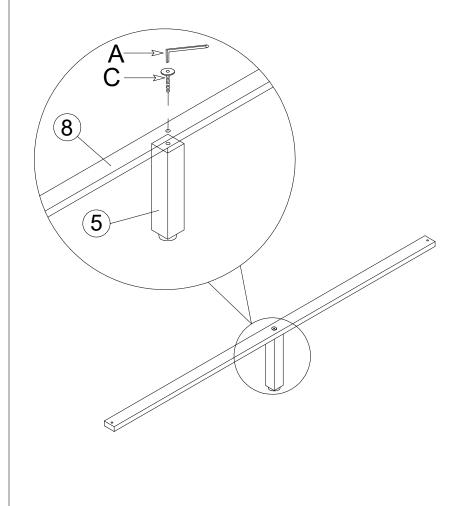

STEP 4.


Attach and tighten the Side Rail Right (3) (2pcs) & Side Rail Left (4) (2pcs) to Side Rail Leg (7) (2pcs.) Use JCBC Bolt (C), Spring Washer (F), Flat Washer (G) and Allen Key (A) to fix.

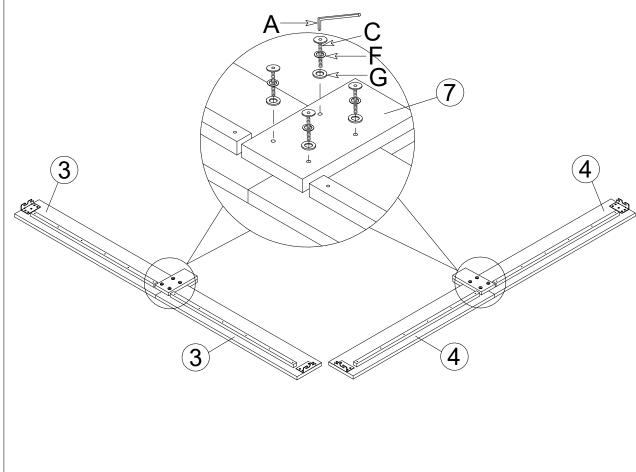

Page: 4 OF 6




Attached the Footboard Leg (6)(2pcs) to Footboard Panel (2). Use JCBC Bolt (D) and Allen Key (A) to fix.

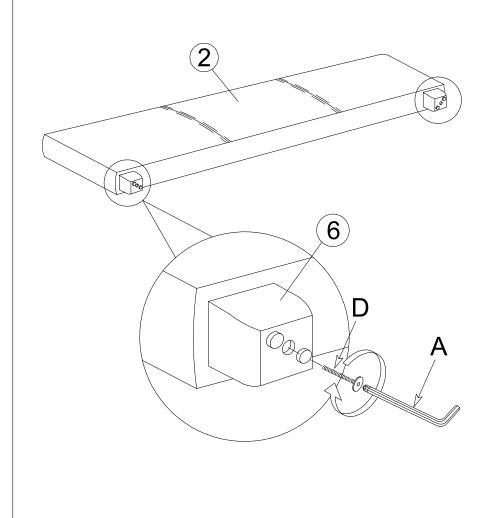


STEP 6.

Attach (hook) the Side Rail to Headboard Left Leg (9), Headbord Right Leg (10) and Footboard Panel (2). Use JCBB Bolt (E) and Allen Key (B) to fix.

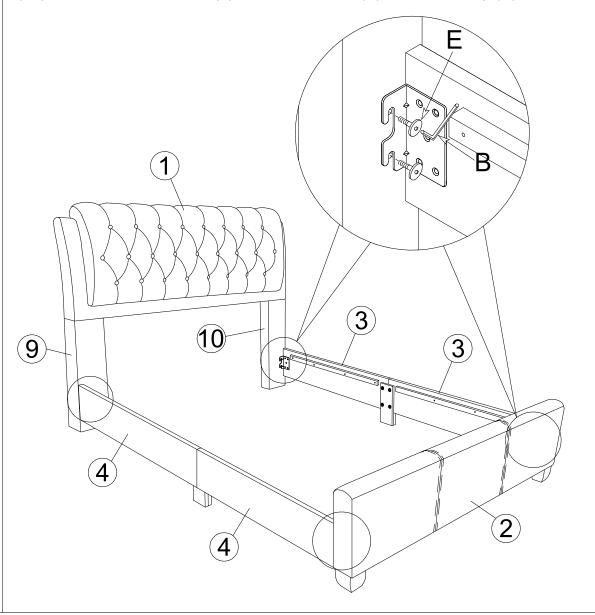

Page : 5 OF 6

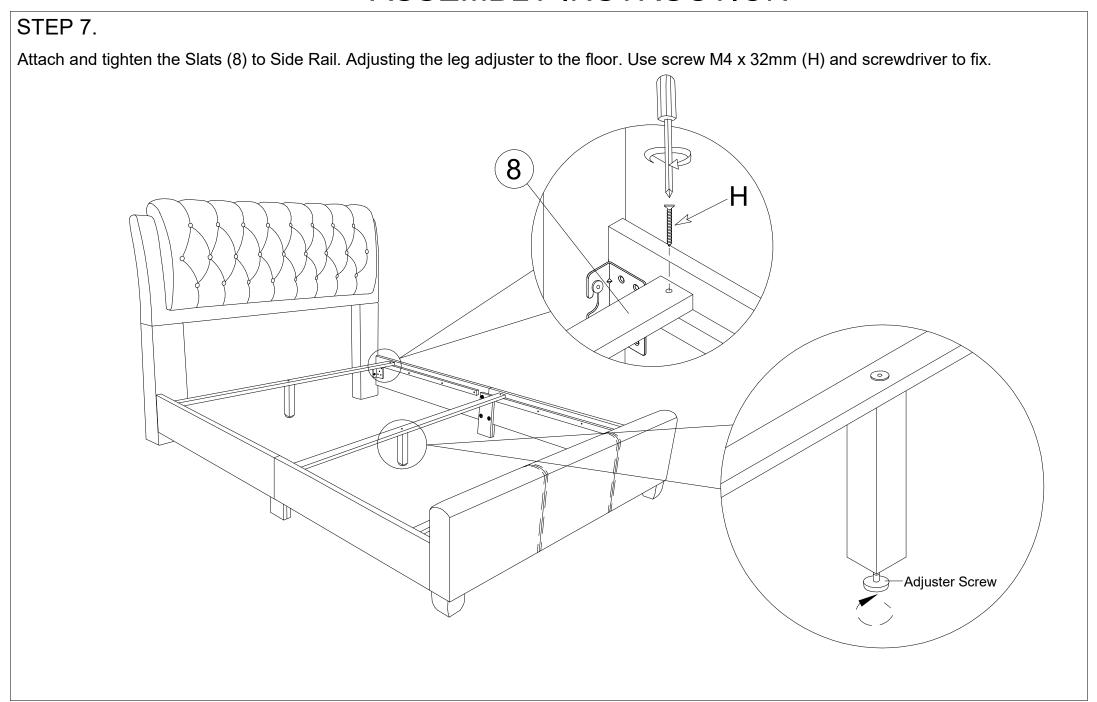

Page : 6 OF 6