



ASSEMBLY INSTRUCTIONS:
1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
4- DO NOT USE ABRASIVES SOLUTIONS;

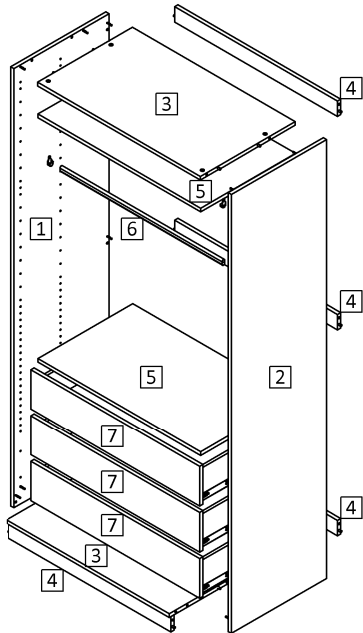

ASSEMBLY INSTRUCTIONS
BOX 03


PART LIST		
PART NUMBER	Qty	DESCRIPTION:
1	1	LEFT SIDE PANEL
2	1	RIGHT SIDE PANEL
3	2	BOTTOM/TOP PANEL
4	4	FRAME
5	2	SHELVES
6	1	RODS
7	3	REGULAR DRAWER

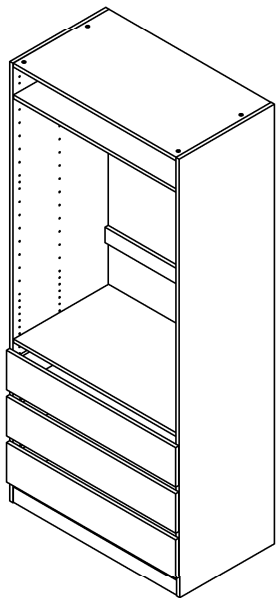




CABINET HARDWARES	16		16		16	
	CAM LOCK SCREWS		CAM LOCK		DOWEL 5/16 X 1 3/16	

CABINET ASSEMBLY

STEP 01
PREPARATION OF THE SIDE PANELS


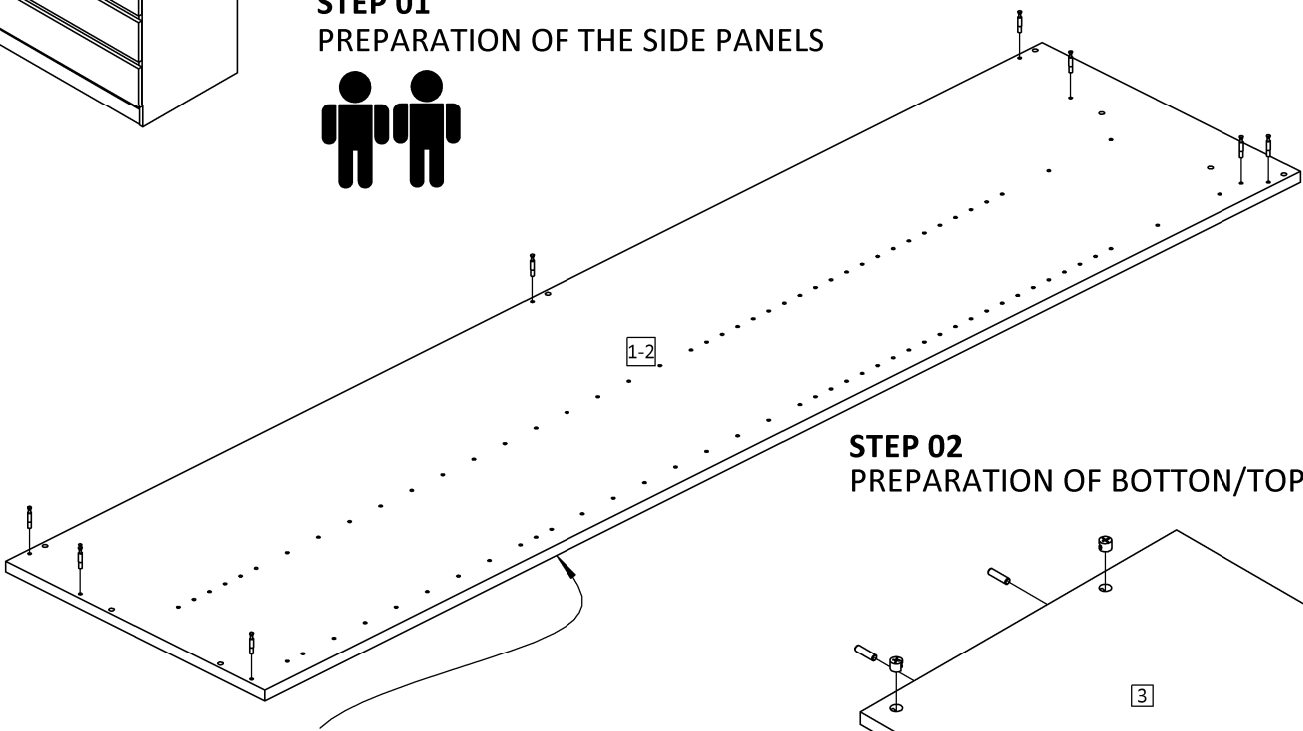


STEP 02
PREPARATION OF BOTTOM/TOP PANELS

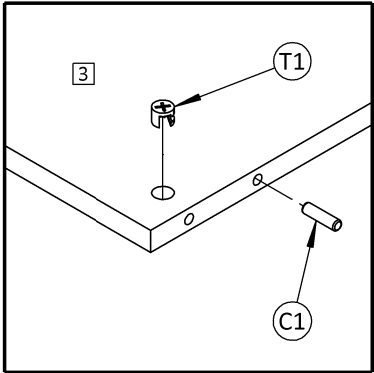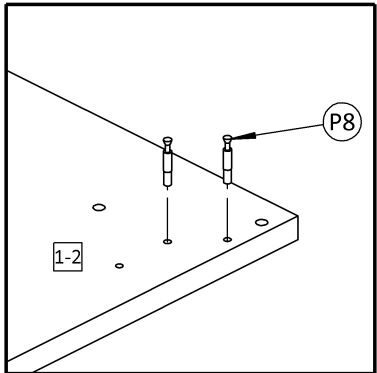
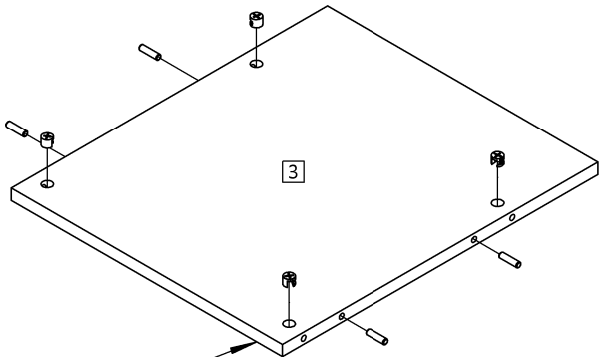


STEP 03
PREPARATION OF THE FRAMES

ASSEMBLY INSTRUCTIONS
BOX 03

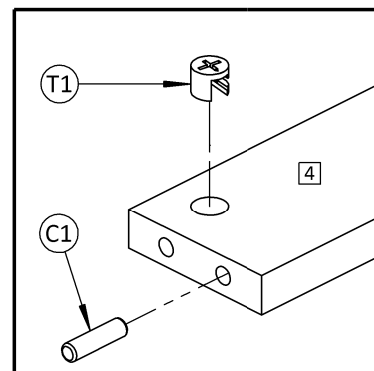
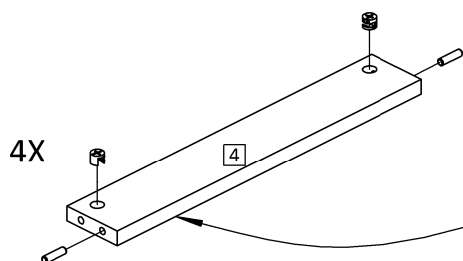


STEP 04
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

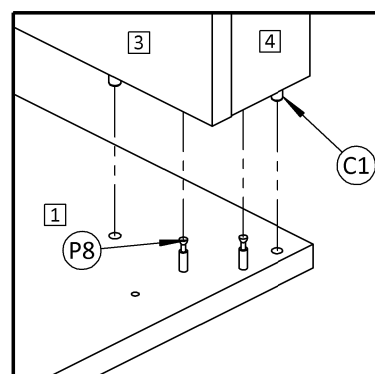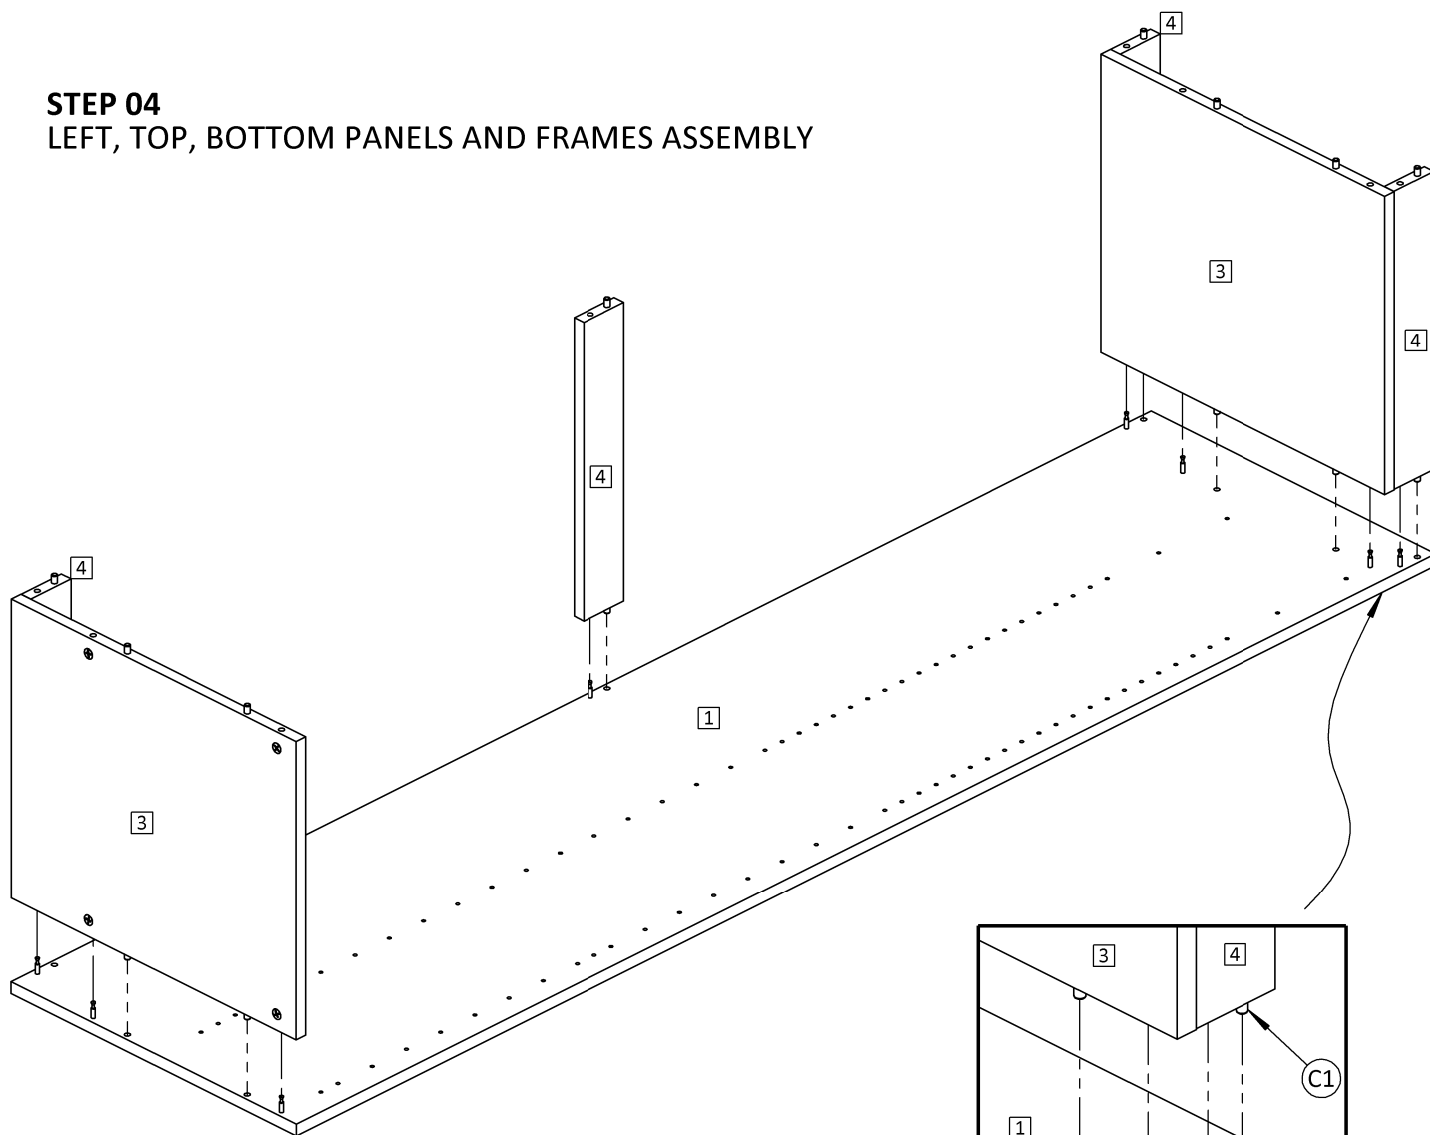


ASSEMBLY INSTRUCTIONS
BOX 03

STEP 05
RIGHT SIDE PANEL ASSEMBLY

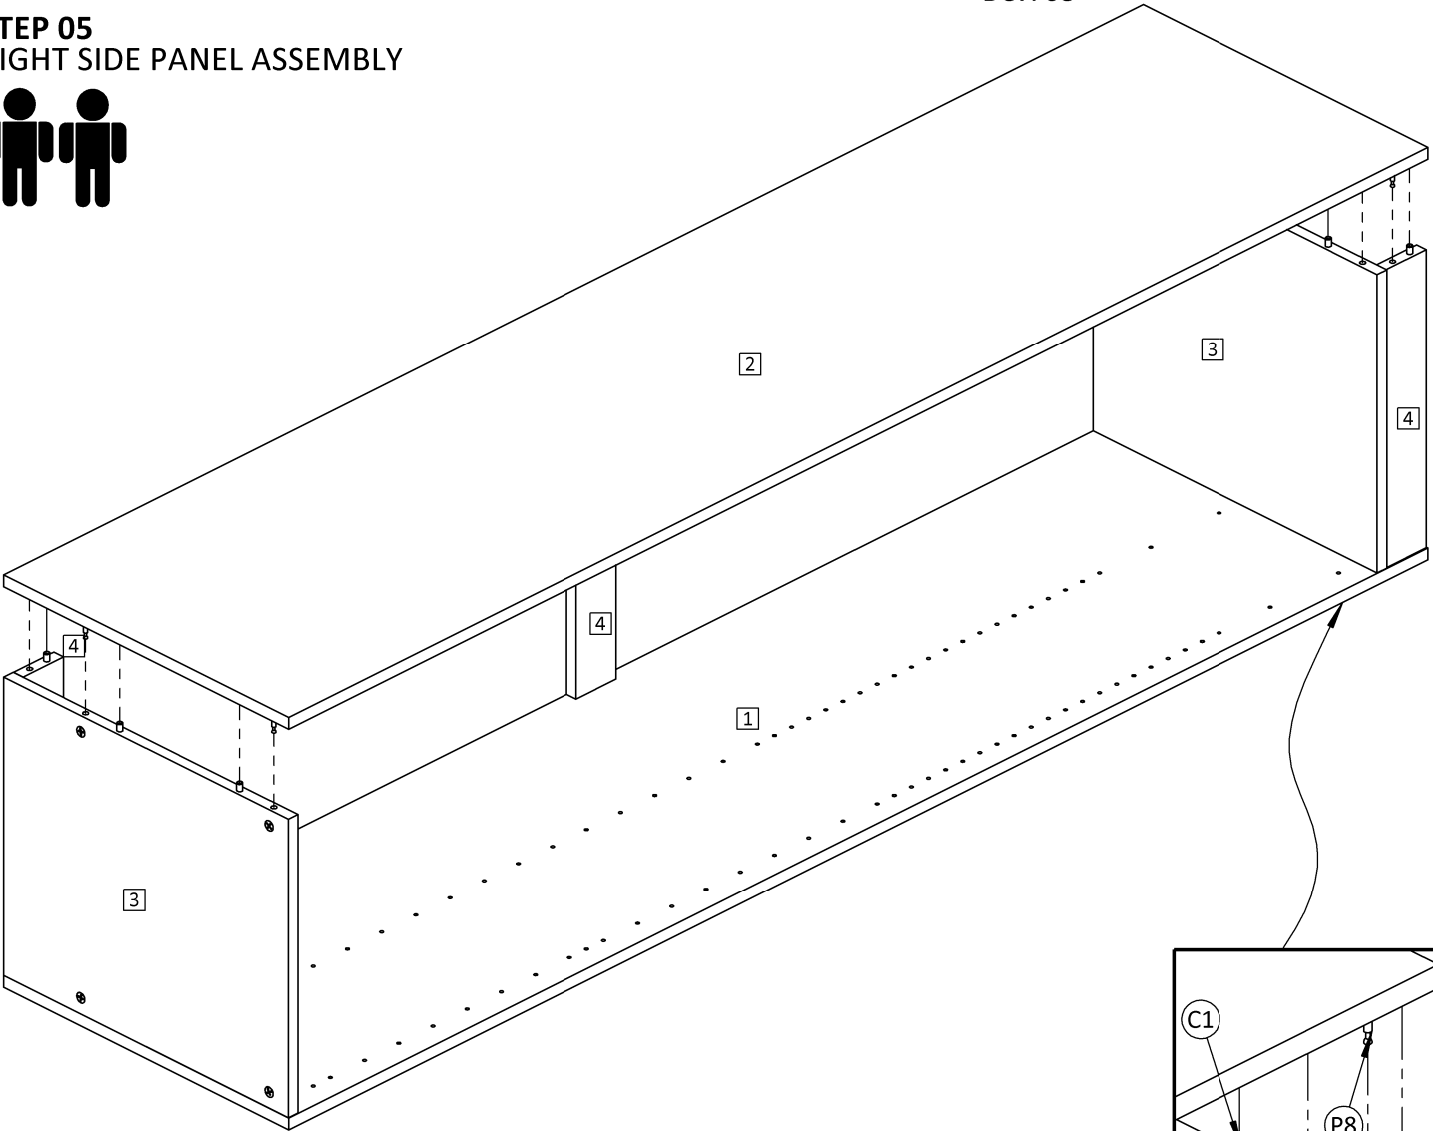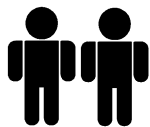


DRAWERS ASSEMBLY

PART NUMBER 7 - REGULAR DRAWER

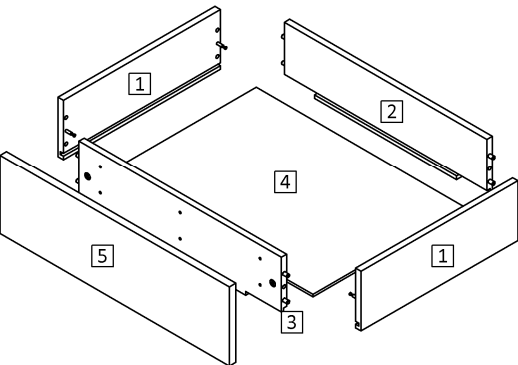


DRAWERS HARDWARES	18	06	12	12	24
	SCREW 9/64 X 1 1/4	SLIDER PIN	CAM LOCK SCREWS	CAM LOCK	DOWEL 5/16 X 1 3/16

STEP 06
PREPARATION OF DRAWER SIDE PANNELS

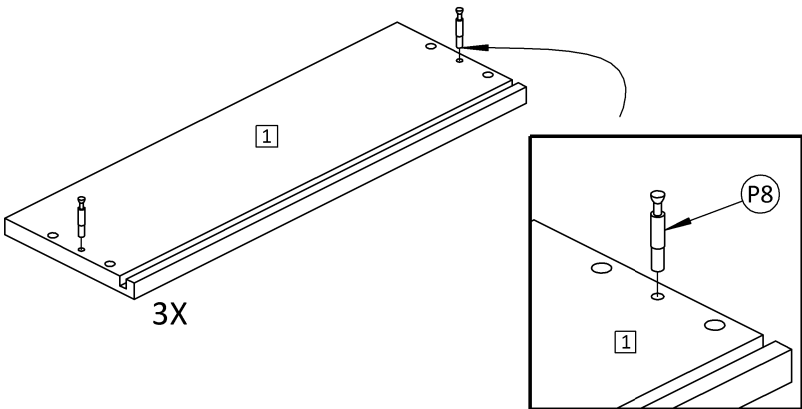


PART LIST		
PART NUMBER	QTY	DESCRIPTION:
1	2	DRAWER SIDE PANEL
2	1	DRAWER BACK PANEL
3	1	DRAWER INSIDE FRONT
4	1	DRAWER BOTTOM PANEL
5	1	DRAWER FRONT

STEP 07
PREPARATION OF DRAWER BACK PANNEL
AND DRAWER INSIDE FRONT

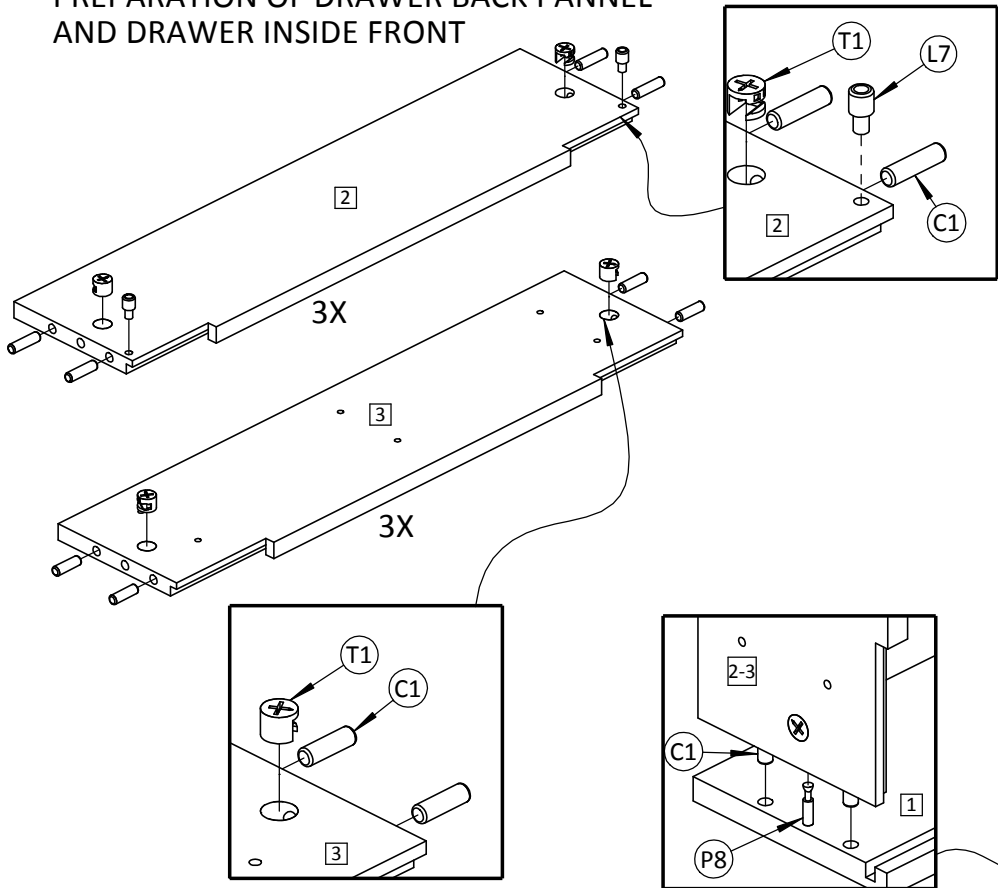


ASSEMBLY INSTRUCTIONS
BOX 03


STEP 08
DRAWER ASSEMBLY

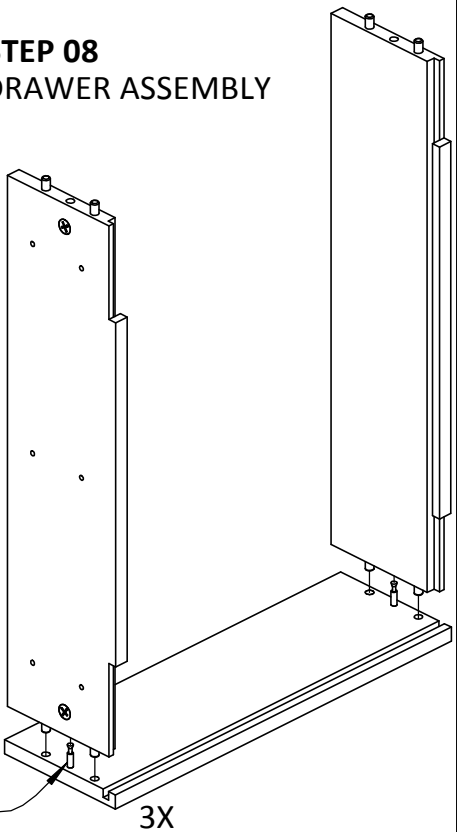

STEP 09
BACK PANNEL ASSEMBLY


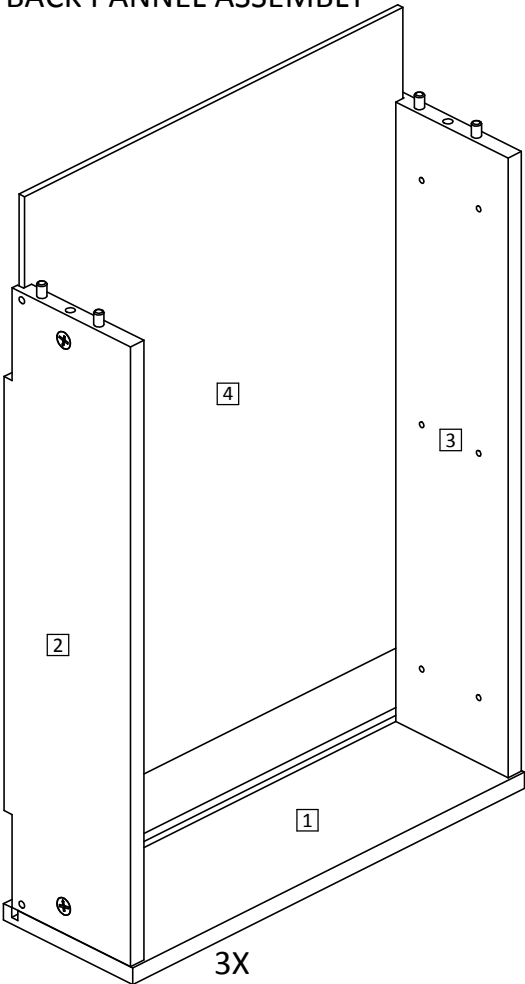


STEP 10
RIGHT SIDE PANNEL ASSEMBLY

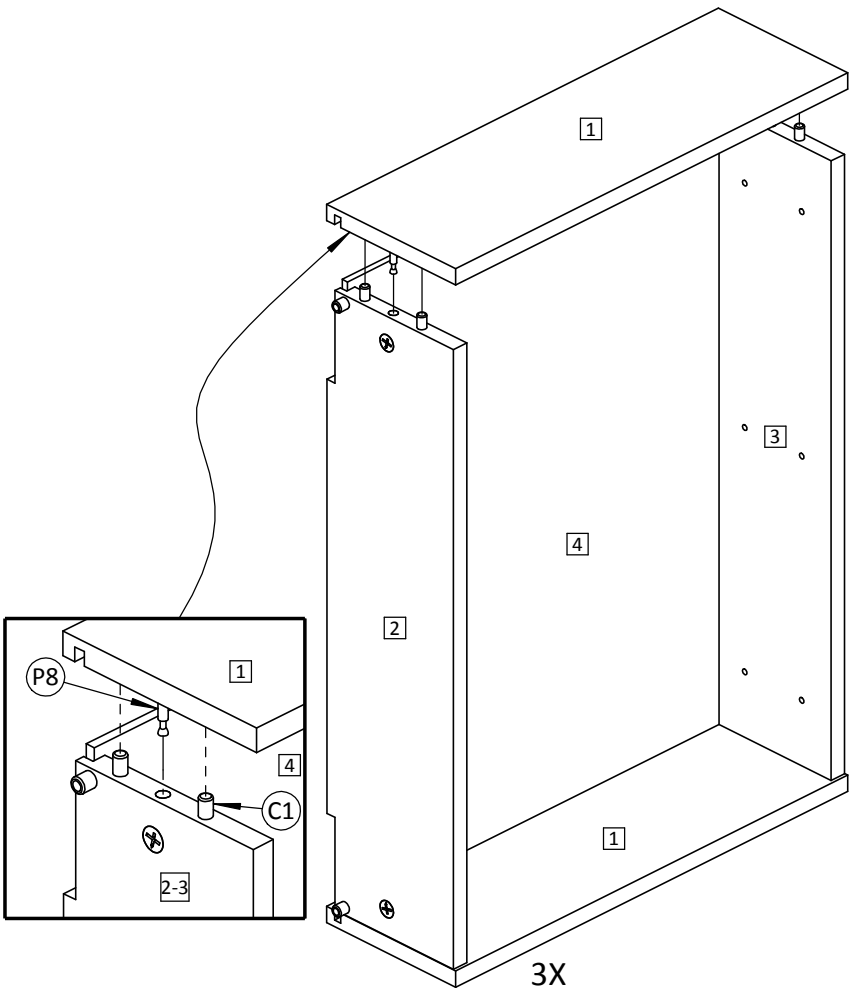


STEP 11
ASSEMBLING FRONT POSITION

DRAWER BACK VIEW

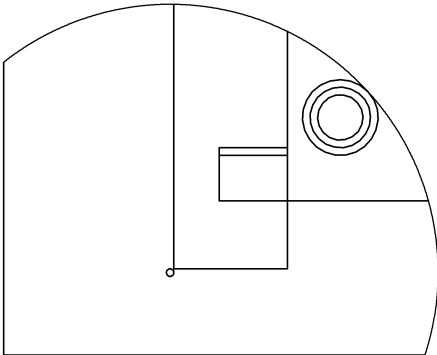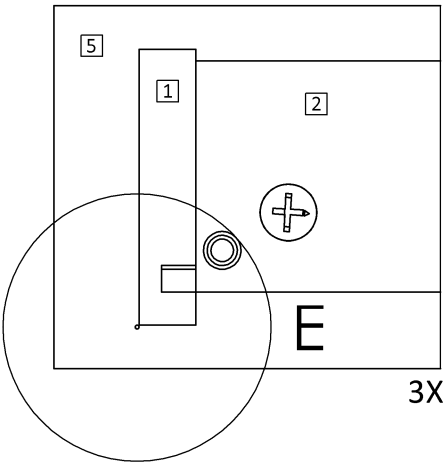


DETALHE E

ASSEMBLY INSTRUCTIONS
BOX 03

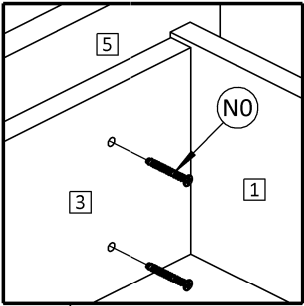

STEP 12
DRAWER FRONT ASSEMBLY

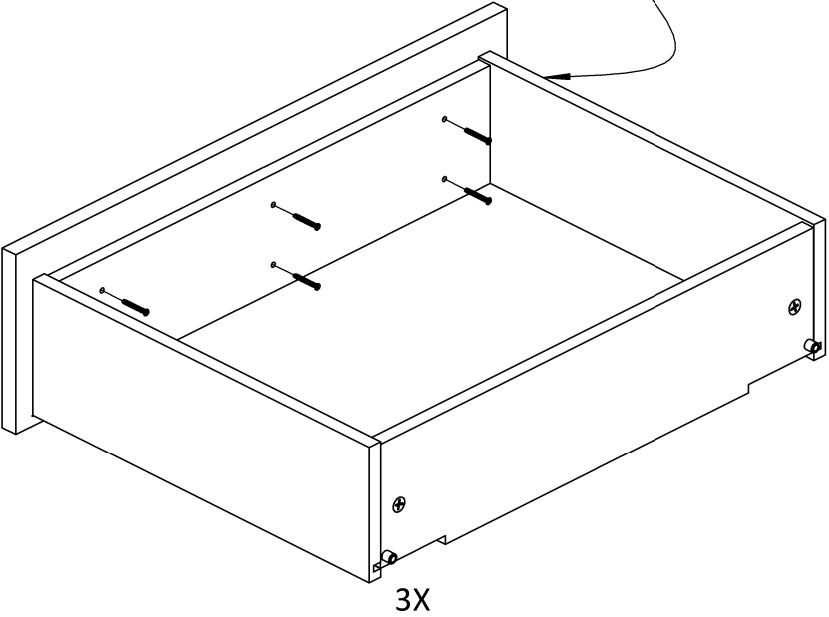

STEP 13 FIXING THE CABINET ON THE WALL


FIXING THE CABINET

DRILL THE WALL
USING A DRILLER
IN ORDER TO
INSERT THE PLUG



ASSEMBLY INSTRUCTIONS BOX 03




IT IS REQUIRED TO FIX
THE CABINETS ON THE WALL
RISK OF FALL!



FIXING CABINET HARDWARES	06	06	06	08
	SCREW 5/32 X 2 3/4	SCREW 1/4 X 2 3/4	PLASTIC PLUG	SCREW 9/64 X 1 1/4

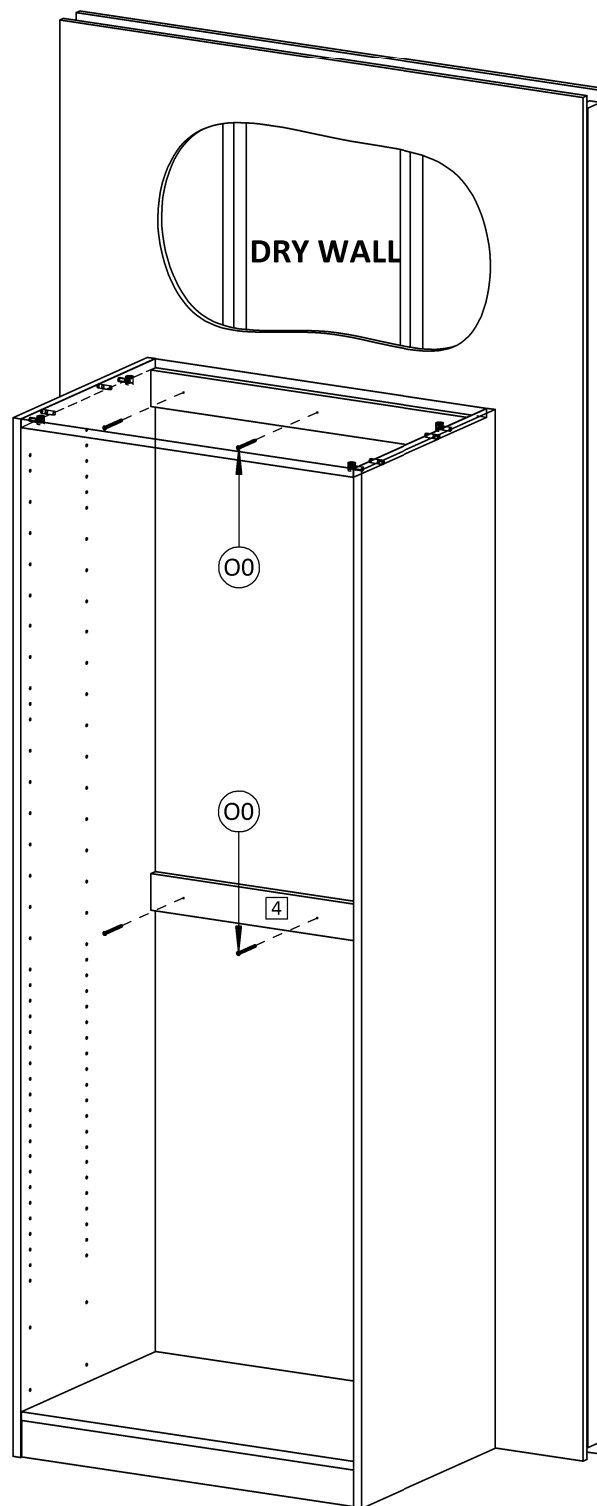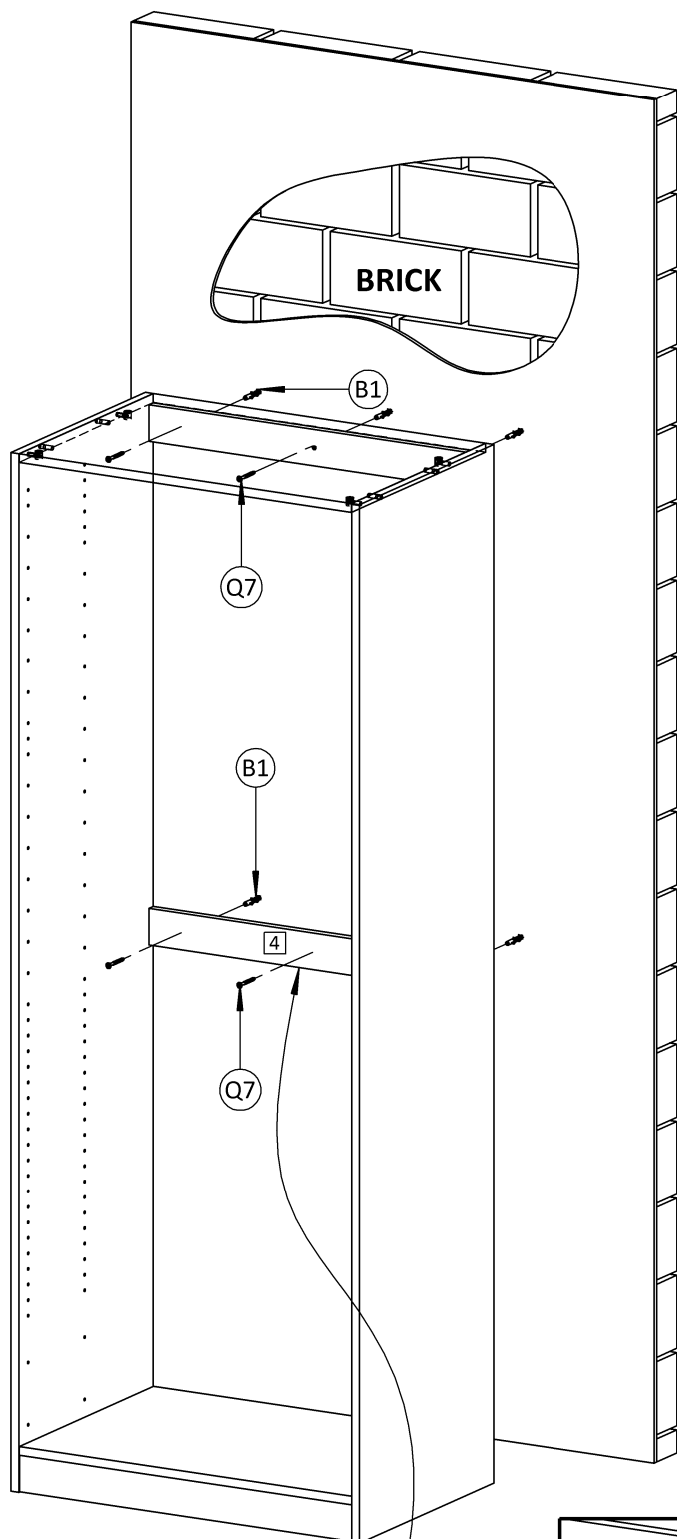



SCREW IN THE CENTER
OF THE FRAME

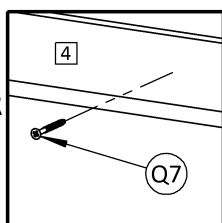

THE CABINET MUST ALWAYS BE
SUPPORTED ON THE GROUND

STEP 14
JOINING THE CABINETS

ASSEMBLY INSTRUCTIONS
BOX 03

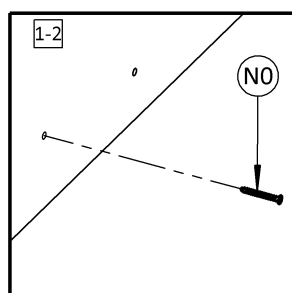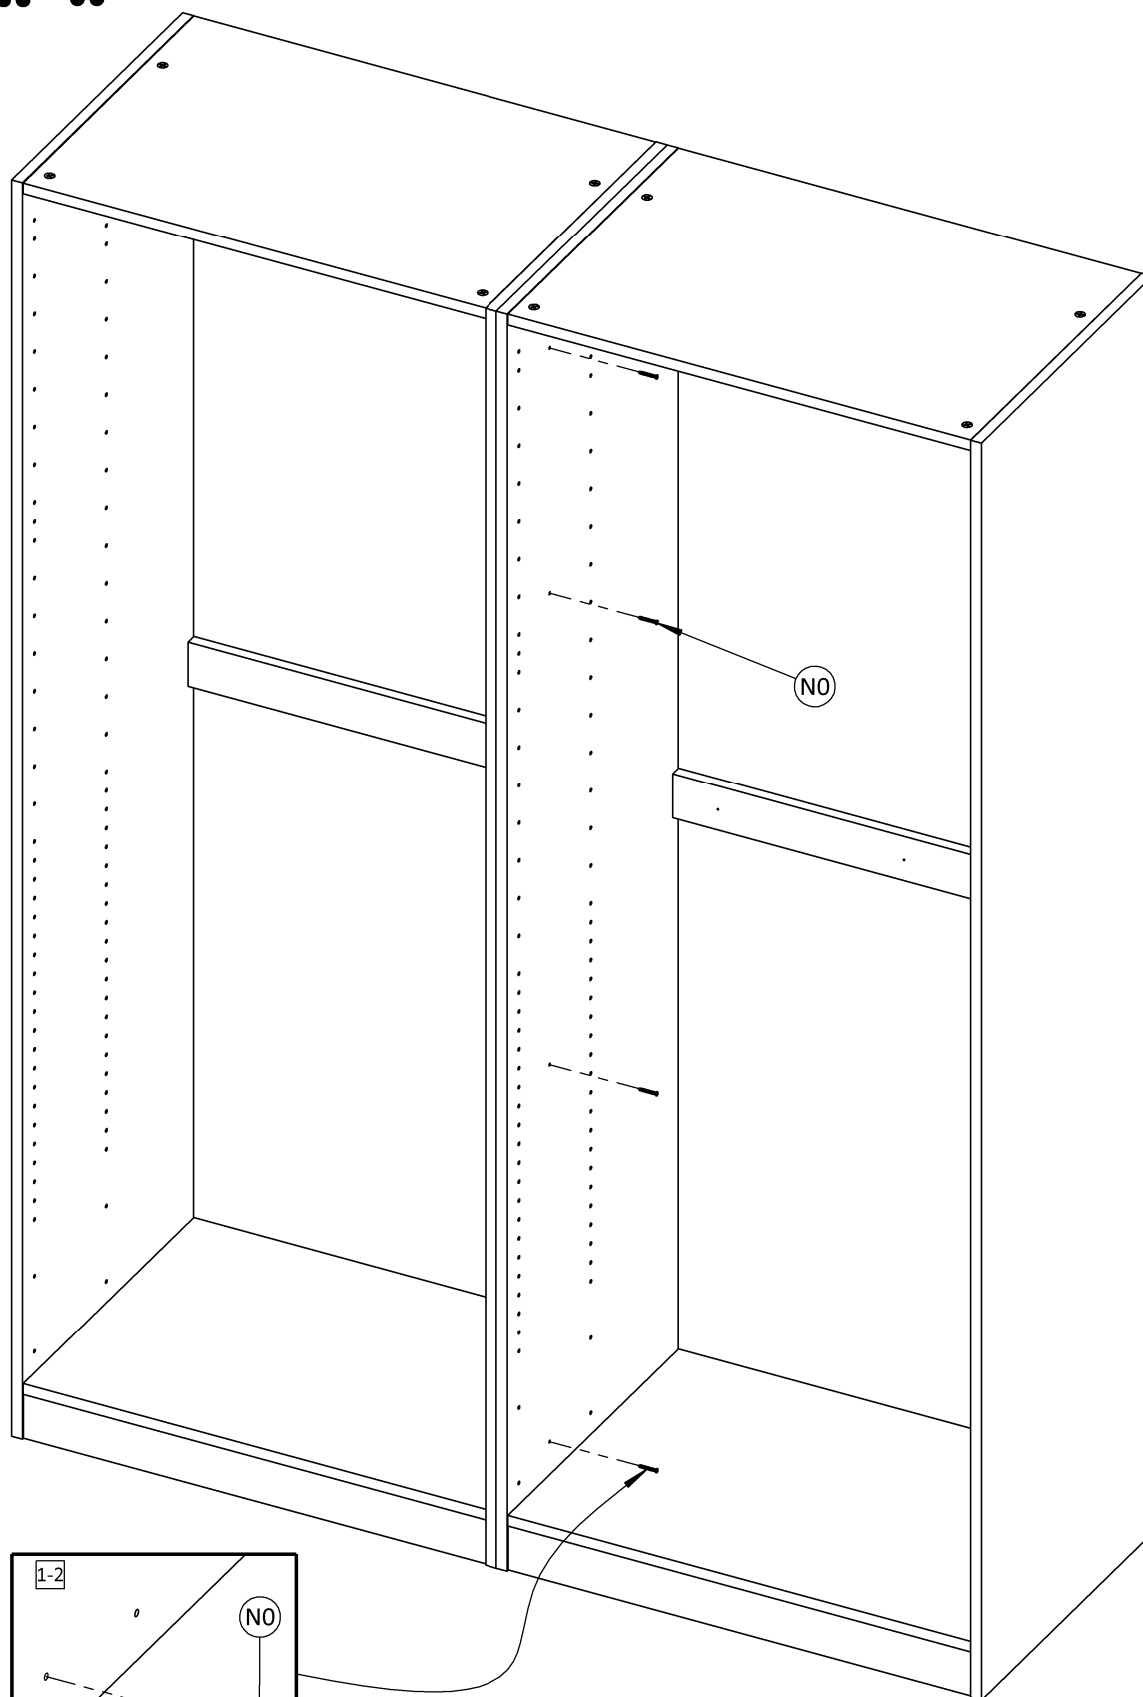



FIXING THE SHELVES INSIDE THE CABINET

ASSEMBLY INSTRUCTIONS

BOX 03

STEP 15


FIX THE SUPPORT ON THE SIDE PANNELS CLOSET

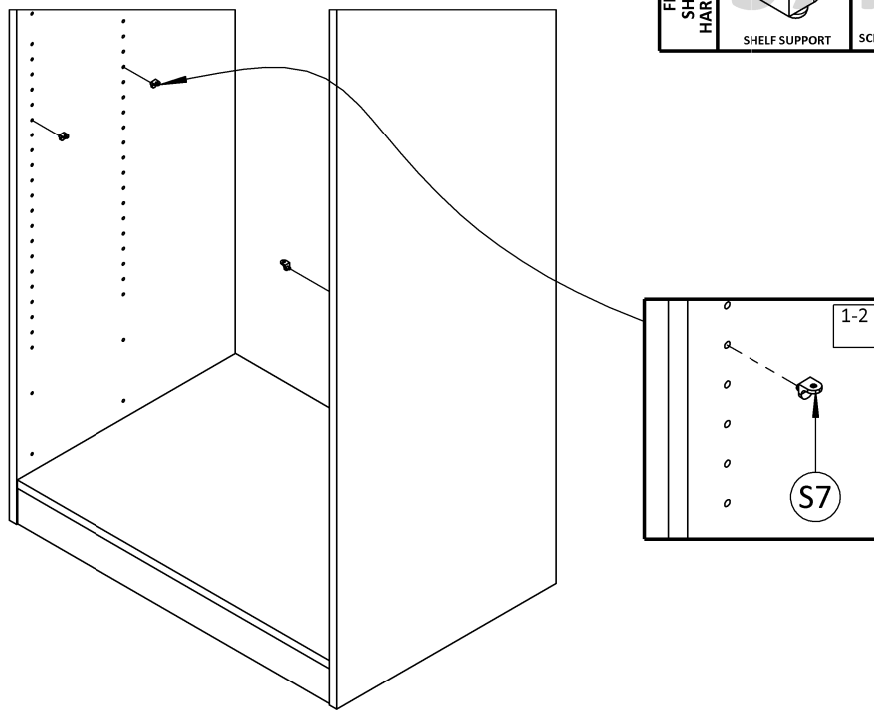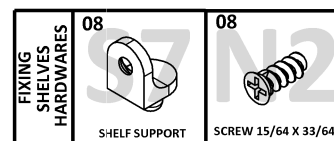

STEP 16


FIT THE SHELF ON THE CLOSET

SCREW THE SHELF
ON THE SUPPORT

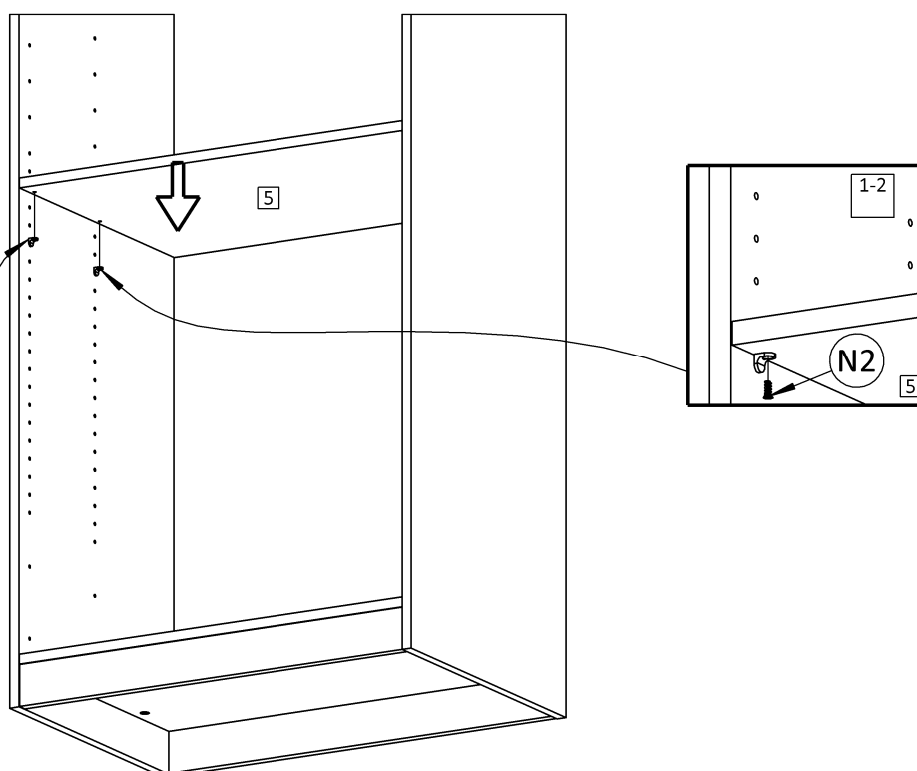


FIXING THE RODS INSIDE THE CABINET

PART NUMBER 6 - RODS


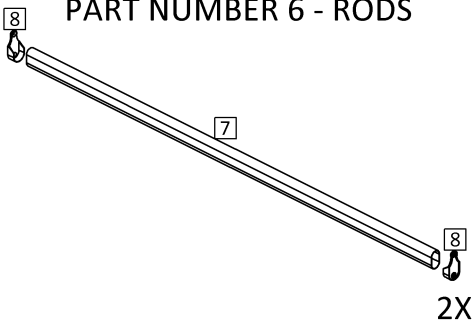


PART LIST		
PART NUMBER	QTY	DESCRIPTION
7	1	ROD
8	2	ROD SUPPORT


ASSEMBLY INSTRUCTIONS
BOX 03

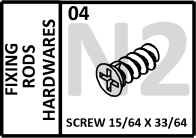

STEP 17
ROD SUPPORT FIXATION

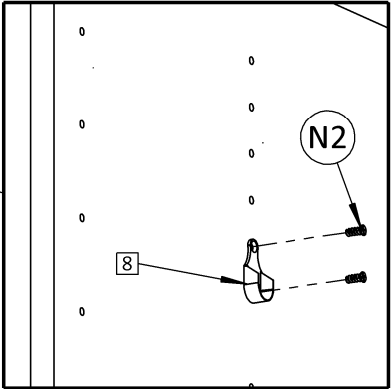
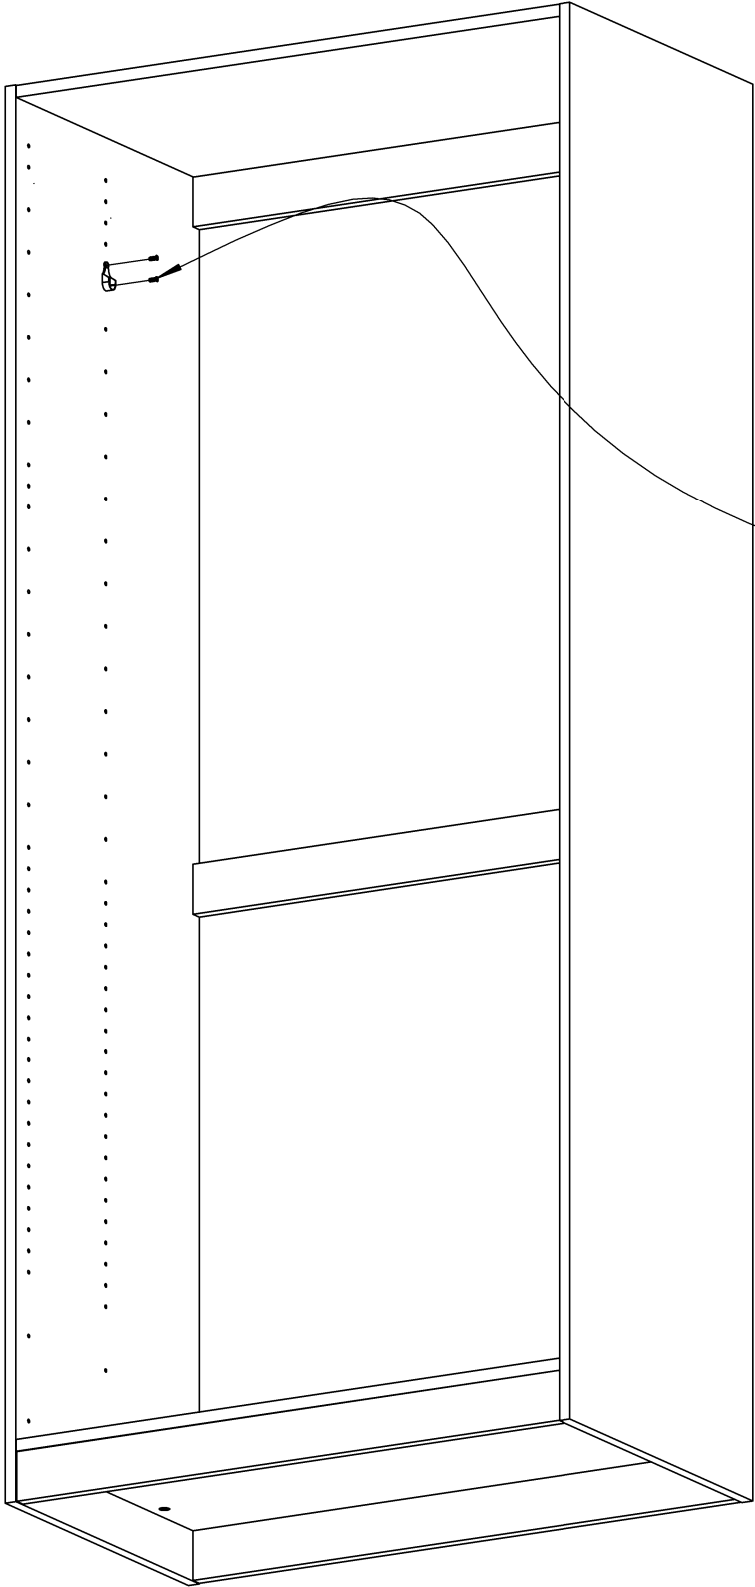


STEP 18
FIT ROD

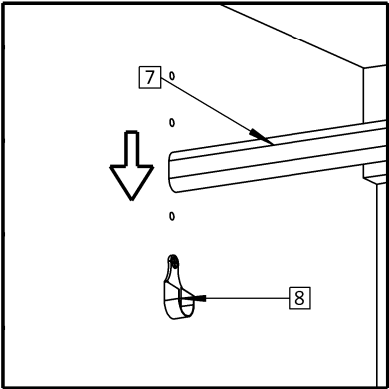



STEP 19
FIX THE SLIDERS ON THE CLOSET

ASSEMBLY INSTRUCTIONS
BOX 03

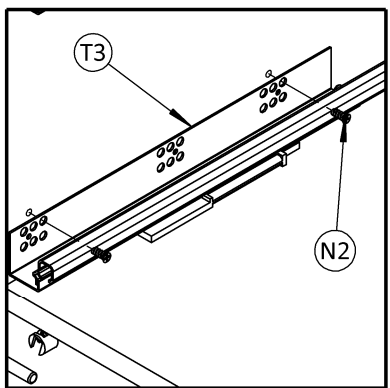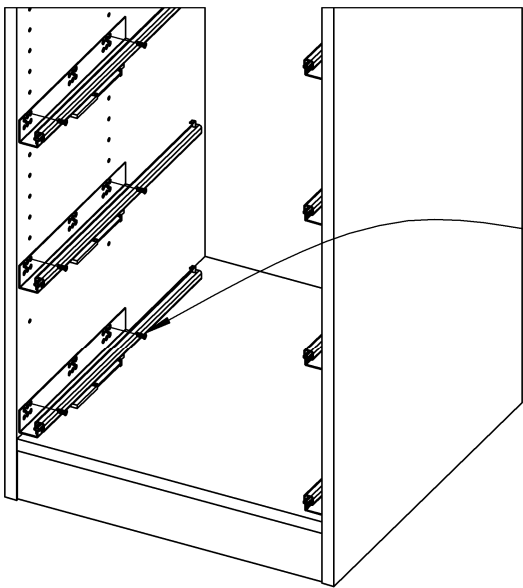

FIXING DRAWERS HARDWARES	03 (PAIR)	12
	SLIDER	SCREW 15/64 X 33/64

STEP 20
FIT THE DRAWERS ON THE SLIDERS

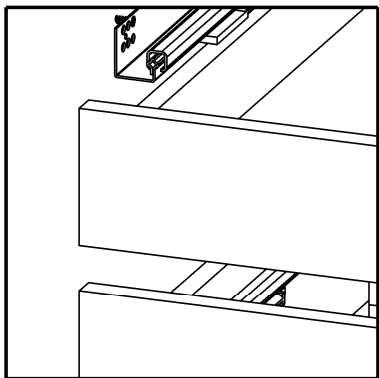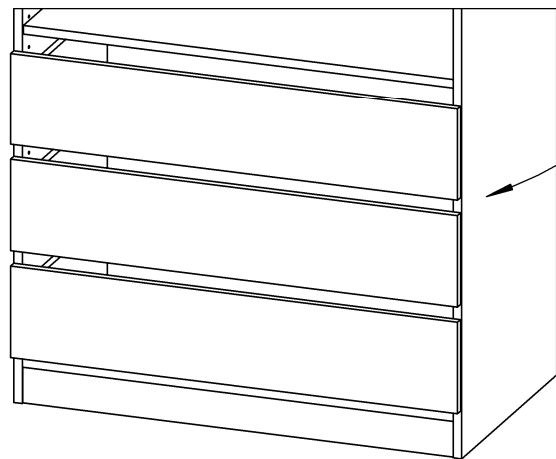

1,25" BETWEEN DRAWERS

STEP 21
FIT THE PIN DRAWERS INTO THE SLIDER

