


PARTS AND HARDWARE

Avoid using sharp objects such as a knife to open packing as you may accidentally damage the upholstery.



14mm
Spanner
1x



M8 x 90mm
Threaded Rod
6x



M8
Nut
6x



M8 x 22mm
Washer
6x



M8
Spring Washer
6x




Leg
4x




Back Cushion
2x




Pillow
2x

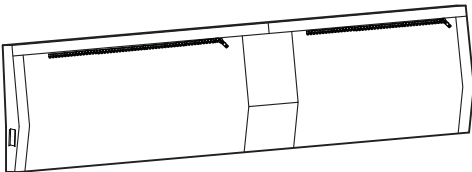

Backrest
1x

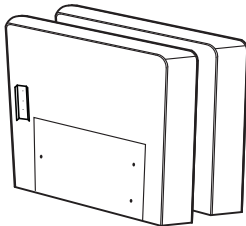


Arm
1 Pair

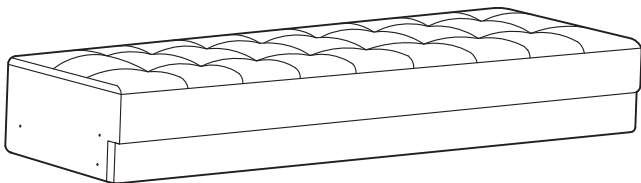

Seat Body
1x

- 7** Place accent pillows as desired .

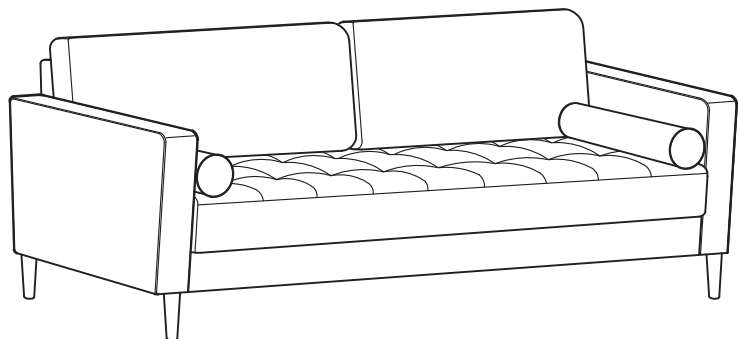


ASSEMBLY INSTRUCTIONS


CAUTION: At least two adults are required to safely complete performing this task.
Other lifting attempts may risk back injury due to large and heavy part(s).




- 1** Carefully unpack parts/hardware from storage of seat body and place on a clean flat surface.

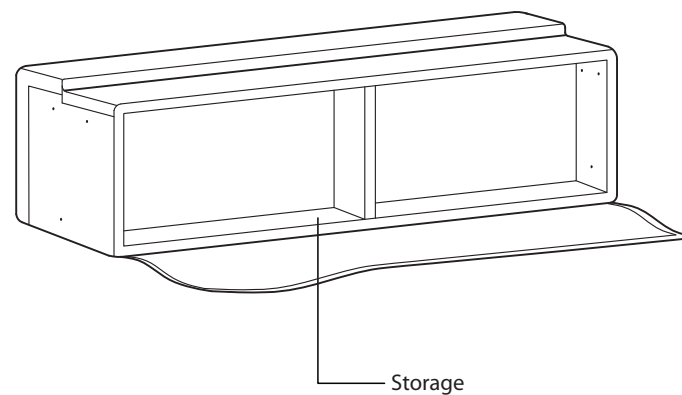


- 2** Screw in three threaded rods into pre-drilled holes of armrest by hand until about half of the thread is exposed. Repeat steps for other armrest.

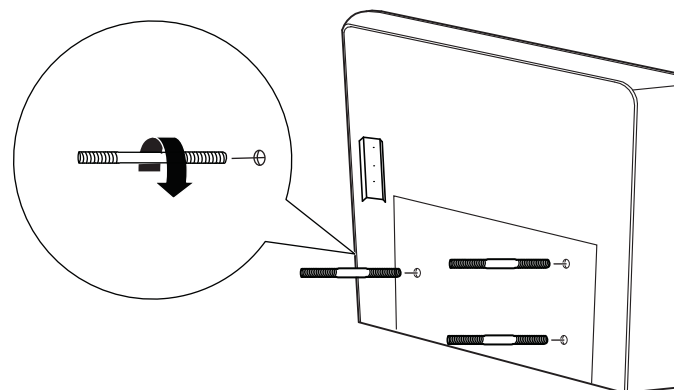


- 3** Locate pre-drilled holes on the side of sofa body and match the orientation with the correct armrest.
Now, carefully join armrest (with the three threaded rods exposed) with sofa body by aligning and going through the three pre-drilled holes at the side of sofa body.
Open compartment cover underneath the sofa base and secure all three threaded rods with flat washers, spring washers and nuts from inside with spanner, making sure there is no movement.
Repeat step for other armrest.

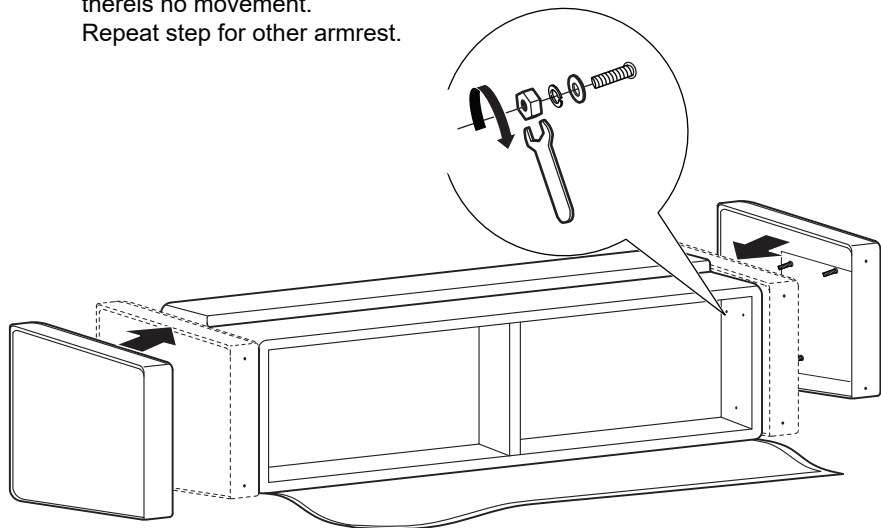

- 4** Align all four legs onto pre-drilled holes and secure by hand.
Please avoid overtightening

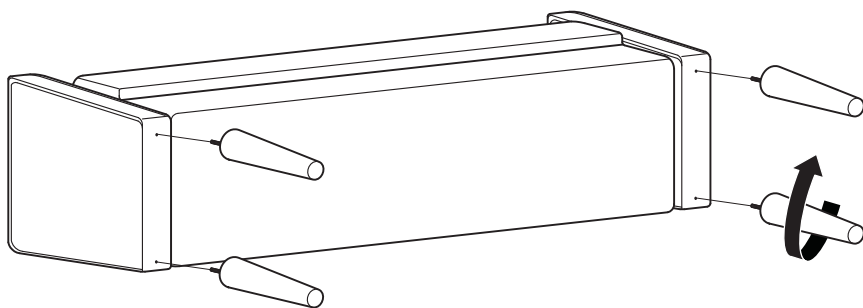

- 5** Insert backrest metal plates to both arms as shown below.
Ensuring it is correctly in place.

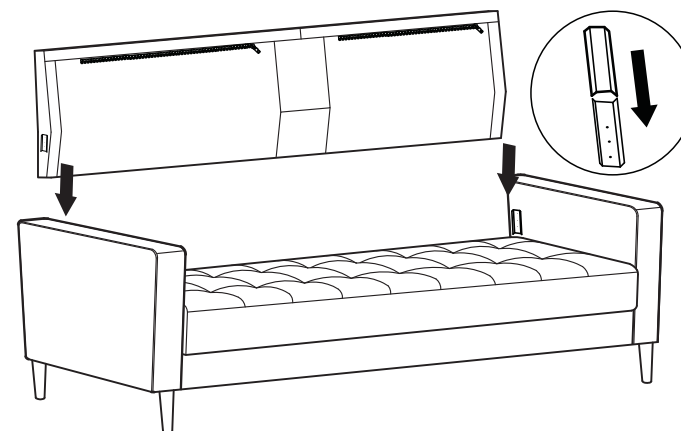

- 6** Secure both back cushions by locating the zipper end. Fasten both sides and continue all the way to the end. Flip the pillow into position when finished.

