

ASSEMBLY INSTRUCTION

Headboard

PARTS#		PARTS NAME	DRAWING	QTY
P1		Headboard		1
P2		Left Support Leg with 3 Mounting Brackets (With the sticker "Left" on the bottom)		1
P3		Right Support Leg with 3 Mounting Brackets (With the sticker "Right" on the bottom)		1
P4		Left Wing		1
P5		Right Wing		1
Pack A (Used to assemble the headboard)	H1	Bolt M8X25mm	<u> </u>	5
	H2	Spring Washer Ring		5
	Н3	Big Flat Washer Ring		5
	H4	Allen Key		1
Pack B (assemble the headboard to the bed frame)	Н5	Bolt M8X25mm	<u> </u>	4
	Н6	Spring Washer Ring		4
	Н7	Big Flat Washer Ring		4
	Н8	Nut Cap		4
	Н9	Solid Wrench	5-0	1
Pack C (assemble the wings to the headboard)	H10	Bolt M8X50mm	<u> </u>	7
	H11	Spring Washer Ring		7
	H12	Small Flat Washer Ring	0	7

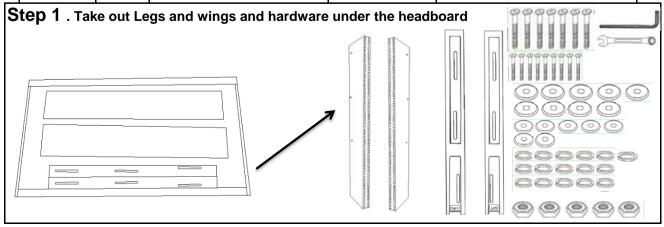


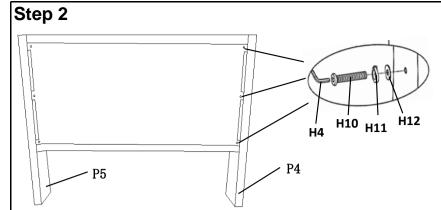

Put the Headboard onto a flat surface.

Align the mounting position on Headboard to the mounting position on Left Wing(P4). Then, lock the mounting positions by using Flat washer (H12), Spring washer(H11), bolt(H10), Then tighten the bolts with allen wrench (H4). Repeat the same steps to install

Step 3

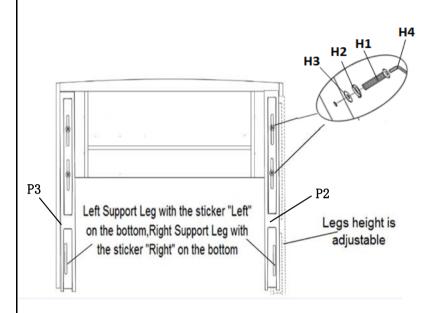

Put the Headboard onto a flat surface.

the Right Wing(P5).

Align the mounting position on Headboard to the mounting position on Left Support Leg(P2).

Then, lock the top and the middle mounting positions by using Flat washer (H3), Spring washer(H2), bolt(H1), Then tighten the bolts with allen wrench (H4).

Repeat the same steps to install the Right Support Leg(P3). At this point of assembly, DO NOT overfasten the connections. The final height of the Headboard may be adjusted to your own need.

Step 4 . Headboard is ready to be assembled to bed frame using Pack B Parts.

