

ASSEMBLY INSTRUCTION


FULL BED

IMPORTANT SAFETY NOTICE READ CAREFULLY BEFORE BEGINNING ASSEMBLY!



- * Before you begin, please read the Assembly Instruction carefully, identify all the parts, and hardware included. Do Not skip any steps and follow the assembly steps in order.
- * Place parts on the carton while installing to prevent damage or scratches. Be sure to check all packing materials carefully for small parts may have come loose inside the cartoon during shipment. If parts are missing, contact the retailer from which your purchased the product to obtain any missing part. **DO NOT USE SUBTITUTE PART.**
- * Some steps may require two or more people, do not attempt by yourself as there is a risk injury.

NOTE: WE DISCLAIM ANY LIABILITY FOR DAMAGES OR INJURIES WHICH MAY OCCUR DUE TO FAILURE TO PROPERLY FOLLOW ASSEMBLY INSTRUCTION, FAILURE TO PROPER ASSEMBLY OR FAILURE TO PROPERLY USE OF THE PRODUCT.

NOTE: YOUR UNIT MAY LOOK DIFFERENT IN APPEARANCE FROM THE ONE SHOWN IN THE ILLUSTRATIONS ON THIS INSTRUCTION SHEET.

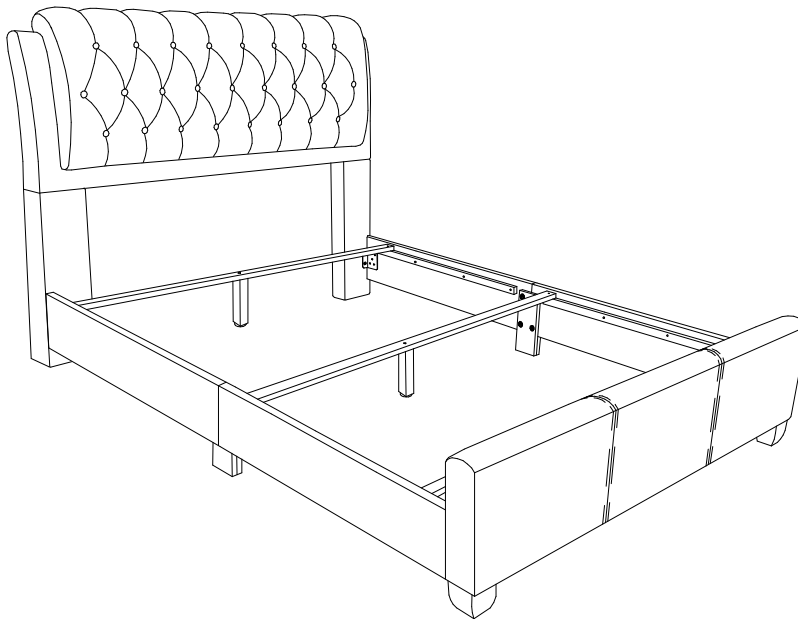

Required Tools : Screwdriver

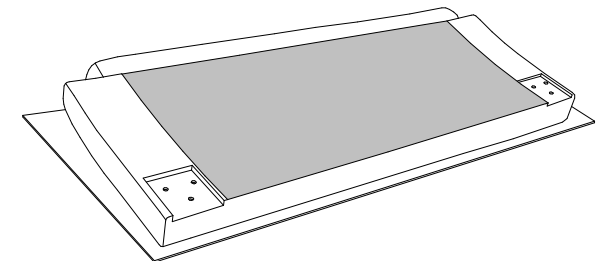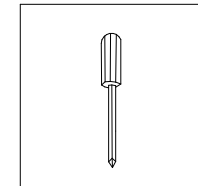


Please place on the carton while installing to prevent damage or scratches.

ASSEMBLY INSTRUCTION

FULL BED


ASSEMBLY PART

1.

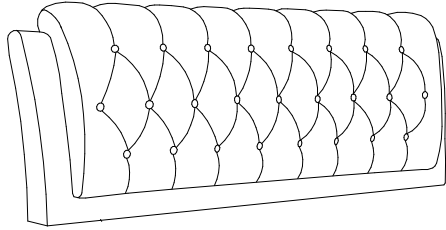


HEADBOARD PANEL

2.

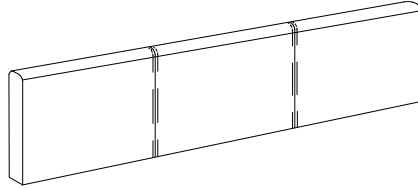


FOOTBOARD PANEL

3.

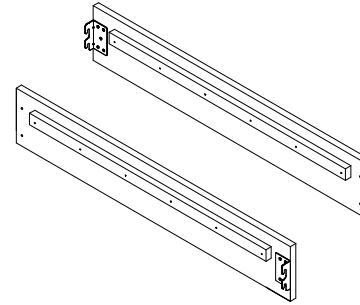

SIDE RAIL RIGHT (2PCS)

4.

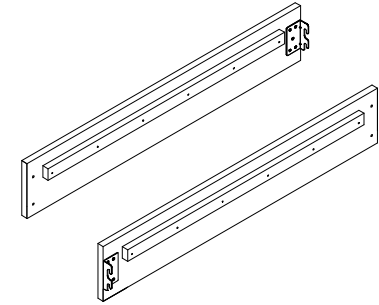


SIDE RAIL LEFT (2PCS)

5.




SUPPORT LEG (3PCS)

6.




FOOTBOARD LEG
(2PCS)

7.



SIDE RAIL LEG (2PCS)

8.

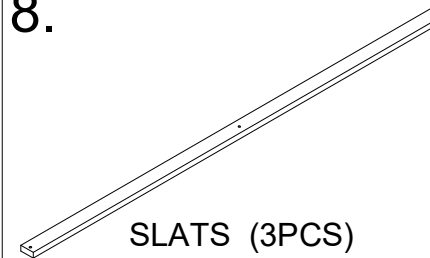

SLATS (3PCS)

9.











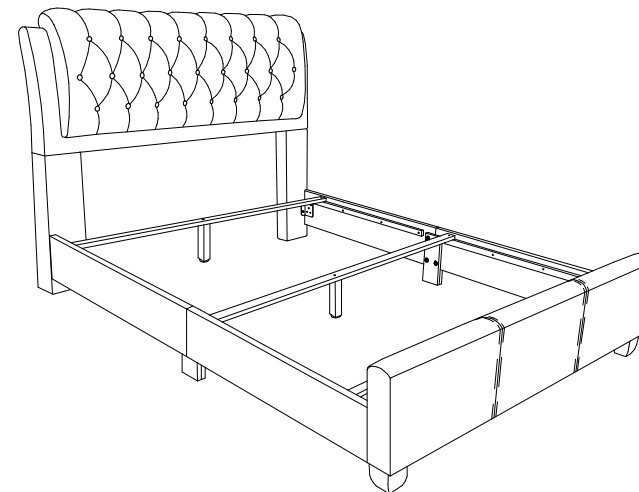
HEADBOARD
LEFT LEG

10.



HEADBOARD
RIGHT LEG

NO	HARDWARE DESCRIPTION	QTY
A.	Allen Key M4 x 100mm 	1PC
B.	Allen Key M5 x 65mm 	1PC
C.	JCBC Bolt M6 x 35mm 	17PCS
D.	JCBC Bolt M6 x 60mm 	2PCS
E.	JCBB Bolt M8 x 16mm 	8PCS
F.	Spring Washer 	14PCS
G.	Flat Washer 	14PCS
H.	Chipboard Screw M4 x 32mm 	6PCS




ASSEMBLY INSTRUCTION

FULL BED


STEP 1.

Open the cover cloth located behind the Headboard and remove all parts and hardware.

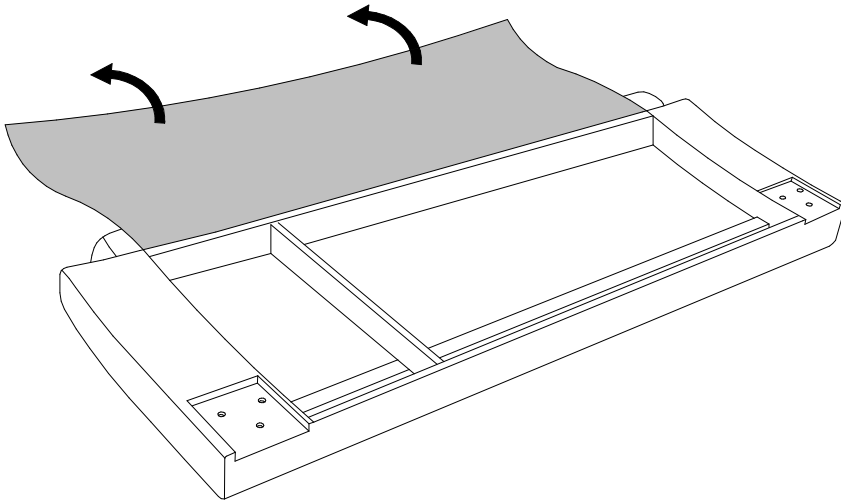

STEP 2.

Attach the Headboard Right Leg (10) and Headboard Left Leg (9) use JCBC Bolt (C), Spring Washer (F) & Flat Washer (G) and Allen Key (A) to fix.

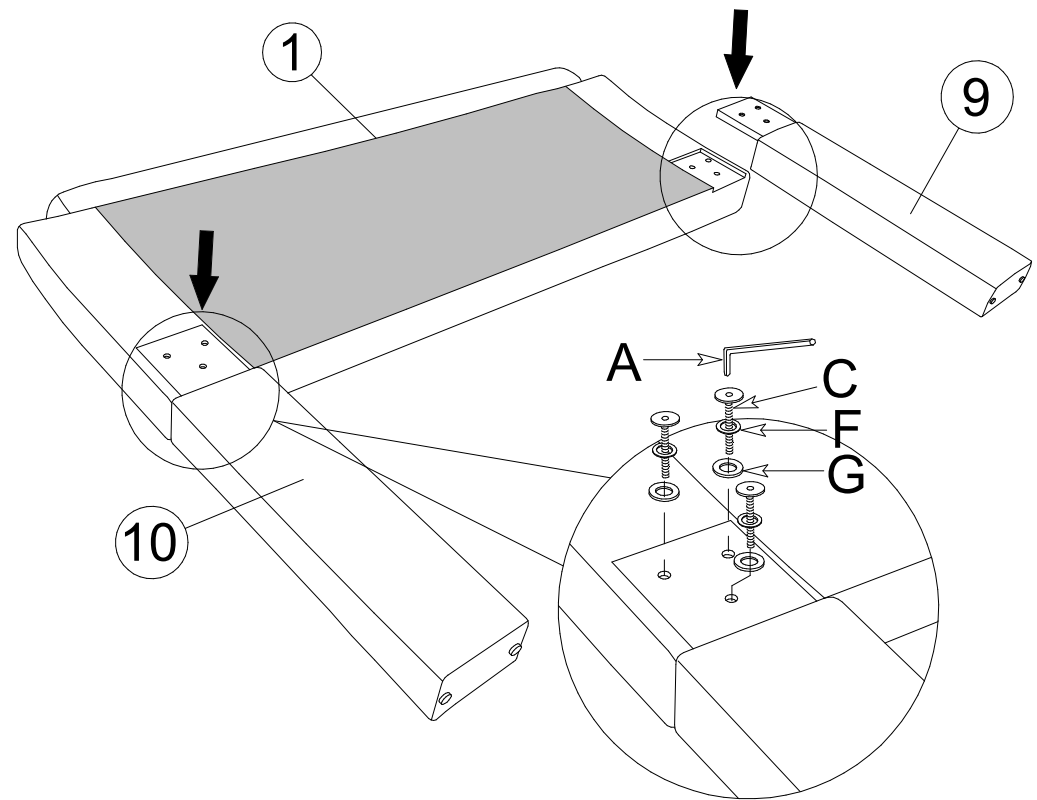


ASSEMBLY INSTRUCTION

FULL BED


STEP 3.

Attach the Slats (8) to Support Leg (5). Use JCBC Bolt (C) and Allen Key (A) to fix.

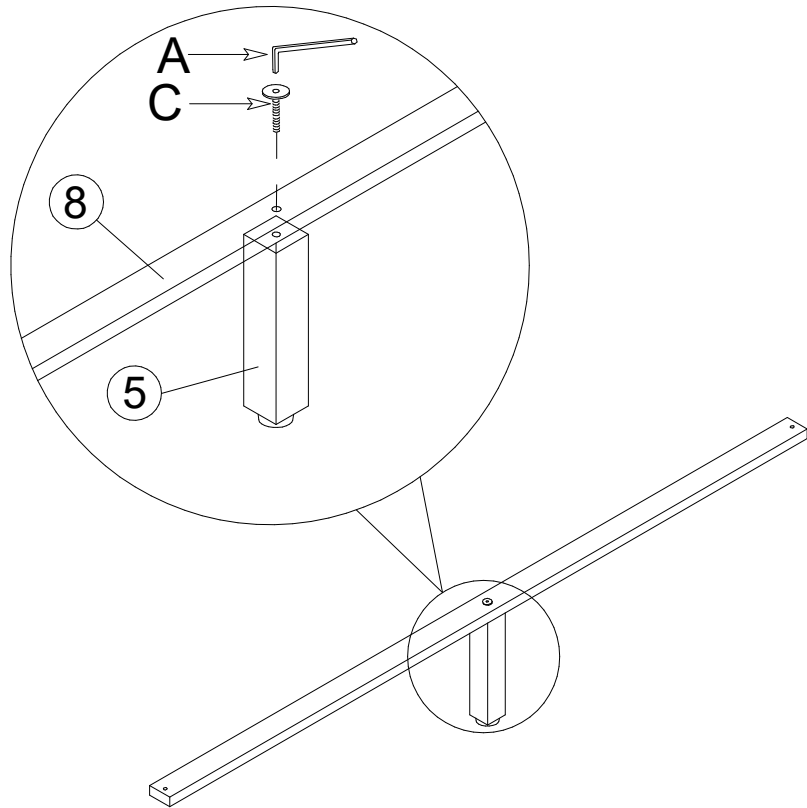

STEP 4.

Attach and tighten the Side Rail Right (3) (2pcs) & Side Rail Left (4) (2pcs) to Side Rail Leg (7) (2pcs.) Use JCBC Bolt (C), Spring Washer (F), Flat Washer (G) and Allen Key (A) to fix.

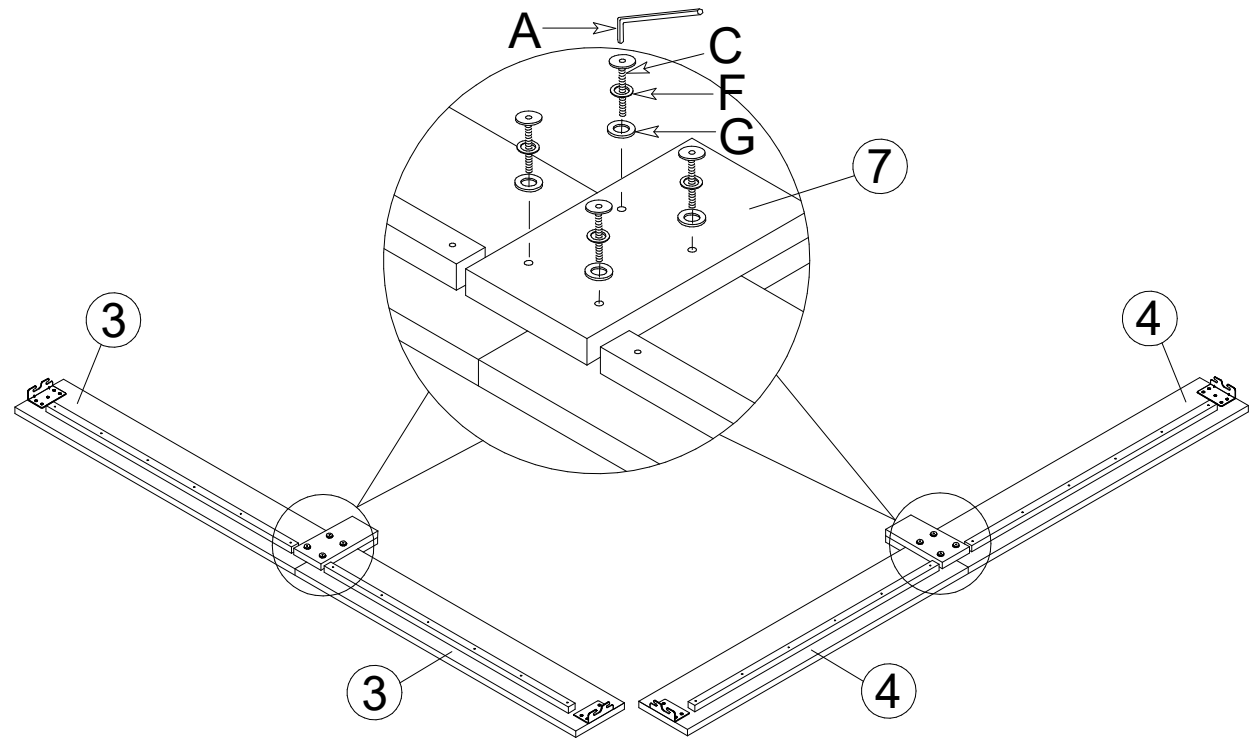


ASSEMBLY INSTRUCTION

FULL BED


STEP 5.

Attached the Footboard Leg (6)(2pcs) to Footboard Panel (2).
Use JCBC Bolt (D) and Allen Key (A) to fix.

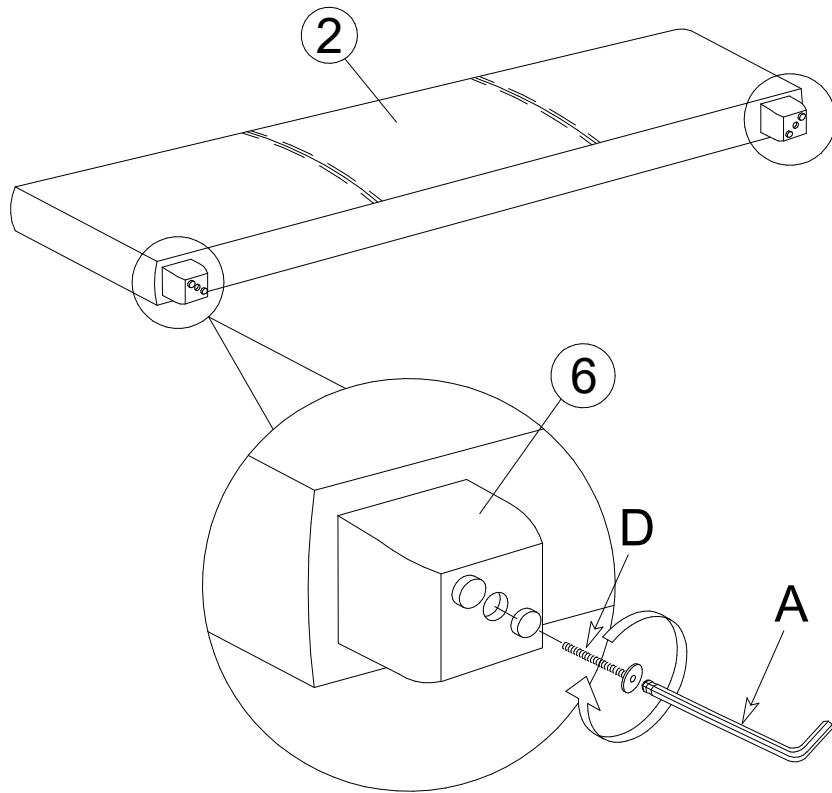

STEP 6.

Attach (hook) the Side Rail to Headboard Left Leg (9), Headboard Right Leg (10) and Footboard Panel (2). Use JCBB Bolt (E) and Allen Key (B) to fix.

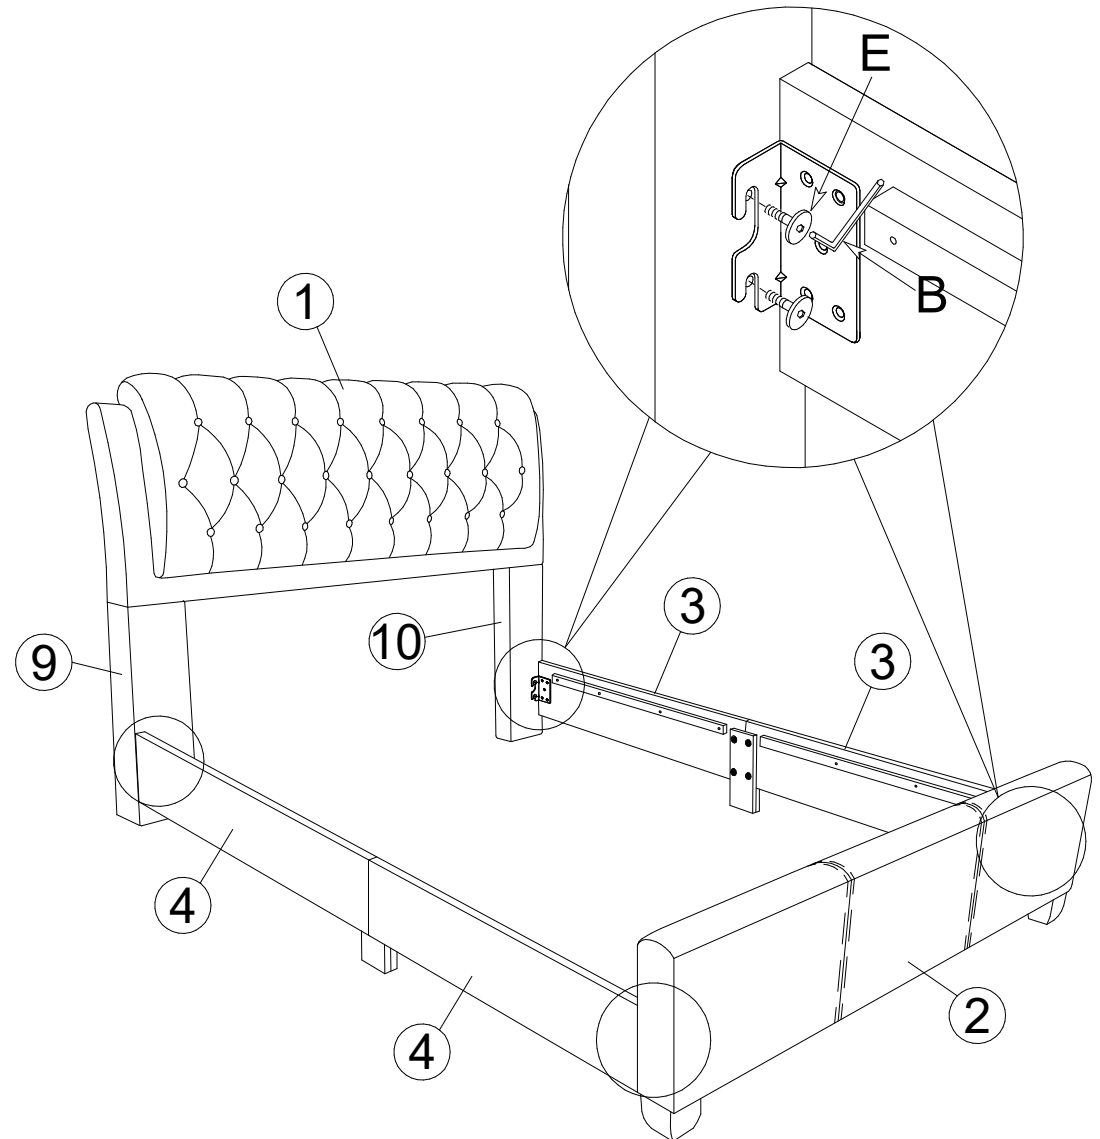

STEP 7.

Attach and tighten the Slats (8) to Side Rail. Adjusting the leg adjuster to the floor. Use screw M4 x 32mm (H) and screwdriver to fix.

