






























# ASSEMBLY INSTRUCTIONS

QUEEN STORAGE BED								
No	Part List	Qty.	No	Part List	Qty.	No	Hardware List	Qty
A	HeadBoard 	1 PC	K	Headboard Back Support - 20 x 30 x 1560mm 	1 PC	5	SPRING WASHER M6 	21 PCS
B	FootBoard 	1 PC	L	Drawer Support Rail - 1 	1 PC	6	FLAT WASHER M6 	21 PCS
C	Headboard Leg (L/R) 	2 PCS	M	Drawer Support Rail - 2 	4 PCS	7	ALLEN KEY M4 x 110MM 	1 PC
D	Side Rail ( L/R) 	2 PCS	N	Support Leg 1 - 30 x 30 x 518mm 	5 PCS	8	HANDLE 	8 PCS
E	Drawer - 1 	4 PCS	O	Support Leg 2 - 30 x 30 x 95mm 	1 PC	9	T/HEAD SCREW HANDLE - M4 x 48mm 	4 PCS
F	Drawer - 2 	2 PCS	P	Support Leg 3 - 30 x 30 x 107mm 	1 PC	10	T/HEAD SCREW HANDLE - M4 x 50mm 	4 PCS
G	Bed Slat 	5 PCS	Q	Headboard Back Support LVL - 18 x 45 x 1560mm 	1 PC	11	Z - BRACKET 	1 PC
H	Footboard Drawer Frame 	1 PC	No Hardware List Qty					
I	Concealed Panel Slat 	5 PCS	1	CSK SCREW M4 x 32MM 	24 PCS			
J	Triangle Support Panel - 9 x 200 x 200mm 	2 PCS	2	P/HEAD SCREW M3.5 x 16MM 	35 PCS			
			3	JCBC BOLT M6 x 35MM 	19 PCS			
			4	JCBC BOLT M6 x 50MM 	8 PCS			



**NOTE : DURING ASSEMBLY, DO NOT TIGHTEN ANY HARDWARE UNTIL THE COMPLETE UNIT HAS BEEN ASSEMBLED.**

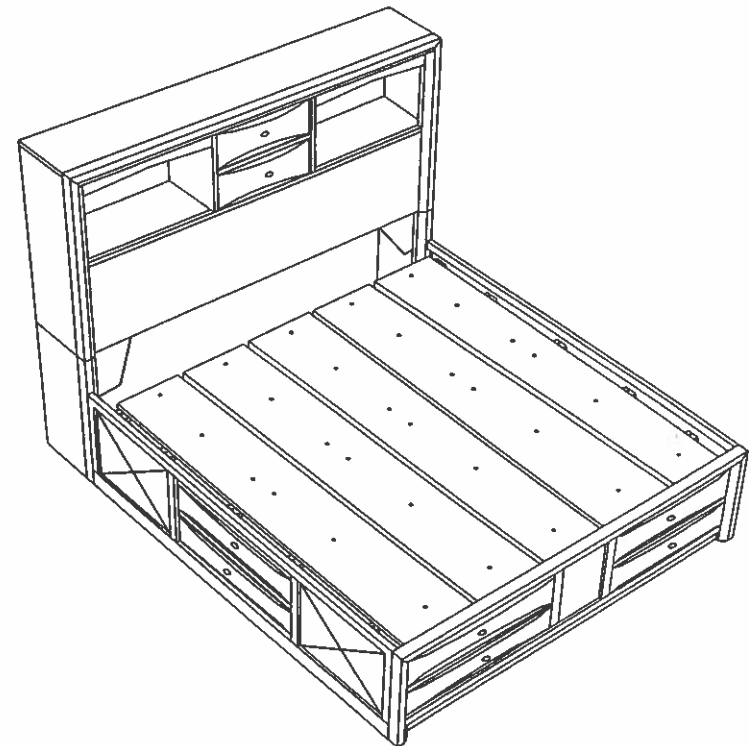



**NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**

# ASSEMBLY INSTRUCTIONS

**STEP 1 : Attached and tighten the Headboard Leg L/R ( C ) to the Headboard ( A ).Insert Spring Washer ( 5 ) Flat Washer ( 6 ),use JCBC Bolt ( 3 ) to fix with Allen Key ( 7 ).**

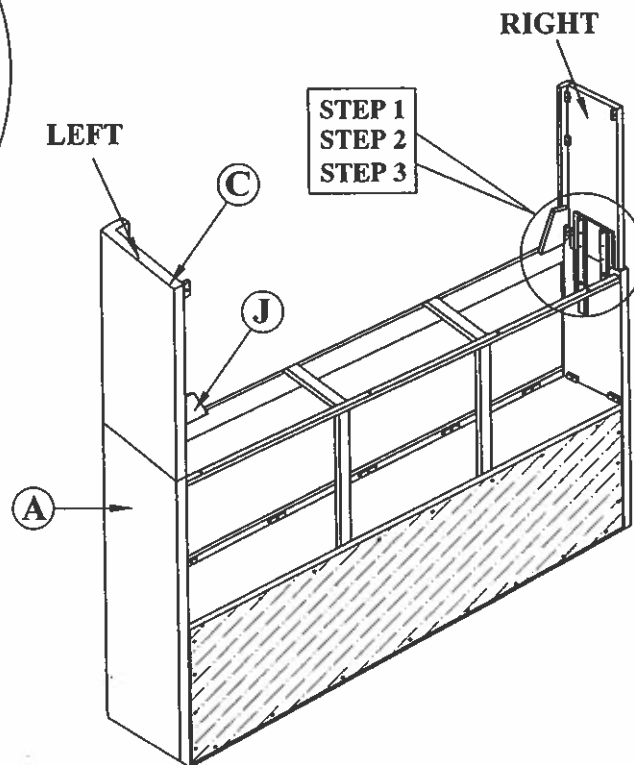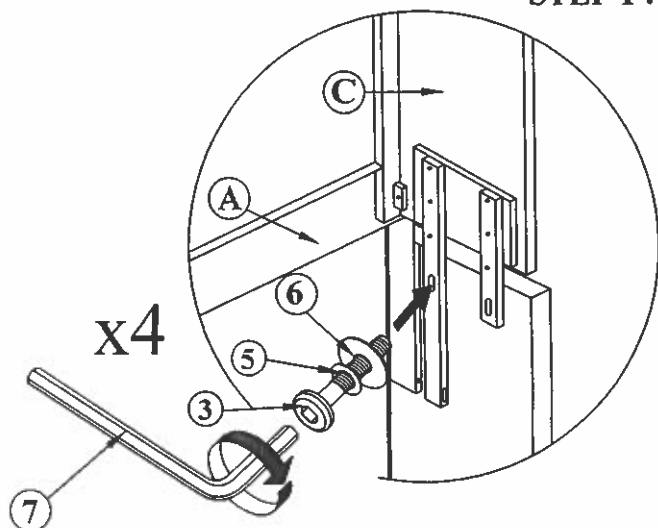


**STEP 3 : Attached and tighten the Triangle Support Panel ( J ) to the Headboard and fix the Panhead Screw ( 2 ) using Screw Driver.( Not Included )**

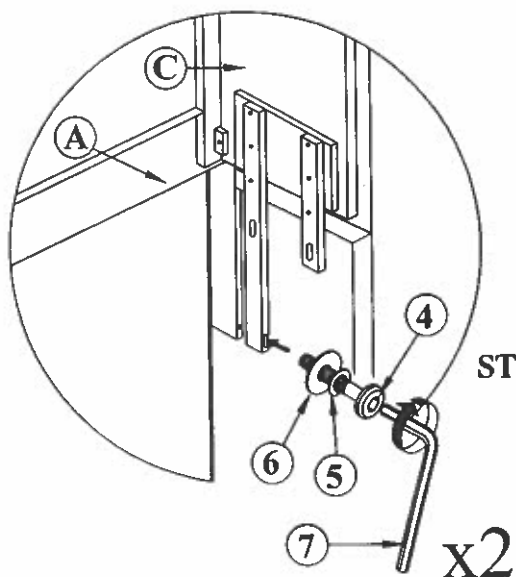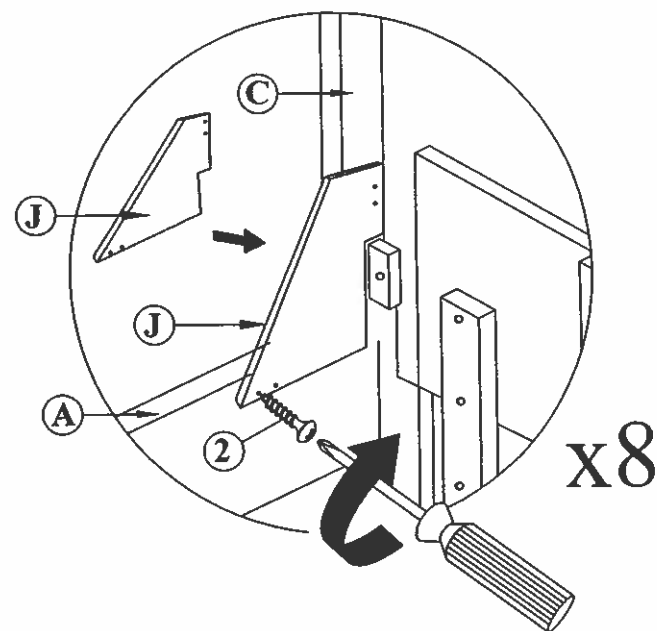


**STEP 2 : Attached and tighten the Headboard Leg L/R ( C ) to the Headboard ( A ).Insert Spring Washer ( 5 ) Flat Washer ( 6 ),use JCBC Bolt ( 4 ) to fix with Allen Key ( 7 ).**

# ASSEMBLY INSTRUCTIONS

**STEP 4 :** Attach Headboard Back Support ( K ) and ( Q ) follow the picture. Fix the CSK Screw ( 1 ) using a Screw Driver.  
( Not Included )

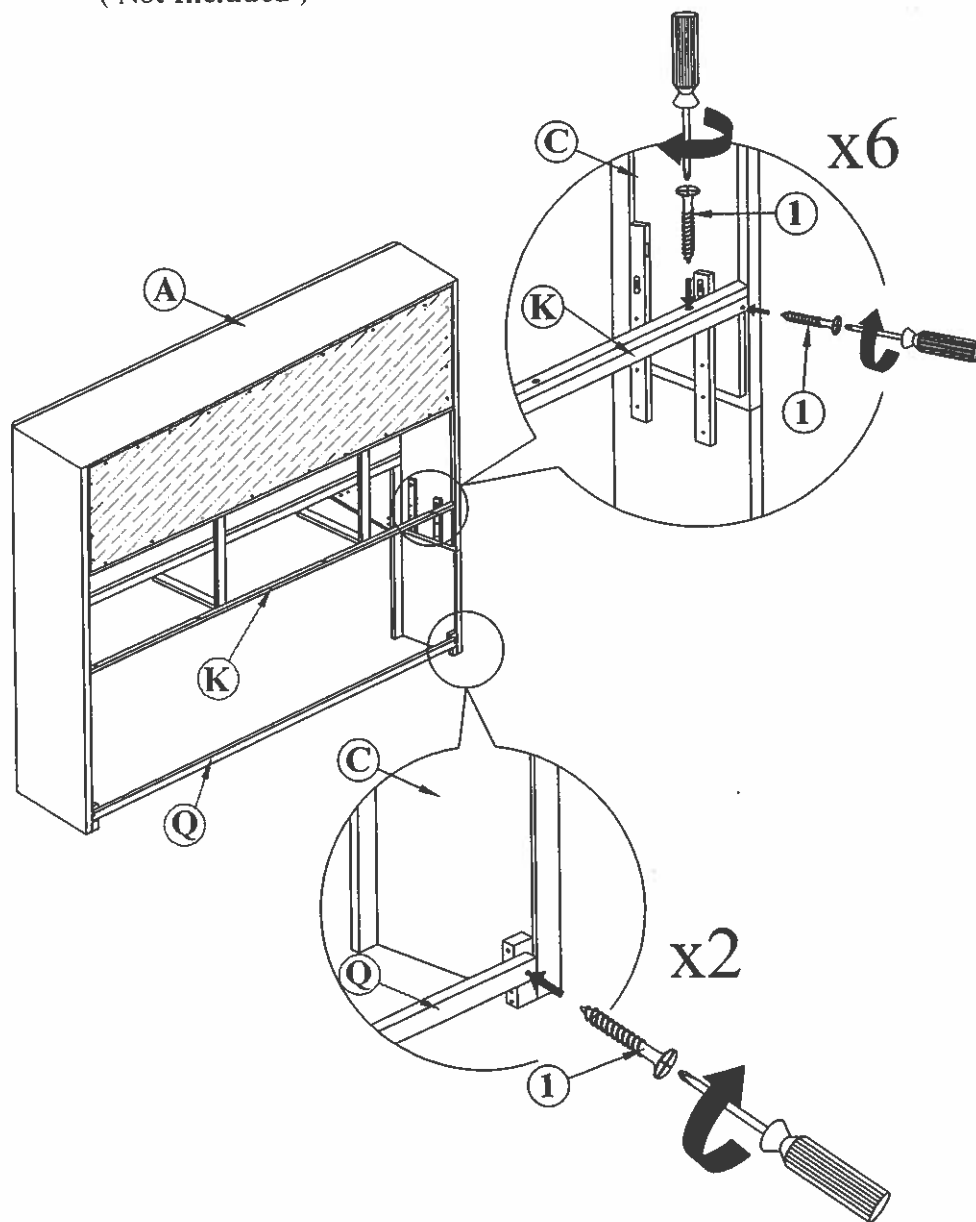

**STEP 5 :** Attach the Side Rail ( D ) to the Headboard Leg ( C ) and Footboard ( B ). Insert Spring Washer ( 5 ), Flat Washer ( 6 ), use JCBC Bolt ( 3 ) to fix with Allen Key ( 7 ).

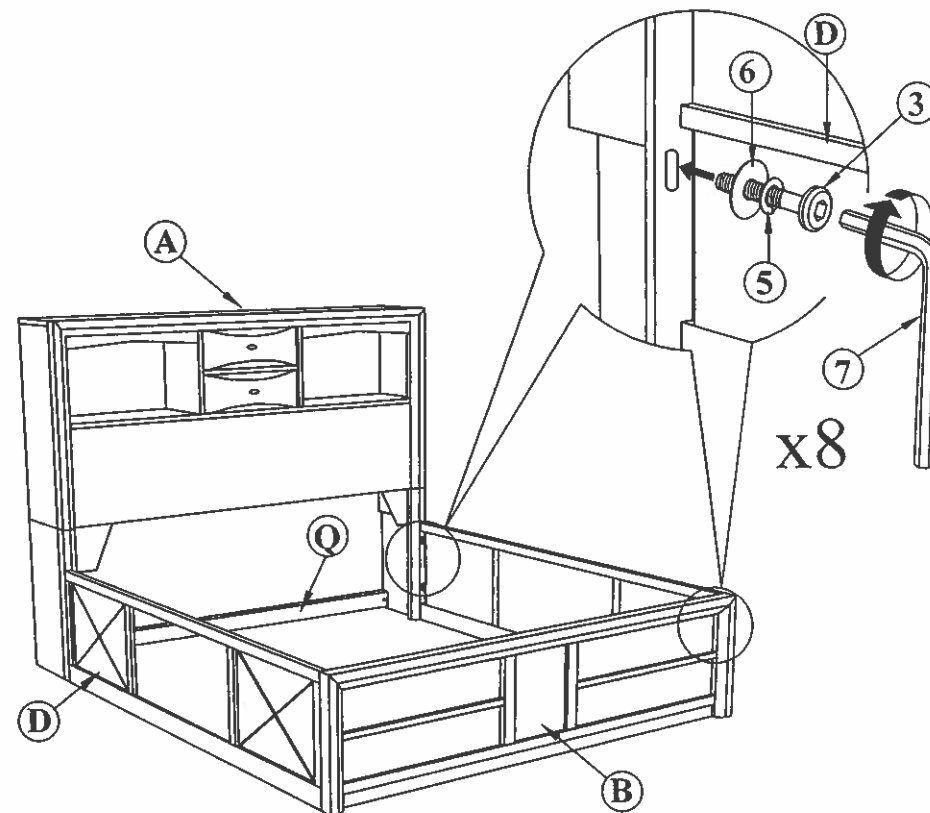


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 3 OF 7

# ASSEMBLY INSTRUCTIONS

**STEP 6 :** Attach the Footboard Drawer Frame ( H ) to the Side Rail ( D ).Insert Spring Washer ( 5 ), Flat Washer ( 6 ) & JCBC Bolt ( 3 ) to fix with Allen Key ( 7 ).

**STEP 9 :** Attach the Drawer Support Rail ( M ) to the Footboard Drawer Frame ( H ).Insert Spring Washer ( 5 ),Flat Washer ( 6 ) & JCBC Bolt ( 3 ) to fix with Allen Key ( 7 ).

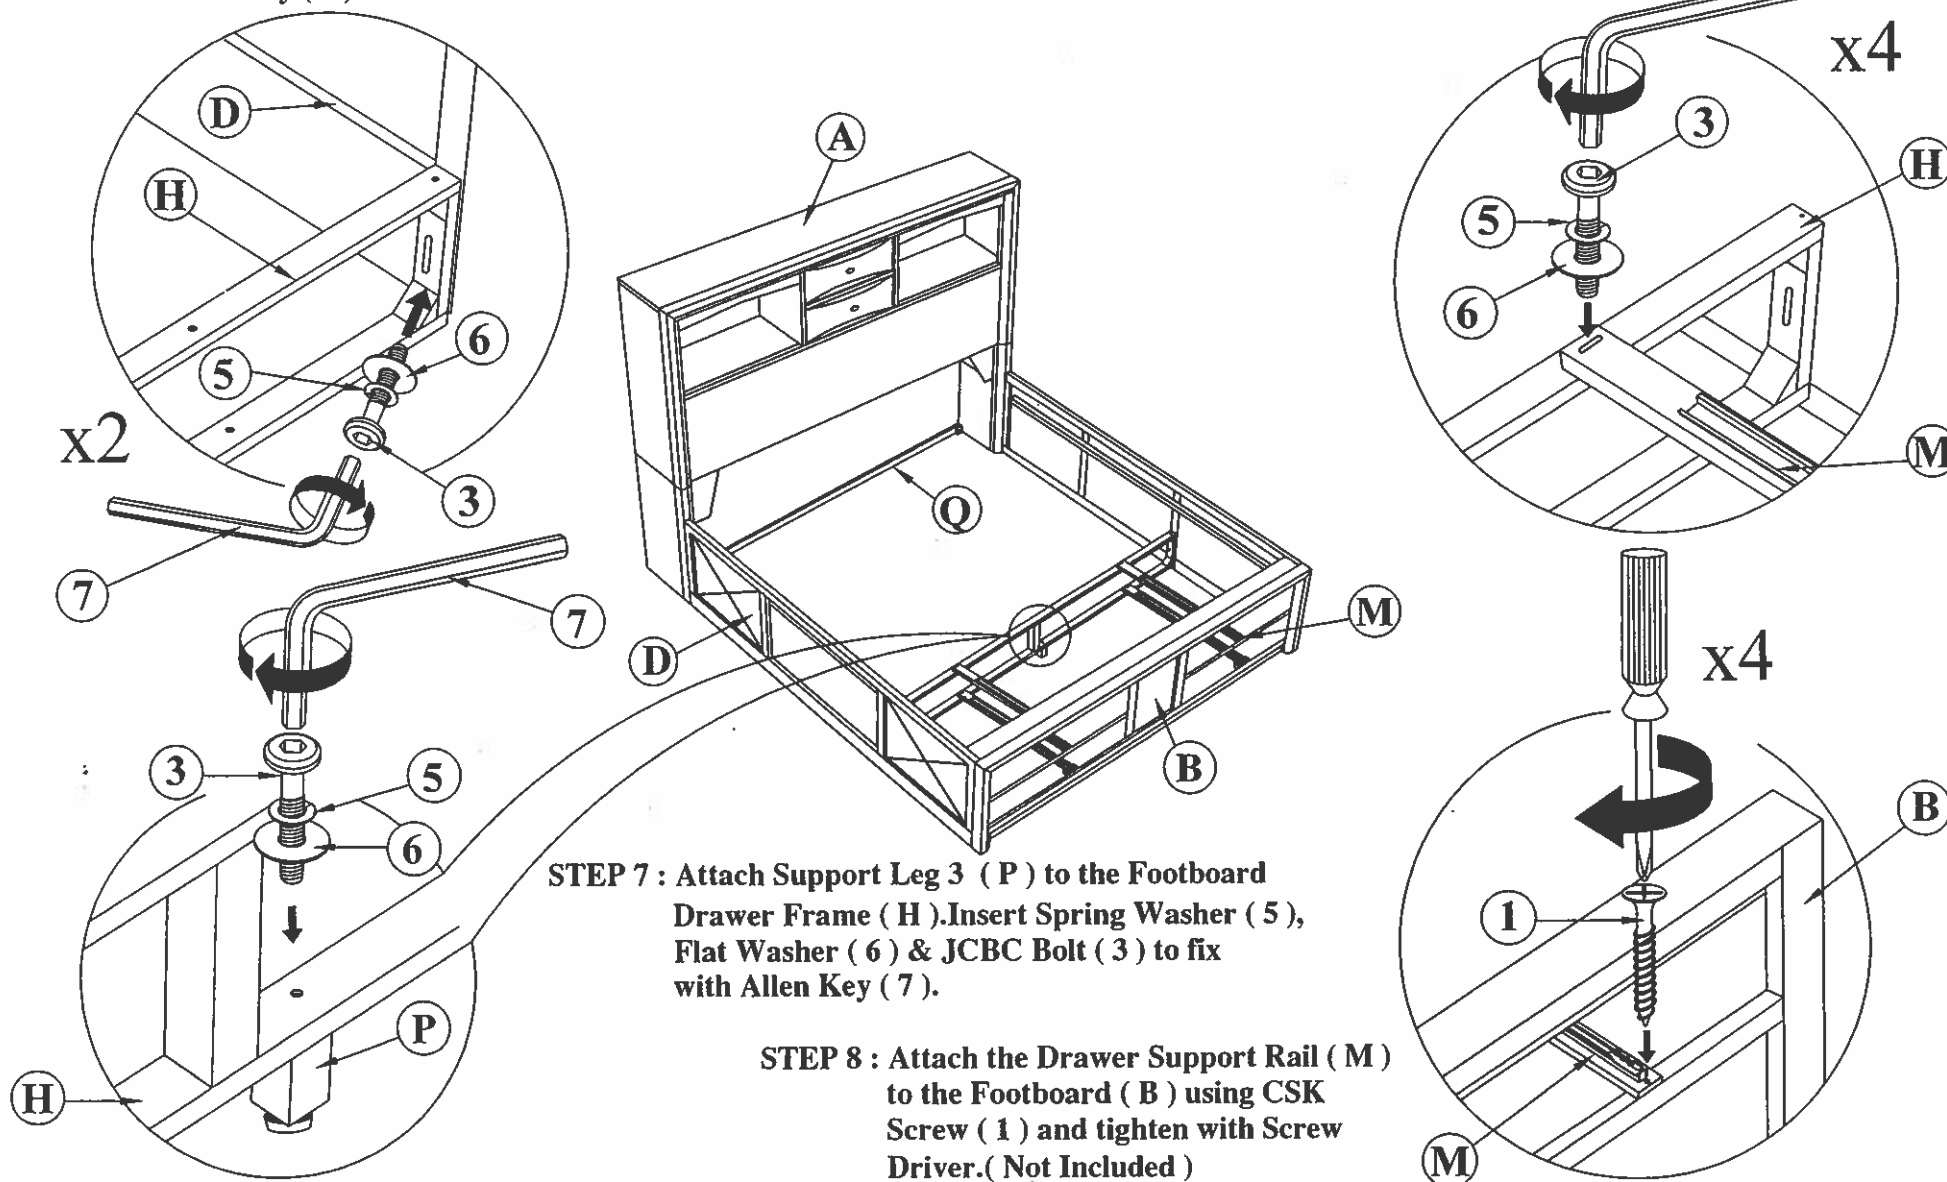

**STEP 7 :** Attach Support Leg 3 ( P ) to the Footboard Drawer Frame ( H ).Insert Spring Washer ( 5 ), Flat Washer ( 6 ) & JCBC Bolt ( 3 ) to fix with Allen Key ( 7 ).

**STEP 8 :** Attach the Drawer Support Rail ( M ) to the Footboard ( B ) using CSK Screw ( 1 ) and tighten with Screw Driver.( Not Included )


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 4 OF 7

# ASSEMBLY INSTRUCTIONS

**STEP 10 : Attach Support Leg 2 ( O ) to the Drawer Support Rail ( L ). Use JCBC Bolt ( 4 ) to fix with Allen Key ( 7 ).**



**Step 12 : Attach Bed Slat ( G ) to the Bed Slat Support ( N ). Use JCBC Bolt ( 4 ) to fix with Allen Key ( 7 ). ( Loosen and tighten the Adjuster to stability of bed )**

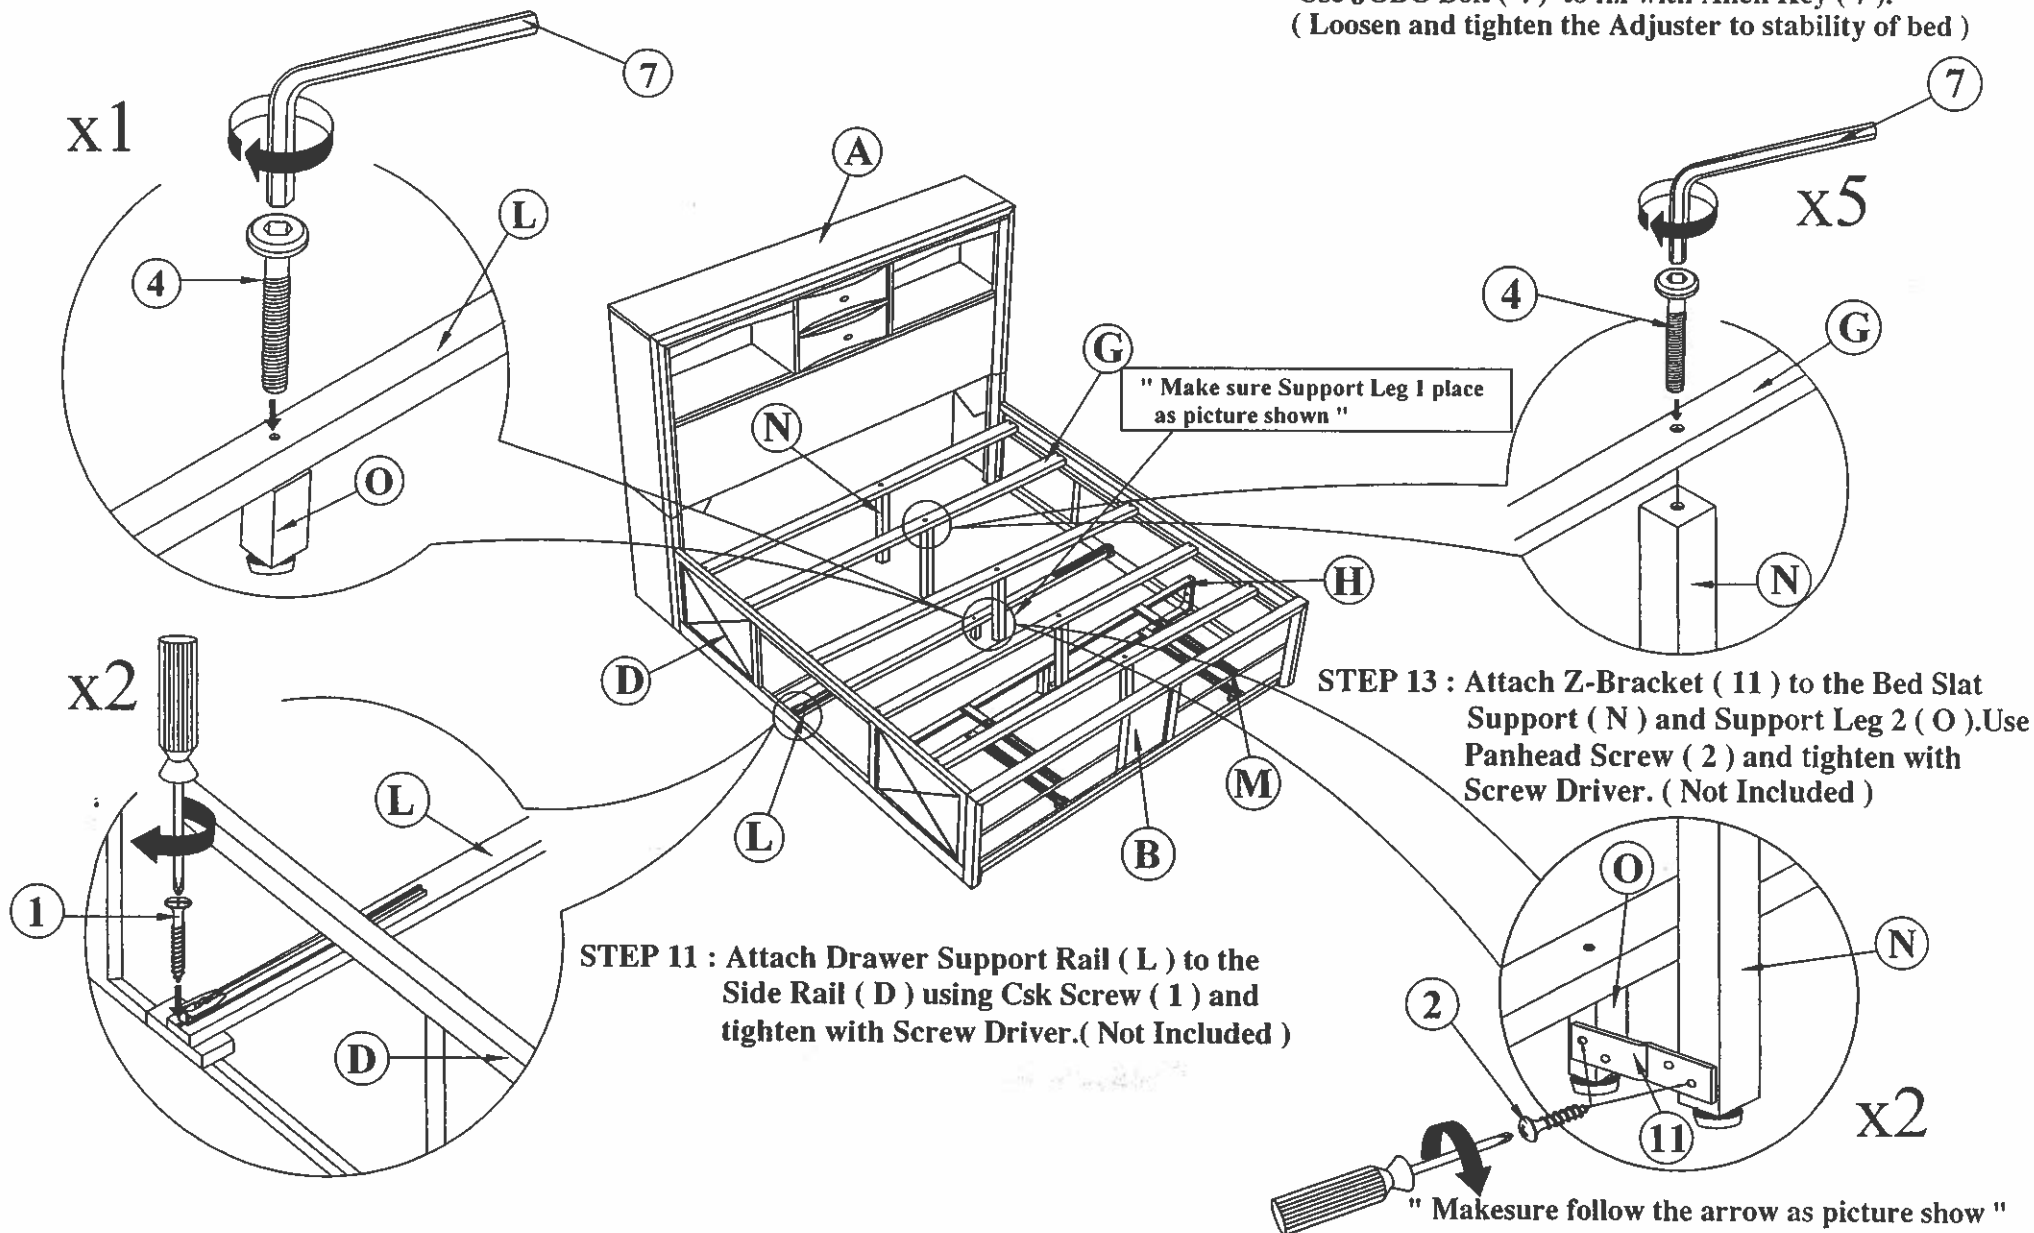



**NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.**

# ASSEMBLY INSTRUCTIONS



**STEP 14 : Attach Drawer-2 ( F ) on Drawer Support Rail -1 ( L ).**

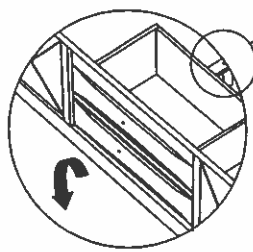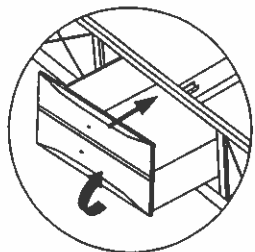


Adjust the adjuster for the stability of bed

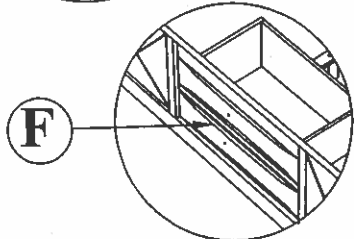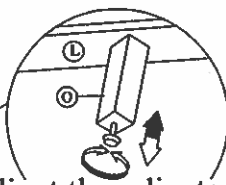



**STEP 15 : Attach Drawer-1 ( E ) on Drawer Support Rail -2 ( M ).**

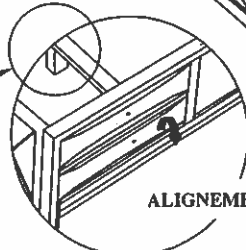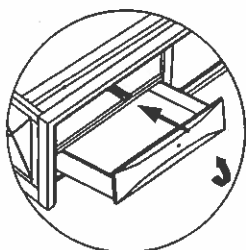


ALIGNMENT

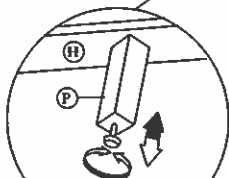


Adjust the adjuster for the stability of bed

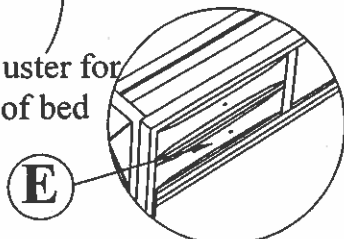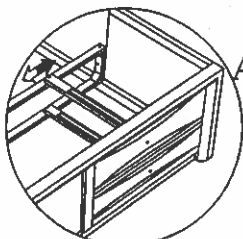


**STEP 16 : Install the Handle ( 8 ) in front of drawer. Tighten the Handle Screw ( 10 ) using Screw Driver.( Not Included )**

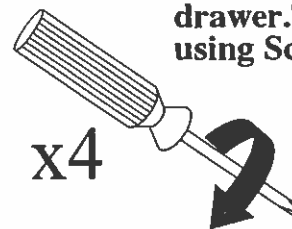


x4

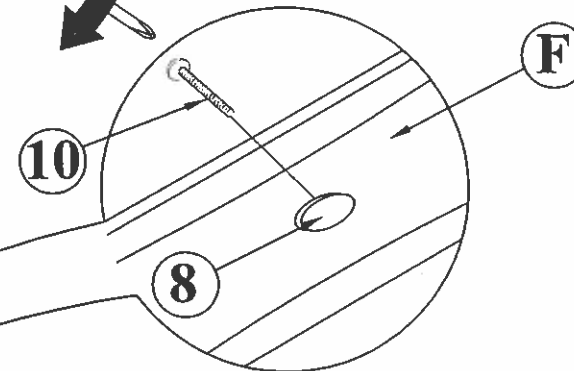

**STEP 17 : Install the Handle ( 8 ) in front of drawer. Tighten the Handle Screw ( 9 ) using Screw Driver.( Not Included )**

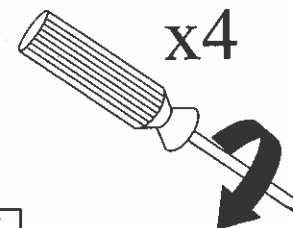

x4

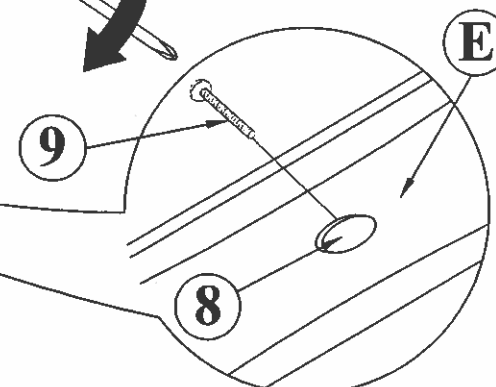


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

PAGE 6 OF 7

# ASSEMBLY INSTRUCTIONS

**STEP 18 :** Push the Side Rail ( D ) with Bed Slat ( G ) and tighten with CSK Screw ( 1 ) by using Screw Driver.( Not Included )  
( Make sure follow the center Marking Line as shown )

**STEP 20 :** Attach Concealed Panel Slat ( I ) at the Upper Bed Slat ( G ) using Panhead Screw ( 2 ) and tighten with Screw Driver. ( Not Included )

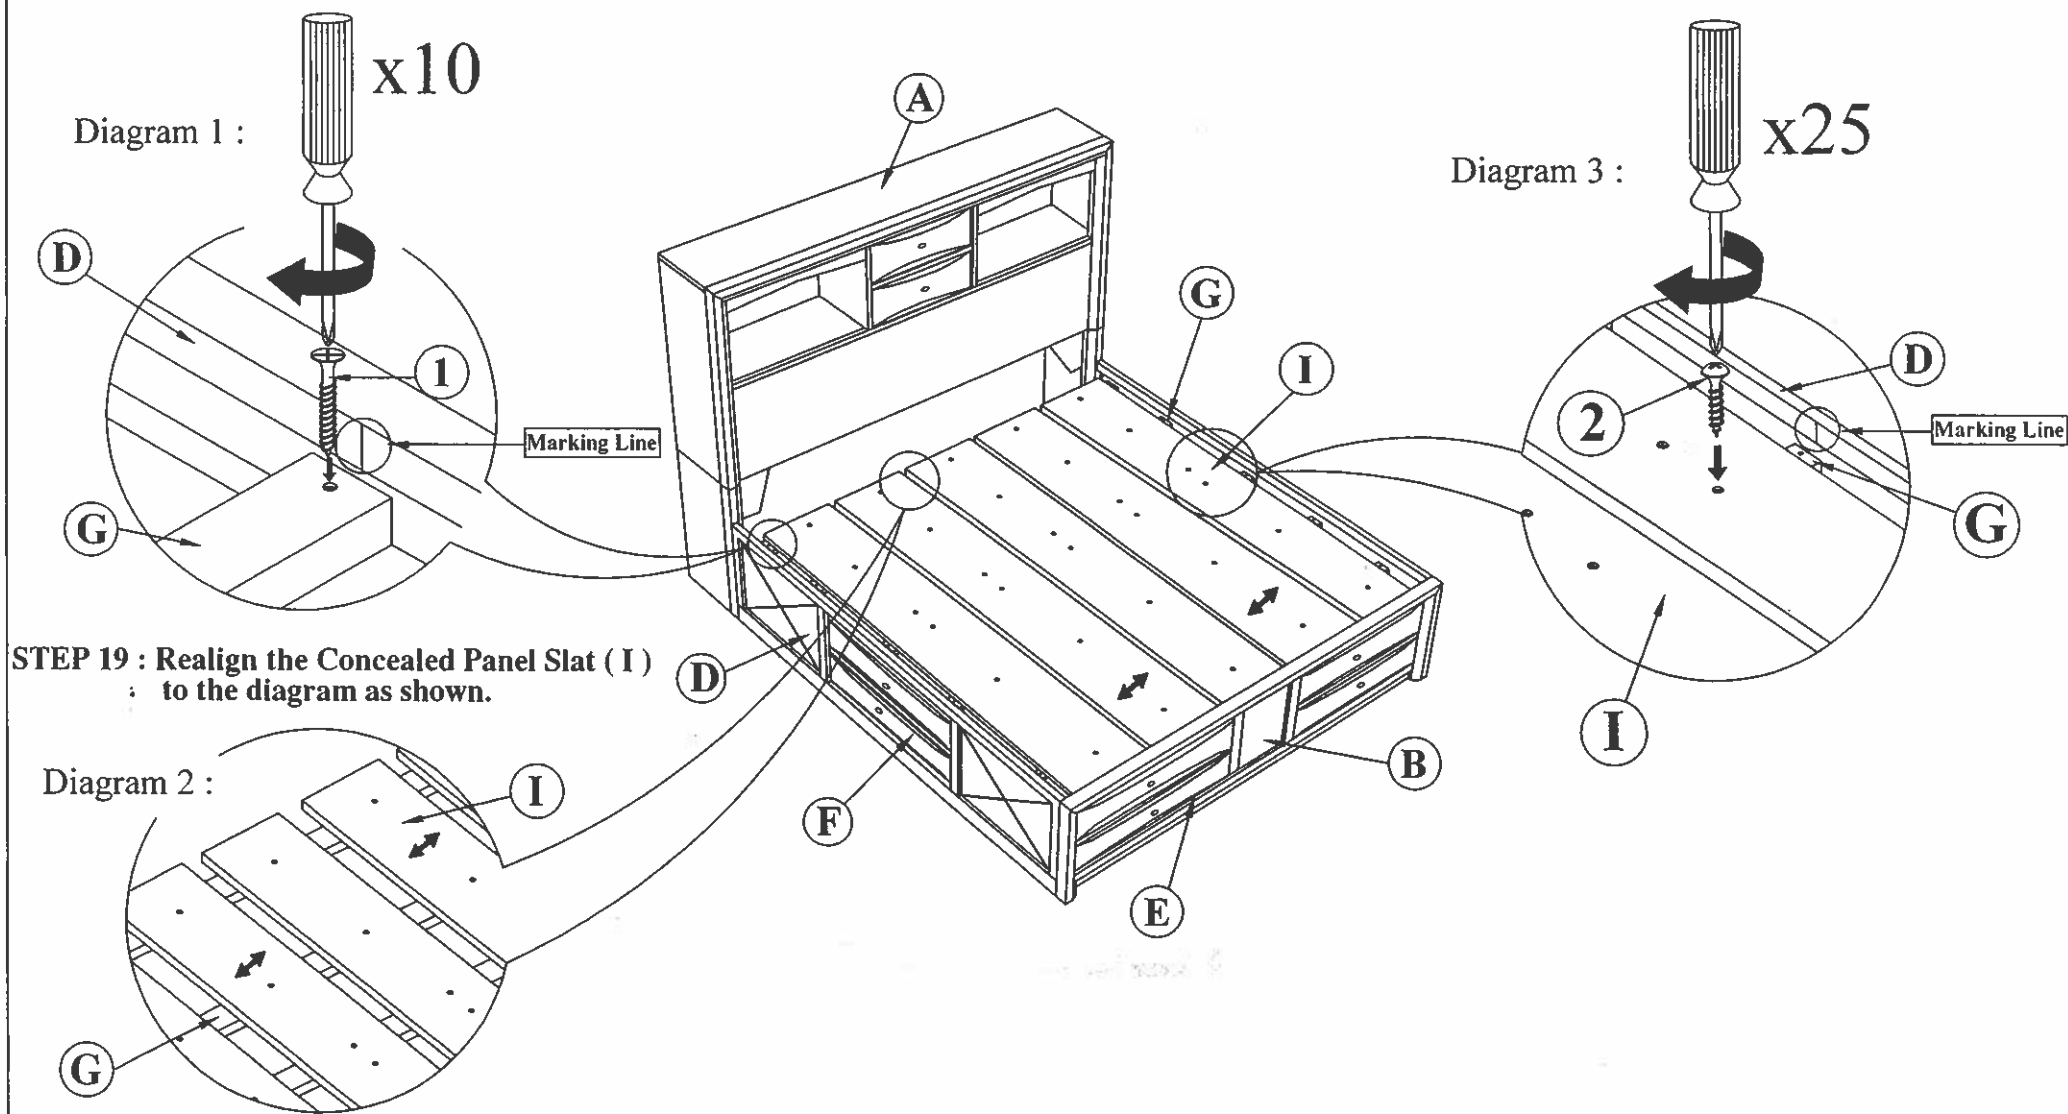

**STEP 19 :** Realign the Concealed Panel Slat ( I ) to the diagram as shown.

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.