













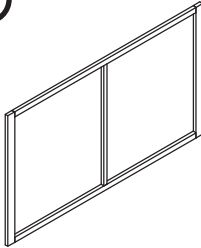

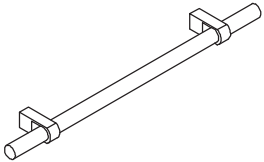


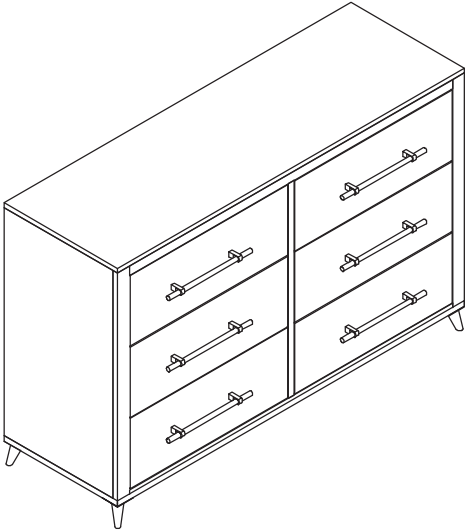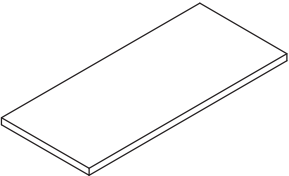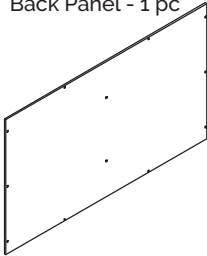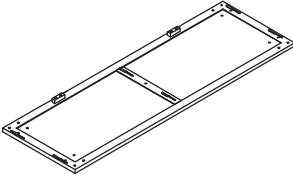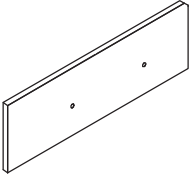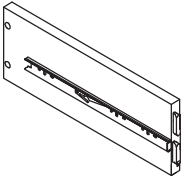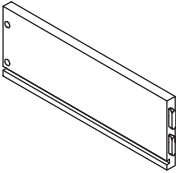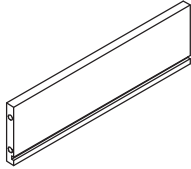


6-DRAWER DRESSER


	A Top Panel - 1 pc 	B Left Side Panel - 1 pc 	C Right Side Panel - 1 pc 	D Back Panel - 1 pc 	E Bottom Panel - 1 pc 
	F Drawer Front - 6 pcs 	G Left Drawer Side - 6 pcs 	H Right Drawer Side - 6 pcs 	I Drawer Bottom Panel - 6 pcs 	J Drawer Back - 6 pcs 
	K Center Panel - 1 pc 	L Legs - 4 pcs 	M Support Leg - 1 pc 	N Face Frame - 1 pc 	1 25mm Allen Bolt - 36 pcs 
	2 Handle - 6 pcs 	3 Allen Key - 1 pc 	4 19 mm Handle Screw - 12 pcs 	5 12mm Allen Bolt - 16 pcs 	

TOOLS NEEDED: Phillips Screwdriver




Step 1: Attach the legs (L) and support leg (M) to the bottom panel (E) using Allen bolts (5) and the Allen key (3).


Note: Make sure the mounting blocks are facing upward.

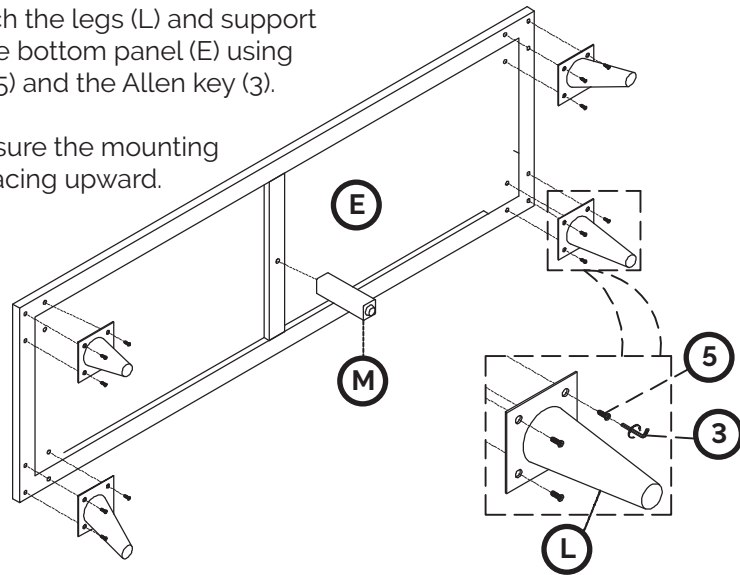


Step 2: Attach the left side panel (B), center panel (K), and right side panel (C) to the bottom panel (E) by placing the plastic pieces into the slots and sliding the side panels toward the front.

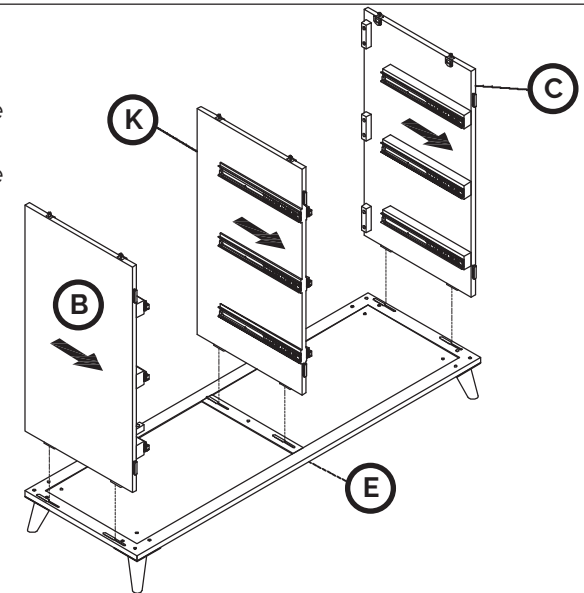


Step 3: Secure the face frame (N) to the center and side panels (B,C,K) by placing the plastic pieces into the slots and sliding the face frame (N) down.

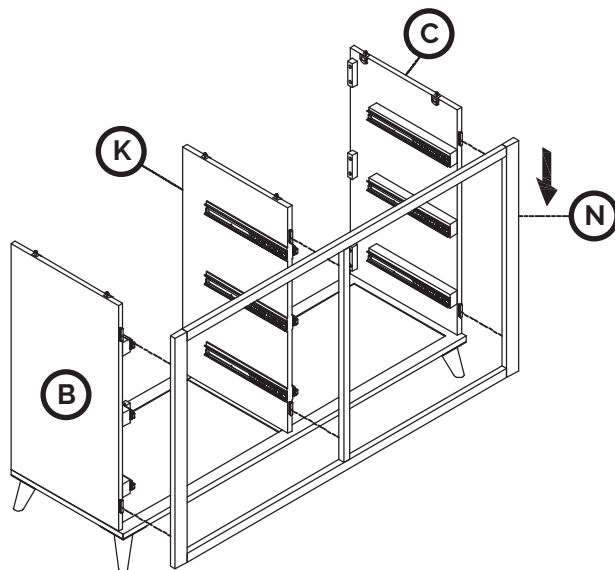

Step 4: Place the top panel (A) onto the side panels (B,C) and flip the levers on the side panels to the "closed" position.

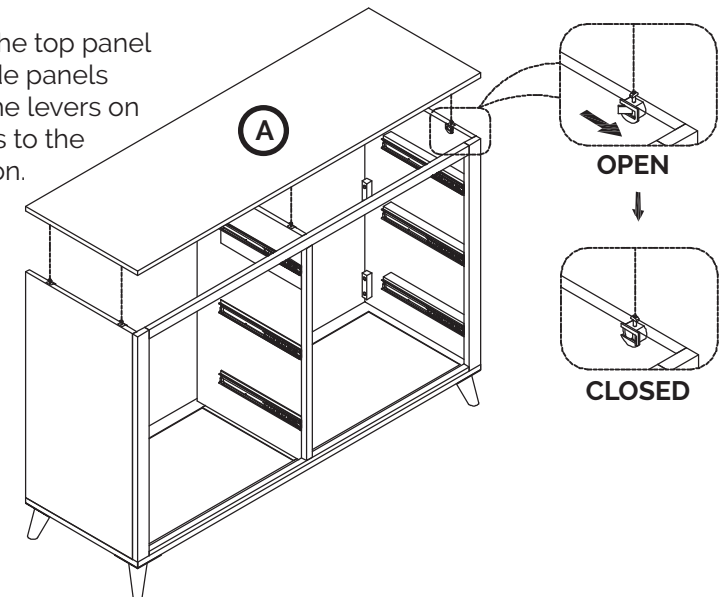


Step 5: Secure the back panel (D) to the mounting blocks using Allen bolts (1) and the Allen key (3).

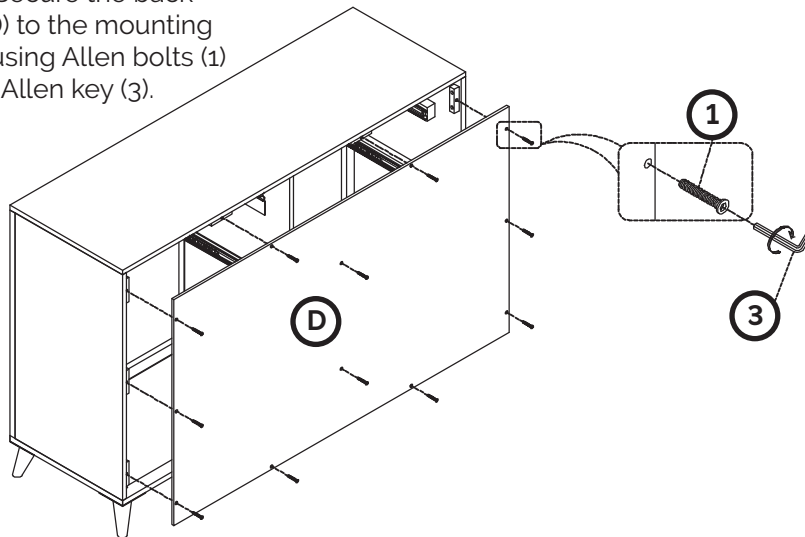


Step 6: Attach the left drawer side (G) and right drawer side (H) to the drawer front (F) by placing the plastic pieces into the slots and sliding the drawer front (F) down.


Note: Make sure the metal tracks are facing outward and the bottom panel groove is toward the bottom.

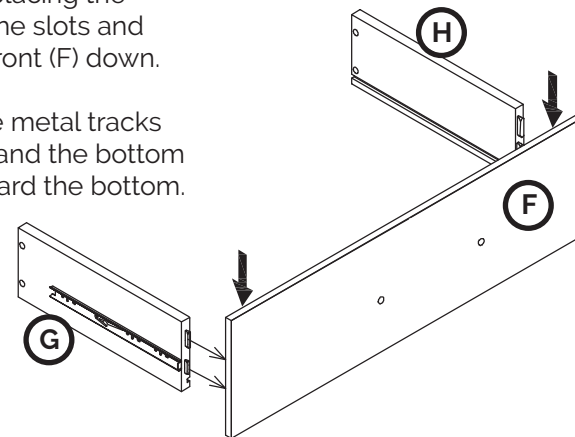

Step 7: Slide the drawer bottom panel (I) into place.

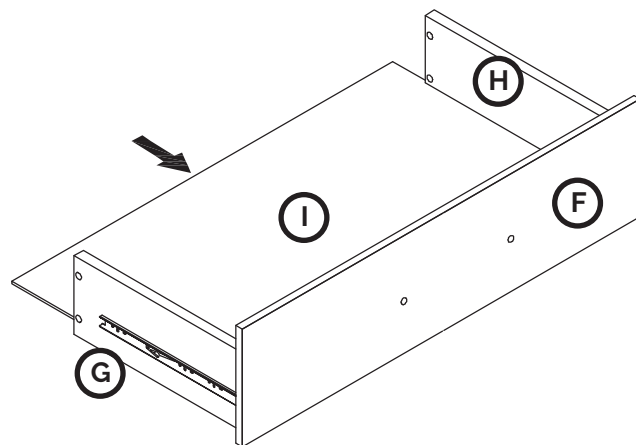


Step 8: Attach the drawer back (J) to the drawer sides (G, H) using Allen bolts (1) and the Allen key (3).

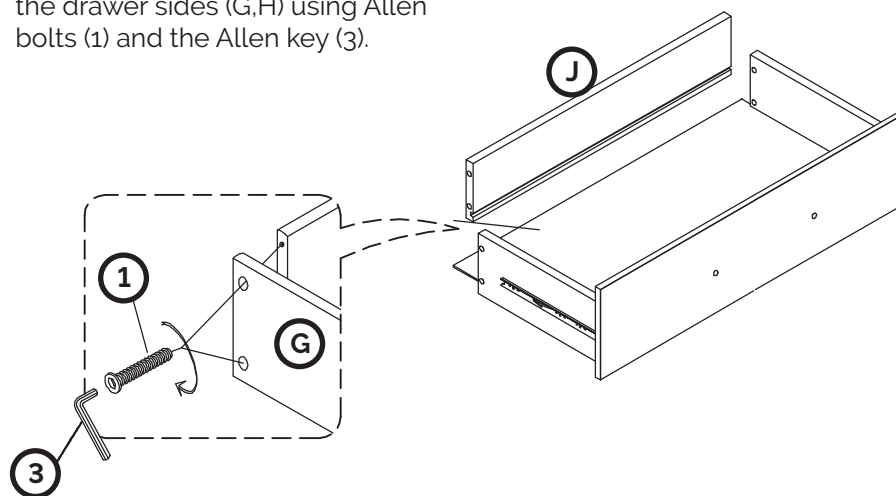


Step 9: Attach a handle (2) to the drawer front (F) using a screw (4) and Phillips screwdriver.

Repeat for each drawer

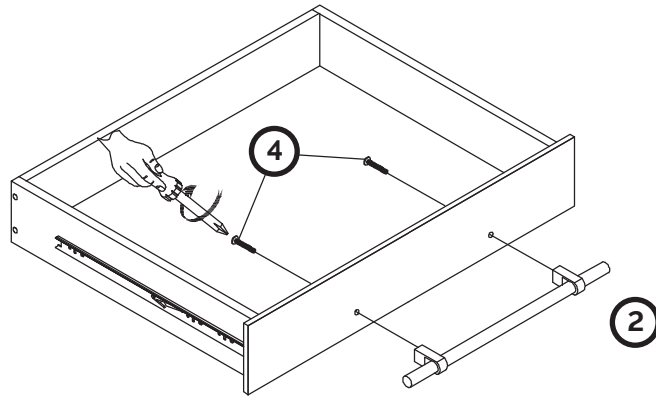

Step 10: Place drawers into the dresser frame on the metal tracks and slowly work the drawers into place until fully closed.

To remove the drawers, use the lever release. Pull the drawer out as far as possible, and you'll see a plastic lever on each side. Pull one lever up and push the other down to remove the drawer.

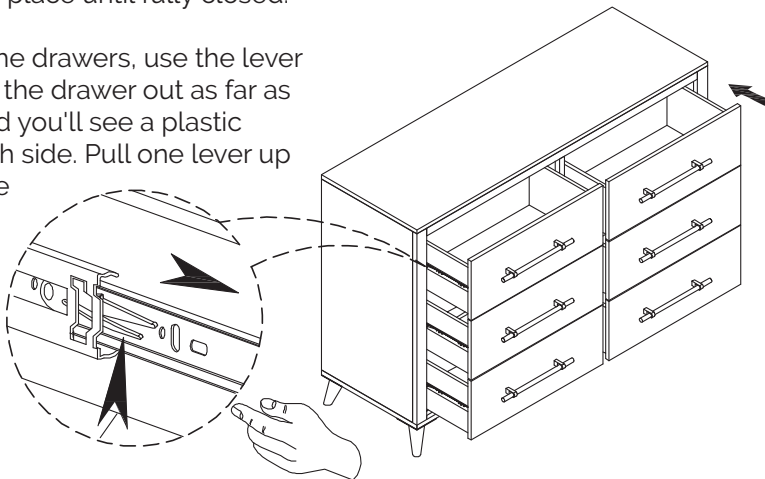

LIMITED 1-YEAR WARRANTY

WHAT IS COVERED

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

HOW LONG COVERAGE LASTS

This warranty runs for one (1) year from the date of purchase.

WHAT IS NOT COVERED

The warranty applies only to the original purchaser and does not cover: (a) wear and tear; (b) improper maintenance, misuse, or alteration; (c) repair by unauthorized representatives; (d) damage resulting from transit or handling; or (e) transportation costs.

WHAT WE WILL DO

At our sole discretion we will repair, replace, or refund any product that proves to be defective in materials or workmanship.

HOW STATE LAW APPLIES

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

The foregoing warranty shall be exclusive and in lieu of any other warranty, express or implied, including warranties of merchantability and fitness for a particular purpose and all other warranties otherwise arising by operation of law, course of dealing, custom, trade, or otherwise. Neither the seller nor the manufacturer shall be liable for any injury, loss or damage, direct or consequential arising out of the use or inability to use this product.