Size of Mattress and Foundation

The length and width of the upper and lower bunk mattress and foundation are as follows:

Size	Length	_Width_	Thickness
Twin	74"- 75"	37 ½"- 38 ½"	9 ½" max
Full	74"- 75"	52"- 53"	9 ½" max

You must use only this size mattress.

Ensure thickness of upper and lower mattress and foundation combined does not exceed 9 ½" and that the mattress is at least 5" below upper edge of guardrails.

This bunk bed uses a slat kit for mattress foundation.

Replacement Parts

Replacement parts, including additional guardrails, may be obtained from any our dealer




SAFETY WARNINGS



- (1) Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
- (2) Always use the recommended size mattresses or mattress support, or both, to help prevent the likehood of entrapment or falls.
- (3) Surface of mattress must be at least 5 in. (127mm) below the upper edge of guardrails.
- (4) Do not allow children under 6 years of age to use the upper bunk.
- (5) Periodically check and ensure that the guardrail, ladder, and other component are in their proper position, free from damage, and that all connectors are tight.
- (6) Do not allow horseplay on or under the bed and prohibit jumping on the bed.
- (7) Always use ladder for entering or leaving upper bunk.
- (8) Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
- (9) Use of a night light may provide added safety precaution for a child using the upper bunk.
- (10) Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.
- (11) The use of water or sleep flotation mattresses is prohibited.
- (12) **STRANGULATION HAZARD**: Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.
- (13) Keep these instructions for future reference.

ASSEMBLY INSTRUCTIONS

(TWIN - TWIN) (TWIN - FULL) (FULL - FULL)

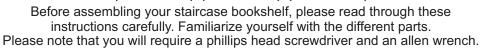


ATTENTION! If you receive a damaged or defective item,








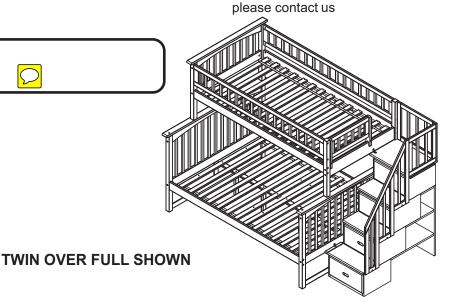









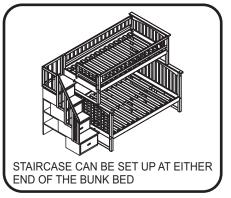

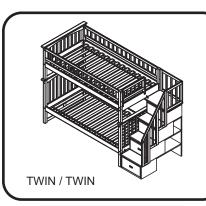

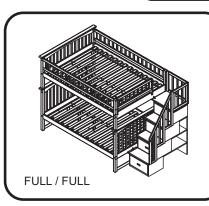

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.



JCB M6 X 3 ½"(90mm) - 24 pcs Spare - 2 pcs





Barrel nuts - 24 pcs Spare - 2 pcs








JCB M6 X 3/4"(20mm) - 1 pc with Flat washer




Metal pins - 4 pcs




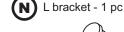




Allen screw 2" (50mm) - 17 pcs Spare - 2 pcs

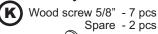

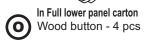




Cap nut - 1 pc

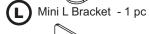




Allen screw 1 5/8" (40mm) - 6 pcs Spare - 1 pc

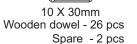








Allen screw 3 1/8" (80mm) - 4 pcs Spare - 1 pc

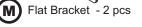



Page 2 of 13

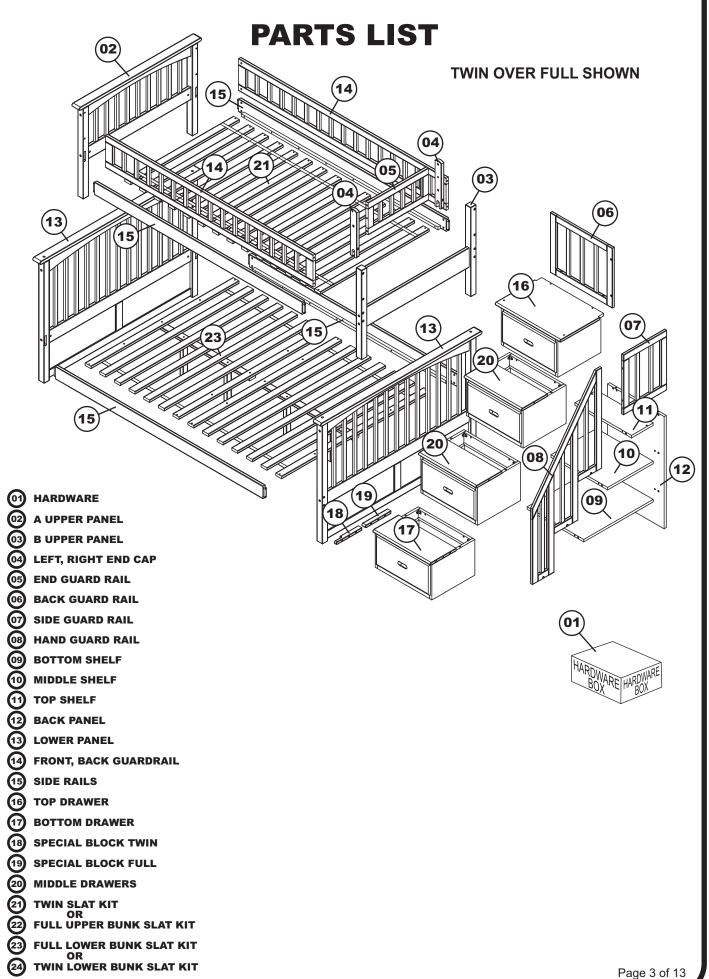


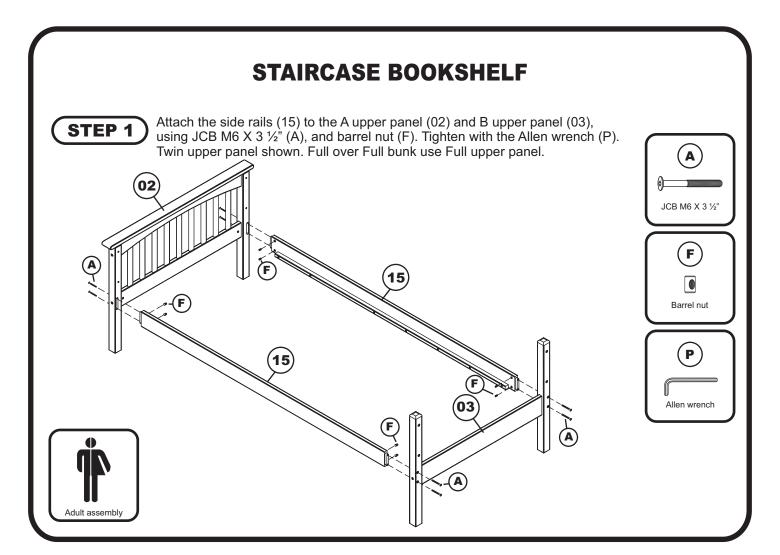


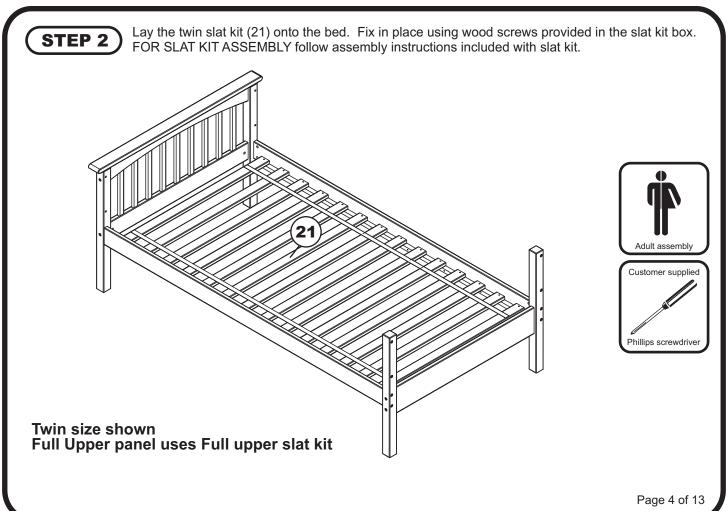

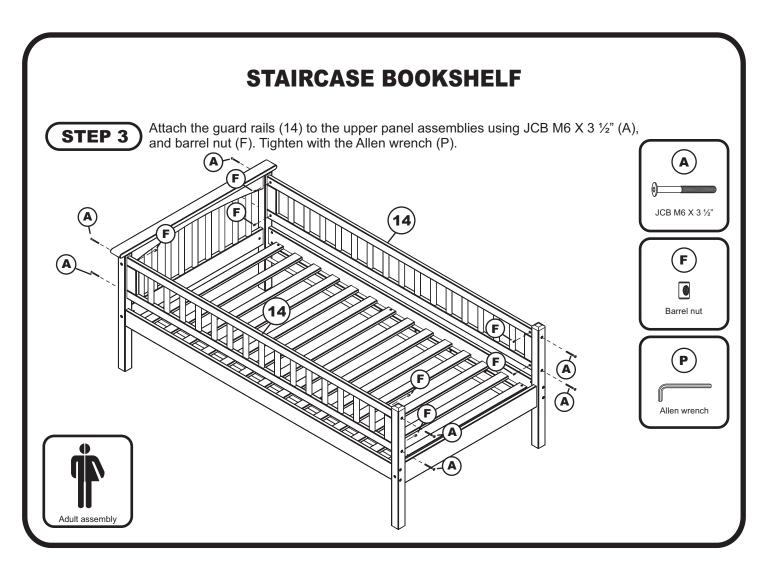

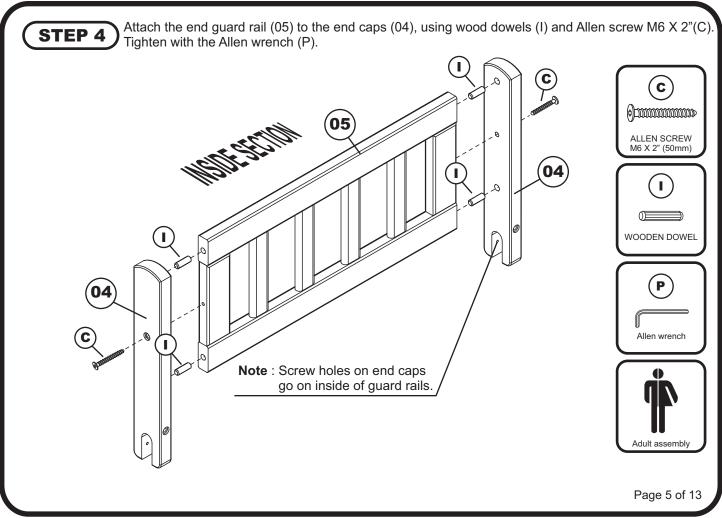


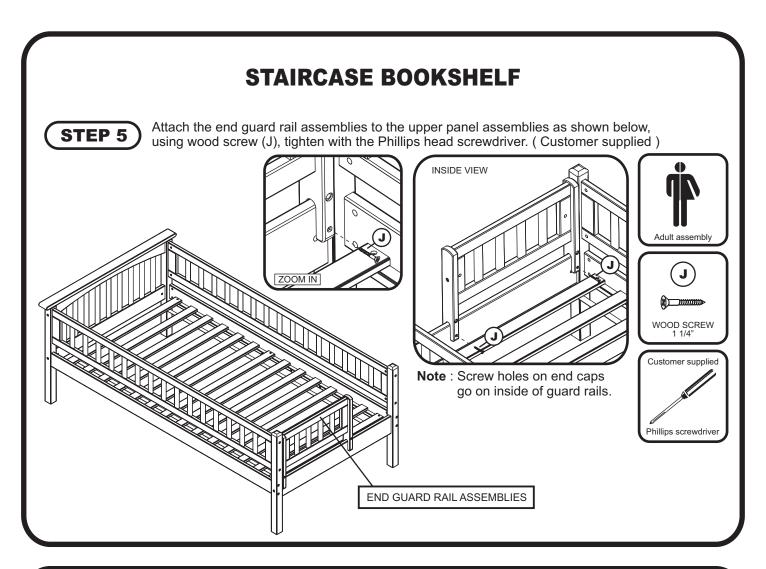

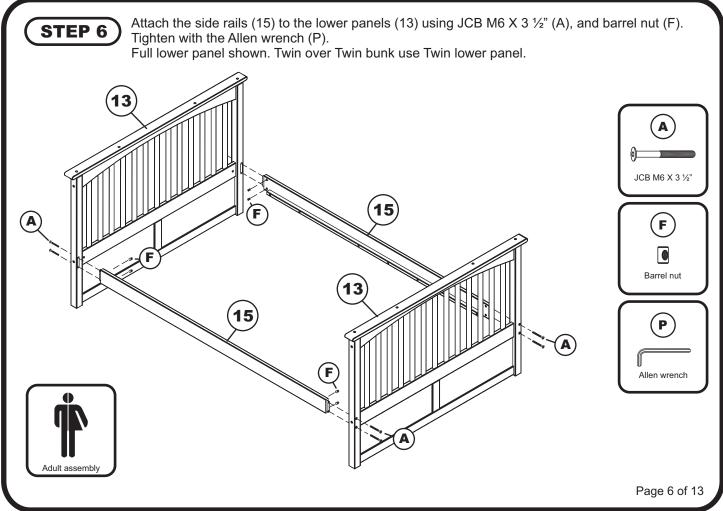

STEP 7

Lay the full slat kit (23) onto the bed. Fix in place using wood screws provided in the slat kit box. FOR SLAT KIT ASSEMBLY follow assembly instructions included with slat kit.

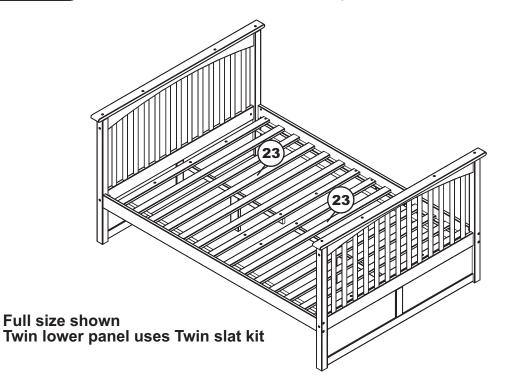



STEP 8


Insert metal pins (G) into the holes on top of the lower panels. Lift the upper panels onto the lower panels as shown, and fit the metal pins into the holes in the bottom of the upper panel legs.







A CAUTION

This step requires two strong people.

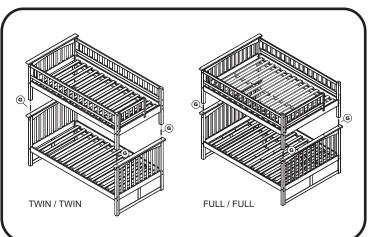


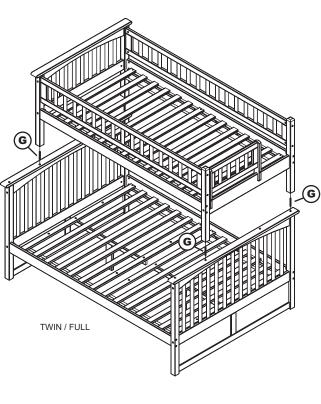


STEP 9 Insert wooden dowels (I) into the shelves (09)(10)(11) as shown below.

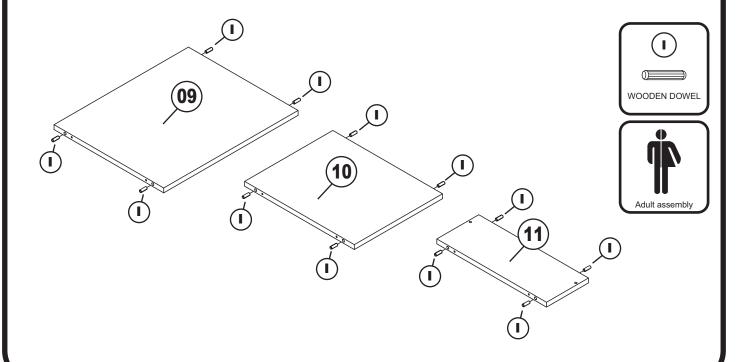


STEP 10 Insert wooden dowels (I) into the bottom drawer (17) and middle drawer (20) as shown below.

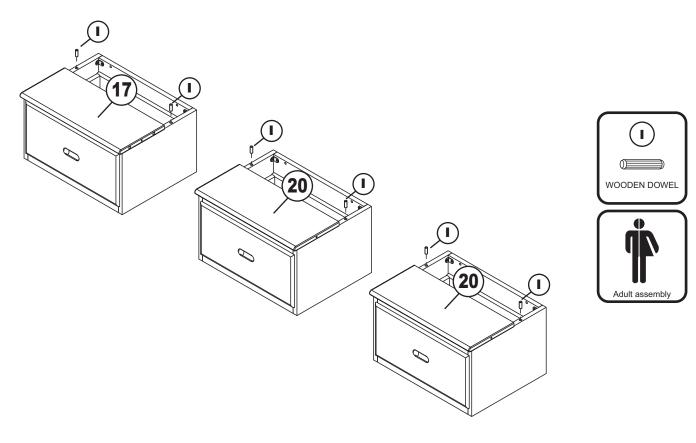


Attach the bottom shelf (09) to the bottom drawer (17) and back panel (12). Using Allen screw M6 X 2" (C). Tighten with Allen wranch (P).

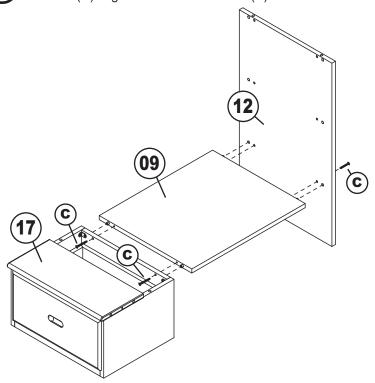


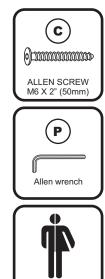


Adult assembly


Attach the middle shelf (10) to the middle drawer (20) and back panel (12). Using Allen screw M6 X 2" (C). Tighten with Allen wranch (P).

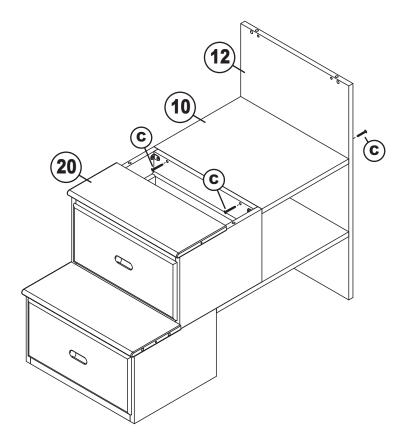

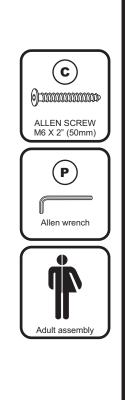



Attach the top shelf (11) to the middle drawer (20) and back panel (12). Using Allen screw M6 X 2" (C). Tighten with Allen wranch (P).

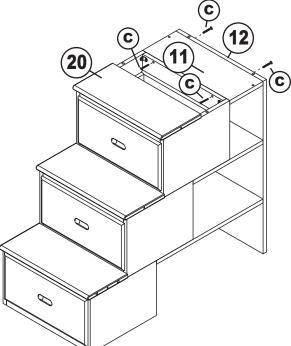

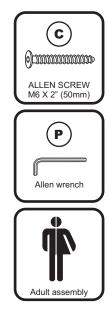

Attach the top drawer (16) as shown below. Using wood dowels (I) and Allen screw M6 X 2" (C). Tighten with Allen wranch (P).

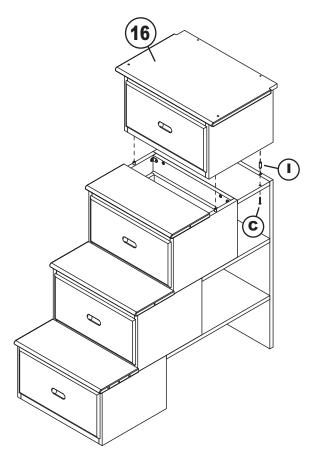


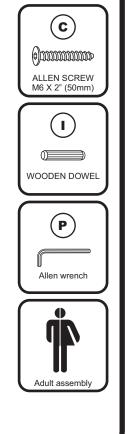


Page 10 of 13


STEP 15


Attach back guard rail (06) as shown below. Using Allen screw M6 X 3 1/8" (E). Tighten with Allen wranch (P).

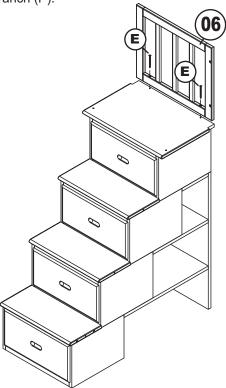

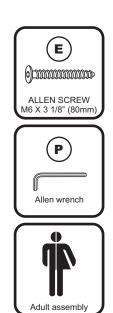


Attach side guard rail (07) as shown below. Using Allen screw M6 X 1 5/8" (D). Tighten with Allen wranch (P).

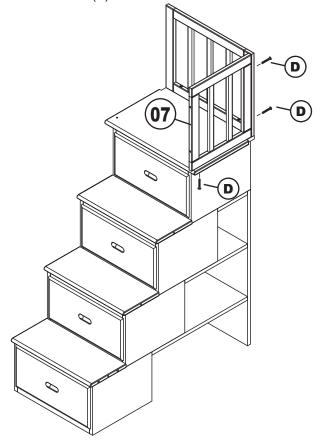

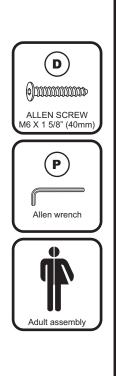

STEP 17

Attach hand guard rail (08) as shown below. Using Allen screw M6 X 3 1/8" (E) and M6 X 1 5/8" (D). Tighten with Allen wranch (P).

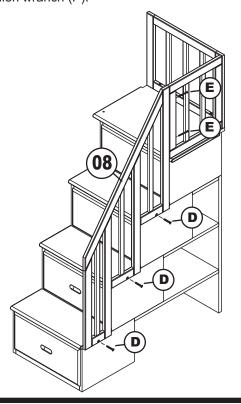

E

Ommonium

ALLEN SCREW
M6 X 3 1/8" (80mm)



ALLEN SCREW M6 X 1 5/8" (40mm)





Allen wrench



Attach special block full (19) as shown below. Using wood dowels (I) and Allen screw M6 X 2" (C). Tighten with Allen wranch (P).

Note: Using special block twin (18) for lower panel twin size.

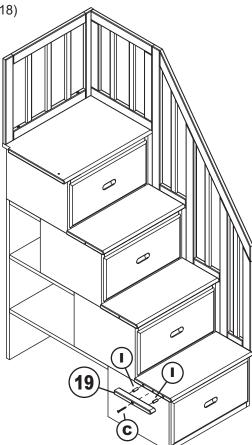

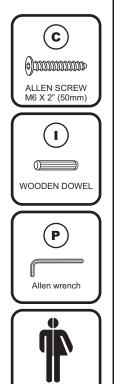

Page 12 of 13


Adult assembly

STEP 19

Move the bunk bed and staircase assemblies where you want to place them in the room. Attach staircase assembly to the bunk bed assembly as shown below.

Using mini L bracket (L), wood screw D6 X 5/8" (K). Using flat bracket (M), wood screw D6 X 5/8" (K). Using L-Bracket (N), JCB M6 X 3/4"+ washer (B) and wood screw D6 X 5/8" (K). Tighten with Allen wrench (P) and Phillips head screwdriver. (Customer supplied).

Lastly, cover holes with wood buttons (O)(Twin Full, Full Full).

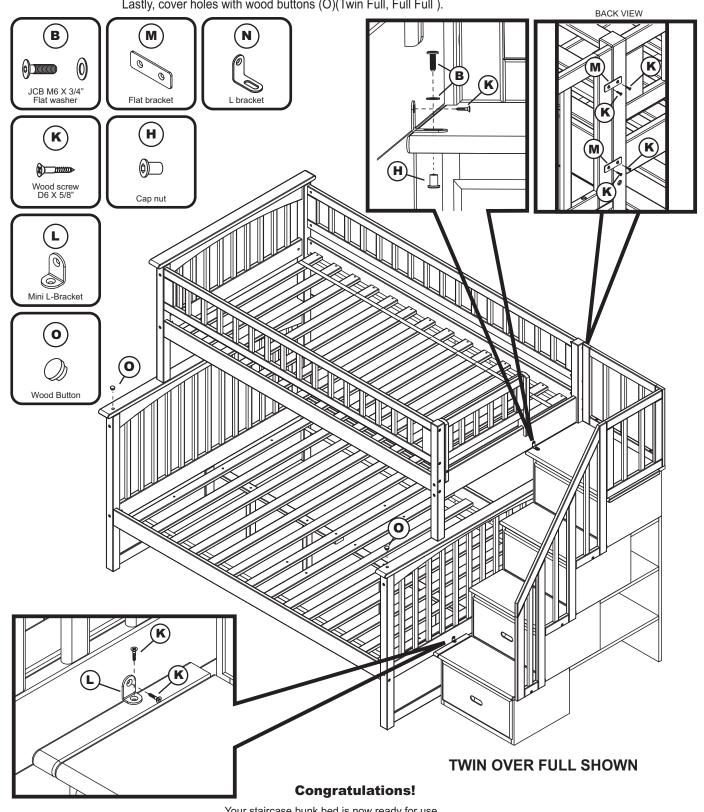

Your staircase bunk bed is now ready for use.

We recommend that you double check that all screws are tight,

and that all parts are secure before use and periodically check that all screws are tight to ensure lasting safety.