


















CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. The seat board can be cleaned with a mild cleaner. Test the cleaning method on a hidden area before using them over the entire area.


NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- * This item may require periodic tightening.
- * Do not tighten bolts until completely assembled.

Part List and Hardware List

| Piece | Description | Picture | Quantity |
|-------|-----------------------|---|----------|
| A | HEADBOARD |  | 1X |
| B | R-POST |  | 1X |
| C | L-POST |  | 1X |
| D | FOOTBOARD |  | 1X |
| E | SUPPORT LEGS OF SLATS |  | 8X |
| F | SUPPORT LEGS OF RAILS |  | 2X |
| G | SLAT |  | 4X |
| H | L-RAIL |  | 2X |
| I | R-RAIL |  | 2X |
| J | WOOD LEG |  | 2X |
| K | WOOD BAR |  | 2X |
| H1 | BOLT 5/16"*2-1/2" |  | 8X |
| H2 | BOLT 1/4"*2" |  | 10X |
| H3 | ALLEN KEY 4mm |  | 1X |
| H4 | SCREW Ø8*30mm |  | 8X |
| H5 | SCREW Ø8*15mm |  | 8X |
| H6 | METAL PLATE 50*33*1mm |  | 2X |

Product Dimensions:88-1/4"W*65-1/2"D*55-1/2"H

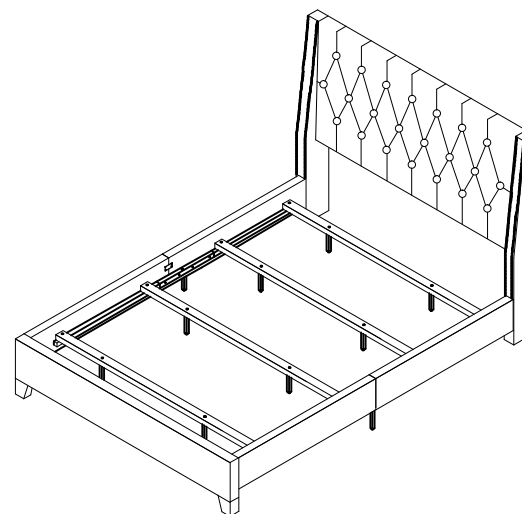


Weight capacity : 550lbs
WARNING : DO NOT STAND ON THE BED

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Wrench.

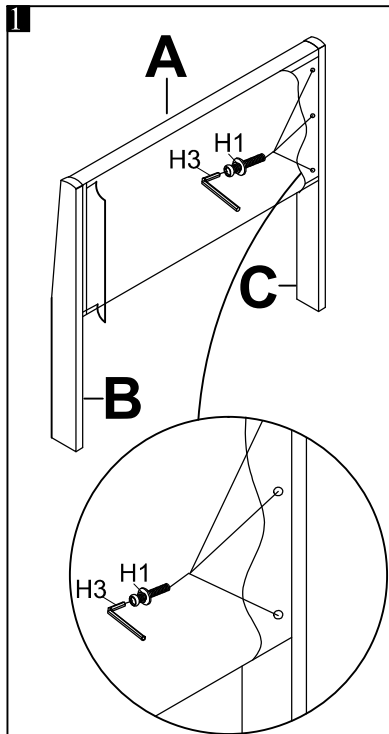


Step 1

Attach L/R posts "B" & "C" to headboard "A" by using Allen key (H3) to lock with bolts "H1".

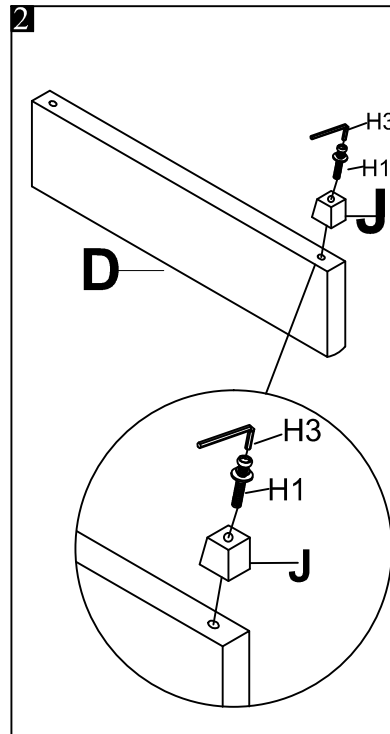


Step 2

Attach wood legs "J" with footboard "D". Using Allen key (H3) to lock with bolts "H1".

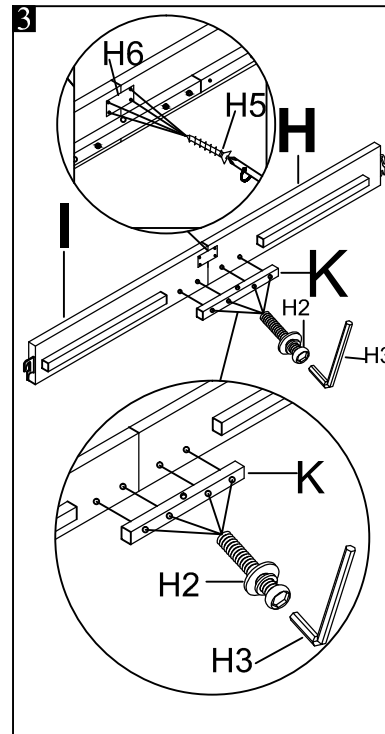


Step 3

Attach wood bar "K" to the 2 rails "H" & "I". Using Allen key (H3) to lock with bolts "H2".
Lock the both side rails (H & I) (front & rear of rail) tight and alignment with metal plate (H6) by using 8x screws (H5)

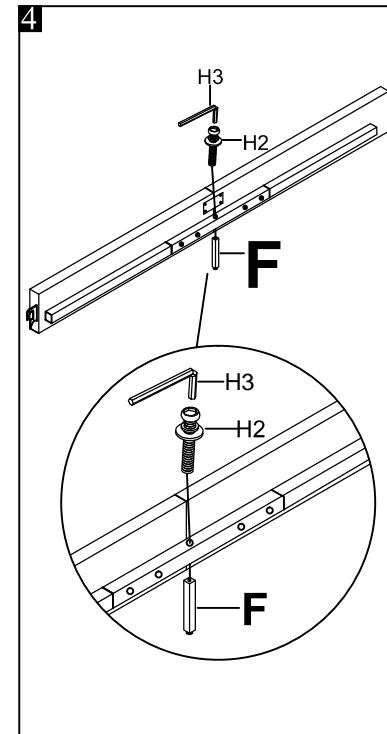

Step 4

Attach support legs "F" to wood bar "K". Using Allen key (H3) to lock with bolts "H2".

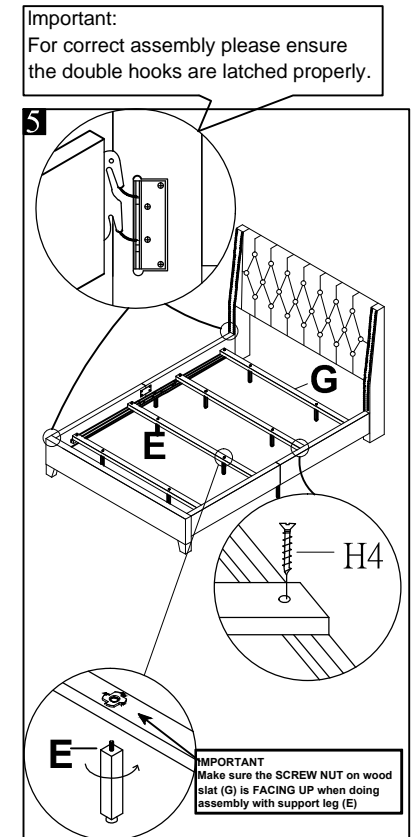

Step 5

Attach 2 rails to the L/R posts & the footboard assembled with legs.
Attach 2 support legs (E) to each slat (G).
Lock the slats tight with wood bar (both inside of rails) by using 8x screws (H4).